

PROCESSING FREEZER/CHILLER/REFRIGERATION SYSTEM

Model:

QC2-3

QC2-20

QC2-40

QC2-100

QC2-100 REMOTE

QC2-100

QC2-40

QC2-3


• **INSTALLATION**

• **OPERATION**

• **MAINTENANCE**



W164 N9221 Water Street • P.O. Box 450 • Menomonee Falls, Wisconsin 53052-0450 USA
PHONE: 262.251.3800 • 800.558.8744 USA/CANADA FAX: 262.251.7067 • 800.329.8744 U.S.A. ONLY
www.alto-shaam.com

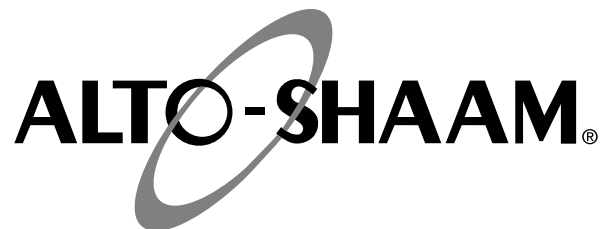

Delivery	1
Unpacking	1
Safety Procedures and Precautions	2

Installation

Site Installation	3
Clearance Requirements	3
Installation Requirements	3
Guide Installation for Trolley Option	4
Water Drainage	5
Dimension Drawings, Weights & Capacities	6
Options and Accessories	11
Electrical	12

Operation

Operating Introduction	13
Chill Processing Cycles	14
Quickchiller Operation Modes	14
Initial Quickchiller Operation	14
Additional Information	15
Control Panel Identification	16
Basic Operation	17
Advanced Operation - Hold Temp	18
Advanced Operation - Chill Modes	19
Factory Default Set Points	19
Advanced Operation - Programming	20
Advanced Operation - User Settings	21
Advanced Operation - HACCP Download	22
Food Probe Use	24
Time & Temperature Guidelines	24
Automatic Defrost	24
Food Handling Guidelines	25
Product Covering	25
Portioning & Packaging	25
Quickchiller Pan Capacity	26
Product Capacity Per Pan	26
Portion Sizes and Pan Capacities	27

Care and Cleaning

Cleaning and Preventative Maintenance	28
Protecting Stainless Steel Surfaces	28
Cleaning Agents	28
Cleaning Materials	28
Interior Cleaning	29
Exterior Cleaning	29
Probe Cleaning Procedures	29
Food Trolley Cleaning	29
Monthly Compressor & Condenser Maintenance	29

Service

Control Error Displays	30
------------------------------	----

Service Views


QC2-3	31
QC2-20	36
QC2-40	41
QC2-100	51

Wire Diagrams

Always refer to the wire diagram(s) included with the unit for most current version.

Warranty

Transportation Damage and Claims	Back Cover
Limited Warranty	Back Cover

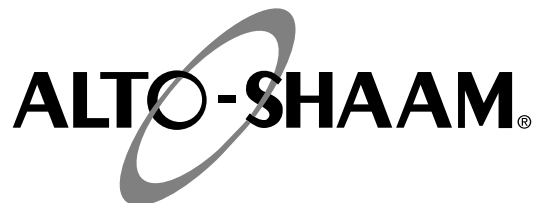

DELIVERY

This Alto-Shaam appliance has been thoroughly tested and inspected to insure only the highest quality unit is provided. Upon receipt, check for any possible shipping damage and report it at once to the delivering carrier. *See Transportation Damage and Claims section located in this manual.*

This appliance, complete with unattached items and accessories, may have been delivered in one or more packages. Check to ensure that all standard items and options have been received with each model as ordered.

Save all the information and instructions packed with the appliance. Complete and return the warranty card to the factory as soon as possible to assure prompt service in the event of a warranty parts and labor claim.


This manual must be read and understood by all people using or installing the equipment model. Contact the Alto-Shaam service department if you have any questions concerning installation, operation, or maintenance.

NOTE: All claims for warranty must include the full model number and serial number of the unit.

UNPACKING

1. Carefully remove the appliance from the carton or crate.

NOTE: Do not discard the carton and other packaging material until you have inspected the unit for hidden damage and tested it for proper operation.

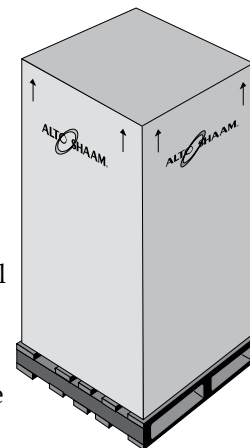

2. Read all instructions in this manual carefully before initiating the installation of this appliance.

DO NOT DISCARD THIS MANUAL.

This manual is considered to be part of the appliance and is to be provided to the owner or manager of the business or to the person responsible for training operators. *Additional manuals are available from the Alto-Shaam service department.*

3. Remove all protective plastic film, packaging materials, and accessories from the appliance before connecting electrical power. Store any accessories in a convenient place for future use.



SAFETY PROCEDURES AND PRECAUTIONS

Knowledge of proper procedures is essential to the safe operation of electrically and/or gas energized equipment. In accordance with generally accepted product safety labeling guidelines for potential hazards, the following signal words and symbols may be used throughout this manual.

DANGER



Used to indicate the presence of a hazard that **WILL** cause severe personal injury, death, or substantial property damage if the warning included with this symbol is ignored.

WARNING



Used to indicate the presence of a hazard that **CAN** cause personal injury, possible death, or major property damage if the warning included with this symbol is ignored.

CAUTION



Used to indicate the presence of a hazard that can or will cause minor or moderate personal injury or property damage if the warning included with this symbol is ignored.


CAUTION

Used to indicate the presence of a hazard that can or will cause minor personal injury, property damage, or a potential unsafe practice if the warning included with this symbol is ignored.

NOTE: Used to notify personnel of installation, operation, or maintenance information that is important but not hazard related.

1. This appliance is intended to chill or freeze foods for the purpose of human consumption. No other use for this appliance is authorized or recommended.
2. This appliance is intended for use in commercial establishments where all operators are familiar with the purpose, limitations, and associated hazards of this appliance. Operating instructions and warnings must be read and understood by all operators and users.
3. Any troubleshooting guides, component views, and parts lists included in this manual are for general reference only and are intended for use by qualified technical personnel.
4. This manual should be considered a permanent part of this appliance. This manual and all supplied instructions, diagrams, schematics, parts lists, notices, and labels must remain with the appliance if the item is sold or moved to another location.

NOTE

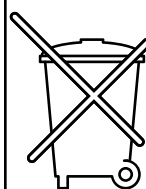

For equipment delivered for use in any location regulated by the following directive:

DO NOT DISPOSE OF ELECTRICAL OR ELECTRONIC EQUIPMENT WITH OTHER MUNICIPAL WASTE.

INSTALLATION

DANGER



IMPROPER INSTALLATION, ALTERATION, ADJUSTMENT, SERVICE, OR MAINTENANCE COULD RESULT IN SEVERE INJURY, DEATH, OR CAUSE PROPERTY DAMAGE.

READ THE INSTALLATION, OPERATING AND MAINTENANCE INSTRUCTIONS THOROUGHLY BEFORE INSTALLING OR SERVICING THIS EQUIPMENT.

CAUTION



TO PREVENT PERSONAL INJURY, USE CAUTION WHEN MOVING OR LEVELING THIS APPLIANCE.



**5-Year Limited
Warranty on
self-contained
compressor**

Effective from date of
shipment. (EXCLUDES LABOR)




SITE INSTALLATION

Position the Quickchiller to allow sufficient air ventilation through the condensing unit(s).

Avoid installing the chiller immediately adjacent to fryers, charbroilers, or any other equipment producing grease laden air; heat producing equipment such as ovens and ranges; and steam discharging equipment such as steamer ovens and kettles. Do not locate the Quickchiller in direct sunlight.

Allow sufficient front clearance for serviceability and for easy maneuvering of food trolleys in and out of the cabinet.

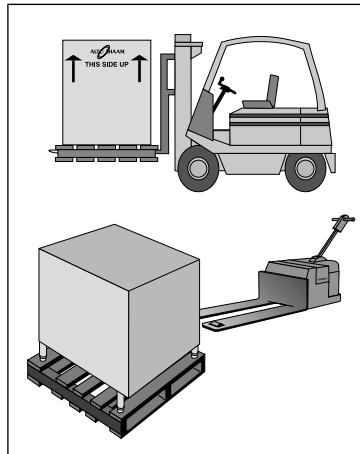

CLEARANCE REQUIREMENTS

18" (457mm) MINIMUM CLEARANCE
FROM HEAT PRODUCING EQUIPMENT.

INSTALLATION REQUIREMENTS

Unit should **NOT** be tipped on its side.

If tipped, unit must stand in the upright position for a MINIMUM of 12 hours before operating. Tipping will cause damage to the unit and void the warranty if not allowed to "rest".

- Appliance must be installed level.
- The appliance must not be installed in any area where it may be affected by steam, grease, dripping water, extreme temperatures, or any other severely adverse conditions.

In order to maintain standards established by the National Sanitation Foundation, all counter mounted equipment must use legs that allow for a 4" (102mm) clearance between the cabinet and the counter.

INSTALLATION

Prior to moving the Quickchiller to the installation site, check the dimensions of doors, passageways, and ceiling heights in the areas through which the cabinet must be moved. Also check the turning radius if the cabinet must be moved around an existing structure. The use of a fork lift or pallet lift truck is required for moving and leveling most Quickchiller models.

NOTE: In certain instances, it may be necessary to remove doors and door hardware to negotiate tight spaces.

 
INSTALLATION

SITE INSTALLATION

INSTALLATION REQUIREMENTS

The model QC2-3 is a counter mounted unit and must use legs that allow for a 4" (102mm) clearance between the cabinet and the counter.

For all other models, install the appliance on a smooth and level floor surface. Use the adjustable cabinet legs to level the Quickchiller.



Adjust from front-to-back and from side-to-side with the use of a spirit level to evenly distribute the cabinet weight and avoid pulling the cabinet alignment out of square.

After leveling the cabinet, check that the door handle is aligned properly. Also check the height relationship of the optional roll-in cart to the cabinet. Adjust the Quickchiller height as needed to accommodate the cart and to securely close the Quickchiller door.

DOOR SEAL:

Check the door gasket to make certain it is sealing properly and that the gasket provides an even and positive seal around the entire door frame.

CAUTION




**TO PREVENT PERSONAL INJURY,
USE CAUTION WHEN MOVING OR
LEVELING THIS APPLIANCE.**

GUIDE INSTALLATION FOR TROLLEY OPTION ON QC2-100 & QC2-100/REMOTE

Trolley Guide Installation

1. Align each guide rail with the holes located under the cabinet.
2. Fasten each guide rail with washer, lock washer and bolt.
3. Push the roll-in cart (trolley) into the Quickchiller and close the door.
4. At the front of the Quickchiller, make certain contact has been made between the Quickchiller and the cart along the total width of the door to create a complete seal. When a full seal has been determined, recheck each connection to make certain it has been fully tightened.

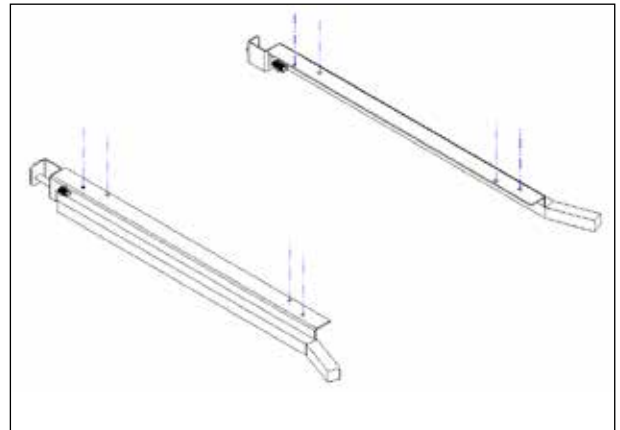

INSTALLATION

SITE INSTALLATION


WATER DRAINAGE

A 1" NPS drain is located under the QC2-100. Connect the drain pipe using Teflon tape to discharge through an indirect waste pipe into an open-site drain by means of a 2" (51mm) air gap. Connection must be within 10' (3m) of the unit.

NOTE: In the U.S.A., this equipment is to be installed to comply with the Basic Plumbing Code of the Building Officials and Code Administrators International, Inc. [BOCA], and the Food Service Sanitation Manual of the Food & Drug Administration [FDA].

DRAINAGE		
QC2-3	QC2-20	QC2-40
EVAPORATOR PAN: NO INSTALLATION REQUIRED		
QC2-100		
ONE (1) FLOOR DRAIN: 1/2" (12,7mm) DIAMETER		


QC2-100 Bottom View

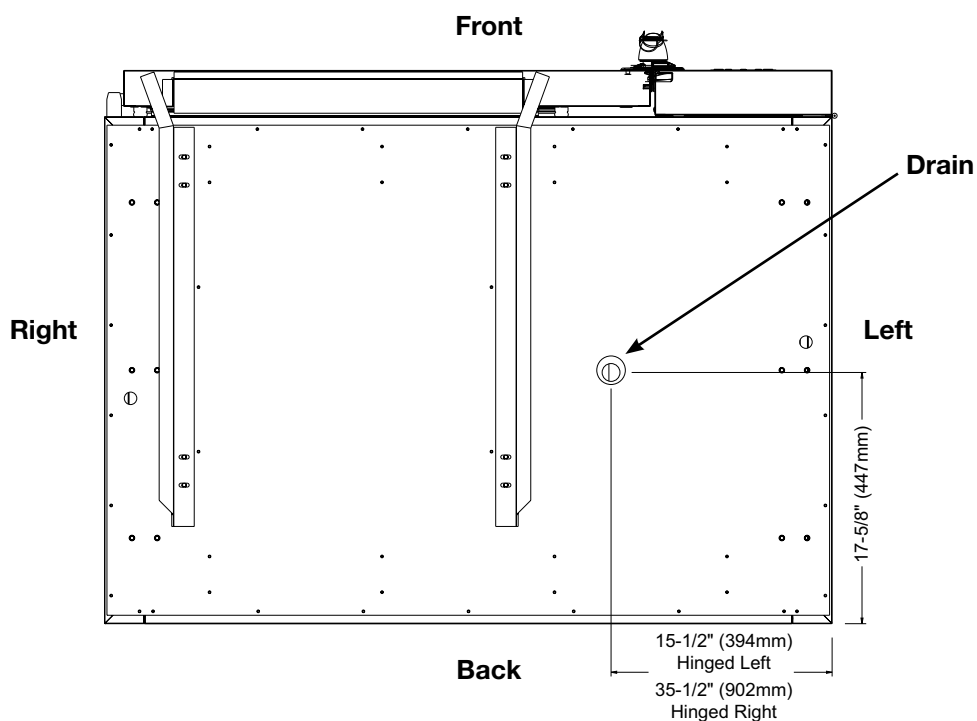

INSTALLATION

SITE INSTALLATION

QC2-3

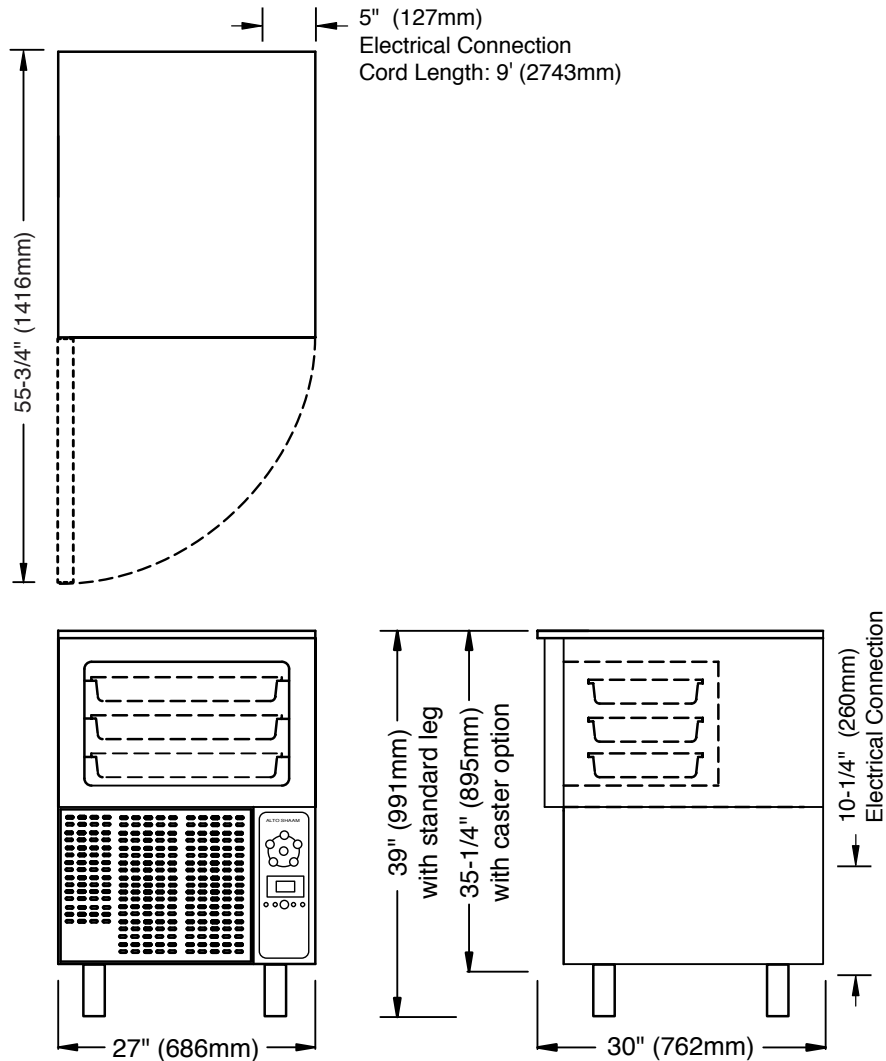

WEIGHT

NET: CONTACT FACTORY SHIP: 330 lb (150 kg)

CARTON DIMENSIONS: (L x W x H)

35" x 35" x 42" (889mm x 889mm x 1067mm)

REFRIGERATION

40 oz. R404a Refrigerant

One (1) 1/2 hp Condensing Unit:

2,800 BTU's per hour at -5°F (-21°C) in the freeze mode

4,750 BTU's per hour at +20°F (-7°C) in the chill mode

PRODUCT/PAN CAPACITY

Approximately 36 lb (16 kg) MAXIMUM


VOLUME MAXIMUM: 22-1/2 QUARTS (28,5 LITERS)

FULL-SIZE PANS:	GASTRONORM 1/1:
Three (3) 20" x 12" x 2-1/2"	(530 x 325 x 65mm)

INSTALLATION

SITE INSTALLATION

QC2-20

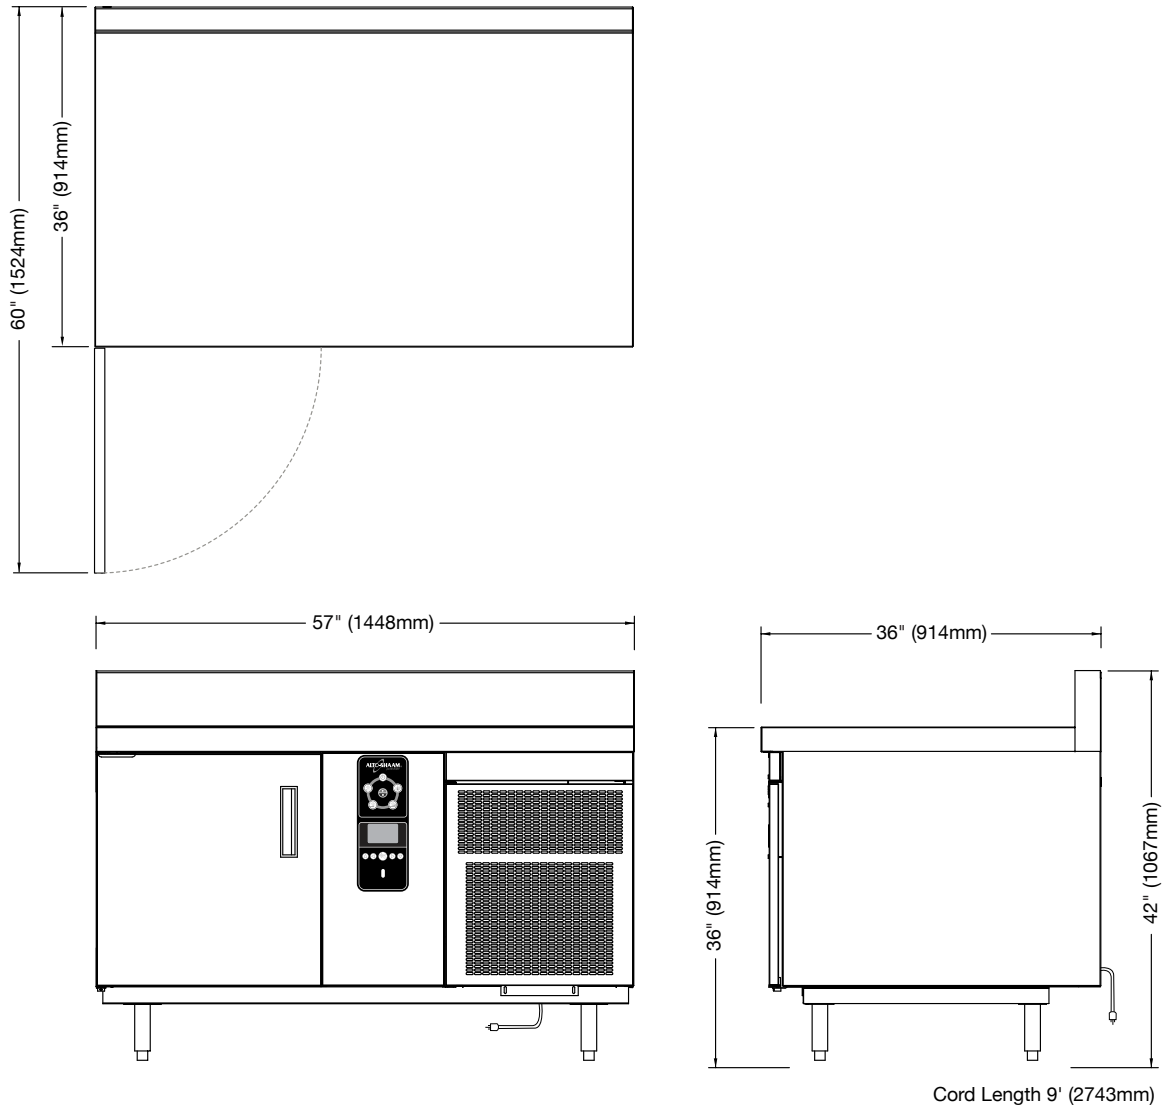

WEIGHT	
NET: CONTACT FACTORY	SHIP: 450 lb (204 kg)
CARTON DIMENSIONS: (L x W x H) 60" x 39" x 48-1/2" (1524mm x 991mm x 1232mm)	

REFRIGERATION
40 oz. R404a Refrigerant
One (1) 3/4 hp Condensing Unit:
FREEZE MODE: 4,380 BTU's per hour at -5°F (-21°C)
CHILL MODE: 7,080 BTU's per hour at +20°F (-7°C)



PRODUCT \ PAN CAPACITY
MAXIMUM CHILLING CAPACITY: Approximately 60 lb (27 kg)
VOLUME MAXIMUM: 37.5 QUARTS (47,5 LITERS)
FULL-SIZE PANS: GASTRONORM 1/1:
Five (5) 20" x 12" x 2-1/2" (530 x 325 x 65mm)
FULL-SIZE SHEET PANS:
Ten (10) 18" x 26" x 1"

INSTALLATION



SITE INSTALLATION

QC2-40

Prior to June 2012

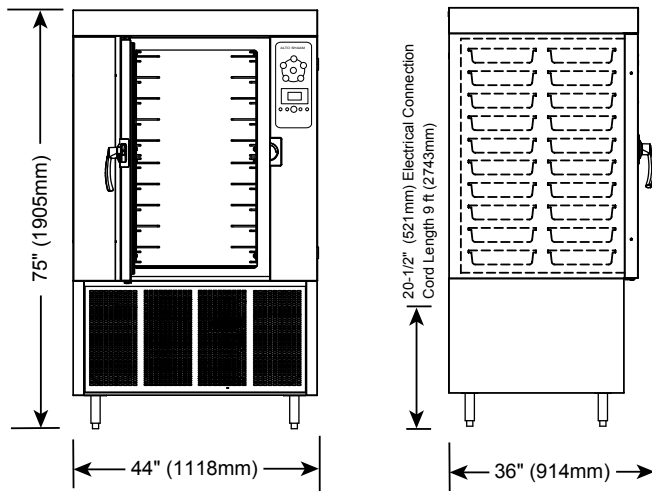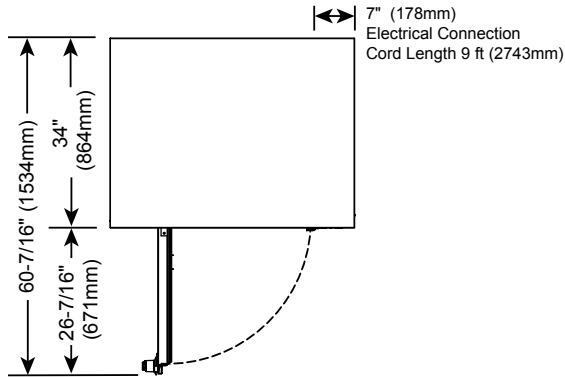

After June 2012

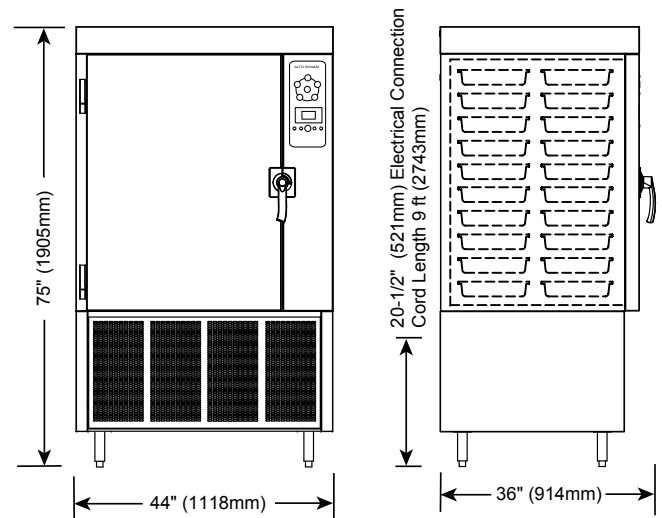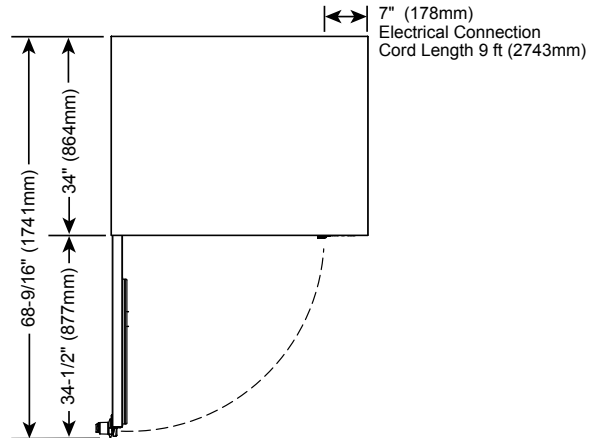

WEIGHT

NET: 654 lb (297 kg)

SHIP: 815 lb (370 kg)

CARTON DIMENSIONS: (L x W x H)

55-1/2" x 45-1/4" x 87" (1410mm x 1149mm x 2210mm)

REFRIGERATION

80 oz. R-404a Refrigerant

One (1) 1-1/2 hp Condensing Unit:

FREEZE MODE: 5,880 BTU's per hour at -5°F (-21°C)

CHILL MODE: 11,400 BTU's per hour at +20°F (-7°C)

PRODUCT/PAN CAPACITY

MAXIMUM COLD HOLDING CAPACITY:

Approximately 240 lb (109 kg) MAXIMUM

VOLUME MAXIMUM: 150 QUARTS (190 LITERS)


FULL-SIZE PANS: GASTRONORM 1/1:
Twenty (20) 20" x 12" x 2-1/2" (530 x 325 x 65mm)

FULL-SIZE SHEET PANS:
Ten (10) 18" x 26" x 1"

INSTALLATION

SITE INSTALLATION

QC2-100

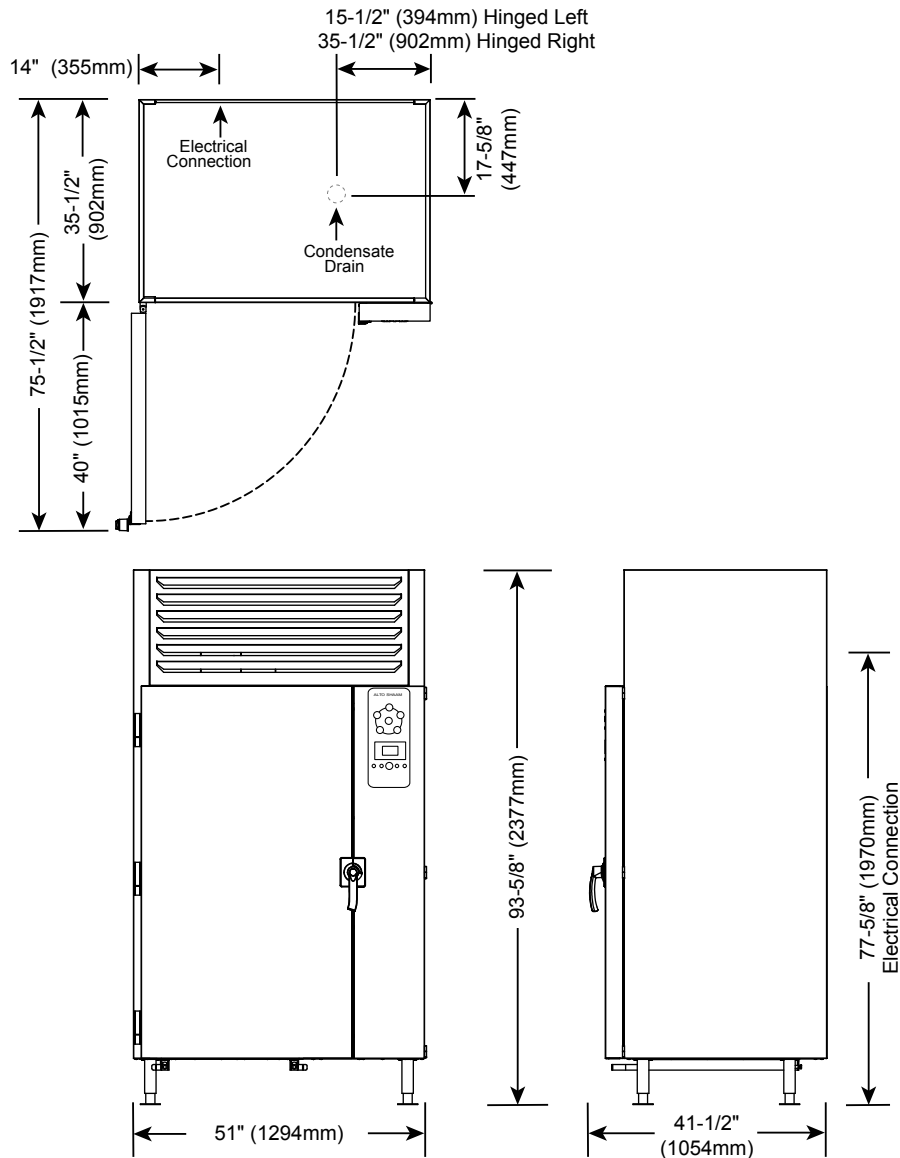




WEIGHT	
QC2-100 NET: 1000 lb (454 kg)	SHIP: 1186 lb (538 kg) est
Pan Cart NET: 120 lb (54 kg)	SHIP: 161 lb (73 kg)
Plate Cart NET: CONTACT FACTORY	SHIP: CONTACT FACTORY
CARTON DIMENSIONS: (L x W x H)	
57" x 44" x 94" (1448mm x 1118mm x 2388mm)	
REFRIGERATION	
200 oz. R-404a Refrigerant	
One (1) 3 hp Condensing Unit:	
FREEZE MODE: 11,300 BTU's per hour at -5°F (-21°C)	
CHILL MODE: 21,600 BTU's per hour at +20°F (-7°C)	

PRODUCT/PAN CAPACITY	
Maximum Product Capacity	
Approximately 480 lb (218 kg) MAXIMUM	
VOLUME MAXIMUM: 300 QUARTS (380 LITERS)	
Maximum Chilling Capacity	
Approximately 240 lb (109 kg) MAXIMUM	
VOLUME MAXIMUM: 150 QUARTS (190 LITERS)	
FULL-SIZE PANS:	GASTRONORM 1/1:
Forty (40) 20" x 12" x 2-1/2"	(530 x 325 x 65mm)
FULL-SIZE SHEET PANS:	
Twenty (20)* 18" x 26" x 1" on wire shelves only.	
* Extra optional wire shelves required for maximum capacity shown above.	

INSTALLATION

SITE INSTALLATION

QC2-100R

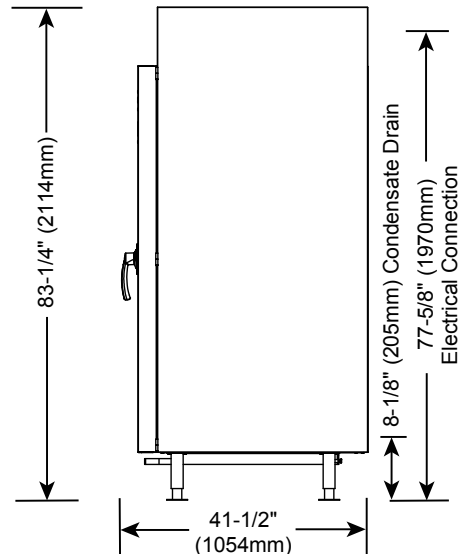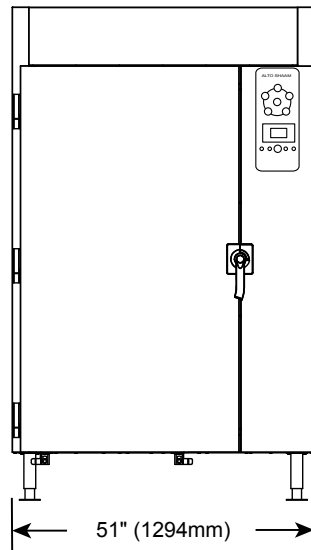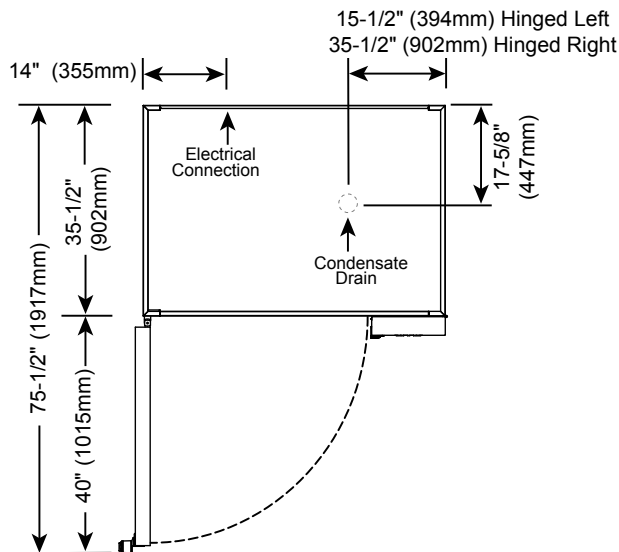

WEIGHT

QC2-100R NET: CONTACT FACTORY	SHIP: CONTACT FACTORY
Pan Cart NET: 120 lb (54 kg)	SHIP: 161 lb (73 kg)
Plate Cart NET: CONTACT FACTORY	SHIP: CONTACT FACTORY
CARTON DIMENSIONS: (L x W x H)	
57" x 44" x 93" (1448mm x 1118mm x 2362mm)	

REMOTE BTU REQUIREMENTS

FREEZE MODE: 14,690 BTU's at 90°F AMBIENT
-5°F (-21°C) EVAPORATOR TEMPERATURE

PRODUCT\PAN CAPACITY


Maximum Product Capacity	
Approximately 480 lb (218 kg) MAXIMUM	
VOLUME MAXIMUM: 300 QUARTS (380 LITERS)	
Maximum Chilling Capacity	
Approximately 240 lb (109 kg) MAXIMUM	
VOLUME MAXIMUM: 150 QUARTS (190 LITERS)	
FULL-SIZE PANS:	GASTRONORM 1/1:
Forty (40)	20" x 12" x 2-1/2" (530 x 325 x 65mm)
FULL-SIZE SHEET PANS:	
Twenty (20)* 18" x 26" x 1" on wire shelves only.	
* Extra optional wire shelves required for maximum capacity shown above.	

INSTALLATION

OPTIONS AND ACCESSORIES

MODEL >	QC2-3	QC2-20	QC2-40	QC2-100	QC2-100 REMOTE
Casters, 3" (76mm) [SET OF 4]	5014890	—	—	—	—
Casters, 5" (127mm) [SET OF 4]	5014751	5014751	5014751	—	—
HACCP Documentation, Data Logger <ul style="list-style-type: none"> On-board Datalogger technology maintains accurate and timely recordkeeping Register start time and end time Register start temperature and end temperature Interim time and temperature reporting is captured at 5 minute intervals USB downloads facilitate record keeping on department management PC's Electronic HACCP record keeping can be imported into excel formats for use in report writing and charting Controller will retain all information until downloaded Program utilizes 20 standard product names 	CC-35050	CC-35050	CC-35050	CC-35050	CC-35050
Legs, 7" (178mm) for countertop applications [SET OF 4]	5014889	—	—	—	—
Legs, 9" (229mm) for floor standing applications [SET OF 4]	5014891	—	—	—	—
Prechill Sealing Strip	—	—	—	SA-35079	SA-35079
Roll-In Pan Cart (Trolley) 66-1/16" x 28-15/16" x 35-3/16" (1678 x 734 x 892mm)	—	—	—	UN-27970	UN-27970
Roll-In Plate Cart (Trolley) 78 plate capacity 65-1/2" x 30-5/16" x 39-9/16" (1663 x 770 x 1004mm) 108 plate capacity 65-15/16" x 28-1/8" x 39-13/16" (1673 x 714 x 1011mm)	—	—	—	UN-28311 UN-27971	UN-28311 UN-27971
Wire Shelves, Stainless Steel	—	—	SH-22584	SH-22473	SH-22473
Wire Shelves, Coated	SH-35114	SH-35115	—	—	—
Side Racks [2 NEEDED] - TEN (10) NON-TILT PAN SLIDES SPACED ON 1.9" (48mm) CENTERS	—	SR-29969	—	—	—
Side Rack Pin, Long [2 NEEDED]	—	PI-29939	—	—	—
Side Rack Pin, Short [2 NEEDED]	—	PI-35828	—	—	—
Side Rack Holder [2 NEEDED]	—	SR-35829	—	—	—
Stacking Kit, 7•14 over QC2-20	—	5015155	—	—	—

SR-35827 - Slide in Rack, QC2-20 (Standard)

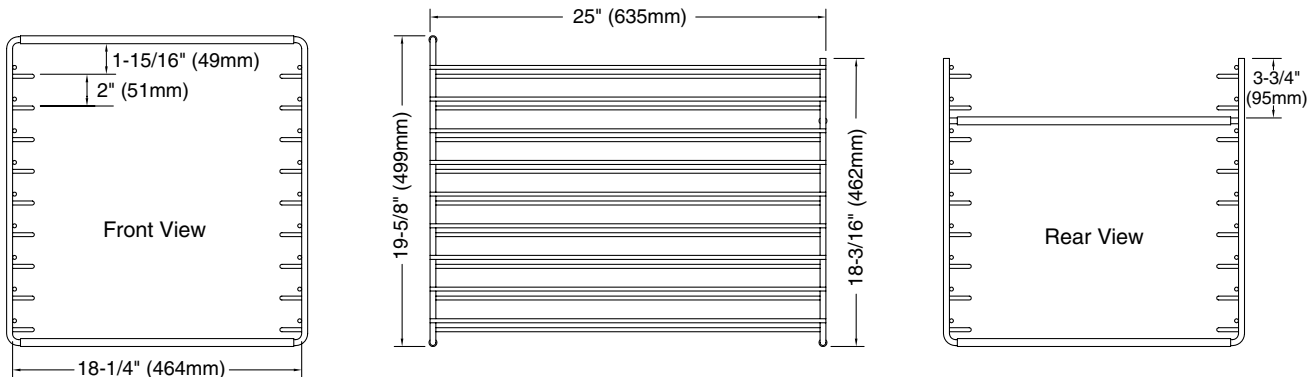

INSTALLATION

ELECTRICAL

This appliance must be branch circuit protected with proper ampacities, in accordance with the wiring diagram. The Quickchiller must be properly grounded in accordance with the National Electrical Code and applicable local codes. Wire size for the main incoming power to the unit must match the minimum size listed in the specifications applicable to the specific Quickchiller model. For supply connections, locate the wire size listed in this manual.

Before operating the chiller, check all cable connections in the electrical connection area for tightness since connections can loosen during transport.

NOTE: After electrical connections have been completed, operate the appliance in any chilling mode for a period of 15 minutes and recheck the main power connections at the terminal block to make certain they remain tight.

DANGER



To avoid electrical shock, this appliance **MUST** be adequately grounded in accordance with local electrical codes or, in the absence of local codes, with the current edition of the National Electrical Code ANSI/NFPA No. 70. In Canada, all electrical connections are to be made in accordance with CSA C22.1, Canadian Electrical Code Part 1 or local codes.



DANGER



ELECTRICAL CONNECTIONS MUST BE MADE BY A QUALIFIED SERVICE TECHNICIAN IN ACCORDANCE WITH APPLICABLE ELECTRICAL CODES.

Wire diagrams are located near the top of the unit, close to the compressor or control panel.

ELECTRICAL SPECIFICATIONS

VOLTAGE	PHASE	CYCLE/HZ	QC2-3	QC2-20	QC2-40	QC2-100	QC2-100R REMOTE
115	1 ph	60 Hz	16A, 1.8kW 20 amps NEMA 5-20P	16A, 1.8kW 20 amps NEMA 5-20P	NOT AVAILABLE	NOT AVAILABLE	NOT AVAILABLE
115/208-230	1 ph	60 Hz	NOT AVAILABLE	NOT AVAILABLE	16A, 3.7kW 20 amps NEMA 14-20P	24A, 5.5kW 30 amps 4 wire direct	20A, 4.6kW 30 amps 4 wire direct
115/208-230	3 ph	60 Hz	NOT AVAILABLE	NOT AVAILABLE	NOT AVAILABLE	16A, 3.7kW 20 amps 5 wire direct	NOT AVAILABLE
220	1 ph	50 Hz	NOT AVAILABLE	14A, 1.8kW 20 amps 3 wire direct	20A, 4.4kW 30 amps 5 wire direct	20A, 4.4kW 30 amps 3 wire direct	16A, 3.5kW 20 amps 3 wire direct
380-420	3 ph	50 Hz	NOT AVAILABLE	NOT AVAILABLE	10A, 3.8kW 20 amps 5 wire direct	12A, 4.6kW 20 amps 5 wire direct	7A, 2.7kW 15 amps 5 wire direct

OPERATION

OPERATING INTRODUCTION

The Alto-Shaam® Quickchiller™ is a processing refrigeration system designed to rapidly and uniformly decrease the temperature of hot foods to either a chilled or frozen state. This process provides enhanced safety, longer storage life and better production efficiency.

Rapid reduction in the temperature of hot foods inhibits the growth of bacteria and provides a safe, five-day chilled food refrigerated storage period from the time of preparation to the time of service. Enhanced storage time offers the food service operation considerable production efficiency. As an example, a daily menu item can be reduced from daily preparation to a preparation schedule consisting of two days per week.

The Alto-Shaam Quickchiller can be effectively utilized in several types of food service programs:



1. TRADITIONAL COOK-SERVE KITCHENS —

Quick chilling can be used to help streamline production in operations where foods are prepared for immediate service. Preparation of labor intensive entrées can be scheduled for production several days before service. Chilling foods provides the ability to rethermalize these items at a later date while maintaining both safety and product quality.

2. MODIFIED COOK-CHILL OPERATIONS—

where a significant portion of food is cooked for immediate service and a smaller portion of more labor intensive, hot food items are prepared in advance, chilled and reheated when required for service.

3. FULL COOK-CHILL OPERATIONS —

where all hot food production is prepared in advance of service requirements and held in refrigerated prepared food inventories. Hot food preparation takes place over a five-day production schedule.

The Quickchiller cooling or freezing process is accomplished with the utilization of large compressors and fans that are electronically controlled through the parameters entered by the operator on the control panel located at the front of the cabinet. The Quickchiller provides the operator with the ability to chill food products to a set cavity temperature by time or by internal product temperature using one or more food probes. When the specified chill time has elapsed or the probe temperature(s) has been reached the

Quickchiller will convert to a holding mode at a temperature specified for either refrigeration or frozen product maintenance. The Quickchiller control maintains a record of the length operating time used for each current cycle. After the chill cycle has ended and the unit is maintaining a holding temperature mode, the chiller control will initiate an automatic defrost cycle when required.

OPERATION

CHILL PROCESSING CYCLES

The Alto-Shaam Quickchiller uses high velocity cold air circulation to remove heat from prepared foods for the purpose of rapidly reducing temperatures through the danger zone and providing maximum storage life. Cold air is evenly directed across each pan from the control side of every Quickchiller model to assure rapid cooling.

The high velocity cold air produced by the Quickchiller removes insulating layers of warm moist air that surrounds hot products. The rapid removal of these insulating layers of heat reduces food temperatures significantly faster than any other method of temperature reduction and provides enhanced food safety.

Because the basic performance of the Quickchiller relies on high velocity air movement around each container of food, it is important to load the food by placing pans directly into the pan slides. Always use the pan slides to support the edges of 12" x 20" steam table pans (GN 1/1). Use a wire shelf for pan support when using 18" x 26" sheet pans; 12" x 10" steam table pans (GN 1/2); loaf pans; entree plates; and other small containers.

	CAUTION
	TO MAINTAIN SANITATION CONTROL, ALL FOODS FOR QUICK-CHILL OR QUICK-FREEZE PROCESSING MUST BE AT A TEMPERATURE ABOVE 140°F (60°C) AND MUST BE TIGHTLY COVERED.

QUICKCHILLER OPERATION MODES

► PROCESSING WITH THE USE OF PROBES

Probe usage provides chill or frozen food processing activation and termination through use of a food probe or probes inserted into the center of the food. The cycle is automatically terminated when the center of the food reaches the probe sensing temperature set by the operator. In units with multiple probes, all probes must reach the sensing temperature set by the operator to trigger automatic termination of the cycle.

► PROCESSING BY TIME

The time mode provides processing activation and termination based on a timed cycle selected by the operator. Upon expiration of the timed cycle, the cabinet automatically reverts to the designated holding cycle temperature.


► HOLDING

Following processing completion, a holding cycle maintains the temperature to safely hold foods after processing. The holding cycle will also maintain a holding compartment temperature between processing cycles.

INITIAL QUICKCHILLER OPERATION

PRECHILLING THE CABINET

The Quickchiller should be prechilled prior to placing hot foods into the cabinet. In models equipped with an optional roll-in cart (trolley), always maintain an empty food cart inside the chiller when prechilling to eliminate air loss through the bottom of the chiller cabinet door. An optional *Prechill Sealing Strip* (Item #SA-35079) may also be used for this purpose.

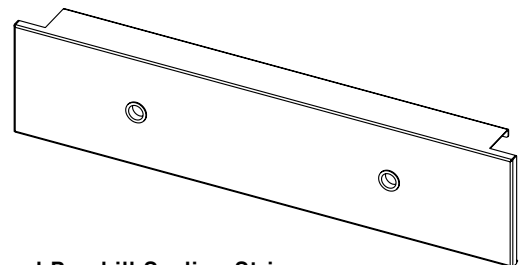

Optional Prechill Sealing Strip
SA-35079

OPERATION

ADDITIONAL INFORMATION

- Clean the Quickchiller and probes prior to use and make certain all processing modes are operating properly before chilling or freezing foods.
- To maintain proper operation of the Quickchiller, always allow the unit to defrost whenever the **"DEFROST OVERDUE"** warning appears in the display.
- For optimum performance, allow the Quickchiller to prechill for a minimum of 30 minutes before loading pans of food.
- Never overload the Quickchiller.
- It is important to be familiar with and adhere to all local food codes.
- Cook foods properly in preparation for blast chilling or freezing.
- Foods should be portioned into shallow pans to a depth not to exceed 2-inches (51mm).
- Pans must be covered prior to the chilling or freezing process.
- Always follow the recommended shelf life for chilled food products. Hold chilled foods under refrigeration for a maximum of 5 days including the day of production and the day of consumption.
- According to U.S. food code regulations, all chilled products must be reheated to an internal temperature of 165°F (74°C) prior to serving.

DOOR

If the Quickchiller door is opened during any running chill or freeze cycle, the fans will disengage. When the door is closed, the fans will reengage and the chiller will resume operation. When the door is opened, the display will reverse. When the unit is in operation and not in the "off mode", a **"DOOR OPEN"** message will appear on the display along with the normal chill data. If the door is open for more than 2 minutes, then the beeper will sound every 10 seconds.

FAN OPERATION

During the initial cooling of the Quickchiller, an evaporator fan delay system will prevent the chilling fans from engaging until the evaporator coil temperature is below 30°F (-1°C). The fans will continue to run until the evaporator coil temperature is above 60°F (16°C).

The Quickchiller will only trigger an automatic defrost cycle during the refrigerated **Hold Temp** mode. If the chiller is in any other mode when the 6-hour Fan Timer limit plus one additional hour has elapsed, the display will indicate a warning message **"DEFROST OVERDUE"** and the control will produce an audible signal every ten seconds until a defrost is conducted.








POWER OUTAGE


"POWER WAS OFF" will appear in the display whenever operation is interrupted by a power outage. The control will produce an audible signal every 10 seconds and the display will indicate the amount of time the power was off. If consecutive power outages occur before the first outage has been acknowledged, the control will accumulate the total amount of outage time up to a period of 4 hours. After a period of 24 hours, accumulated time will be shown as greater than 24 hours, i.e., **>24**.

Press the **PROGRAM** key to clear the display and stop the audible signal.

OPERATION


CONTROL PANEL IDENTIFICATION

- 1  **ON/OFF POWER BUTTON.**
- 2  **SOFT CHILL ...** To rapidly decrease the temperature of foods by internal product probe temperature or time within a range of 24°F to 36°F (-4°C to 2°C). Soft Chill is recommended for less dense food items that chill quickly. The mode automatically converts to a refrigerated holding temperature at the end of the chill cycle.
- 3  **HOLD TEMP ...** The mode for refrigerated storage within a temperature range of -5°F to +40°F (-21°C to +4°C). Hold Temp offers continuous refrigerated storage without the utilization of food probes or a timer. Hold Temp always defaults to the default hold temperature, found under the User Settings.
- 4  **HARD CHILL ...** To rapidly decrease the temperature of foods by internal product probe temperature or time within a range of 11°F to 23°F (-11°C to -5°C). Hard Chill is recommended for more dense food items. The mode automatically converts to refrigerated holding temperature at the end of the chill cycle.
- 5  **QUICK FREEZE ...** The mode for rapid freezing and frozen food maintenance by internal product probe temperature or time within a temperature range of -10°F to +10°F (-23°C to -12°C). The mode automatically converts to a frozen food holding temperature at the end of the quick freeze cycle.
- 6  **START/STOP ...** Button used to initiate operating modes, set time and temperatures, and to set specific chiller program functions or settings.
- 7  **PROGRAM ...** Button used to modify or select specific chiller programming functions or settings.

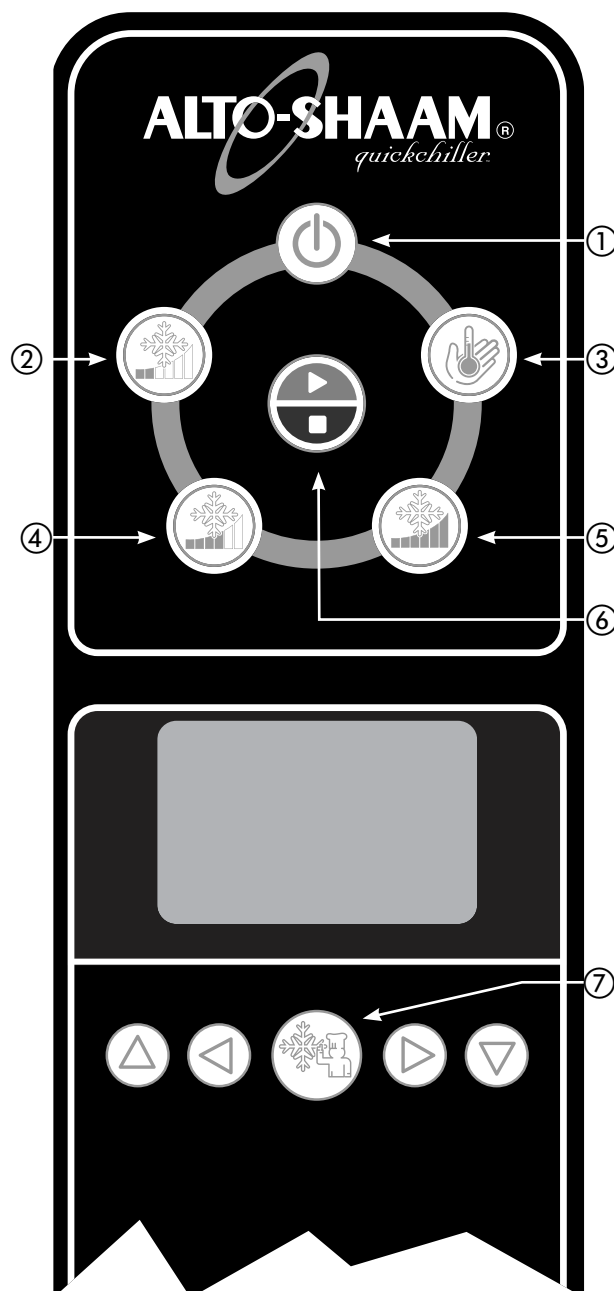



OPERATION

BASIC OPERATION

1.  Starting from the OFF position, press the power key ON.


The Alto-Shaam name will illuminate and the **SELECTION SCREEN** will appear on the display. The compressor will become energized and will begin to operate if required by the sensors.

2. Press the desired mode key. Mode will operate at last settings entered.

- a.  **Soft Chill** - Select Soft Chill for less dense items such as fish or vegetables.
- b.  **Hard Chill** - Select Hard Chill for items such as meats or casseroles.
- c.  **Quick Freeze** - Select Quick Freeze to freeze items and transfer them directly to your freezer.
- d.  **Hold Temp** - Used to hold chilled items at a refrigerated temperature.

Note: The Alto-Shaam Quickchiller uses high velocity cold air circulation to remove heat from prepared foods. Therefore pans must be covered prior to the chilling or freezing process to prevent food from drying out.

3.  Press the **START/STOP** key to begin your chill or hold cycle.

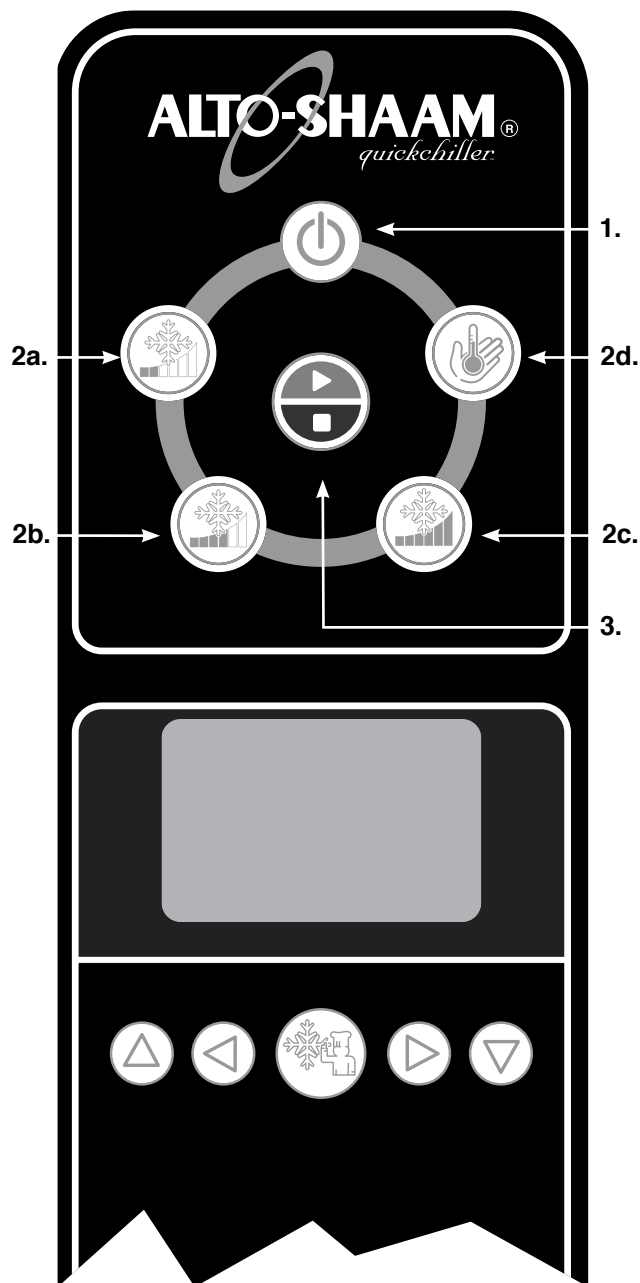

CAUTION



NEVER STACK PANS DIRECTLY ON TOP OF EACH OTHER. STACKED PANS WILL RESTRICT AIR FLOW AND INCREASE CHILL PROCESSING TIME.

CAUTION



ADEQUATE SPACING MUST BE ALLOWED BETWEEN PANS FOR PROPER AIR CIRCULATION FOR BOTH PROCESSING AND SUBSEQUENT HOLDING.

OPERATION

ADVANCED OPERATION

The date and time will appear in the display when the unit is off. When the unit is turned on, the screen will read: “**SELECT MODE OR PRESS START TO SELECT PRESET**”

To initiate any Quickchiller operating mode, power must initially start from the **OFF** position or an operating mode must be halted by pressing the **START/STOP** key so that the **SELECTION SCREEN** appears on the display.

NOTE: With the exception of the QC2-3 counter top Quickchiller model, the Alto-Shaam name on the control panel will illuminate whenever the power key is pressed to the **ON** position.

HOLD TEMP



Starting from the **OFF** position, press the power key **ON**. The **SELECTION SCREEN** will appear on the display. The compressor will become energized and will begin to operate if required by the sensors.



Press the **HOLD TEMP** key. The display will indicate the default hold temperature (changeable in User Settings).

To change the displayed temperature, press the up **▲** or down **▼** arrow key to increase or decrease the temperature display within the refrigeration storage parameters of the **Hold Temp** mode -5°F to +40°F (-21°C to +4°C).

NOTE: THE MODIFIED HOLDING TEMPERATURE SET-POINT IS NOT SAVED. THE DEFAULT HOLD TEMPERATURE CAN BE CHANGED UNDER USER SETTINGS.



Press the **START/STOP** key to begin operation of the Quickchiller in the **Hold Temp** mode.

The display will indicate:

1. The length of time the chiller is operating in the **Hold Temp** mode.
2. The temperature set by the operator.
3. The air temperature inside the chiller compartment.
4. The temperature of all food probes.

WHEN IN THE HOLD TEMP MODE AFTER A CHILL MODE:

Press the **UP ▲** arrow key to display the maximum sensor temperature achieved during the completed chill cycle. Press the **DOWN ▼** arrow key to display the minimum sensor temperature achieved during the completed chill cycle. Press the right **►** or left **◄** arrow key to display the Probe Done Time.

CAUTION



NEVER STACK PANS DIRECTLY ON TOP OF EACH OTHER. STACKED PANS WILL RESTRICT AIR FLOW AND INCREASE CHILL PROCESSING TIME.

CAUTION




ADEQUATE SPACING MUST BE ALLOWED BETWEEN PANS FOR PROPER AIR CIRCULATION FOR BOTH PROCESSING AND SUBSEQUENT HOLDING.

OPERATION

ADVANCED OPERATION

QUICK FREEZE, HARD CHILL, SOFT CHILL

MANUAL OPERATION

1.  Starting from the OFF position, press the power key ON.

The Alto-Shaam name will illuminate and the **SELECTION SCREEN** will appear on the display. The compressor will become energized and will begin to operate if required by the sensors.

2. Press the desired mode key.



The display will give an overview of the current set-temperatures for the mode.



If the current settings are acceptable, press the **START/STOP** key to begin your chill cycle.



If modifications are required, press the **PROGRAM** key and proceed to **step 3**.

3. The display will require the operator to select between chilling by **PROBE** or by **TIME**.


Select the desired chill method (time or probe) by pressing the right ► or left ◄ arrow keys.



Press the **PROGRAM** key to continue.

- 3a. If **TIME** was selected, use the right ► or left ◄ arrow keys to highlight chill, hold, or time, then press the up ▲ or down ▼ arrow keys to change accordingly.
- 3b. If **PROBE** was selected, select top, middle and lower probe using right ► or left ◄ arrow keys and then press the up ▲ or down ▼ arrow keys to change accordingly.

NOTE: QC2-3 and QC2-20 will display only one probe.

4.  Once the desired settings are entered, press the **START/STOP** key to begin chilling.

Chilling by Time

When chilling by time, the display will indicate a count-down of the time, the air temperature, and the temperature of each food probe. After time has expired, the chiller will automatically convert to the set holding mode.

Chilling by Probe

When chilling by probe, the display will indicate the length of time the product has been chilling, the interior compartment set temperature, and the air temperature. The display will also indicate the temperature of each probe along with "ACT." to advise the operator that the individual probe is active. As each probe reaches the set point value, the display will indicate "DONE." When all probes reach the individual set point value, the chiller will automatically convert to the holding mode.

Note: When a removable probe is unplugged, it is assumed to be at the set-point, and it will display "UNPLUGGED" on the display instead of the actual and temperature set points.

WHEN IN THE HOLD TEMP MODE AFTER CHILLING BY PROBE:

Press the **RIGHT ►** or **LEFT ◄** arrow key to display the length of time it took for each probe to achieve set temperature.

THIS DATA IS RETAINED UNTIL A NEW PROBE CYCLE IS COMPLETED.

FACTORY DEFAULT SET POINTS

Quickchiller >		Default Set Points		
Preset	Mode	Chill	Probe	Hold
1. Beans	Hard Chill	14°F	38°F	38°F
2. Beef	Hard Chill	14°F	38°F	38°F
3. Casserole	Hard Chill	14°F	38°F	38°F
4. Chicken Breast	Soft Chill	34°F	38°F	38°F
5. Chicken Whole	Hard Chill	14°F	38°F	38°F
6. Duck	Hard Chill	14°F	38°F	38°F
7. Fish	Soft Chill	34°F	38°F	38°F
8. Ground Meat	Hard Chill	14°F	38°F	38°F
9. Lamb	Hard Chill	14°F	38°F	38°F
10. Lasagna	Hard Chill	14°F	38°F	38°F
11. Pork	Hard Chill	14°F	38°F	38°F
12. Potatoes	Hard Chill	14°F	38°F	38°F
13. Rice	Hard Chill	14°F	38°F	38°F
14. Sauce	Hard Chill	14°F	38°F	38°F
15. Sheet Cake	Soft Chill	34°F @ 10 min.	—	38°F
16. Soup	Hard Chill	14°F	38°F	38°F
17. Stew	Hard Chill	14°F	38°F	38°F
18. Stuffing	Hard Chill	14°F	38°F	38°F
19. Turkey	Hard Chill	14°F	38°F	38°F
20. Vegetables	Soft Chill	34°F	38°F	38°F

OPERATION

ADVANCED OPERATION — PRESET PROGRAMMING

PRESET PROGRAM OPERATION



1. Starting from the **OFF** position, press the power key **ON**. The Alto-Shaam name will illuminate and the **SELECTION SCREEN** will appear on the display. The compressor will become energized and will begin to operate if required by the sensors.
2. At the **SELECTION SCREEN** press the **START/STOP** key to access the presets.

The first five of the following preset menu selections will appear in the display.


PRESET SELECTIONS	
1. Beans	11. Pork
2. Beef	12. Potatoes
3. Casserole	13. Rice
4. Chicken Breast	14. Sauce
5. Chicken Whole	15. Sheet Cake
6. Duck	16. Soup
7. Fish	17. Stew
8. Ground Meat	18. Stuffing
9. Lamb	19. Turkey
10. Lasagna	20. Vegetables

3.

Press the up ▲ or down ▼ arrow keys to scroll through the preset menu items.

4.  When desired preset is highlighted, press the **START/STOP** key.
The Quickchiller will show the values previously programmed by the operator or will begin chilling if the Presets are locked.
5.  Press the **START/STOP** key again to begin operation.

PROGRAMMING PRESETS

1. Starting from the **OFF** position, press the power key **ON**. The Alto-Shaam name will illuminate and the **SELECTION SCREEN** will appear on the display. The compressor will become energized and will begin to operate if required by the sensors.
2. At the **SELECTION SCREEN** press the **START/STOP** key to access the presets.
3. Press the up ▲ or down ▼ arrow keys until the arrow points to the preset menu program desired.
4.  Press the **START/STOP** key.

Press the desired mode key.




Press the up ▲ or down ▼ arrow keys to adjust temperature. **Skip to Step 6.**

The display will give an overview of the current set-temperatures for the mode.



To change the settings for the desired mode, press the **PROGRAM** key.

5. The Display will require the operator to select between chilling by **PROBE** or by **TIME**.
Select the desired chill method (time or probe) by pressing the right ► or left ◀ arrow keys.
 - a. If **TIME** was selected, use the right ► or left ◀ arrow keys to highlight chill, hold, or time, then press the up ▲ or down ▼ arrow keys to change accordingly.
 - b. If **PROBE** was selected, select top, middle and lower probe using right ► or left ◀ arrow keys and then press the up ▲ or down ▼ arrow keys to change accordingly.

NOTE: QC2-3 and QC2-20 will display only one probe.
6.  If settings are acceptable, press the **START/STOP** key. The preset settings will be saved and the operation will begin.

OPERATION

ADVANCED OPERATION – USER SETTINGS

CHANGING USER SETTINGS



Starting from the **OFF** position, press the power key **ON**. The Alto-Shaam name will illuminate and the **SELECTION SCREEN** will appear on the display. The compressor will become energized and will begin to operate if required by the sensors.



Press the **PROGRAM** key. The display will indicate the User Settings each time the **Program** key is pressed.

USER SETTINGS	
1. Start Manual Defrost	8. HACCP Download
2. Defrost Frequency	9. Probe Verification
3. Language	10. Preset Lock
4. Date - YYYY/MM/DD	11. Chill Mode Lock
5. Time - HH:MM	12. Defrost Time (Minutes)
6. °F/°C - Fahrenheit/Celsius	13. Drip Time (Minutes)
7. Hold Default	14. Factory Settings

Press the up ▲ or down ▼ arrow keys to select the desired User Setting. Press the right ► or left ◀ arrow keys to change the value.



Press the **PROGRAM** key to save settings and return to the **SELECTION SCREEN**.

PROGRAMMING USER SETTINGS

1. START MANUAL DEFROST



Select **Start Manual Defrost** and press the **START/STOP** key to initiate a manual defrost cycle. The defrost cycle will complete operation when the temperature of the coil or coils reach set-point values or after a user set period has been reached, whichever occurs first.

2. DEFROST FREQUENCY

The display will indicate the length of time necessary to accrue before the Fan Timer triggers an automatic defrost cycle. The length of time can be adjusted by pressing the right ► or left ◀ arrow keys to increase or decrease automatic defrost cycle time (4-10 hours).

3. LANGUAGE

The display will indicate the currently selected language. Press the right ► or left ◀ arrow key to select English, Spanish, or French as the language of choice.

4. DATE

The display will indicate **YEAR, MONTH, and DAY OF MONTH** (YYYY/MM/DD). Press the up ▲ or down ▼ arrow key to select the date, time, and day, and the right ► or left ◀ arrow key to increase or decrease the numbers as required.

5. TIME

The display will indicate the current **TIME** of day (HH:MM). Press the up ▲ or down ▼ arrow key to select the hours or minutes and the right ► or left ◀ arrow key to increase or decrease the numbers as required.

6. °F/°C - FAHRENHEIT/CELSIUS

The display will indicate a choice between **Celsius** and **Fahrenheit** for Quickchiller temperature display readings. Press the right ► or left ◀ arrow key to toggle the setting.

7. HOLD DEFAULT

The display will indicate the default **HOLD** temperature. Press the right ► or left ◀ arrow key to increase or decrease the default holding temperature between a range of -5°F to +40°F (-21°C to +4°C).

OPERATION

ADVANCED OPERATION – USER SETTINGS

8. HACCP DOWNLOAD

(Only on units with optional HACCP Datalogger)

Insert USB data stick into data port on front of the unit. Display will indicate USB.



Press the **PROGRAM** key and then press the down ▼ arrow key until "HACCP Download" is selected.



Press the **START/STOP** key. Display will indicate USB and the % status copied to USB data stick. When 100% is displayed, transfer is complete. Pull the data stick out of the data port.

All data has been transferred to the USB stick and is erased from the control. A folder called "haccp" is created on the USB data stick containing dated excel file names for each chilling mode or defrost cycle since the last HACCP download.



USB Data Port

Sample of Excel Data File - Chill Mode

	A	B	C	D	E	F	G	H	I	J
1	QC Serial Number	80:00:2E								
2	USB Software Version:	0.1								
3	Start Time	9/8/11 7:46								
4	Program Name	Beans								
5	Chill Mode	Hard Chill								
6	Cavity Set Temperature (F)	14								
7	Hold Set Temperature (F)	38								
8	Chilling by:	Probe								
9	Top Probe Set-Temperature (F)	38								
10	Middle Probe Set-Temperature (F)	38								
11	Bottom Probe Set-Temperature (F)	38								
12										
13										
14										
15	Date	Time	Mode	Cavity Set-Temperature (F)	Cavity (F)	Top (F)	Middle (F)	Bottom (F)	Additional Information	
16	9/8/11	7:46:29	Holding	38	44	34	32	35		
17	9/8/11	7:46:29	Holding	38	44	34	32	35		
18										
19										
20										
21										

OPERATION

ADVANCED OPERATION – USER SETTINGS

9. PROBE VERIFICATION

With the probe verification selected, press the Start key to enter the probe verification mode.

The offset and the temperature will display for:

- Top Probe (WHERE APPLICABLE)
- Middle Probe (WHERE APPLICABLE)
- Bottom Probe (WHERE APPLICABLE)

If probe calibration is needed, place the probe in a glass of ice-water and let the probe settle in temperature. The temperature in the glass should be 32°F (0°C).

To calibrate, Press up ▲ or down ▼ arrow key to adjust between the probes, and the right ► or left ◀ arrow keys to adjust the calibration value.



Press the **PROGRAM** key to exit probe calibration mode.

10. PRESET LOCK (0=UNLOCKED, 1=LOCKED)



If the presets are locked, pressing START on the desired preset will skip the mode overview and will start immediately. Factory default is **LOCKED**.

11. CHILL MODE LOCK (0=UNLOCKED, 1=LOCKED)



If the chill modes are locked, pressing the chill mode button will skip the mode overview and will start immediately. Factory default is **UNLOCKED**.

12. DEFROST TIME (MINUTES)

This is the amount of time the defrost function will run before automatically switching back to the chilling mode. Factory default setting is 20 minutes. The user may select a range from 10-30 minutes using the right ► or left ◀ arrow key to increase or decrease the numbers as required.

13. DRIP TIME (MINUTES)

This is the amount of time the drain heater will run after a hot-gas defrost function before automatically switching back to the chilling mode. Factory default setting is 10 minutes. The user may select a range from 5-15 minutes using the right ► or left ◀ arrow key to increase or decrease the numbers as required.

14. FACTORY SETTINGS


Resets all presets and user-defined settings to factory default settings. **Warning: Pressing Factory Reset will erase all User Settings and Presets programmed by the user. All custom User Settings and Presets will need to be reprogrammed.**

OPERATION

FOOD PROBE USE

Unpacking Food Probes

1. Cut and remove the plastic ties keeping the probe cables coiled during shipment.
When removing the ties, exercise caution to avoid accidentally cutting the black plastic covers on the probe cable wires.
2. Uncoil the probe cables and insert the metal portion of each probe into the bracket mounted on the inside of the cabinet. Proper probe placement is in the following sequence:
Place the top probe (Product Probe 1) in the top bracket. On equipped models, place the center probe (Product Probe 2) in the middle bracket, and place the bottom probe (Product Probe 3) in the bottom bracket position.
3. Before using the probes, wipe each probe and probe tip with a disposable alcohol pad to clean and sanitize.

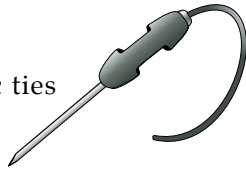

Probe Cleaning Procedures

1. Remove all food residues from probes between loads and at the end of each production shift. Wipe the entire probe, cable assembly, and probe holding bracket with warm detergent solution and a clean cloth.
2. Remove detergent by wiping each probe, probe cable, and holding bracket with clean rinse water and a cloth.
3. Wipe probes and probe brackets with disposable alcohol pad or sanitizing solution recommended for food contact surfaces.
4. Replace the probe into the proper probe bracket. Allow the probe and cable to air dry.
5. Wipe the each probe with a disposable alcohol pad prior to inserting the probe into a new food product.

Daily Prong Cleaning

To ensure accurate internal product temperature readings, the prongs on the removable probe must be cleaned daily.

1. Remove all food debris from prongs at the end of each production shift. Wipe the entire prong casing, and between each prong with a warm detergent solution and a clean cloth.
2. Remove detergent by wiping with clean rinse water and a cloth.
3. Allow prongs to air dry before replacing detachable probe.



USER INFORMATION

Time & Temperature Guidelines

To assure quality and safety in chilled processed food handling, it is important to observe the following guidelines.

1. All foods should be covered prior to chill or freeze processing.
2. The temperature of foods should be rapidly reduced from 140°F to 40°F (60°C to 4°C) within a period of 4 hours.
3. Foods can be safely removed from the chiller cabinet at a product temperature of 40°F (4°C) or lower.
4. Chilled foods should be stored under refrigeration designed to hold products at 34° to 38°F (1° to 3°C) for a maximum of 5 days or less. A 5-day shelf life includes the day of production and the day of consumption.
5. All potentially hazardous cooked foods that have been chilled followed by reheating and hot food holding must be reheated to a minimum core temperature of 165°F (74°C) for 15 seconds prior to serving. Refer to local food codes for possible exceptions.
6. Always reference and adhere to local food codes and HACCP guidelines with regard to time and temperature for chilling or frozen food processing.

Automatic Defrost

The Quickchiller will only trigger an automatic defrost cycle during the refrigerated **Hold Temp** mode. If the chiller is in any other mode when the Fan Timer limit plus one additional hour has elapsed, the display will indicate a warning message "**DEFROST OVERDUE**" and beep every 10 seconds until a defrost is conducted. A defrost can be initiated manually as indicated under User Settings in this manual, or by allowing the Quickchiller to enter the **Hold Temp** mode.

**ALLOW A MINIMUM
OF 30 MINUTES OF
PRECHILL TIME BEFORE
PROCESSING.**

OPERATION

FOOD HANDLING GUIDELINES

PRODUCT COVERING

To maintain sanitation control when loading the Quickchiller, foods should be above 140°F (60°C) and should be tightly covered. A tight cover is an important part of proper chilling methods and must be used to prevent the possibility of accidental contamination by airborne bacteria.

Stainless steel pan covers may be used. Stainless steel covered pans must include a label indicating pan contents and use-by date. A cover of clear plastic wrap is also acceptable.

When using plastic wrap as a food covering, make certain the wrap comes in direct contact with the surface of the product and extends around and down each side of the pan. This is an important step to ensure proper chilling times. Spacing left between the plastic wrap and the surface of the food creates an insulating air gap resulting in more product heat retention and a slower chilling rate.

Meat roasts and other larger, dense products should be no larger than a weight of 8 to 10 pounds (4 to 5 kg) per item. Because of the density of these products, chilling could take up to 4 hours. Due to longer chilling time required, it is also suggested these items be chilled at the end of the day with the chiller set in the automatic chill/hold mode. This method provides the operator with fully chilled product holding at a refrigerated temperature on the following day.

Prior to chilling, roasts must be wrapped in clear plastic and placed in the chiller. ***Do not slice roasted meats until the day of service.***

Portioned meat products such as pork chops or meat patties should be chilled directly on the sheet pans on which they were cooked. Cover the sheet pans with clear plastic wrap for chilling. After chilling, this type of product can be placed in steam table pans for refrigerated storage.

PORTIONING & PACKAGING

1. During portioning and packaging operations, all foods should be maintained at or above 140°F (60°C), or below 40°F (4°C).
2. If cooked foods exceed the processing capacity of the Quickchiller, place hot product in an appropriate back-up hot holding device such as an Alto-Shaam® Halo Heat Combimate holding cabinet which will accommodate a roll-in cart (trolley). Hold hot foods at a temperature above 140°F (60°C).

If a hot food holding cabinet is not available, place hot foods in short-term refrigerated storage until these products can be loaded into the Quickchiller for the next available processing cycle. Production of cooked foods should not exceed the processing capabilities of the chiller, therefore, do not adopt short-term refrigeration as a routine practice but use only in an emergency situation.

3. Fill containers to a 12 pound (5kg) limit or maximum depth of 2" (51mm) of product. Do not use plastic or Lexan® containers.
4. For faster cooling, place lids and over-wrap materials directly on the surface of foods. As previously indicated, air trapped between the lid and food surface acts as an insulator and will increase chill time.
5. For faster chilling times, place low profile foods such as chicken quarters, fish fillets, or ribs in low depth containers such as 1-1/2" (38mm) deep sheet pans.
6. Large cuts of meat and poultry that weigh a maximum of 8 to 10 pounds (4 to 5 kg) maximum should be individually wrapped with tight fitting film and placed on sheet pans in the chill cabinet.

OPERATION

QUICKCHILLER PAN CAPACITY:

The following Quickchiller Capacity Chart indicates the number of pans that can be accommodated in the appropriate size chiller for the chilling or freezing function. Additional pans can be accommodated *only* when using the Quickchiller for holding at a refrigerated temperature or at a maintenance temperature for frozen food.

DO NOT OVERLOAD THE QUICKCHILLER FOR THE PROCESSING FUNCTION.

CHILLING PAN CAPACITY CHART

CHILLER MODEL	NO. PANS	STANDARD PAN SIZES	TOTAL WEIGHT	GASTRONORM PAN SIZES	TOTAL
QC2-3	3	12" x 20" x 2-1/2" pans	36 lb	530mm x 325mm x 65mm 1/1	16 kg
QC2-20	5 10*	12" x 20" x 2-1/2" pans 18" x 26" x 1" pans	60 lb 60 lb	530mm x 325mm x 65mm 1/1 n/a	27 kg
QC2-40	20 10	12" x 20" x 2-1/2" pans 18" x 26" x 1" pans	160 lb 60 lb	530mm x 325mm x 65mm 1/1 n/a	73 kg
QC2-100	24† 48*† 20*†	12" x 20" x 2-1/2" pans 12" x 10" x 2-1/2" pans 18" x 26" x 1" sheet pans	240 lb 240 lb 120 lb	530mm x 325mm x 65mm 1/1 265mm x 325mm x 65mm 1/2 n/a	109 kg 109 kg

*ADDITIONAL WIRE SHELVES REQUIRED FOR MAXIMUM CAPACITY

†POSITION PANS ON EVERY OTHER RAIL

PRODUCT CAPACITY PER PAN:

Foods for chill or freeze processing should be portioned into shallow pans to a depth *not to exceed* 2-inches (51mm). The individual pan capacity chart below is provided as a general guideline to help determine the number of processing loads required for the total quantity of food to be processed.

INDIVIDUAL PAN CAPACITIES

Steam Table Pan:	12" x 20" x 2-1/2"	12 lb	Gastronorm 1/1	530mm x 325mm x 65mm	5,4 kg
Steam Table Pan:	12" x 10" x 2-1/2"	6 lb	Gastronorm 1/2	265mm x 325mm x 65mm	2,7 kg
Full-Size Sheet Pan:	18" x 26" x 1"	6 lb	n/a	—	—
Half-Size Sheet Pans:	18" x 13" x 1"	3 lb	n/a	—	—

EXAMPLE: 132 lb per batch ÷ 12 lb per 12" x 20" x 2-1/2" pan = **11 PANS**

60 kg per batch ÷ 5,4 kg per 325mm x 530mm x 65mm pan = **11 PANS**

OPERATION

THE FOLLOWING CHART OF PORTION SIZES AND SERVING CAPACITY
PER PAN IS PROVIDED AS A GENERAL REFERENCE ONLY.

PORTION SIZES and PAN CAPACITIES			
PAN SIZE >	12" x 20" x 2-1/2"	325 x 530 x 65mm	
FOOD CATEGORY	SERVING SIZE	METRIC EQUIVALENT SERVING SIZE	SERVINGS PER PAN
BREAKFAST ITEMS:			
Griddle Cakes, Waffles, French Toast (2 TO 3 EACH)	4 oz	113 gm	48
Eggs	2 to 4 oz	57 to 113 gm	96 to 48
Breakfast Meats	2 oz	57 gm	96
Cooked Cereals or Grains	4 oz	113 gm	48
Fruit Compote	4 oz	113 gm	48
Meat, Poultry, Fish, Seafood	4 oz	113 gm	48
Casseroles and Extended Dishes	6 to 8 oz	170 to 227 gm	32 to 24
Vegetables	4 oz	113 gm	48
STARCHES:			
Potato, Rice, Pasta, Stuffings, Beans	4 oz	113 gm	48
Gravies and Au Jus	2 oz	57 gm	96
Sauces	4 oz	113 gm	48
Protein and Starch-Based Salads	4 to 6 oz	113 to 170 gm	48 to 32
DESSERTS:			
Pudding, Custard, Mousse, Jello	4 oz	113 gm	48

CARE AND CLEANING

CLEANING AND PREVENTATIVE MAINTENANCE

PROTECTING STAINLESS STEEL SURFACES



It is important to guard against corrosion in the care of stainless steel surfaces. Harsh, corrosive, or inappropriate chemicals can completely destroy the protective surface layer of stainless steel. Abrasive

pads, steel wool, or metal implements will abrade surfaces causing damage to this protective coating and will eventually result in areas of corrosion. Even water, particularly hard water that contains high to moderate concentrations of chloride, will cause oxidation and pitting that result in rust and corrosion. In addition, many acidic foods spilled and left to remain on metal surfaces are contributing factors that will corrode surfaces.





Proper cleaning agents, materials, and methods are vital to maintaining the appearance and life of this appliance. Spilled foods should be removed and the area wiped as soon as possible but at the very least, a minimum of once a day. Always thoroughly rinse surfaces after using a cleaning agent and wipe standing water as quickly as possible after rinsing.

CLEANING AGENTS

Use non-abrasive cleaning products designed for use on stainless steel surfaces. Cleaning agents must be chloride-free compounds and must not contain quaternary salts. Never use hydrochloric acid (muriatic acid) on stainless steel surfaces. Always use the proper cleaning agent at the manufacturer's recommended strength. Contact your local cleaning supplier for product recommendations.

CLEANING MATERIALS

The cleaning function can usually be accomplished with the proper cleaning agent and a soft, clean cloth. When more aggressive methods must be employed, use a non-abrasive scouring pad on difficult areas and make certain to scrub with the visible grain of surface metal to avoid surface scratches. Never use wire brushes, metal scouring pads, or scrapers to remove food residue.

 CAUTION	
 NO SCRAPERS	TO PROTECT STAINLESS STEEL SURFACES, COMPLETELY AVOID THE USE OF ABRASIVE CLEANING COMPOUNDS, CHLORIDE BASED CLEANERS, OR CLEANERS CONTAINING QUATERNARY SALTS. NEVER USE HYDROCHLORIC ACID (MURIATIC ACID) ON STAINLESS STEEL. NEVER USE WIRE BRUSHES, METAL SCOURING PADS OR SCRAPERS.
 NO WIRE BRUSHES	
 NO STEEL PADS	

CARE AND CLEANING

INTERIOR CLEANING

Remove the optional roll-in cart (trolley) from cart equipped models. Open the Quickchiller door to warm the interior of the cabinet.

1. Remove any loose food debris with a cleaning cloth or small hand broom.
2. Use a mild, non-abrasive detergent and warm water. Wipe-down the interior of the cabinet, removing all food residue. This includes the ceiling, floor, walls and fan panel.
Wipe-down the interior door panel and clean the vinyl gaskets. Make certain to clean under the gaskets to remove any mildew accumulation or food residue.
3. Rinse all interior surfaces including the cabinet door and gasket with clean water and a cloth. Remove all rinse water.
4. Wipe interior surfaces with a clean cloth and sanitizing solution for use on metal and vinyl food contact surfaces. This is an important step to control the build-up of unwanted mildew and mold in the refrigeration system.
5. Allow interior to air dry with door open.

EXTERIOR CLEANING



1. Wipe all exterior surfaces including the control panel, door frame, latches, and hinges with a damp cloth containing a mild, non-abrasive, non-chloride detergent solution.
2. Rinse detergent solution with a cloth and warm water. Allow exterior to air dry.
3. Polish with any standard stainless steel polish designed for use on food service equipment. When cleaning the exterior of the cabinet, always wipe with the grain of the stainless steel to avoid scratching or marring the finish. Avoid an accumulation of oil based polish or cleaner collecting along the edges of the keyboard overlay on the control box. Oil build-up around the control overlay could eventually loosen the panel.

DO NOT USE ABRASIVE CLEANING COMPOUNDS OR IMPLEMENTS.



DANGER



DISCONNECT UNIT FROM POWER SOURCE BEFORE CLEANING OR SERVICING.

PROBE CLEANING PROCEDURES

1. Remove all food soil from probes between loads and at the end of each production shift. Wipe entire probe, cable assembly, and probe holding door bracket with warm detergent solution and a clean cloth.
2. Remove detergent by wiping each probe, cable, and bracket with clean rinse water and a cloth.
3. Wipe probes and probe brackets with disposable alcohol pad or sanitizing solution recommended for food contact surfaces
4. Allow probe and cable to air dry in probe holding door bracket.
5. Wipe the probe with a disposable alcohol pad prior to inserting into a new food product.

FOOD TROLLEY CLEANING

1. Take food trolley to a cart wash area. Trolleys may be cleaned using any mild cleaning detergent and warm water.
2. Hand wipe all framing, slides, drip pan, and base. Thoroughly clean debris from the casters. A spray hose can be used for easier cart cleaning.
3. Remove detergent solution with warm water.
4. Wipe or spray with a sanitizing solution designed for use on metal and vinyl food contact surfaces.
5. Allow trolley to air dry.

MONTHLY COMPRESSOR & CONDENSER MAINTENANCE

Keep the condenser coils free of dust and debris build-up to insure proper air circulation and cooling of the refrigeration system.

1. Turn power supply to the cabinet OFF.
2. Using a vacuum or small hand broom, brush the condenser coils in a vertical motion to remove any accumulated dust or debris.
3. Turn breaker switches ON and replace air grill.

DANGER



AT NO TIME SHOULD THE INTERIOR OR EXTERIOR BE STEAM CLEANED, HOSED DOWN, OR FLOODED WITH WATER OR LIQUID SOLUTION OF ANY KIND. DO NOT USE WATER JET TO CLEAN.



SEVERE DAMAGE OR ELECTRICAL HAZARD COULD RESULT.

WARRANTY BECOMES VOID IF APPLIANCE IS FLOODED


TROUBLESHOOTING

CONTROL ERROR DISPLAYS

CONTROL DISPLAY	ACTION REQUIRED
Real Time Clock Bad <i>E-60: REAL TIME CLOCK DEFAULTS LOADED, VERIFY CORRECT TIME, POWER CYCLE UNIT TO CLEAR THIS MESSAGE.</i>	This is likely caused by the unit having been unplugged for an extended amount of time. The data stored in the Real-Time Clock has been reset to the factory default values. Contact service if problem persists.
Real Time Clock Not Detected <i>E-61: REAL TIME CLOCK NOT DETECTED. POWER CYCLE UNIT AND CALL FOR SERVICE IF THE PROBLEM PERSISTS.</i>	Real Time Clock not detected. Contact service if problem persists.
Button Stuck <i>E-90: BUTTON STUCK. CHECK ALL BUTTONS AND ERROR WILL CLEAR WHEN THE PROBLEM HAS BEEN RESOLVED</i>	This error message indicates that a button is stuck. Check all buttons. Error will clear when the problem has been solved. Contact service if problem persists.
Using Default Function Values <i>E-80 - EEPROM ERROR USING DEFAULT FUNCTION VALUES</i>	This error message indicates the control memory is not correctly reading user-set values. The Quickchiller will remain operational but the user defined settings will be reloaded to the default values. The control will revert to factory default settings and will require operator modification each time the unit is used. Call Service. Acknowledge error by pressing the power button.
Probe Open/Shorted <i>PROBE N* OPEN -OR- PROBE N* SHORTED CALL FOR SERVICE</i>	This error message indicates a problem with the probe identified within the display. The Quickchiller will operate normally in the Time mode but will not operate in the Probe mode. Call service. <i>*N</i> signifies probe number that is shorted: 1= top, 2= middle, 3= bottom
Cavity Open Shorted <i>CAVITY SENSOR OPEN OR SHORTED. CALL FOR SERVICE</i>	This error message indicates a problem with the interior cavity sensor. The Quickchiller will not operate in any operational mode. Call service.
Coil Open Shorted <i>COIL N* OPEN OR COIL N* SHORTED CALL FOR SERVICE</i>	This error message indicates a problem with the display identified coil sensor. The Quickchiller will remain operational but will extend the defrost cycle to the full period of 20 minutes. Call service. <i>*N</i> signifies coil number that is shorted.
Bad Calibration <i>E-81: BAD CALIBRATION. PLEASE CALL SERVICE AD1-0=(PASS)(FAIL) AD1-1=(PASS)(FAIL) AD2-0=(PASS)(FAIL) AD2-1=(PASS)(FAIL) AD3-0=(PASS)(FAIL) AD3-1=(PASS)(FAIL)</i>	Calibration bad. Call service. Note: Display will signify <i>PASS</i> where calibration is good, or <i>FAIL</i> where calibration is bad.
Requires Calibration <i>E-82: REQUIRES CALIBRATION. PLEASE CALL SERVICE</i>	Requires Calibration. Call service.
Power Failure <i>POWER WAS OFF FOR HH:MM PRESS PROGRAM TO ACKNOWLEDGE</i>	Power has been off. Press Program to acknowledge. NOTE: If such an event has occurred, it is strongly recommended that you ensure the food is safe for consumption according to local health regulations.

PARTS INFORMATION


QC2-3 BOTTOM

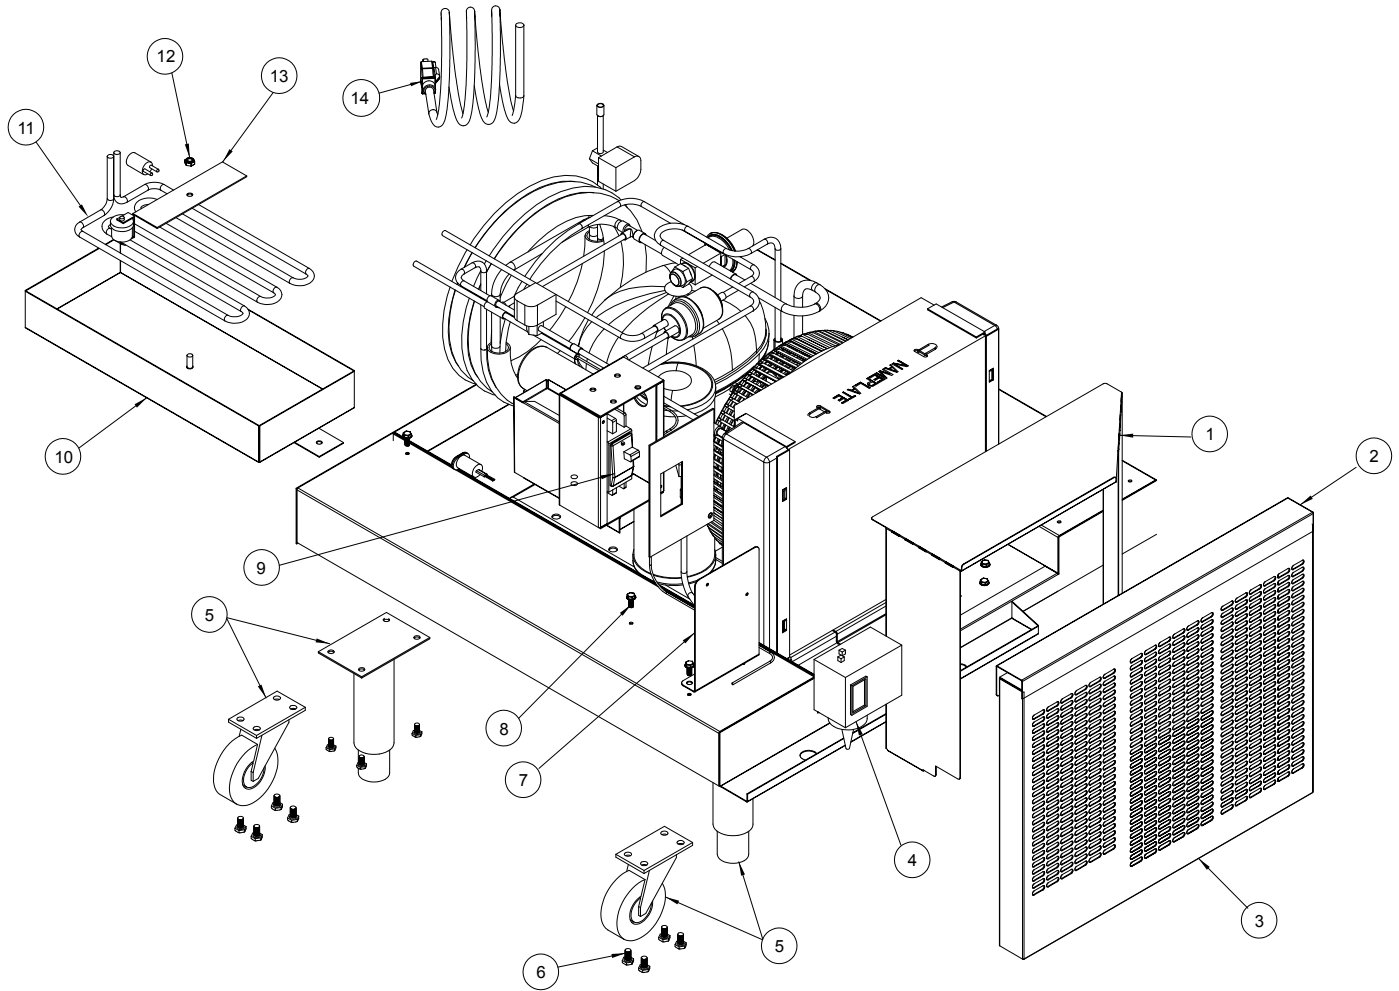

Item	Part	Description	Qty.
1	RE-29821	Condensing Unit Duct	1
2	PE-29819	Top Louver Channel	1
3	PE-29830	Compressor Louver	1
4	SW-29823	Pressure Switch	1
5	LG-29904	6" (152mm) Leg, Standard	4
	CS-29822	3" (76mm) Ranserve Caster Non Locking, Option	4
6	SC-29824	Bolt, 1/4-20 x 3.5" Shoulder Bolt Hex Head	16
7	BX-29820	Electrical Mounting Bracket	1
8	SC-29829	Bolt, 10-24x1/2 H/W/H 410 SS F08ZS Hex Head	12
9	FU-29901	Breaker, 2 Pole 20 Amp, QOU220 Universal	1
10	PN-29825	Condensate Evaporator Pan	1
11	EL-29828	Element Condensate Pan, 115V 200W Evap. 000274 N	1
12	NU-29827	Nut, 10-24 Stainless Nylock	1
13	BT-29826	Tie Down Bracket for Elect Condensate Evaporator Heater	1
14	CD-29831	Cord with Plug, 20Amp 125V 5-20P, 9' Long	1

PARTS INFORMATION

QC2-3 BOX VIEW

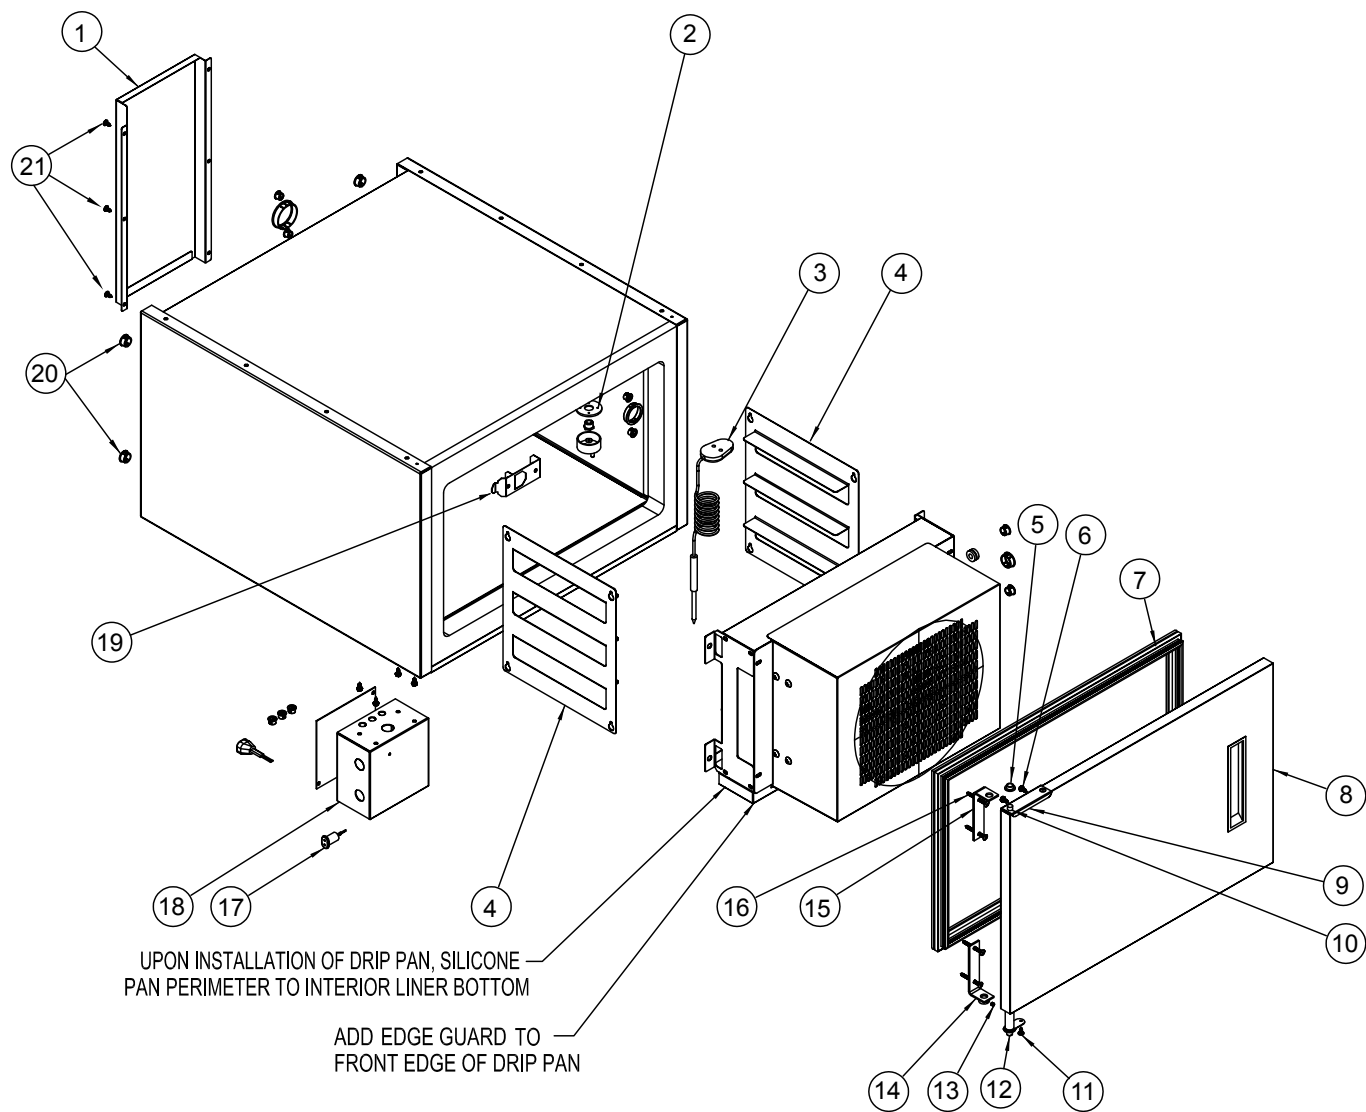


Item	Part	Description	Qty.
1	BT-29841	Holding Bracket Ref Line	1
2	PR-34299	Probe Receptacle Assembly	1
3	PR-34298	Probe, Quick Connect	1
4	SR-29832	Stainless Steel Side Rack	2
5	BU-29937	Bushing, Nylon Hinge 118	1
6	SC-29839	Screw, 10x1/2" Slot	1
7	GS-29838	Gasket, 15.59 x 24.25 Push In Press In	1
8	DR-29833	27x17 Door, Hinged Left	1
9	HG-29959	Hinge, Top Door, Left Hand Channel	1
10	PI-35930	Hinge Pin	1
11	SC-29835	Screw, 1/4-20 x 5/8" Socket Set 18-8 SS	1
12	HG-29834	Hinge, Spring Load Assembly, Self-Closing	1

Item	Part	Description	Qty.
13	SC-29837	Screw, 1/4-20 x 5/8" Socket Set 18-8 SS	1
14	HG-29836	Hinge, Strap w/Collar 38mm L-Shaped	1
15	HG-29960	Unit Hinge Bracket	1
16	SC-29910	Screw, 10x2" THP TYPE A S M62G 410SS	4
17	CD-29831	Cord, 2 Prong Male, for Fan	1
18	BX-29843	Electrical Box	1
19	HL-29840	Food Probe Holder	1
20	PG-35098	Plug, 3/4" Grommet	5
21	SC-29835	Screw, 10x1/2" T/H/P 410 S/S M4XG	3
22	ST-35099*	Stud, Side Rack Mounting	4
23	LT-3738*	Door Switch	1

*NOT SHOWN

 
QC2-3 COIL VIEW



Item	Part	Description	Qty.
9	CD-29831	Cord, 2 Prong 24" (610mm) Female	1
10	CD-29858	Cord, 2 Prong 24" (610mm) Male	1
11	PN-29851	Drain Pan with Tubing, Evaporator BC-3	1
12	BT-29849	Fan Mounting Bracket	2
13	CD-29860	Wire, 11" (279mm) Loop, Drain Heater	1
14	SN-34663	Coil Sensor/, Defrost/Sensor	1
15	SN-33541	Sensor, 1-3/4" (44mm) Long	1
16	NU-29827	Nut, 10-24 Stainless Nylock	4

PARTS INFORMATION


QC2-3 COMPRESSOR VIEW

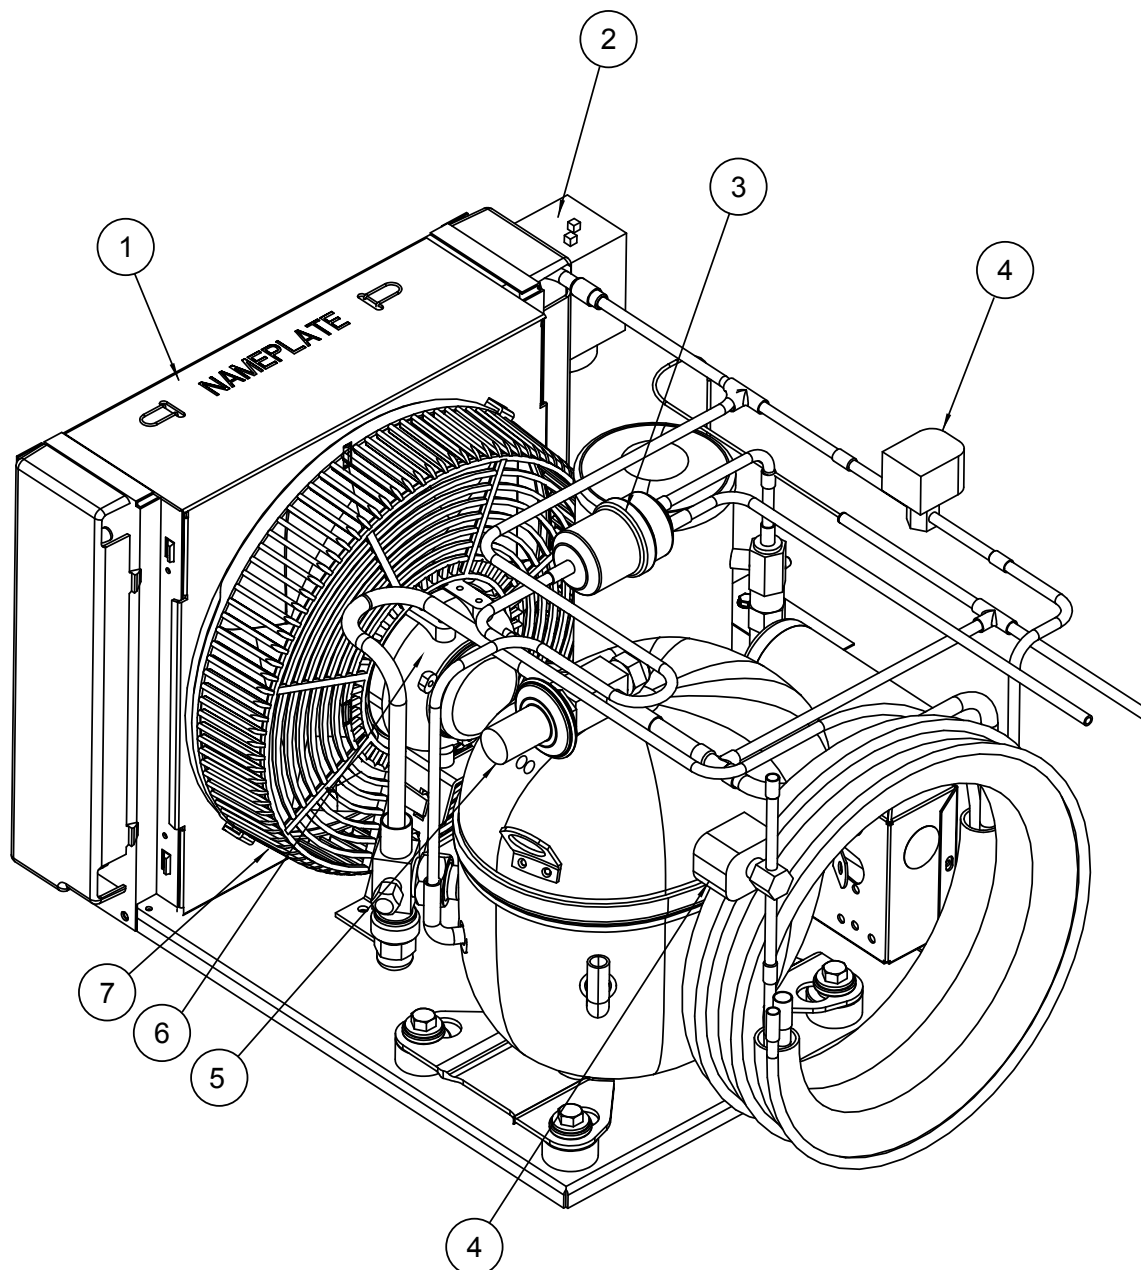

Item	Part	Description	Qty.
1	RE-29861	Condensing Assembly, 1/2 MED R404A 120V	1
2	SW-29823	Pressure Switch	1
3	FI-29862	Dryer, 1/4" Filter with 2nd 1/4"	1
4	VA-29863	Solenoid Valve & 120V Coil	2
5	VA-29864	Valve, Sporlan CRO-4-0/75 Crankcase Pressure Reg.	1
6	MO-29865	Motor, Fan Condenser Unit	1
7	FA-29866	Fan Blade	1
1/4" & 3/8" Diameter Copper Tubing is used			

PARTS INFORMATION

QC2-3 CONTROL BOX

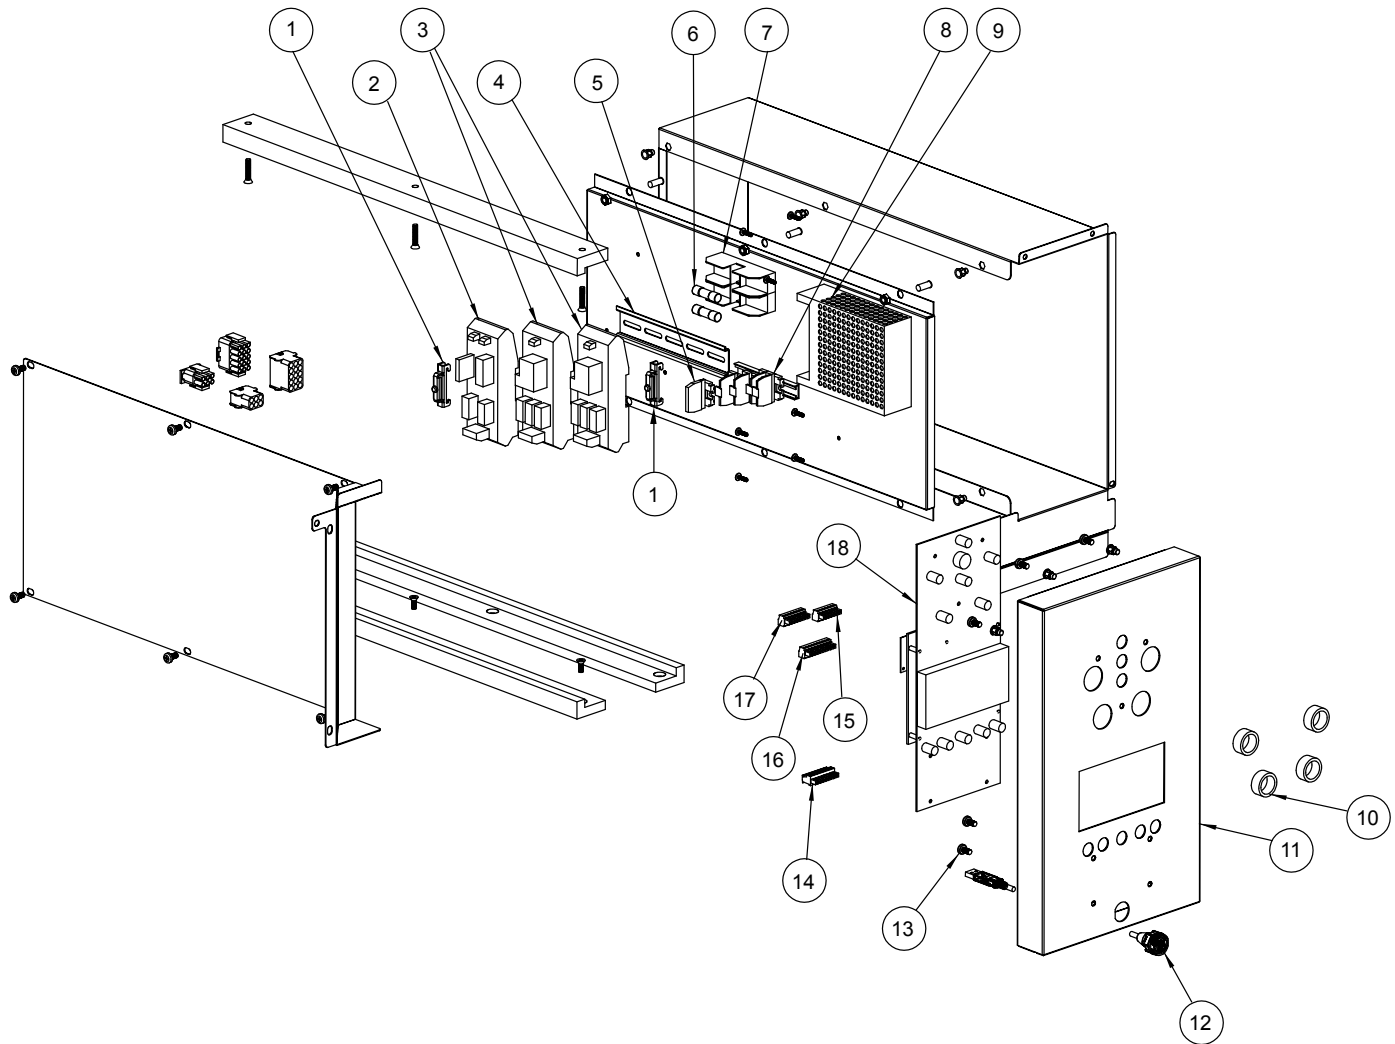


Item	Part	Description	Qty.
1	BT-29929	Dinrail, End Stop	2
2	BA-34010	Digital Relay 2, Circuit Board	1
3	BA-34009	Digital Relay 1, Circuit Board	2
4	BT-29918	Din Rail Mounting Bracket, 160mm Long	1
5	CR-29925	Connector, Flat Base M.D. End	1
6	FU-29934	Fuse, 20 amp, Time Delay, #SLC020 480V Class G	2
7	BK-29919	Block, 20 Amp Fuse Holder	2
8	CR-29924	Connector, Terminal Medium Duty	1
9	BA-29927	Power Supply, 115V to 12VDC	1
10	PI-26098	Pipe, .125" Thick Acrylic Tube, QC2 Control Light	4
11	PN-29932	Control Panel Assembly	1
12	5014750	HACCP Data Logger, USB Port, option	1
13	SC-29933	Bolt, M5	12
14	TM-29920	Terminal Block, 9 Position, Pluggable	1
15	TM-29921	Terminal Block, 7 Position, Pluggable	1
16	TM-29923	Terminal Block, 10 Position, Pluggable	1
17	TM-29922	Terminal Block, 8 Position, Pluggable	1
18	CC-34682	Control Board	1
19*	CC-35050	HACCP Board, option	1
20*	PE-29624	Panel Overlay	1

*NOT SHOWN

PARTS INFORMATION


QC-20 BOTTOM

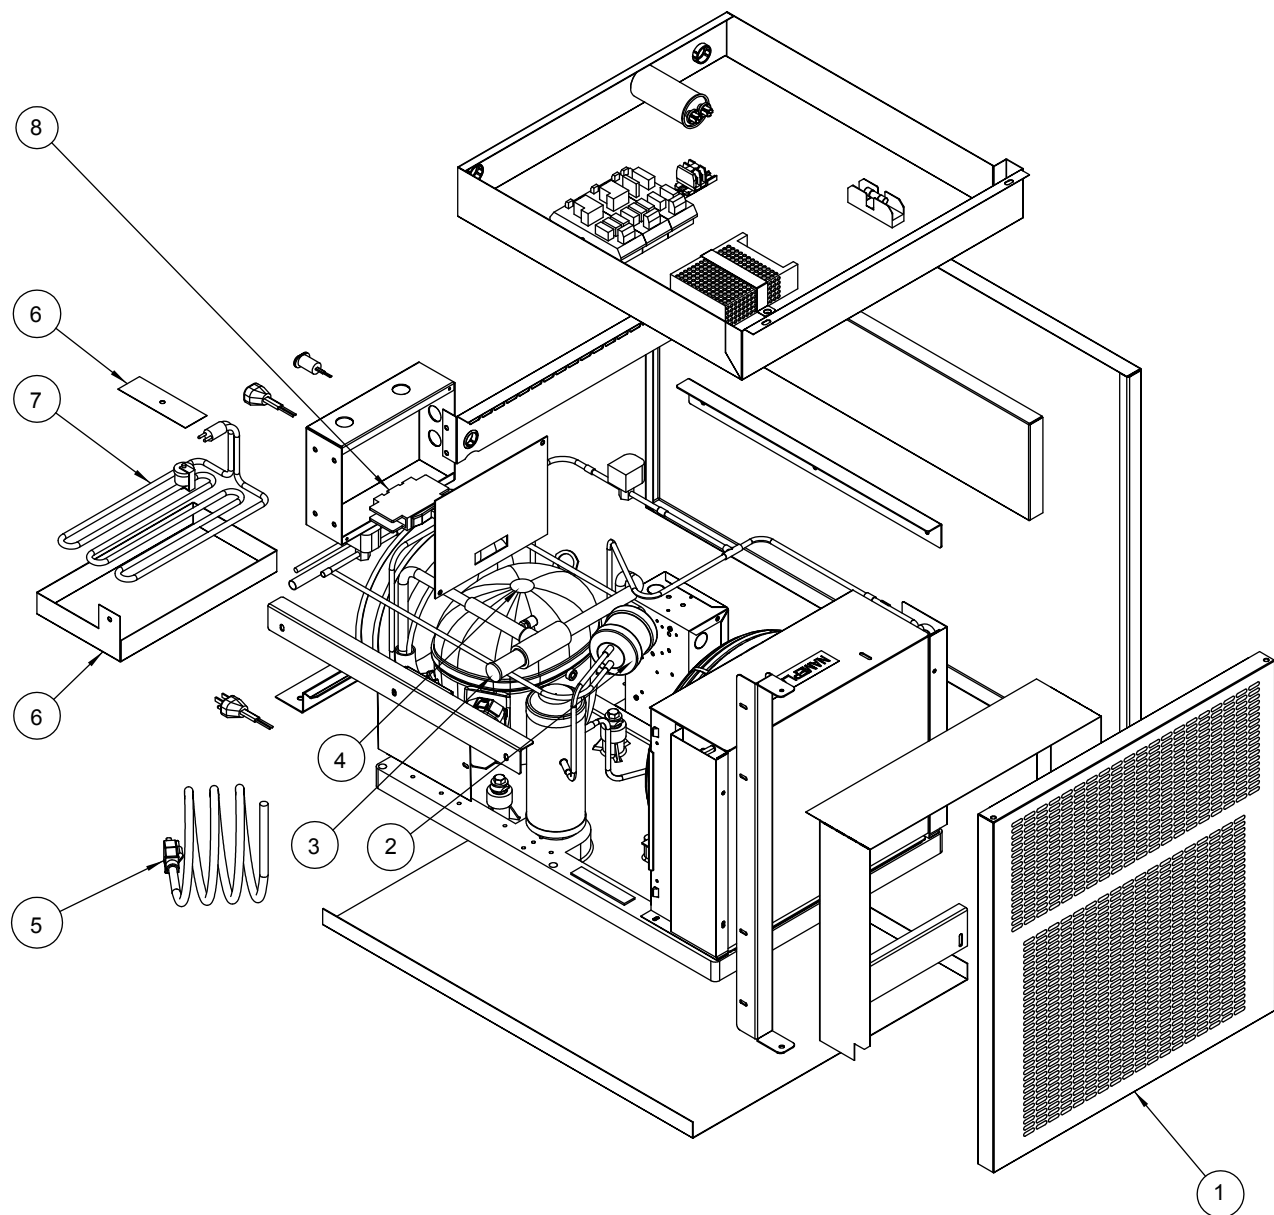

Item	Part	Description	Qty.
1	PN-29968	Compressor Louver	1
2	FI-29954	Filter Dryer	1
3	VA-29900	Valve, Pressure Regulator	1
4	RE-29947	Compressor, 3/4 HP LO R404A	1
5	CD-29831	Cord with Plug, 20Amp 125V 5-20P, 9' Long	1
6	RE-29966	Condensate Evaporator Pan - includes Hold Down Bracket	1
7	EL-29828	Element Condensate Pan, 115V 200W Evap. 000274 N	1
8	FU-29965	Breaker, 1 Pole 20 Amp	1

PARTS INFORMATION

QC-20 BOX VIEW

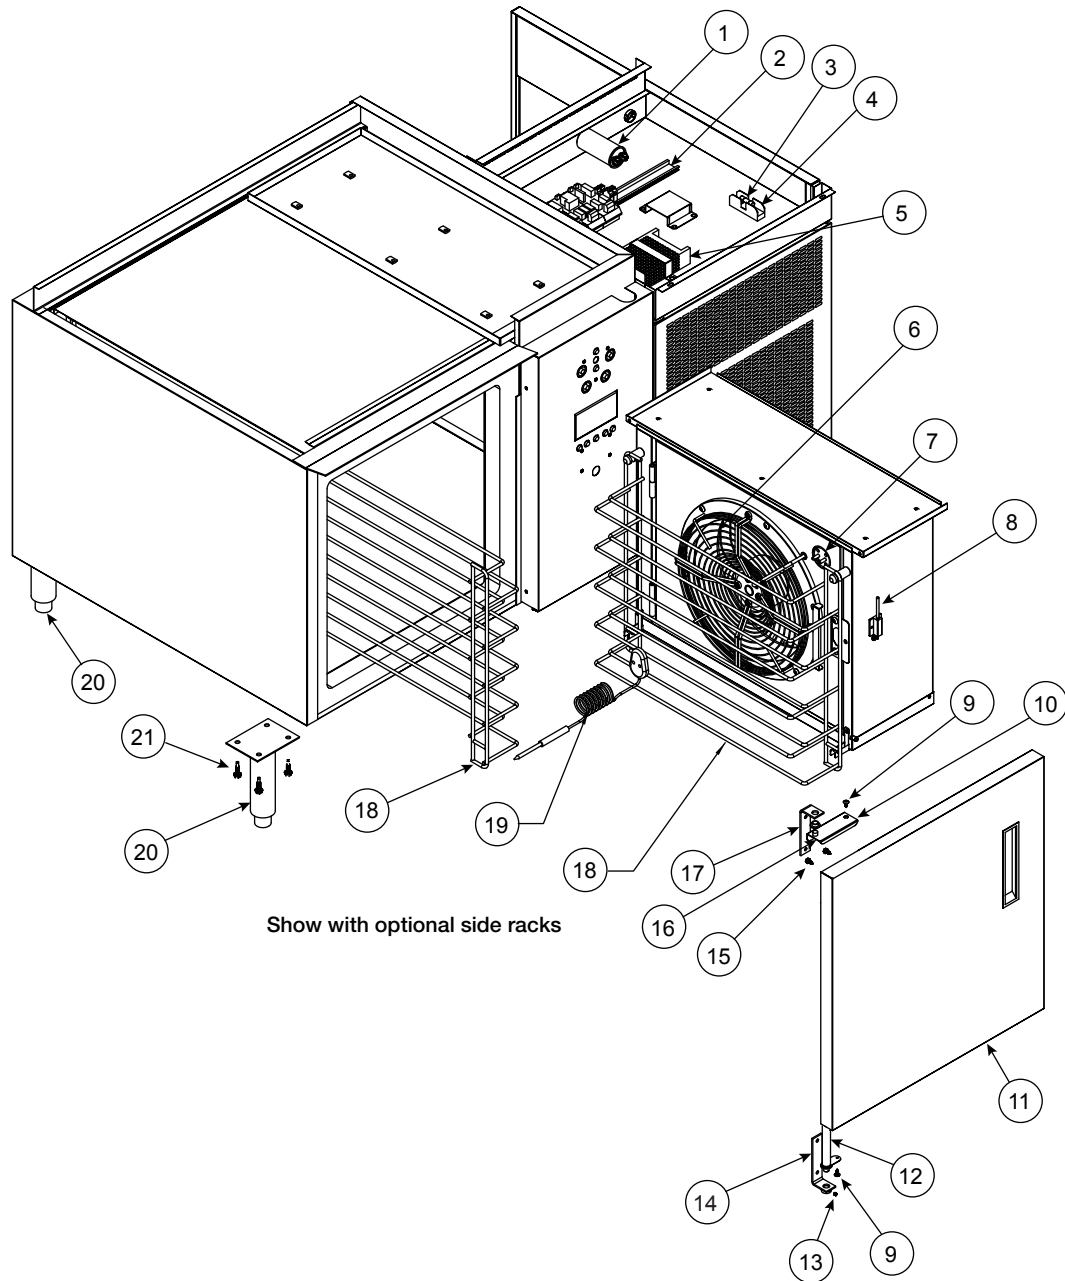


Item	Part	Description	Qty.
1	CU-29964	Capacitor, 14MFD, 440VAC	1
2	BT-29918	Din Rail	1
3	FU-29926	Fuse, 10 Amp Time Delay, 326-010 300V	1
4	BK-29919	Block, Fuse Holder	1
5	BA-29927	Power Supply, 115V to 12VDC 40 Watt	1
6	FA-29945	Fan, Evaporator	1
7	PR-34299	Probe Receptacle Assembly	1
8	5009220	Sensor, Air Temperature	1
9	SC-29835	Screw, 10x1/2" T/H/P 410 S/S M4XG	1
10	HG-29959	Hinge, Top Door, Left Hand Channel	1
11	DR-29957	Door Assembly with Handle, Hinged Left	1
12	HG-29834	Hinge, Self-Closing	1

Item	Part	Description	Qty.
13	SC-29837	Bolt, Black Set Screw	1
14	HG-29836	Hinge, Strap w/ Collar 41mm, L-shaped	
15	SC-29839	Screw, 10x1/2" Slot	2
16	HG-35101	Hinge, Complete Assembly	1
17	HG-29960	Hinge, Strap w/o Collar 38mm, L-shaped	1
18	SR-35827	Slide 9-Pan Rack, Standard	1
	SR-29969	Stainless Steel Side Rack, Optional	2
19	PR-34298	Probe, Quick Connect	1
20	LG-29904	Leg, 6" (152mm)	4
21*	SC-29961	Screw, 14x1" HWH TEK ZINC	16
22*	HL-29840	Food Probe Holder	1
23*	GS-35118	Door Gasket	1
24*	LT-3738	Door Switch	1

*NOT SHOWN

PARTS INFORMATION

QC-20 COIL VIEW

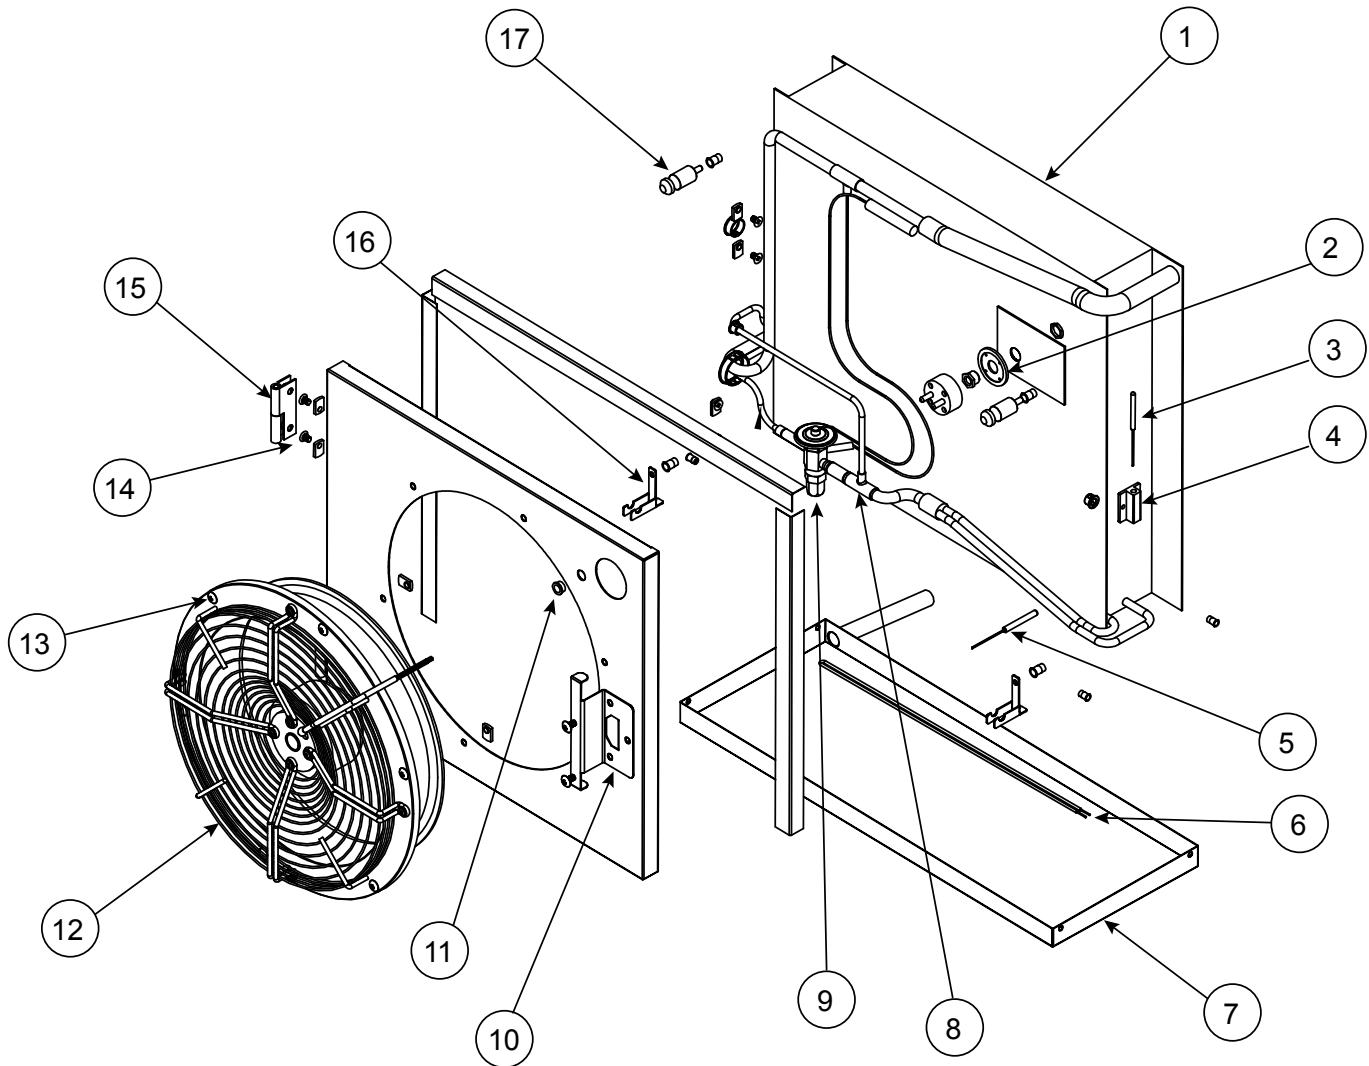


Item	Part	Description	Qty.
1	RE-29944	Coil, QuickChiller	1
2	PR-34704	Probe Receptacle Assembly	1
3	SN-33541	Cavity Sensor	1
4	BK-24427	Mounting Block for Air Sensor	1
5	SN-34663	Coil Sensor/, Defrost/Sensor	1
6	CD-29860	Wire, 11" (279mm) Loop Drain Heater	1
7	PN-29943	Evaporator Pan, without Element	1
8	TE-35100	Copper Tee, 1/2" ID	2

Item	Part	Description	Qty.
9	VA-29900	Valve, Sporlan Pressure Regulator	1
10	LT-29940	Latch, Plate for Fan Door	1
11	BU-29937	Bushing, Nylon	1
12	FA-29945	Fan, Axial	1
13	SC-29935	Bolt, 1/4-20	19
14	SC-29936	Bolt, 1/4-20 x 3/8"	8
15	HG-29938	Hinge Assembly, 2" x 3" Lift Off Left Bottom	2
16	BT-29942	Bracket, Special Rack Pin	2
17	PI-29939	Pin, 3/4" x 1-1/4" Rack	2

PARTS INFORMATION

QC-20 COMPRESSOR VIEW

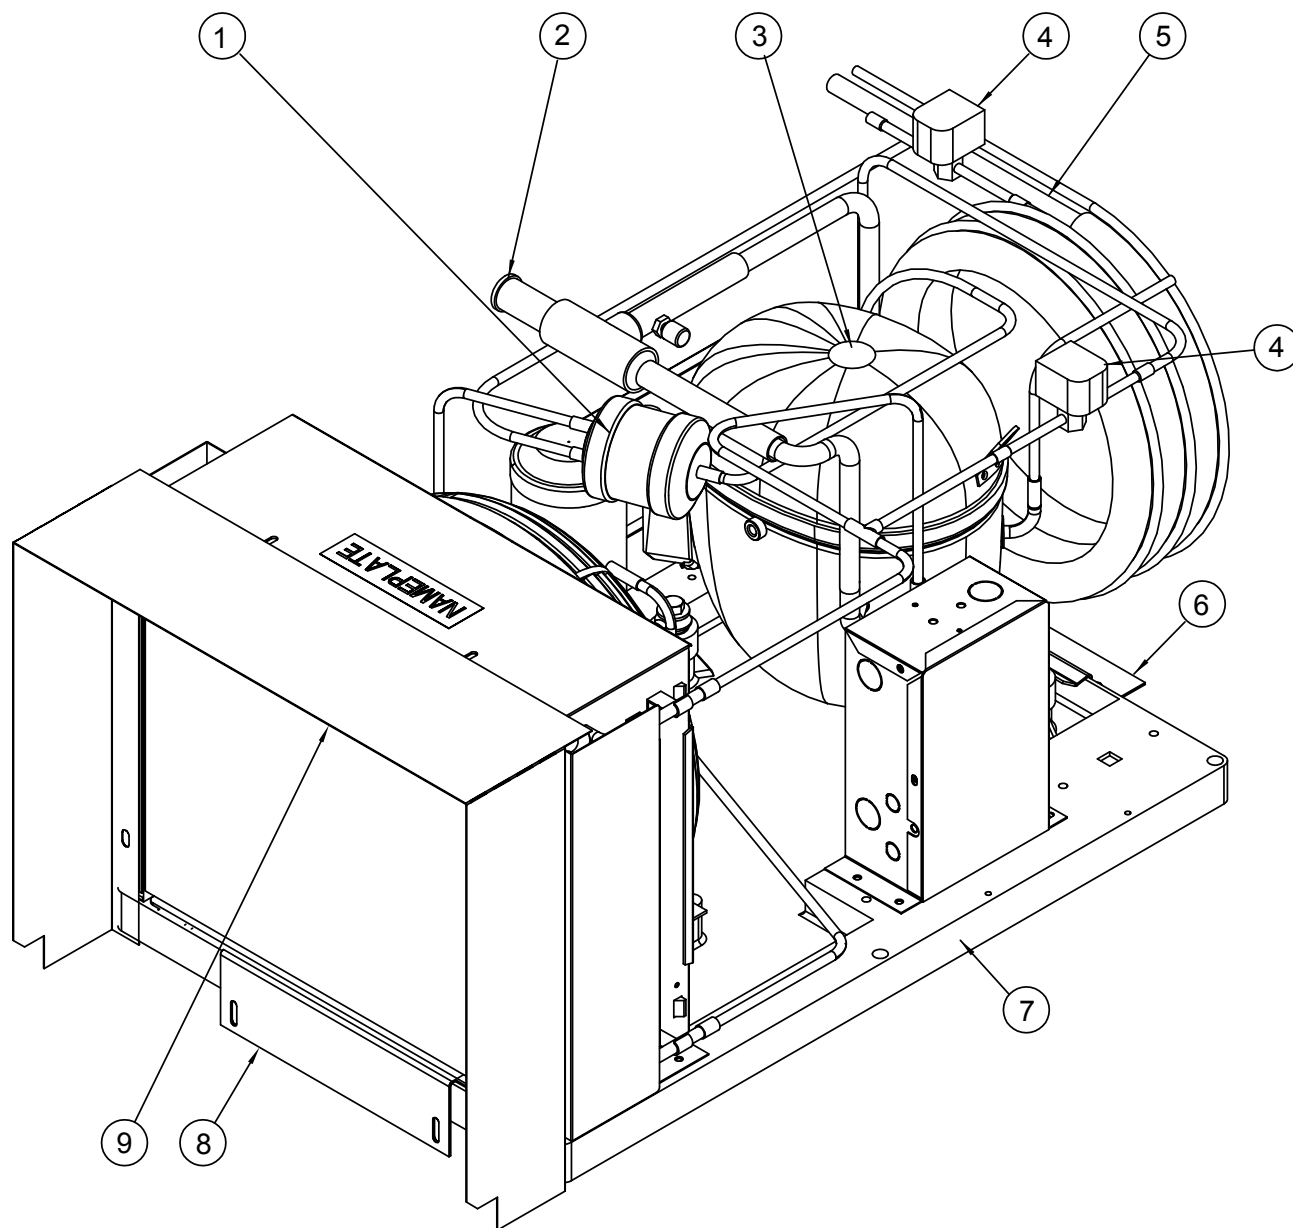


Item	Part	Description	Qty.
1	FI-29954	Filter Dryer	1
2	VA-29900	Solenoid Valve, Sporlan Pressure Regulator	1
3	RE-29947	Compressor	1
4	VA-29863	Solenoid Valve & 120V Coil	2
5	IN-29952	Insulation Wrap	1
6	BT-29951	Bracket, Back Compressor Hold Down	1
7	RE-29948	Condensing Unit, 3/4 HP LT R404A 120V	1
8	BT-29950	Bracket, Front Compressor Hold Down	1
9	PN-29949	Housing	1
10*	MO-29955	Motor, 3/4 HP Compressor Fan Motor	1
11*	FA-29956	Fan Blade for Compressor Fan Motor	1
		1/4" & 3/8" Diameter Copper Tubing is used	

*NOT SHOWN

PARTS INFORMATION


QC-20 CONTROL PANEL

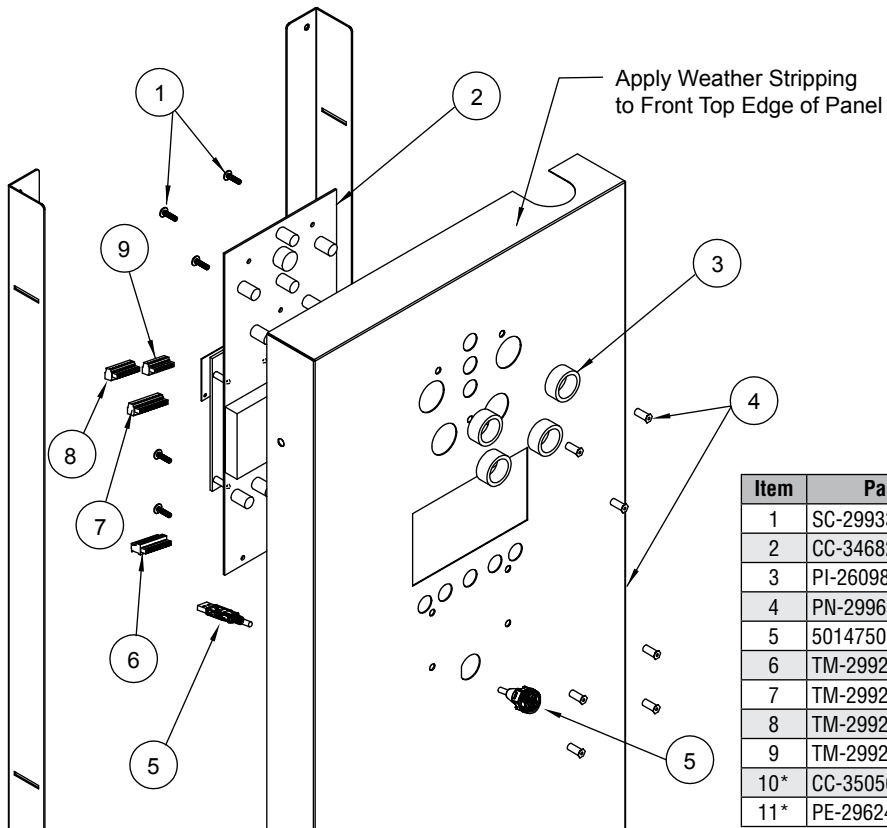

Item	Part	Description	Qty.
1	SC-29933	Bolt, M5	12
2	CC-34682	Control Board	11
3	PI-26098	Pipe, .125" Thick Acrylic Tube, QC2 Control Light	4
4	PN-29962	Control Panel Assembly	1
5	5014750	HACCP Data Logger, USB Port, option	1
6	TM-29920	Terminal Block, 9 Position, Pluggable	1
7	TM-29923	Terminal Block, 10 Position, Pluggable	1
8	TM-29922	Terminal Block, 8 Position, Pluggable	1
9	TM-29921	Terminal Block, 7 Position, Pluggable	1
10*	CC-35050	HACCP Board, option	1
11*	PE-29624	Control Panel Overlay	1

*NOT SHOWN


QC-20 CONTROL BOX

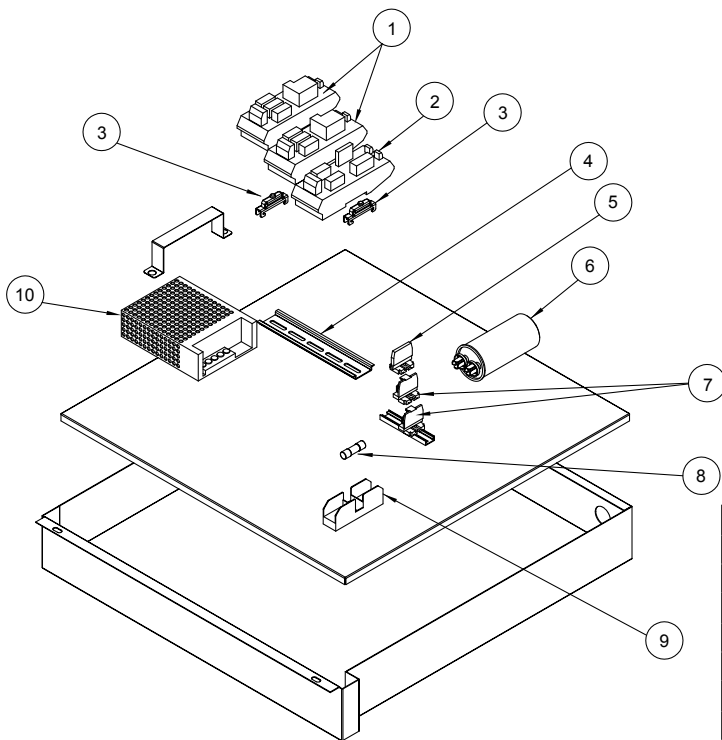

Item	Part	Description	Qty.
1	BA-34009	Digital Relay 2, Circuit Board	2
2	BA-34010	Digital Relay 1, Circuit Board	1
3	BT-29929	Dinrail, End Stop	2
4	BT-29918	Dinrail	1
5	CR-29925	Connector, Flat Base M.D. End	1
6	CU-29964	Capacitor, 14 MFD 440VAC	1
7	CR-29924	Connector, Terminal	2
8	FU-29926	Fuse, 15 Amp Time Delay	1
9	BK-29919	Fuse Holder Block	1
10	BA-29927	Power Supply, 115V to 12VDC 40 Watt	1

PARTS INFORMATION


QC2-40 COMPRESSOR

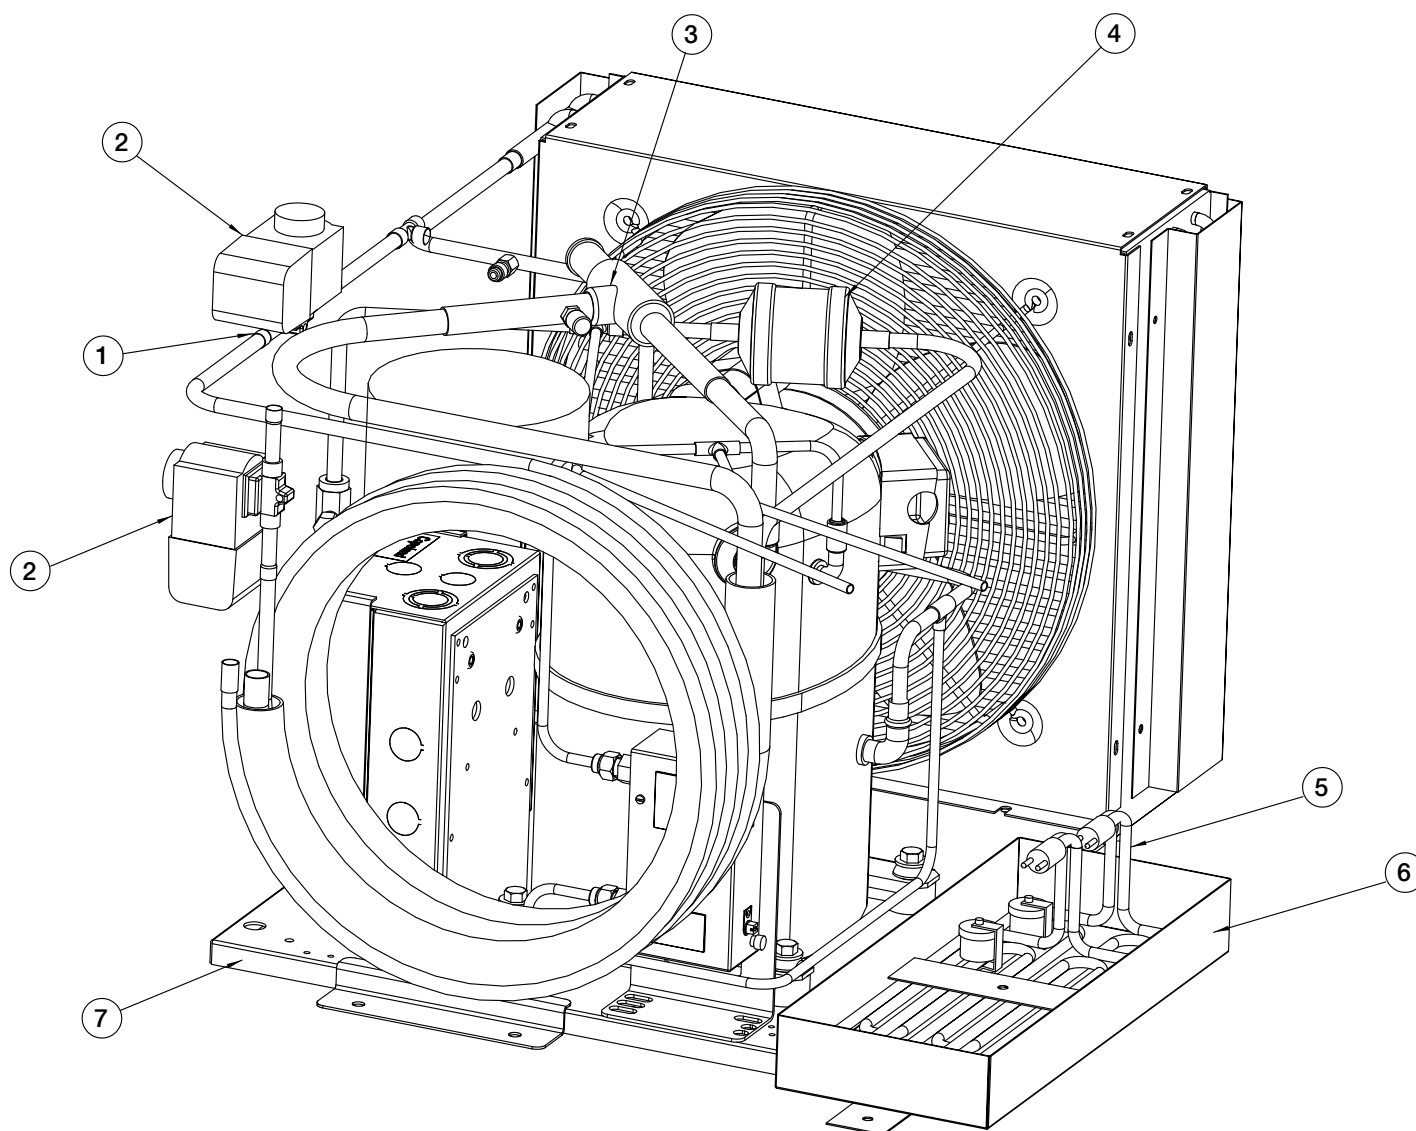

Item	Part	Description	Qty.
1	VA-29898	Valve, Liquid Line Solenoid	2
2	SE-29897	Solenoid Valve & Coil, Danfoss, 120V	2
3	VA-29900	Valve, Sporlan Crankcase Pressure Regulator	1
4	FI-29899	Filter Drier	1
5	EL-29828	Element Condensate Pan, 115V 200W Evap. 000274 N	1
6	PN-29903	Evaporator Pan, without Element	1
7	RE-29896	Condensing Unit, 1.5 HP 230V 1 Phase	1

PARTS INFORMATION


QC2-40 COMPRESSOR HOUSING

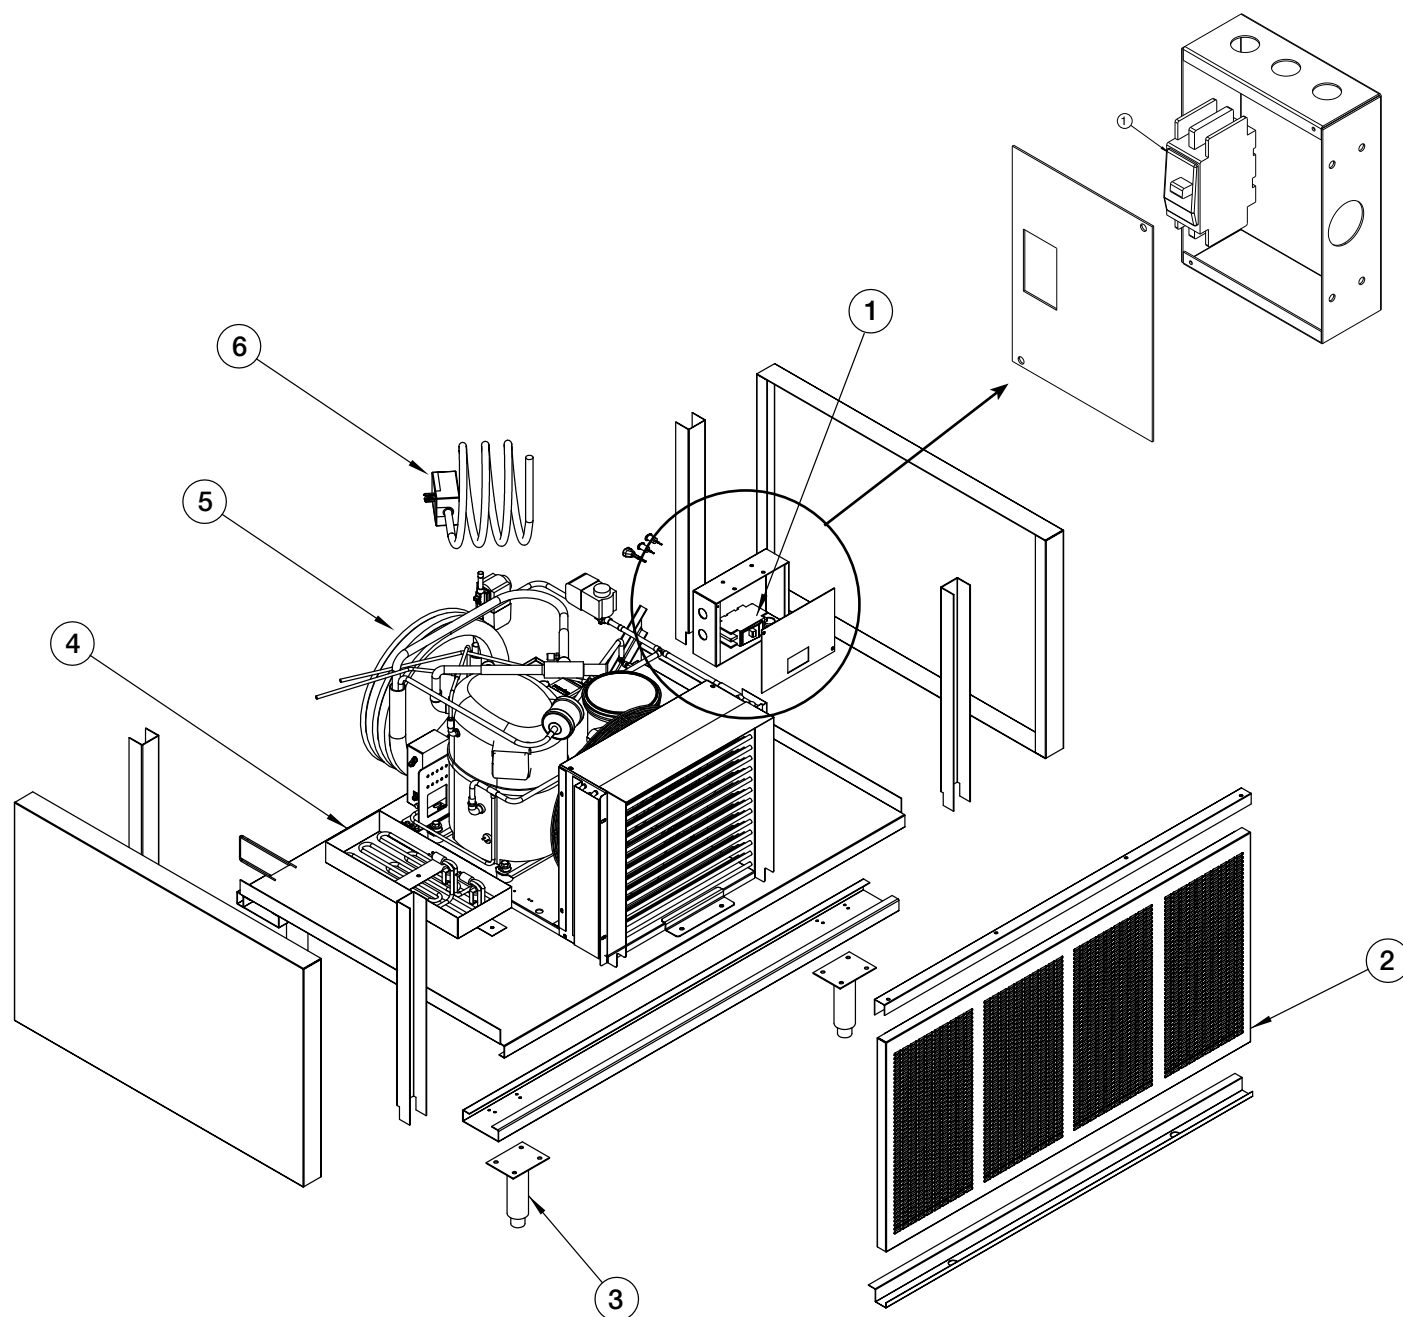

Item	Part	Description	Qty.
1	FU-29901	Breaker, 2 Pole 20 AMP, 60Hz	1
	FU-29996	Breaker, 2 Pole 30 AMP, 50Hz	1
2	PE-29902	Compressor Louver	1
3	LG-29904	6" Leg, Standard (152mm)	4
	SC-29824	Leg Bolt, 1/4-20 x 3.5" Shoulder Bolt Hex Head	16
4	PN-29903	Evaporator Pan, without Element	1
5	RE-29896	Condensing Unit, 1.5 HP 230V 1 Phase	1
6	CD-35103	Cord and Plug, 125/250V 20 Amp 14-20P, 9' Long	1

PARTS INFORMATION

QC2-40 COIL

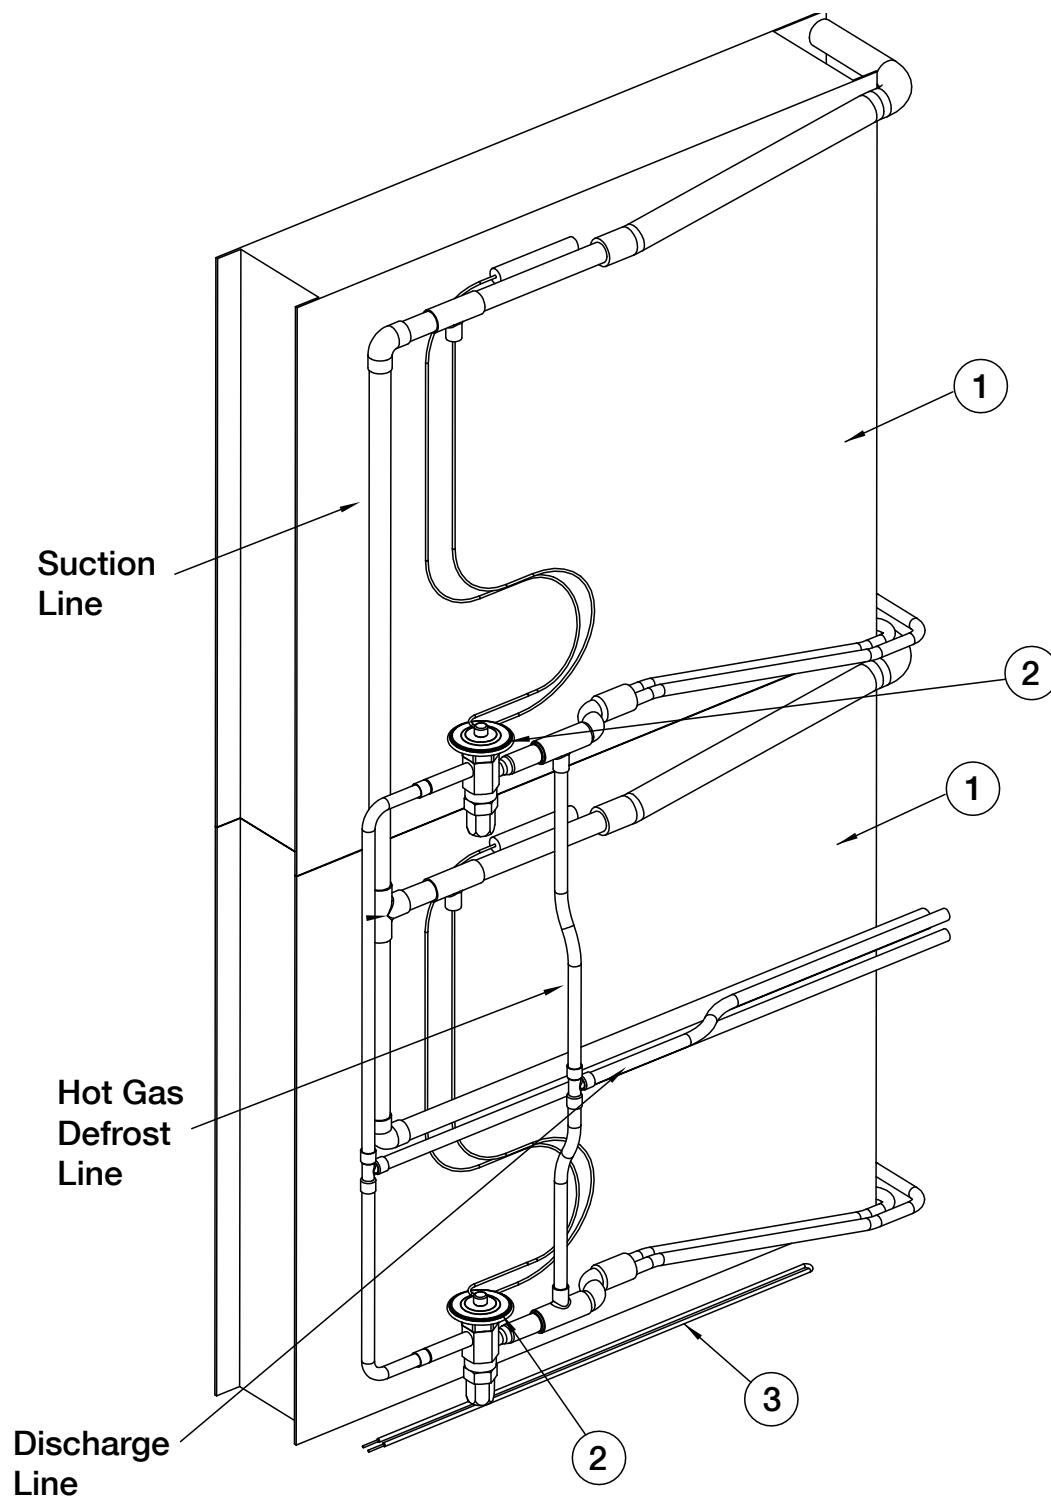


Item	Part	Description	Qty.
1	RE-29905	Coil Assembly, 19x20	2
2	VA-29906	Valve, Expansion	2
3	CD-29860	Wire, 11" (279mm) Loop Drain Heater	1
4	SN-34663*	Coil Sensor/Defrost Sensor	1

*NOT SHOWN

PARTS INFORMATION

QC2-40 DOOR, LEFT HAND (PRIOR TO JUNE 1, 2012)

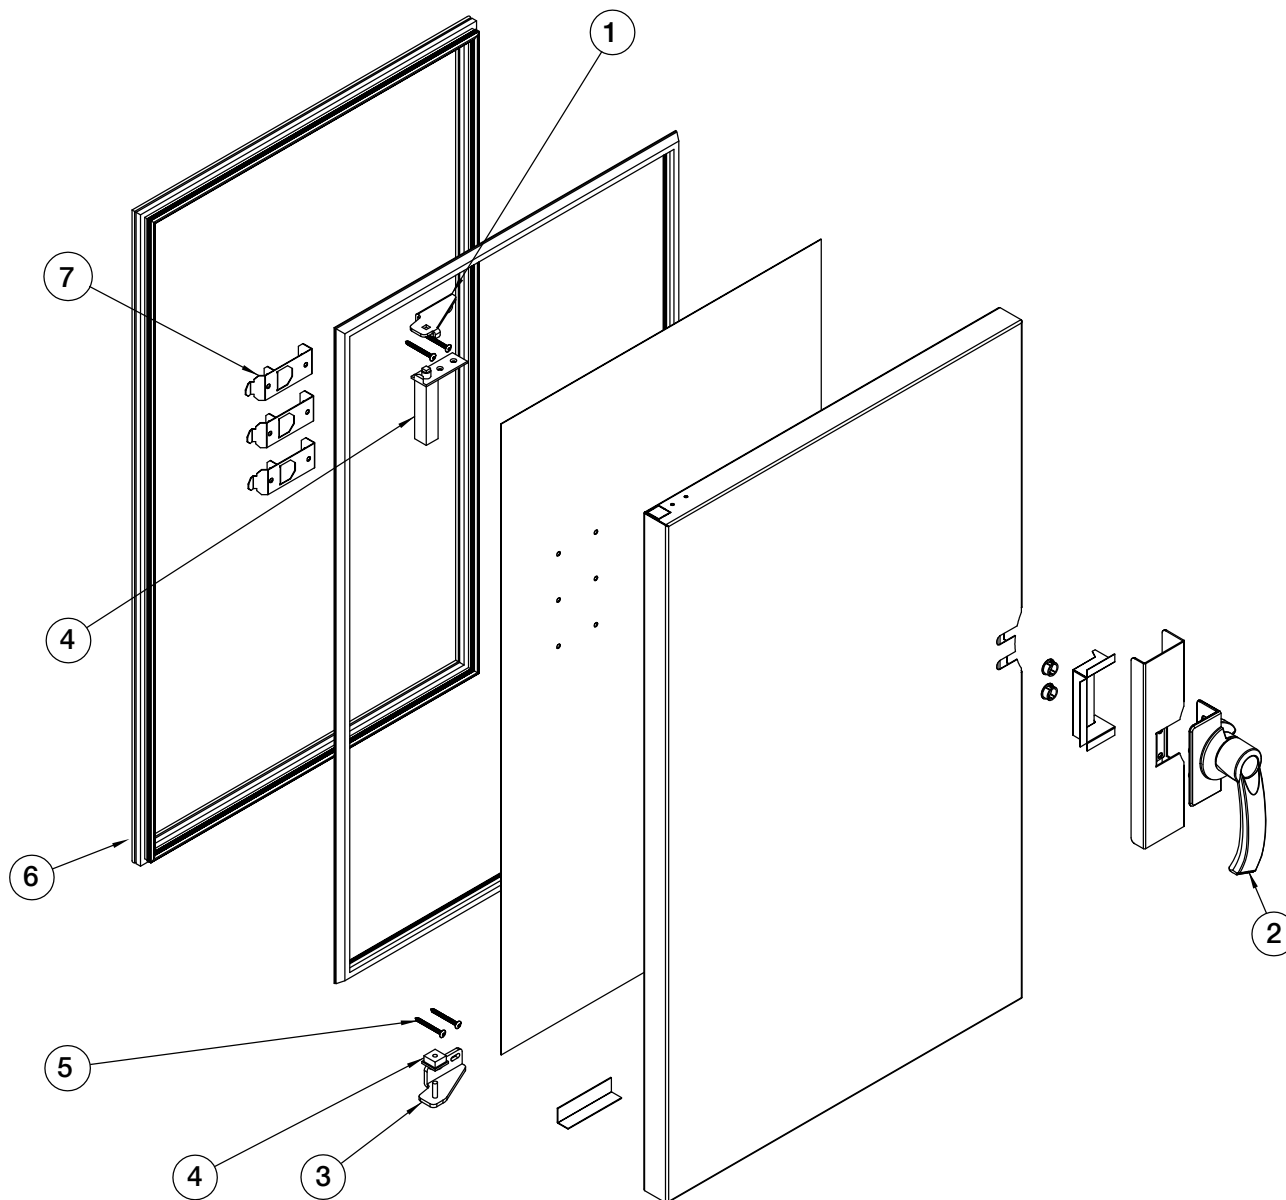


Item	Part	Description	Qty.
1	HG-29913	Upper Hinge, Bracket, Left-Hand	1
2	HD-26967	Handle, Door	1
3	BT-29911	Lower Bracket, Horizontal Pivot, Left-Hand	1
4	HG-29912	Hinge Insert, Self Closing	1
5	SC-29910	Screw, 10x2" THP	4
6	GS-29914	Gasket, Door	1
7	HL-29840	Food Probe Holder	3
8	DR-29909	Door Assembly without Handle or Hinges	1
9*	LT-3738	Door Switch	1

*NOT SHOWN


PARTS INFORMATION

QC2-40 DOOR (AFTER JUNE 1, 2012)

LEFT-HAND

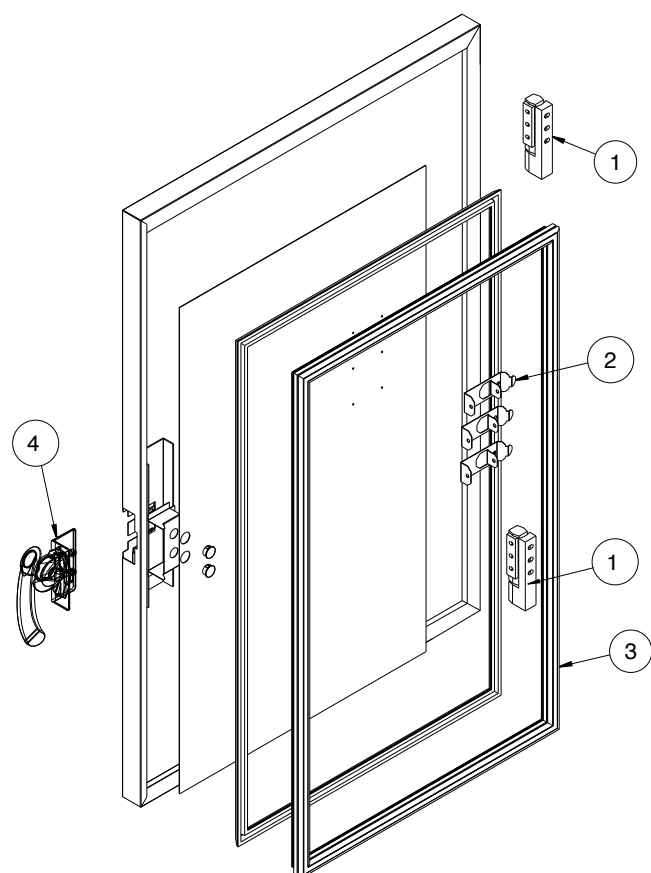


RIGHT-HAND

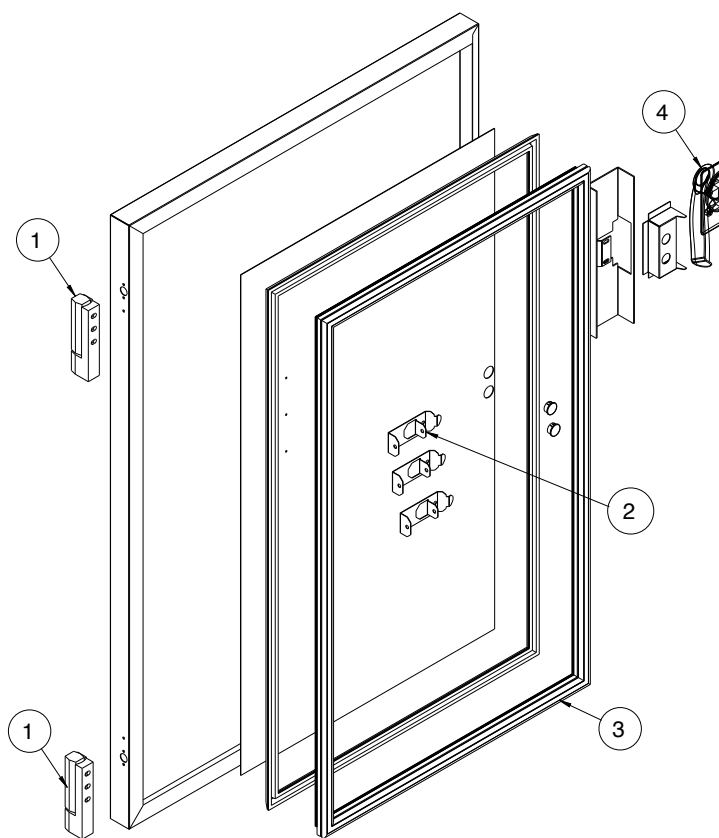

Item	Part	Description	Qty.
1	HG-29992	Hinge, Adjustable	1
2	HL-29840	Food Probe Holder	3
3	GS-29914	Gasket, Door	1
4	HD-26967	Handle, Door	1

PARTS INFORMATION

QC2-40 INTERIOR

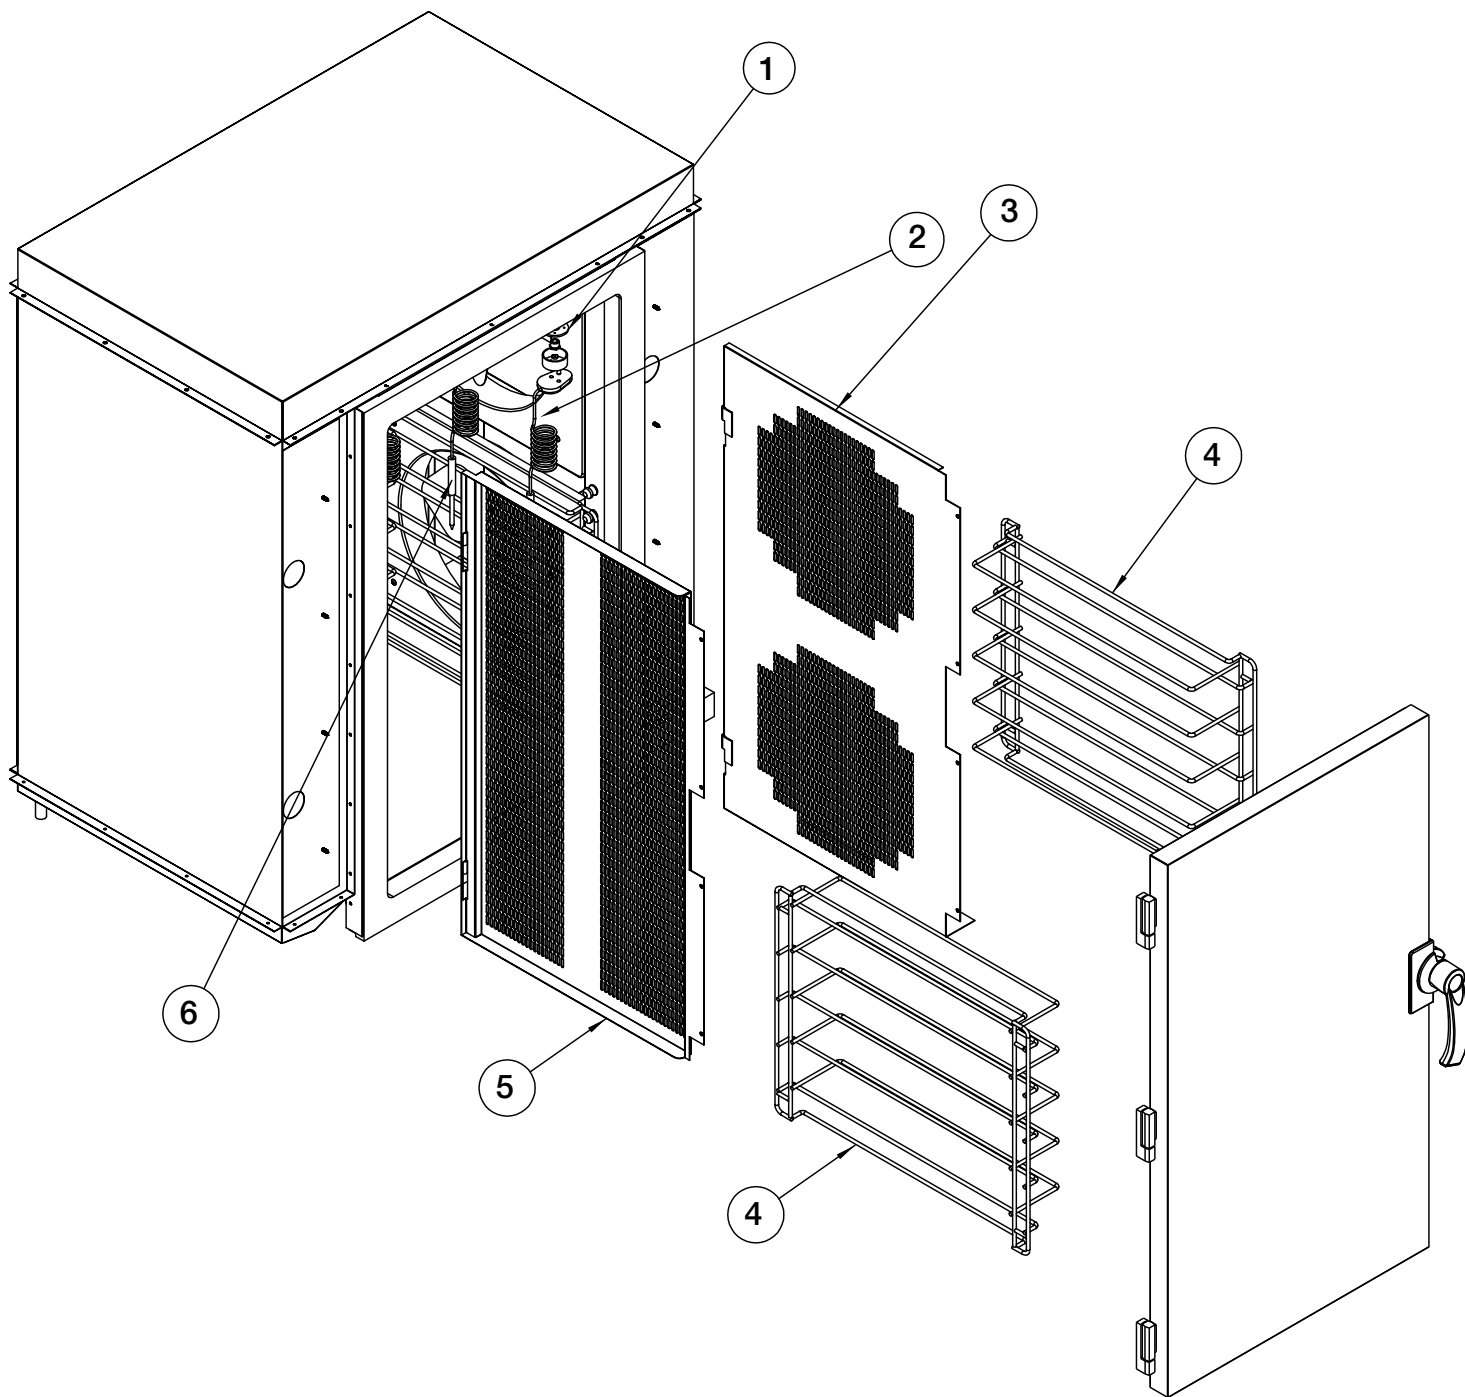


Item	Part	Description	Qty.
1	PR-34299	Probe, Receptacle	3
2	PR-34298	Probe, Quick Connect	3
3	PE-29916	Panel, Fan Guard, Right	1
4	SR-29915	Rack, Pan Support	2
5	PE-29917	Panel, Fan Guard, Left	1
6	SN-33541	Cavity Sensor	1
7*	SH-22584	Shelf, Stainless Steel Wire	1
8*	LT-3738	Door Switch	1

*NOT SHOWN

PARTS INFORMATION

QC2-40 CONTROL PANEL - HINGED LEFT (PRIOR TO JUNE 1, 2012)

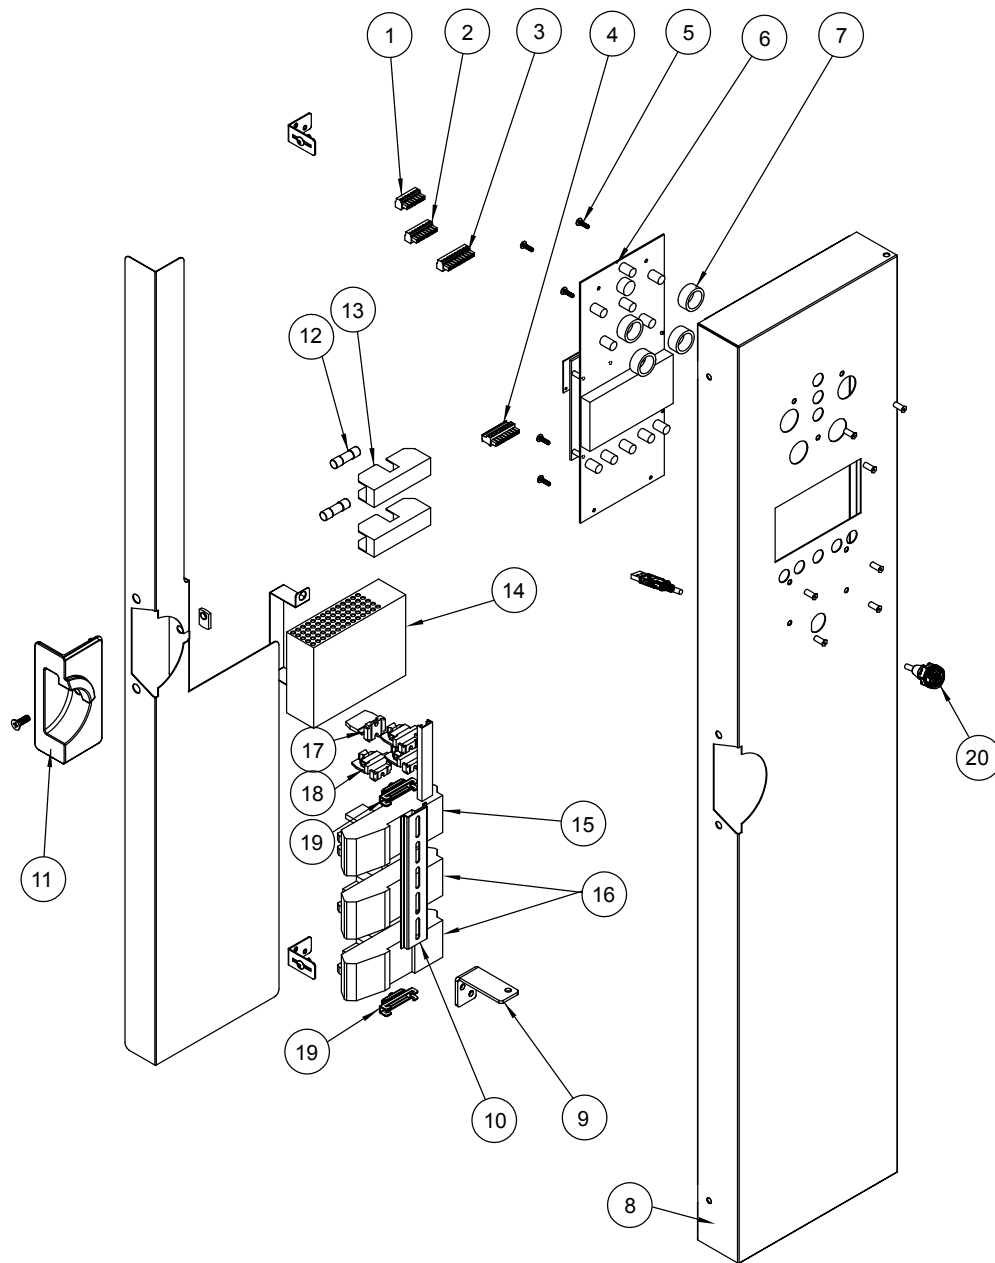

Item	Part	Description	Qty.
1	TM-29921	Terminal Block, Pluggable, 180 Deg, 7 Position	1
2	TM-29922	Terminal Block, Pluggable, 180 Deg, 8 Position	1
3	TM-29923	Terminal Block, Pluggable, 180 Deg, 10 Position	1
4	TM-29920	Terminal Block, Pluggable, 90 Deg, 9 Position	1
5	SC-29928	Bolt, 6-32x1/2, Philip Truss Head	7
6	CC-34682	Control Board	1
7	PI-26098	Pipe, .125" Thick Acrylic Tube Ligt Pipe	4
8	CC-29930	Control Panel Assembly	1
9	HG-29931	Hinge, Control Panel Bottom	1
10	BT-29918	Dinrail Mounting Bracket	1
11	LT-26969	Door Latch, Left-Hand	1


*NOT SHOWN

Item	Part	Description	Qty.
12	FU-29934	Fuse, 20 amp, Time Delay, #SLC020 480V Class G	2
13	BK-29919	Block, Fuse Holder, 20A 300VAC	2
14	BA-29927	Power Supply, 115V-12VDC, 40 W, 60C Op Temp	1
15	BA-34010	Relay Board	1
16	BA-34009	Relay Board	2
17	CR-29925	Connector, Flat Base M.D. End	1
18	CR-29924	Connector, Terminal Medium Duty	1
19	BT-29929	Dinrail, End Stop	2
20	5014750	HACCP Data Logger, USB Port, option	1
21*	PE-29624	Panel Overlay	1
22*	CC-35050	HACCP Board, option	
23*	LT-3738	Door Switch	1


PARTS INFORMATION

QC2-40 CONTROL PANEL - HINGED LEFT (AFTER JUNE 1, 2012)

60HZ

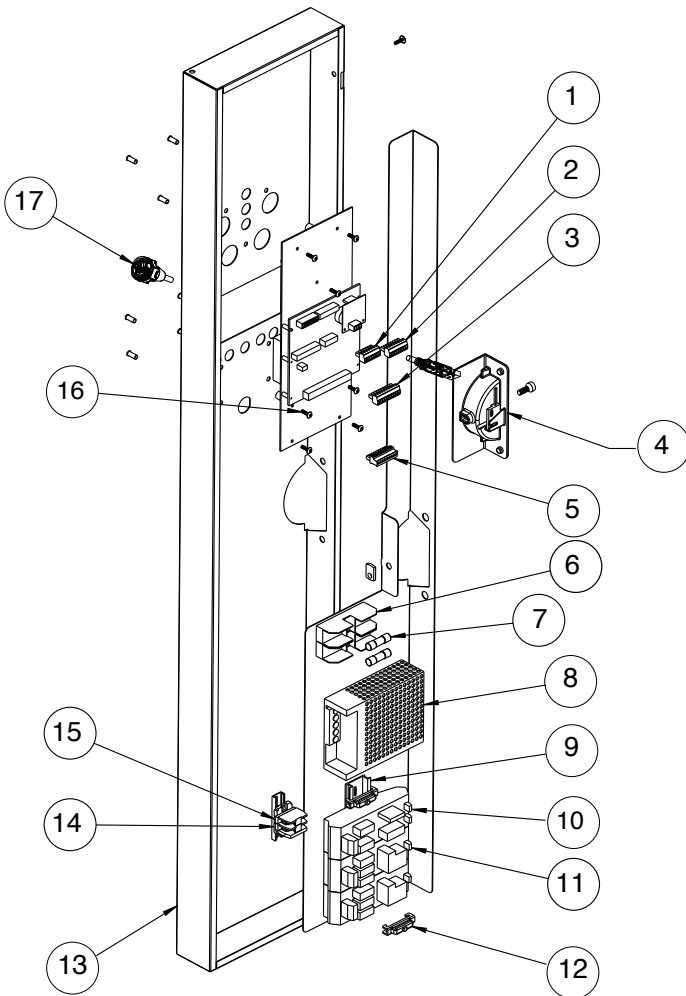

50HZ

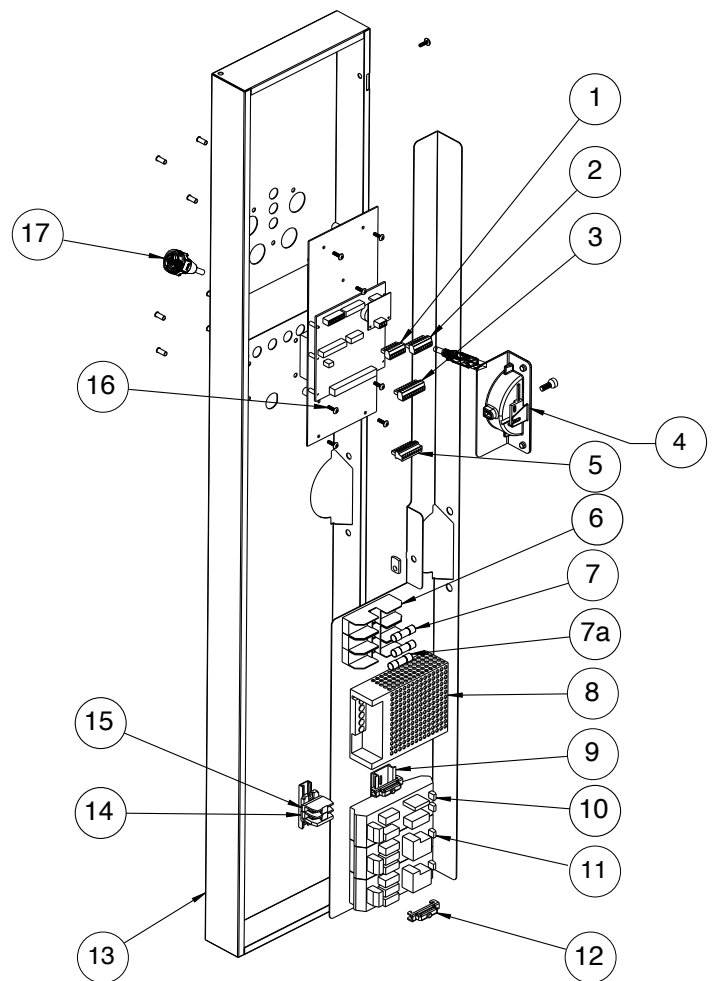

Item	Part	Description	Qty.
1	TM-29921	Terminal Block, Pluggable, 180 Deg, 7 Position	1
2	TM-29922	Terminal Block, Pluggable, 180 Deg, 8 Position	1
3	TM-29923	Terminal Block, Pluggable, 180 Deg, 10 Position	1
4	LT-26969	Door Latch	1
5	TM-29920	Terminal Block, Pluggable, 90 Deg, 9 Position	1
6	BK-29919	Block, Fuse Holder, 20A 300VAC	2
7	FU-29934	Fuse, 20 amp, Time Delay, #SLC020 480V Class G	1
7a	FU-29997	Fuse, 15A Time Delay SC-15 300V 3/4HP	1
8	BA-29927	Power Supply, 115V-12VDC, 40 W, 60C Op Temp	1
9	BT-29929	Dinrail Mounting Bracket	1


Item	Part	Description	Qty.
10	BA-34010	Relay Board	2
11	BA-34009	Relay Board	2
12	BT-29929	Dinrail, End Stop	2
13	CC-29930	Control Panel Assembly	1
14	CR-29925	Connector, Flat Base M.D. End	1
15	CR-29924	Connector, Terminal Medium Duty	2
16	SC-29928	Bolt, 6-32x1/2, Philip Truss Head	7
17	5014750	HACCP Data Logger, USB Port, option	1
18*	CC-35050	HACCP Board, option	1
19*	LT-3738	Door Switch	1

*NOT SHOWN


PARTS INFORMATION

QC2-40 CONTROL PANEL - HINGED RIGHT (AFTER JUNE 1, 2012)

60HZ

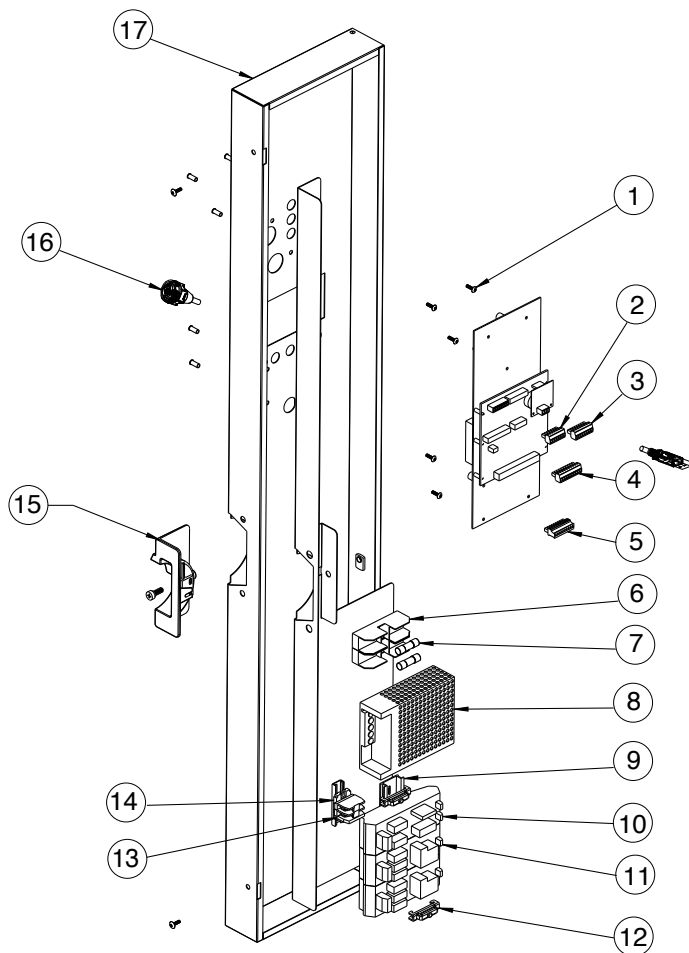

50HZ

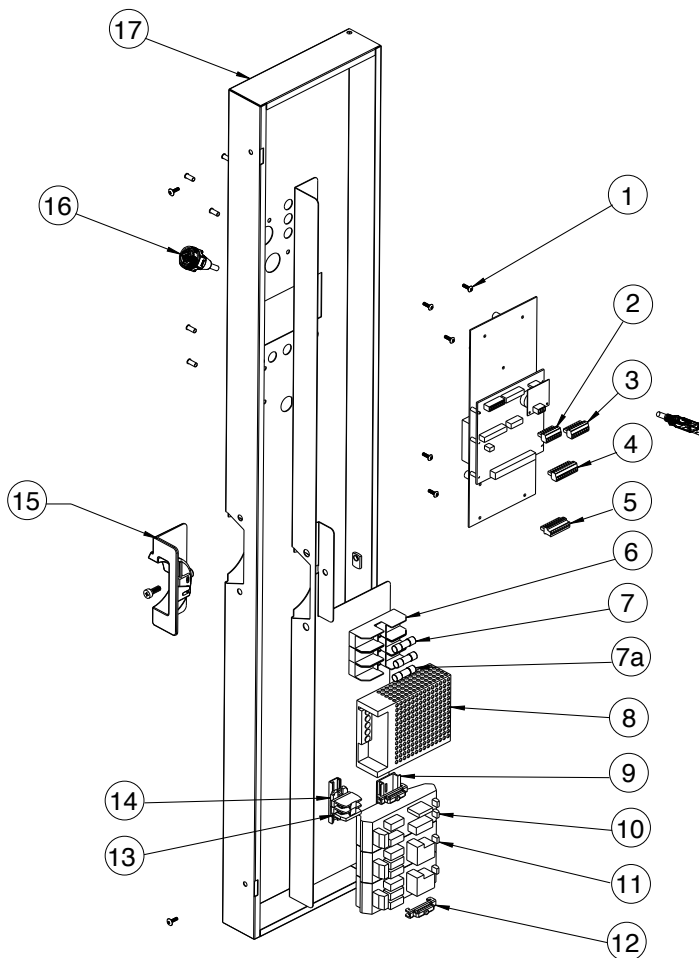


Item	Part	Description	Qty.
1	SC-29928	Bolt, 6-32x1/2, Philip Truss Head	7
2	TM-29921	Terminal Block, Pluggable, 180 Deg, 7 Position	1
3	TM-29922	Terminal Block, Pluggable, 180 Deg, 8 Position	1
4	TM-29923	Terminal Block, Pluggable, 180 Deg, 10 Position	1
5	TM-29920	Terminal Block, Pluggable, 90 Deg, 9 Position	1
6	BK-29919	Block, Fuse Holder, 20A 300VAC	2
7	FU-29934	Fuse, 20 amp, Time Delay, #SLC020 480V Class G	2
7a	FU-29997	Fuse, 15A Time Delay SC-15 300V 3/4HP	1
8	BA-29927	Power Supply, 115V to 12VDC, 40 Watt, 60C Op Temp	1
9	BT-29929	Dinrail Mounting Bracket	1

Item	Part	Description	Qty.
10	BA-34010	Relay Board	1
11	BA-34009	Relay Board	2
12	BT-29929	Dinrail, End Stop	2
13	CR-29925	Connector, Flat Base M.D. End	1
14	CR-29924	Connector, Terminal Medium Duty	2
15	LT-35855	Door Latch, Right Hand	1
16	5014750	HACCP Data Logger, USB Port, option	1
17	CC-29930	Control Panel Assembly	1
18*	CC-35050	HACCP Board, option	1
19*	LT-3738	Door Switch	1

*NOT SHOWN

PARTS INFORMATION


QC2-40 FAN

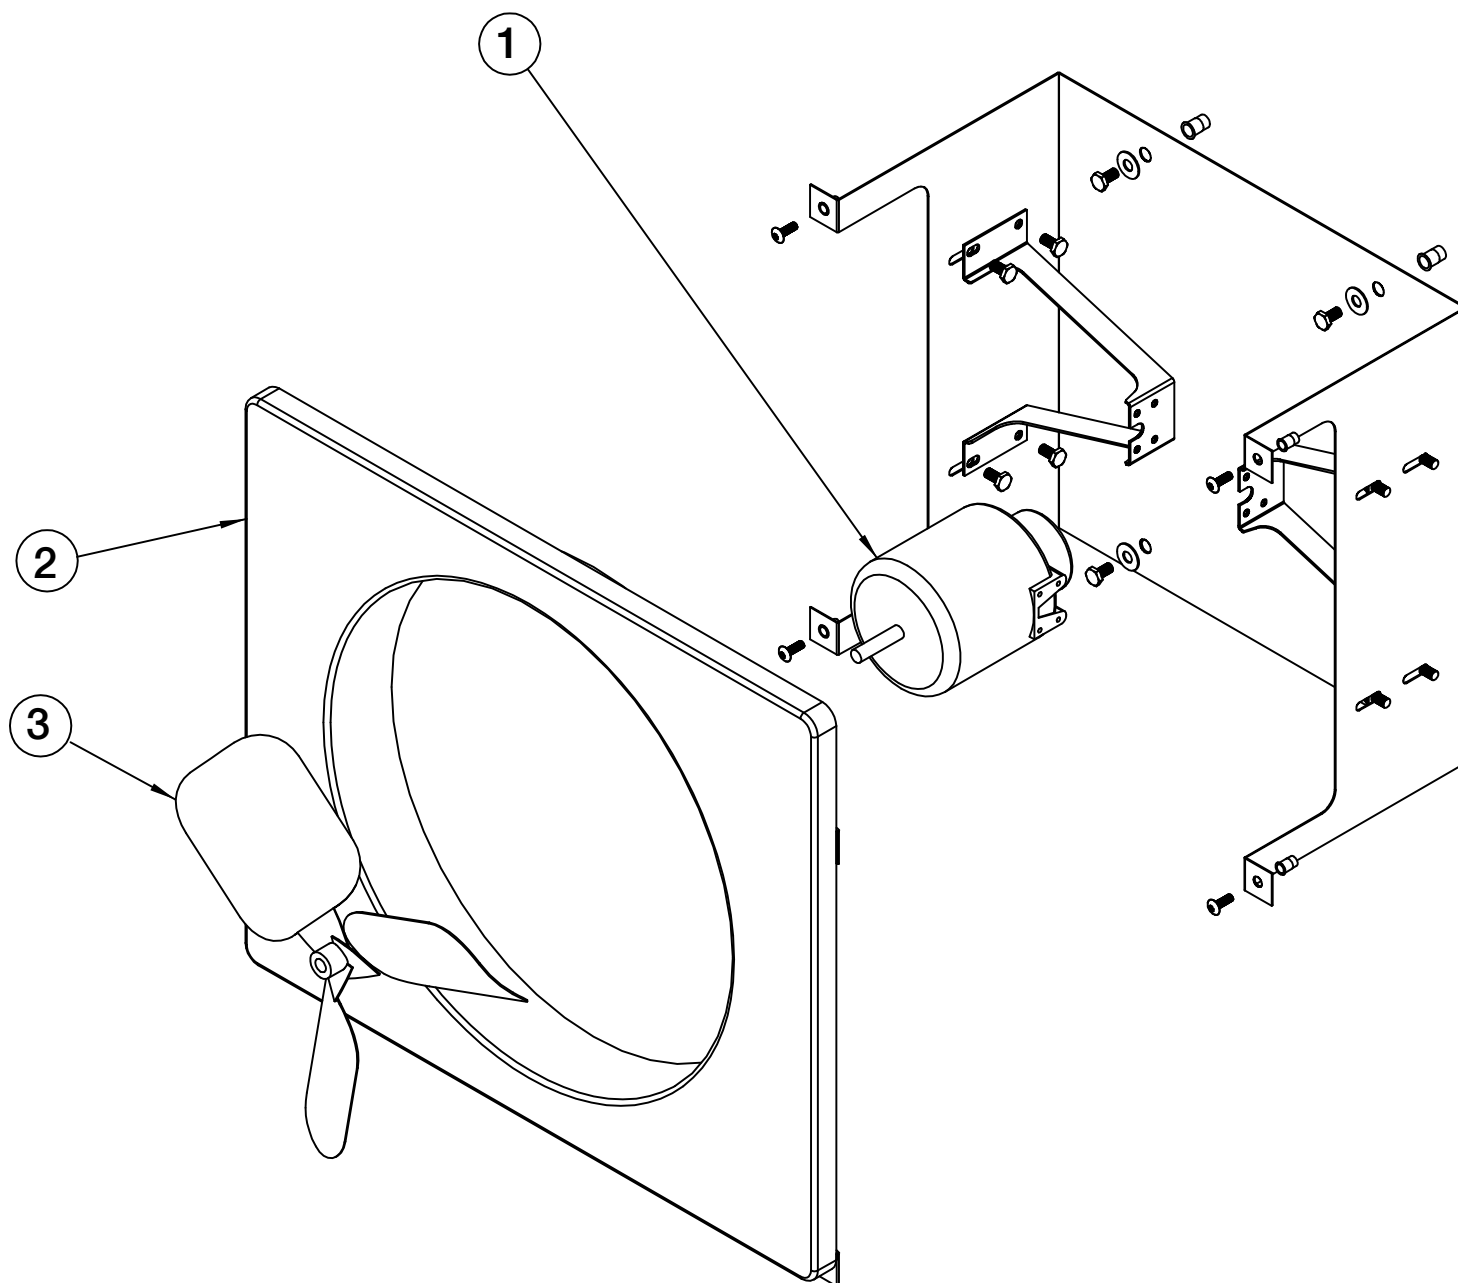

Item	Part	Description	Qty.
1	FA-29853	Motor, Fan Evaporator, 60Hz	2
	RE-35856	Motor, Fan Evaporator, 50Hz	2
2	FT-29908	Plastic Collar, 14-1/2" Round	2
3	FA-29907	Blade, 14" Evaporator Fan	2

PARTS INFORMATION


QC2-100 COMPRESSOR

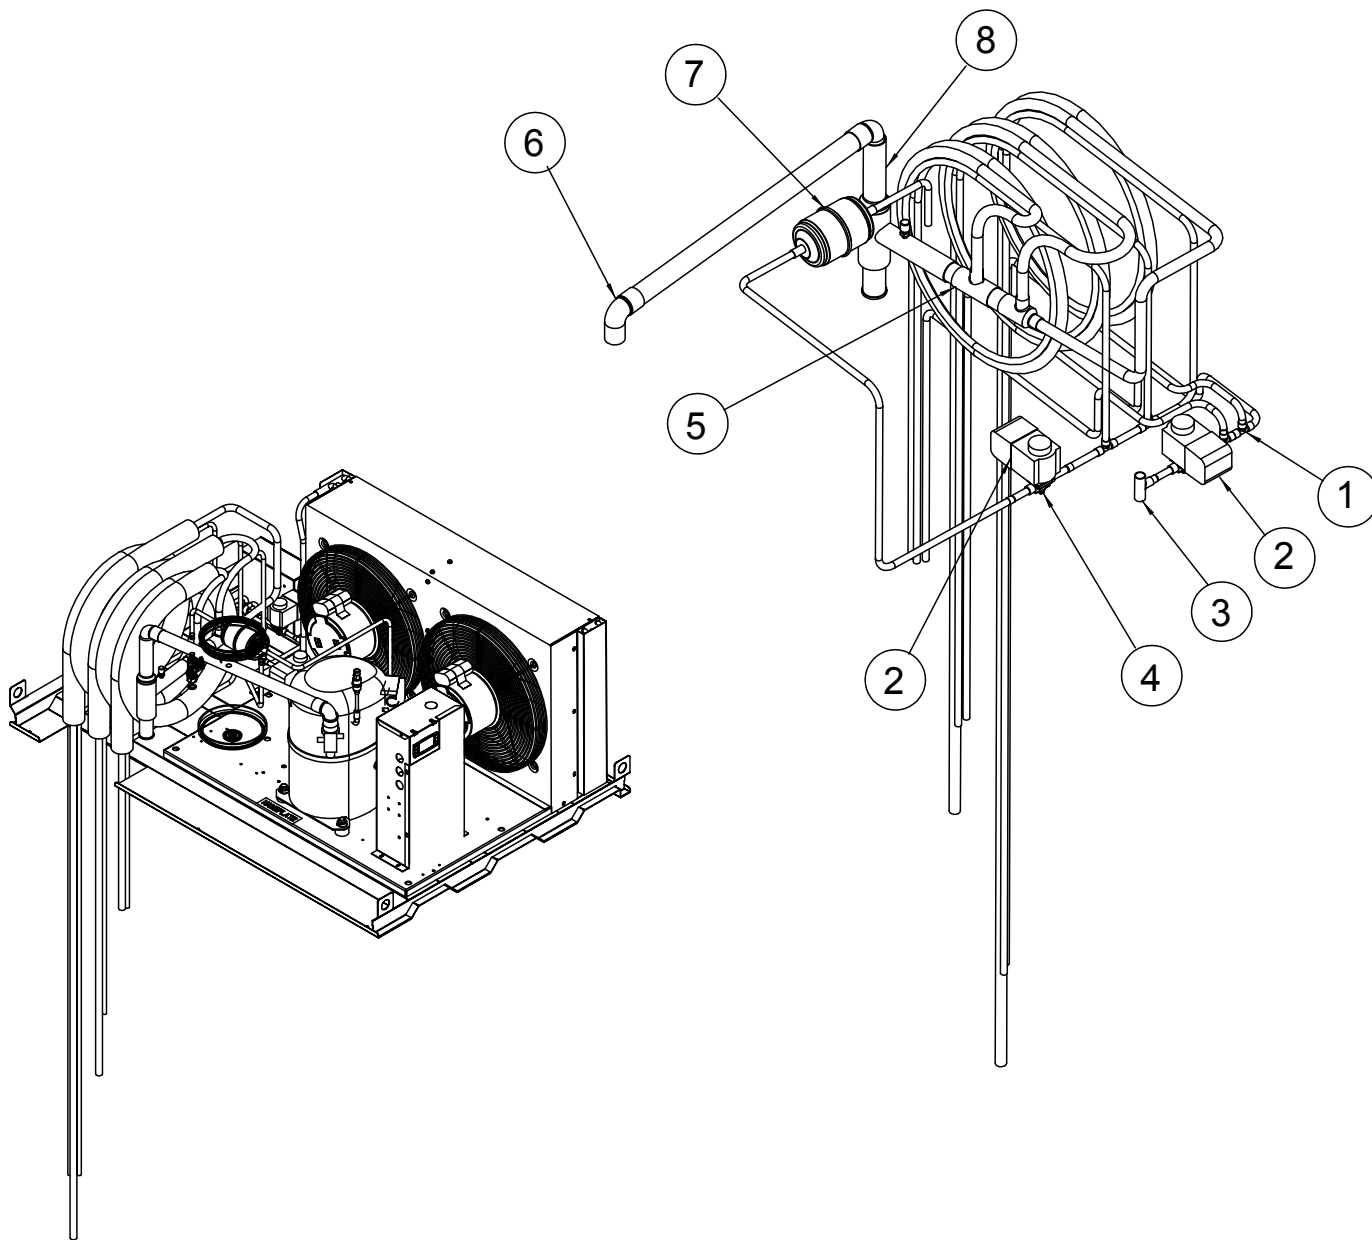

Item	Part	Description	Qty.
1	TE-29986	Tee, Copper, 3/8 x 3/8 x 3/8" ID	4
2	RE-35155	Solenoid Valve & Coil, Danfoss, 120V	2
3	TE-35153	Tee, Copper, 1/2 x 1/2 x 3/8" ID	1
4	VA-29898	Valve, Liquid Line Solenoid	2
5	TE-35154	Tee, Copper, 1-1/8 x 1-1/8 x 5/8" OD	1
6	EL-35152	Elbow, Copper 1/4" Street	2
7	FI-29987	Filter Drier	1
8	RE-29983	Condensing Unit, 3HP 208/230V 1 Phase	1
	RE-35172	Condensing Unit, 3HP 208/230V 3 Phase	1

PARTS INFORMATION

QC2-100 COIL

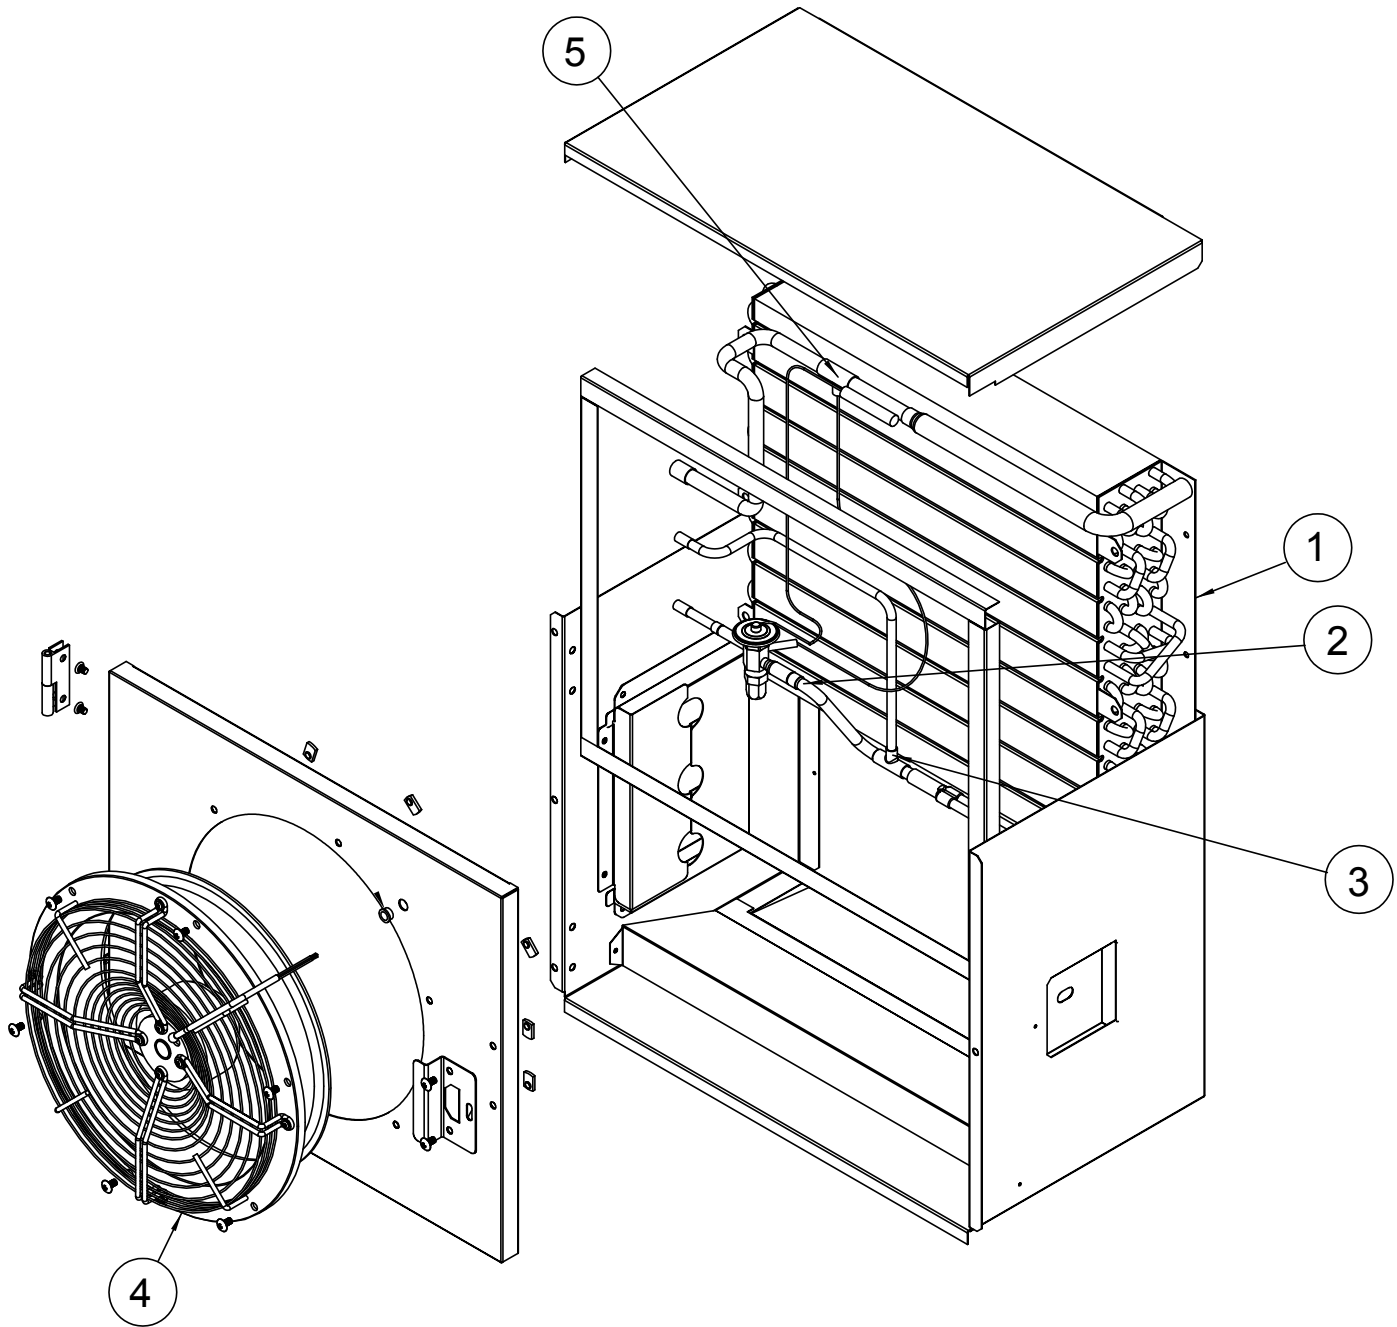


Item	Part	Description	Qty.
1	RE-29905	Coil Assembly, 19x20	1
2	VA-29906	Valve, Expansion	1
3	TE-35153	Tee, Copper, 1/2 x 1/2 x 3/8" ID	1
4	FA-29945	Fan, Axial Evaporator Coil	1
5	TE-29985	Tee, Copper, 1/2" x 1/2" x 1/4" ID	1
6*	SN-34663	Coil Sensor, Defrost/Sensor	1

*NOT SHOWN

PARTS INFORMATION

QC2-100 DOOR

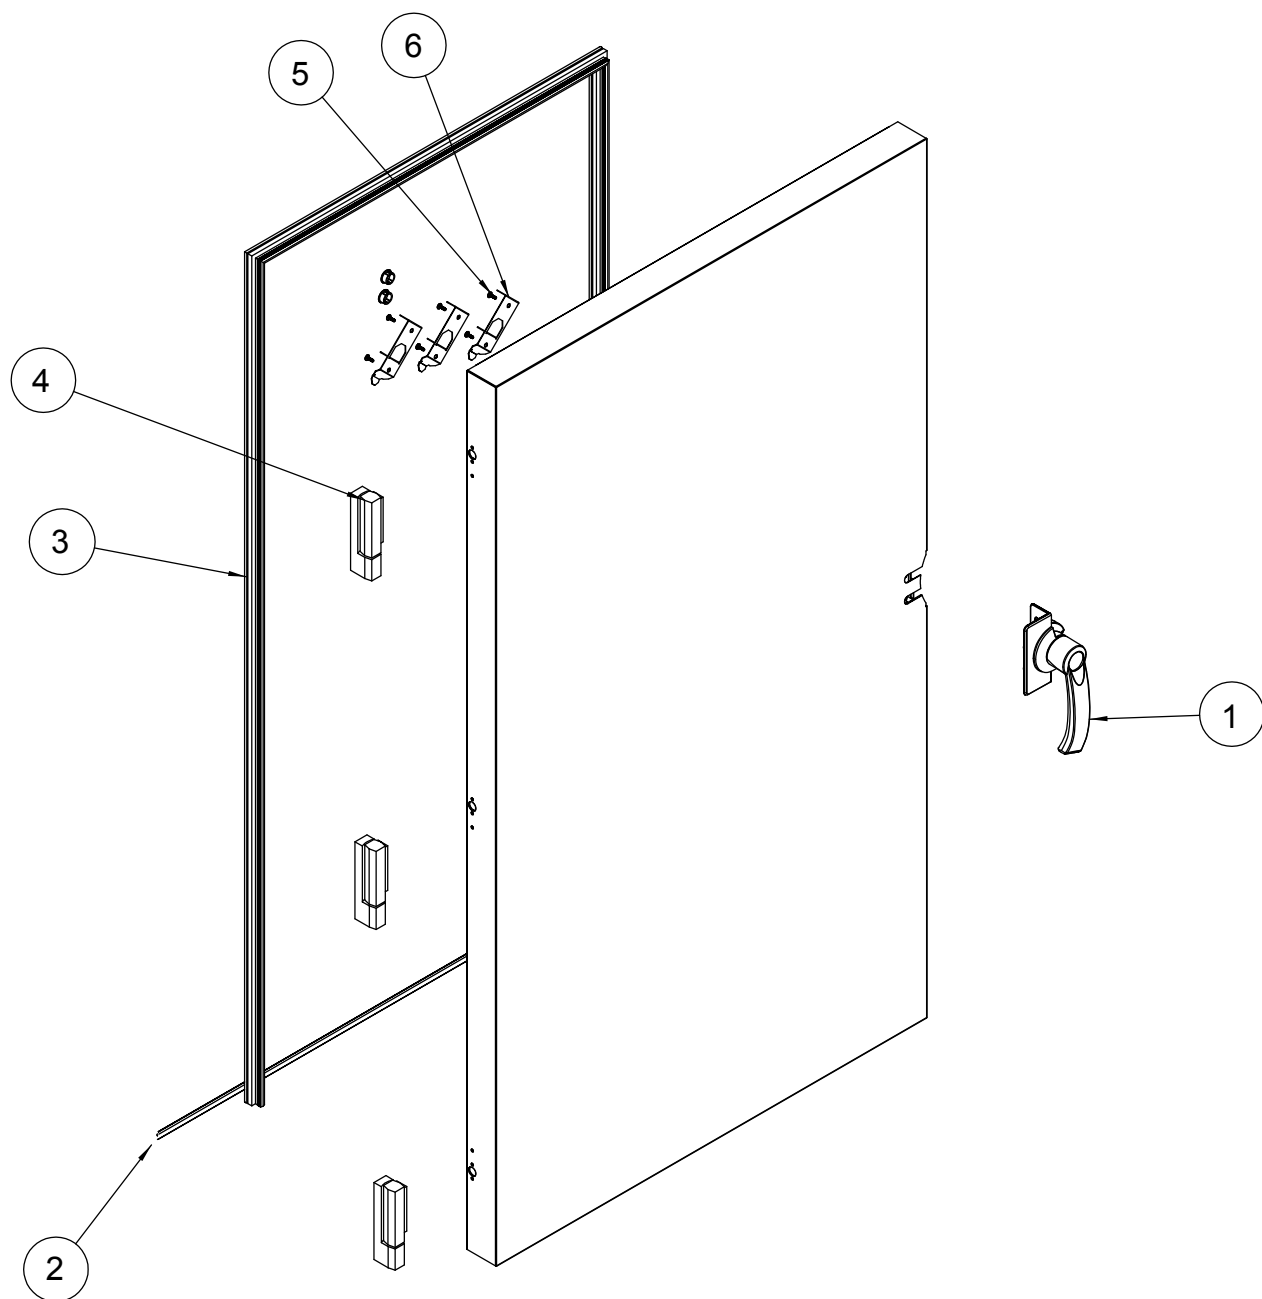


Item	Part	Description	Qty.
1	HD-26967	Handle, Door	1
2	GS-29994	Gasket, Compression	1
3	GS-29993	Gasket, Door	1
4	HG-29992	Hinge, Adjustable	3
5	SC-29991	Screw, Pan Head, 8-32 x 1/2" Long	1
6	HL-29840	Food Probe Holder	3
7*	LT-3738	Door Switch	1
	DR-35858	Door Assembly, LH, without Handle or Hinges	1
	DR-35857	Door Assembly, RH, without Handle or Hinges	

*NOT SHOWN

PARTS INFORMATION

QC2-100 INTERIOR, LEFT-HAND VIEW

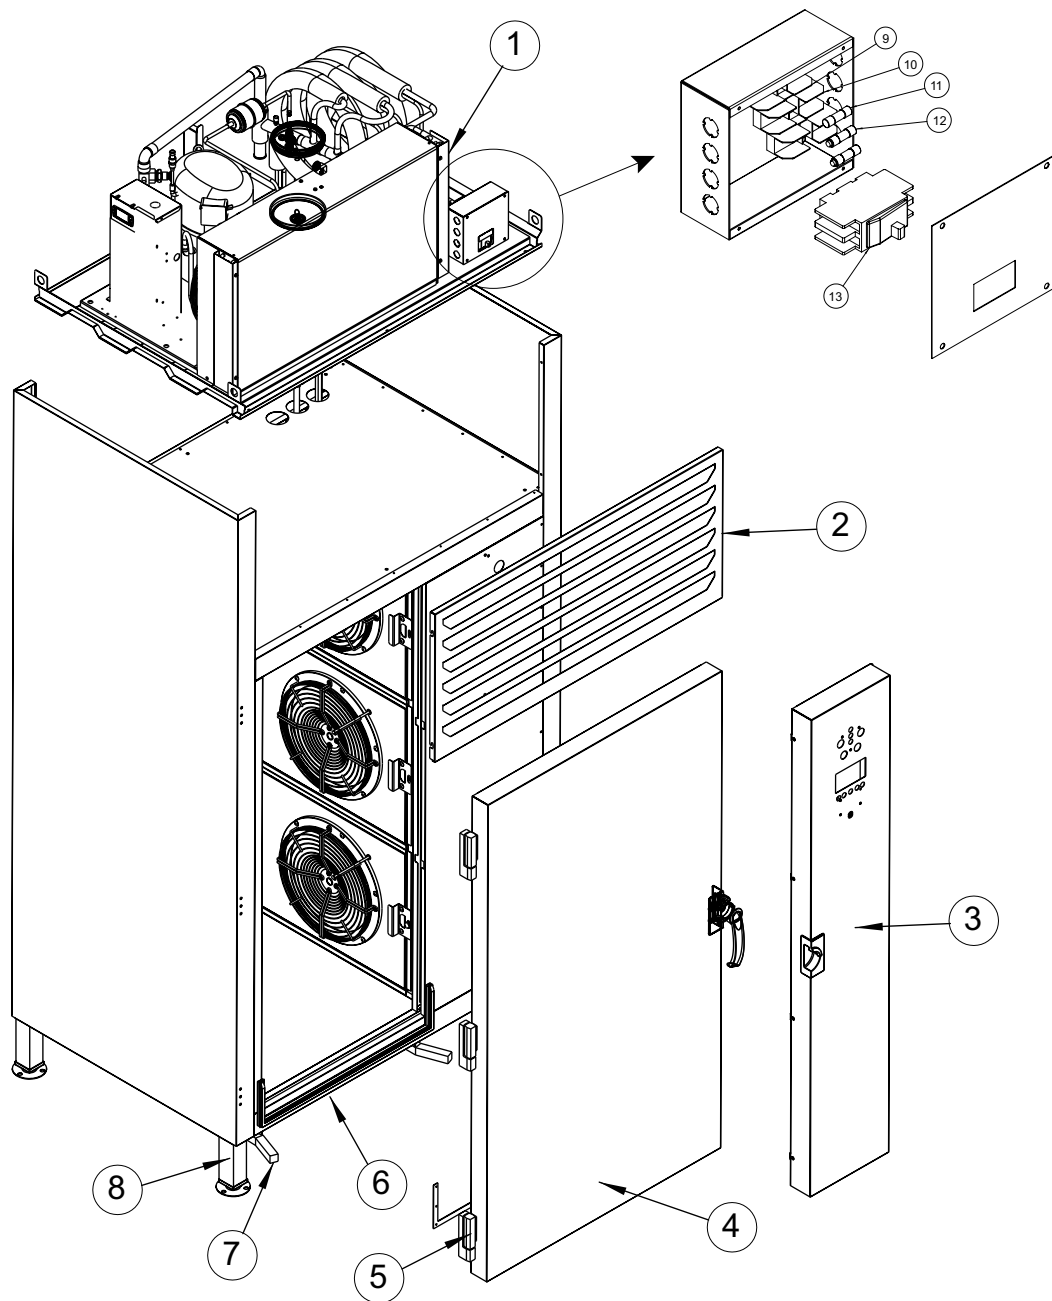


Item	Part	Description	Qty.
1	RE-29983	Condensing Unit, 3HP 208/230V 1 Phase	1
	RE-35172	Condensing Unit, 3HP 208/230V 3 Phase	1
2	PN-29842	Louver Panel	1
3	PN-29999	Panel, Control Panel Assembly, LH	1
4	DR-29990	Door Assembly, LH without Hinges and Handle	1
5	HG-29992	Hinge, Adjustable	3
6	GS-29994	Gasket, Compression	1
7	CONTACT FACTORY	Trolley Guides	1
8	5014889	Legs	4

*NOT SHOWN

Item	Part	Description	Qty.
9	BK-29919	Block, Fuse Holder, 20A 300VAC	1
10	FU-29995	Block, Fuse Holder, 30A 600VAC	2
11	FU-29997	Fuse, 15A Time Delay SC-15 300V 3/4HP	1
12	FU-29998	Fuse, 30A Time Delay CCMR-30 600VAC	2
13	FU-29996	Breaker, 2 Pole, 30 Amp	1
14*	SH-22473	Shelf, Stainless Steel Wire	1
15*	PR-34299	Probe, Receptacle	3
16*	PR-34537	Probe, Quick Connect	3
17*	SA-35079	Pre-Chill Strip	1
18*	SN-33541	Cavity Sensor	1

PARTS INFORMATION

QC2-100 INTERIOR, RIGHT-HAND VIEW

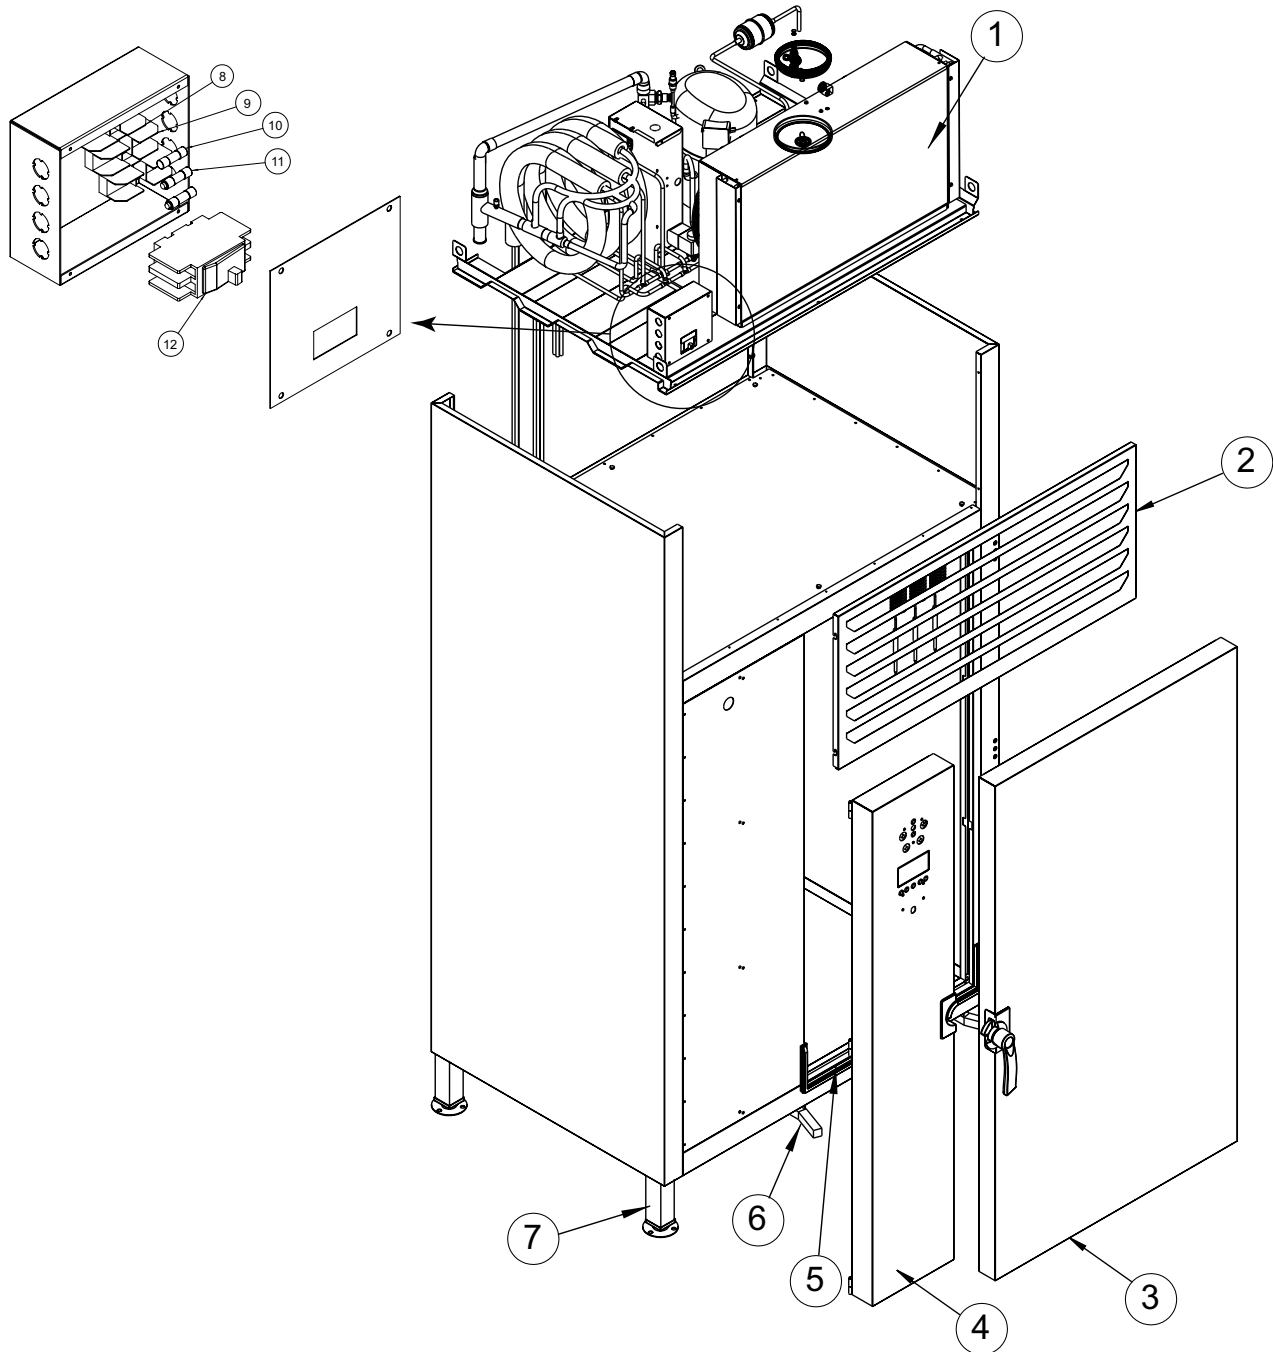


Item	Part	Description	Qty.
1	RE-29983	Condensing Unit, 3HP 208/230V 1 Phase	1
	RE-35172	Condensing Unit, 3HP 208/230V 3 Phase	1
2	PN-29842	Louver Panel	1
3	DR-35857	Door Assembly, RH without Hinges and Handle	1
4	PN-35935	Control Panel Assembly	1
5	GS-29994	Gasket, Compression	1
6	CONTACT FACTORY	Trolley Guides	1
7	5014889	Legs	4
8	BK-29919	Block, Fuse Holder, 20A 300VAC	1

Item	Part	Description	Qty.
9	FU-29995	Block, Fuse Holder, 30A 600VAC	2
10	FU-29997	Fuse, 15A Time Delay SC-15 300V 3/4HP	1
11	FU-29998	Fuse, 30A Time Delay CCMR-30 600VAC	2
12	FU-29996	Breaker, 2 Pole, 30 Amp	1
13*	SH-22473	Shelf, Stainless Steel Wire	1
14*	PR-34299	Probe, Receptacle	3
15*	PR-34537	Probe, Quick Connect	3
16*	SA-35079	Pre-Chill Strip	1
17*	LT-3738	Door Switch	1
18*	HG-29992	Door Hinge, Adjustable	3

*NOT SHOWN

PARTS INFORMATION

QC2-100 CONTROL PANEL, UNIT HINGED LEFT

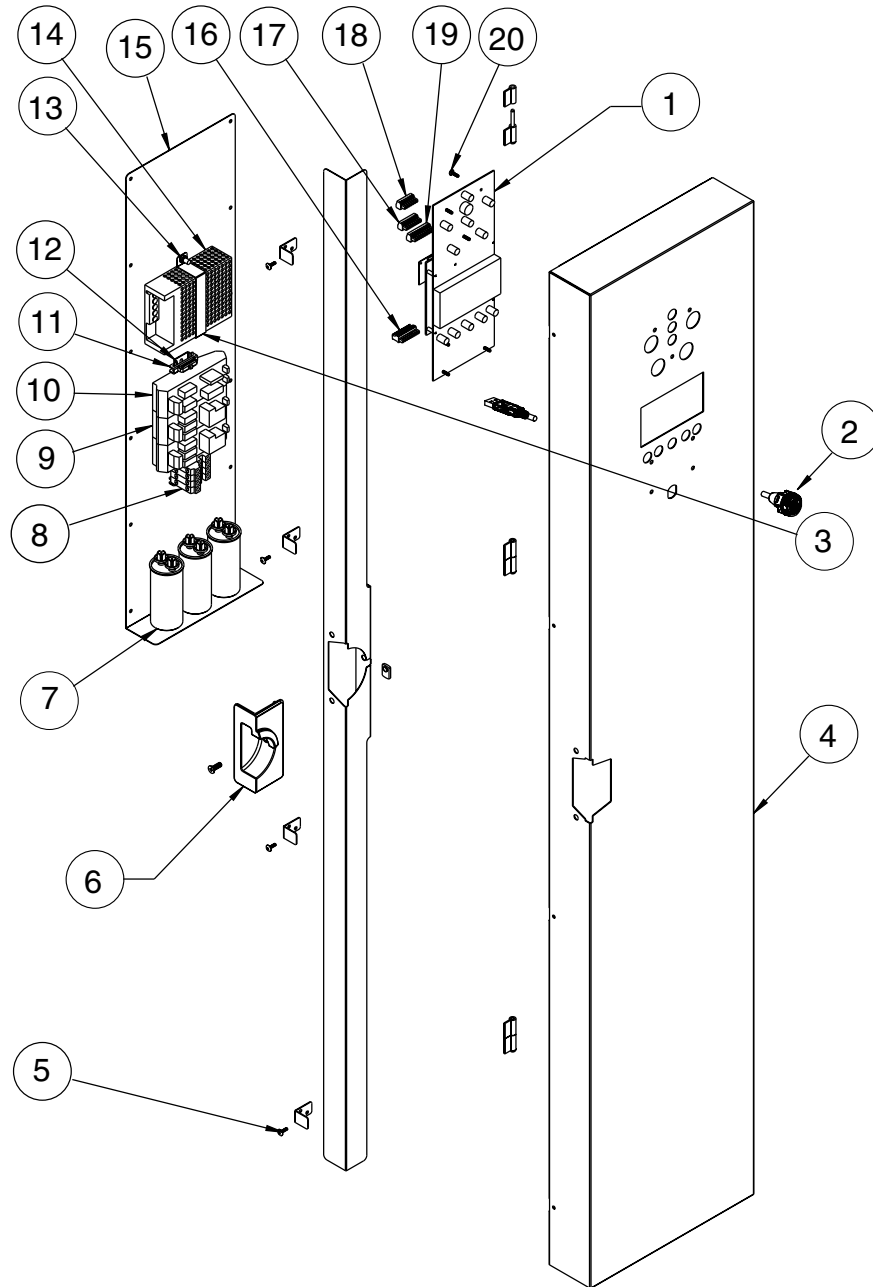


Item	Part	Description	Qty.
1	CC-34682	Control Board	1
2	5014750	HACCP Data Logger, USB Port, option	1
3	TI-35860	Strap, Transformer Tie Down	1
4	PN-29999	Control Panel Assembly	1
5	SC-29991	Bolt, Phillips Truss, 8-32	4
6	LT-26969	Door Latch, Left-Hand	1
7	CU-29964	Capacitor, 14MFD, 440VAC	3
8	BK-35859	Terminal Block, Twin Cond.	4
9	BA-34009	Relay Board	2
10	BA-34010	Relay Board	1
11	BT-29929	Dinrail, End Stop	2
12	BT-29918	Dinrail	1

*NOT SHOWN

Item	Part	Description	Qty.
13	NU-29827	Nut, 10-24, Stainless	6
14	BA-29927	Power Supply, 115V-12VDC, 40 W, 60C Op Temp	1
15	PN-35934	Bracket, Fan Mounting	1
16	TM-29920	Terminal Block, Pluggable, 90 Deg, 9 Position	1
17	TM-29922	Terminal Block, Pluggable, 180 Deg, 8 Position	1
18	TM-29921	Terminal Block, Pluggable, 180 Deg, 7 Position	1
19	TM-29923	Terminal Block, Pluggable, 180 Deg, 10 Position	1
20	SC-29928	Bolt, 6-32x1/2, Philip Truss Head	7
21*	BT-29918	Dinrail Mounting Bracket	1
22*	PE-29624	Panel Overlay	1
22*	CC-35050	HACCP Board, option	1
23*	PI-26098	Pipe, .125" Thick Acrylic Tube Ligt Pipe	4
24*	LT-3738	Door Switch	1

PARTS INFORMATION

QC2-100 CONTROL PANEL, UNIT HINGED RIGHT

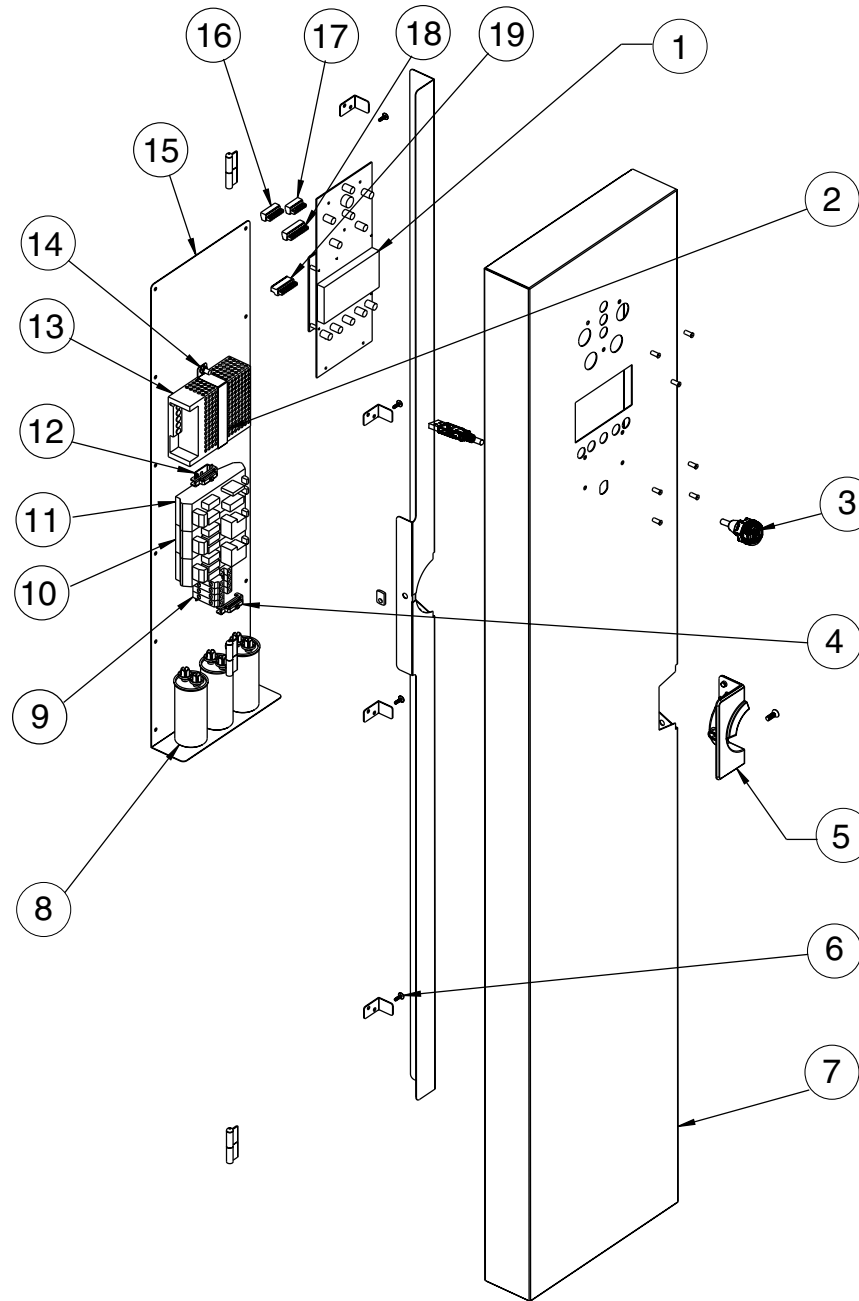

Item	Part	Description	Qty.
1	CC-34682	Control Board	1
2	TI-35860	Strap, Transformer Tie Down	1
3	5014750	HACCP Data Logger, USB Port, option	1
4	BT-29929	Dinrail, End Stop	2
5	LT-26968	Door Latch, Right-Hand	1
6	SC-29991	Bolt, Phillips Truss, 8-32	4
7	PN-29999	Control Panel Assembly, RH	1
8	CU-29964	Capacitor, 14MFD, 440VAC	3
9	BK-35859	Terminal Block, Twin Cond.	4
10	BA-34009	Relay Board	2
11	BA-34010	Relay Board	1
12	BT-29918	Dinrail	1

*NOT SHOWN

Item	Part	Description	Qty.
13	BA-29927	Power Supply, 115V-12VDC, 40 W, 60C Op Temp	1
14	NU-29827	Nut, 10-24, Stainless	6
15	PN-35934	Bracket, Fan Mounting	1
16	TM-29922	Terminal Block, Pluggable, 180 Deg, 8 Position	1
17	TM-29921	Terminal Block, Pluggable, 180 Deg, 7 Position	1
18	TM-29923	Terminal Block, Pluggable, 180 Deg, 10 Position	1
19	TM-29920	Terminal Block, Pluggable, 90 Deg, 9 Position	1
20*	BT-29918	Dinrail Mounting Bracket	1
21*	SC-29928	Bolt, 6-32x1/2, Philip Truss Head	7
22*	PE-29624	Panel Overlay	1
23*	CC-35050	HACCP Board, option	
24*	PI-26098	Pipe, .125" Thick Acrylic Tube Ligt Pipe	4
25*	LT-3738	Door Switch	1

BRN- BROWN
BLK- BLACK
BLU- BLUE
YEL- YELLOW
ORG- ORANGE
GRN- GREEN
RED- RED
WHT- WHITE

- INDICATES BUCHANNAN CONNECTION FILLED WITH BLACK SILICONE
○ INDICATES BUTT SPLICE WITH SHRINK WRAP

LOW PRESS CTRL
RF CNT700

SR CON9902

1/2 HP COMP
115v-60hz-1ph

5-15P 5-15R

J-BOX

REFRIGERANT SOLENOID
RF SOL9801

DEFROST SOLENOID
RF SOL9801

DRAIN HEATER
EL WIR011

SPARE MULLION HEATER

MULLION HEATER

EL MTR9902

EVAP FAN

ELECT. COND. EVAP.
RIB BLK
BLK
EL WIR274

10-24X1" GND STUD
10-24 NUT

10-24X1" GND STUD
10-24 NUT

20A CIRCUIT BREAKER
EL BRK9906
IN SPECIAL J-BOX

9' CORD EL WIR461-12

PRODUCT PROBE STYLE
FOOD PROBE BO PRB1101
RECEPTACLE BO PRB1102

WRAP LENGTH OF HARNESS WITH SPIRAL LOOM (EL WIR0333) AND CREATE STRAIN RELIEF LOOP SECURED WITH SURGICAL TUBING FROM THE REAR

1 BRN FOOD PROBE 18AWG (72")
4 BLK FOOD PROBE 18AWG (72")
2 YEL DEFROST SENSOR 18AWG (72")
5 BLK DEFROST SENSOR 18AWG (72")
3 RED AIR SENSOR 18AWG (72")
6 WHT AIR SENSOR 18AWG (72")

1 BLK LINE 1 IN FROM POWER CORD 14 AWG (50")
2 EMPTY
3 GRN/WHT GND IN FROM POWER CORD 16 AWG (50")
4 YEL TO REFRIGERATION SOLENOID 16 AWG (50")
5 BRN TO DEFROST SOLENOID 16 AWG (50")
6 WHT/RED TO EVAPORATOR FAN 16 AWG (50")
7 ORG TO DRAIN HEATER 16 AWG (50")
8 RED TO MULLION HEATER 16 AWG (50")
9 BLK TO LOW PRESSURE CONTROL 14 AWG (50")
10 EMPTY
11 EMPTY
12 EMPTY
13 EMPTY
14 EMPTY
15 WHT NEUTRAL 16 AWG (50")

WRAP LENGTH OF HARNESS WITH SPIRAL LOOM (EL WIR0333) AND CREATE STRAIN RELIEF LOOP SECURED WITH SURGICAL TUBING FROM THE REAR


TOTAL POWER			
	VOLTS	WATTS	AMPS
G DESIGN	114	923	8.1
	126	1377	10.93
	115	1840	16

TOTAL POWER			
	VOLTS	WATTS	AMPS
AG DESIGN	114	923	8.1
	126	1377	10.93
AG	115	1840	16

4		REROUTE ELEC COND WIRE	05/02/13	AAP
3		CHG FUSE BLK ELBLK0207	01/11/13	AAP
2		CHNG WIRE CONNECT NOTE	07/26/12	AAP
1		CHANGE 16AWG TO 14AWG	03/20/12	AAP
REV	ECO	DESCRIPTION	DATE	APP
QC2-3, 115v-60hz-1ph, Page 1				
ALTO-SHAAM		WIRING DIAGRAM		
		DWG: 77430		SHEET 1_OF_2
BY: AAP DATE: 01-13-12				


WIRE COLOR

BRN- BROWN
BLK- BLACK
BLU- BLUE
YEL- YELLOW
ORG- ORANGE
GRN- GREEN
RED- RED
WHT- WHITE

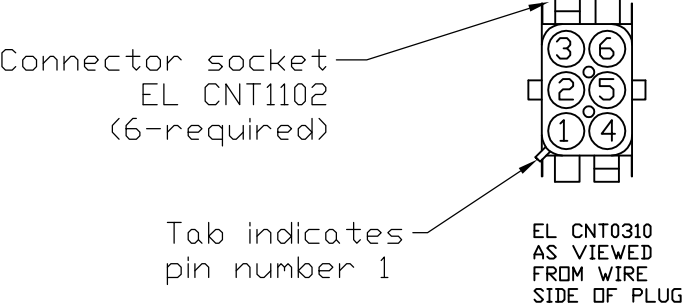

GATHER EXCESS WIRE AND FOIL
SHIELD AT EACH END OF CABLES
"EL WIR1105" AND SHRINK WRAP
A PROTECTIVE COVERING

UL NAME PLATE DATA PROVIDED AND MAINTAINED BY UNIFIED BRANDS:
REFRIGERANT: R404A 2 LBS 8 OZS (CHARGED)
120V, 1PH, 60HZ, 7.7 AMPS

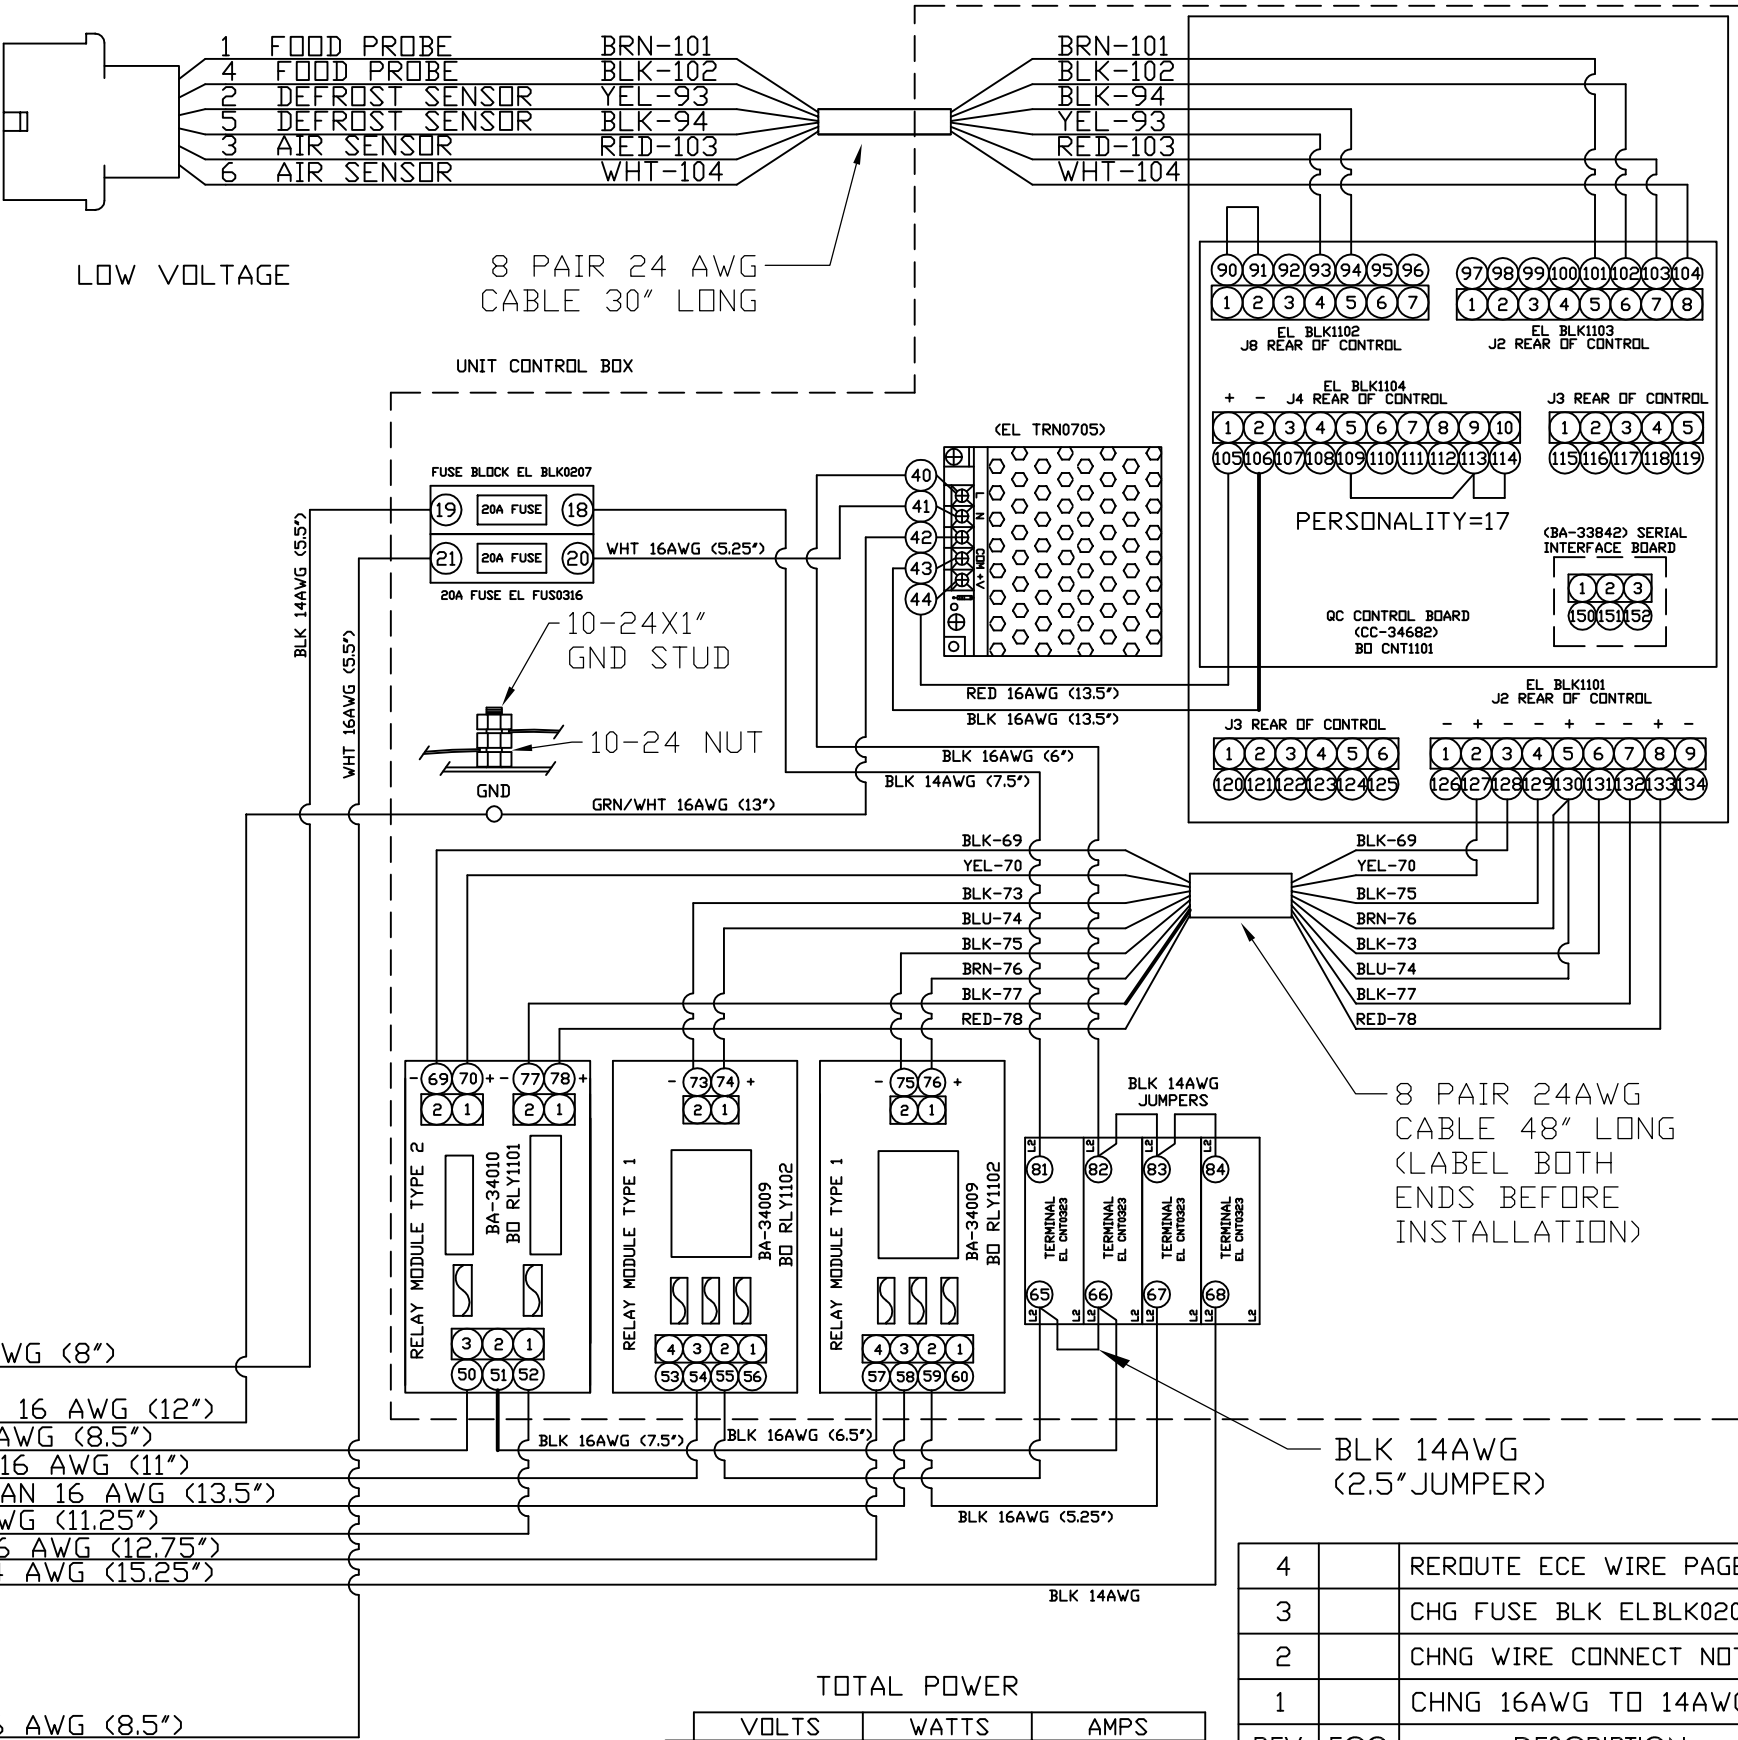


TOTAL POWER		
	VOLTS	WATTS
AG DESIGN	114	923
	126	1377
	115	1840
		AMPS
		8.1
		10.93
		16

NOTE: AG = AGENCY

4		REROUTE ECE WIRE PAGE 1	05/02/13	AAP
3		CHG FUSE BLK ELBLK0207	01/11/13	AAP
2		CHNG WIRE CONNECT NOTE	05/27/12	AAP
1		CHNG 16AWG TO 14AWG	03/20/12	AAP
REV	ECO	DESCRIPTION	DATE	APP
QC2-3, 115v-60hz-1ph, Page 2				
ALTO-SHAAM		WIRING DIAGRAM		
BY: AAP DATE: 01-13-12		DWG: 77430	SHEET 2_OF_2	

- INDICATES BUCHANNAN CONNECTION FILLED WITH BLACK SILICONE
- INDICATES BUTT SPLICE WITH SHRINK WRAP

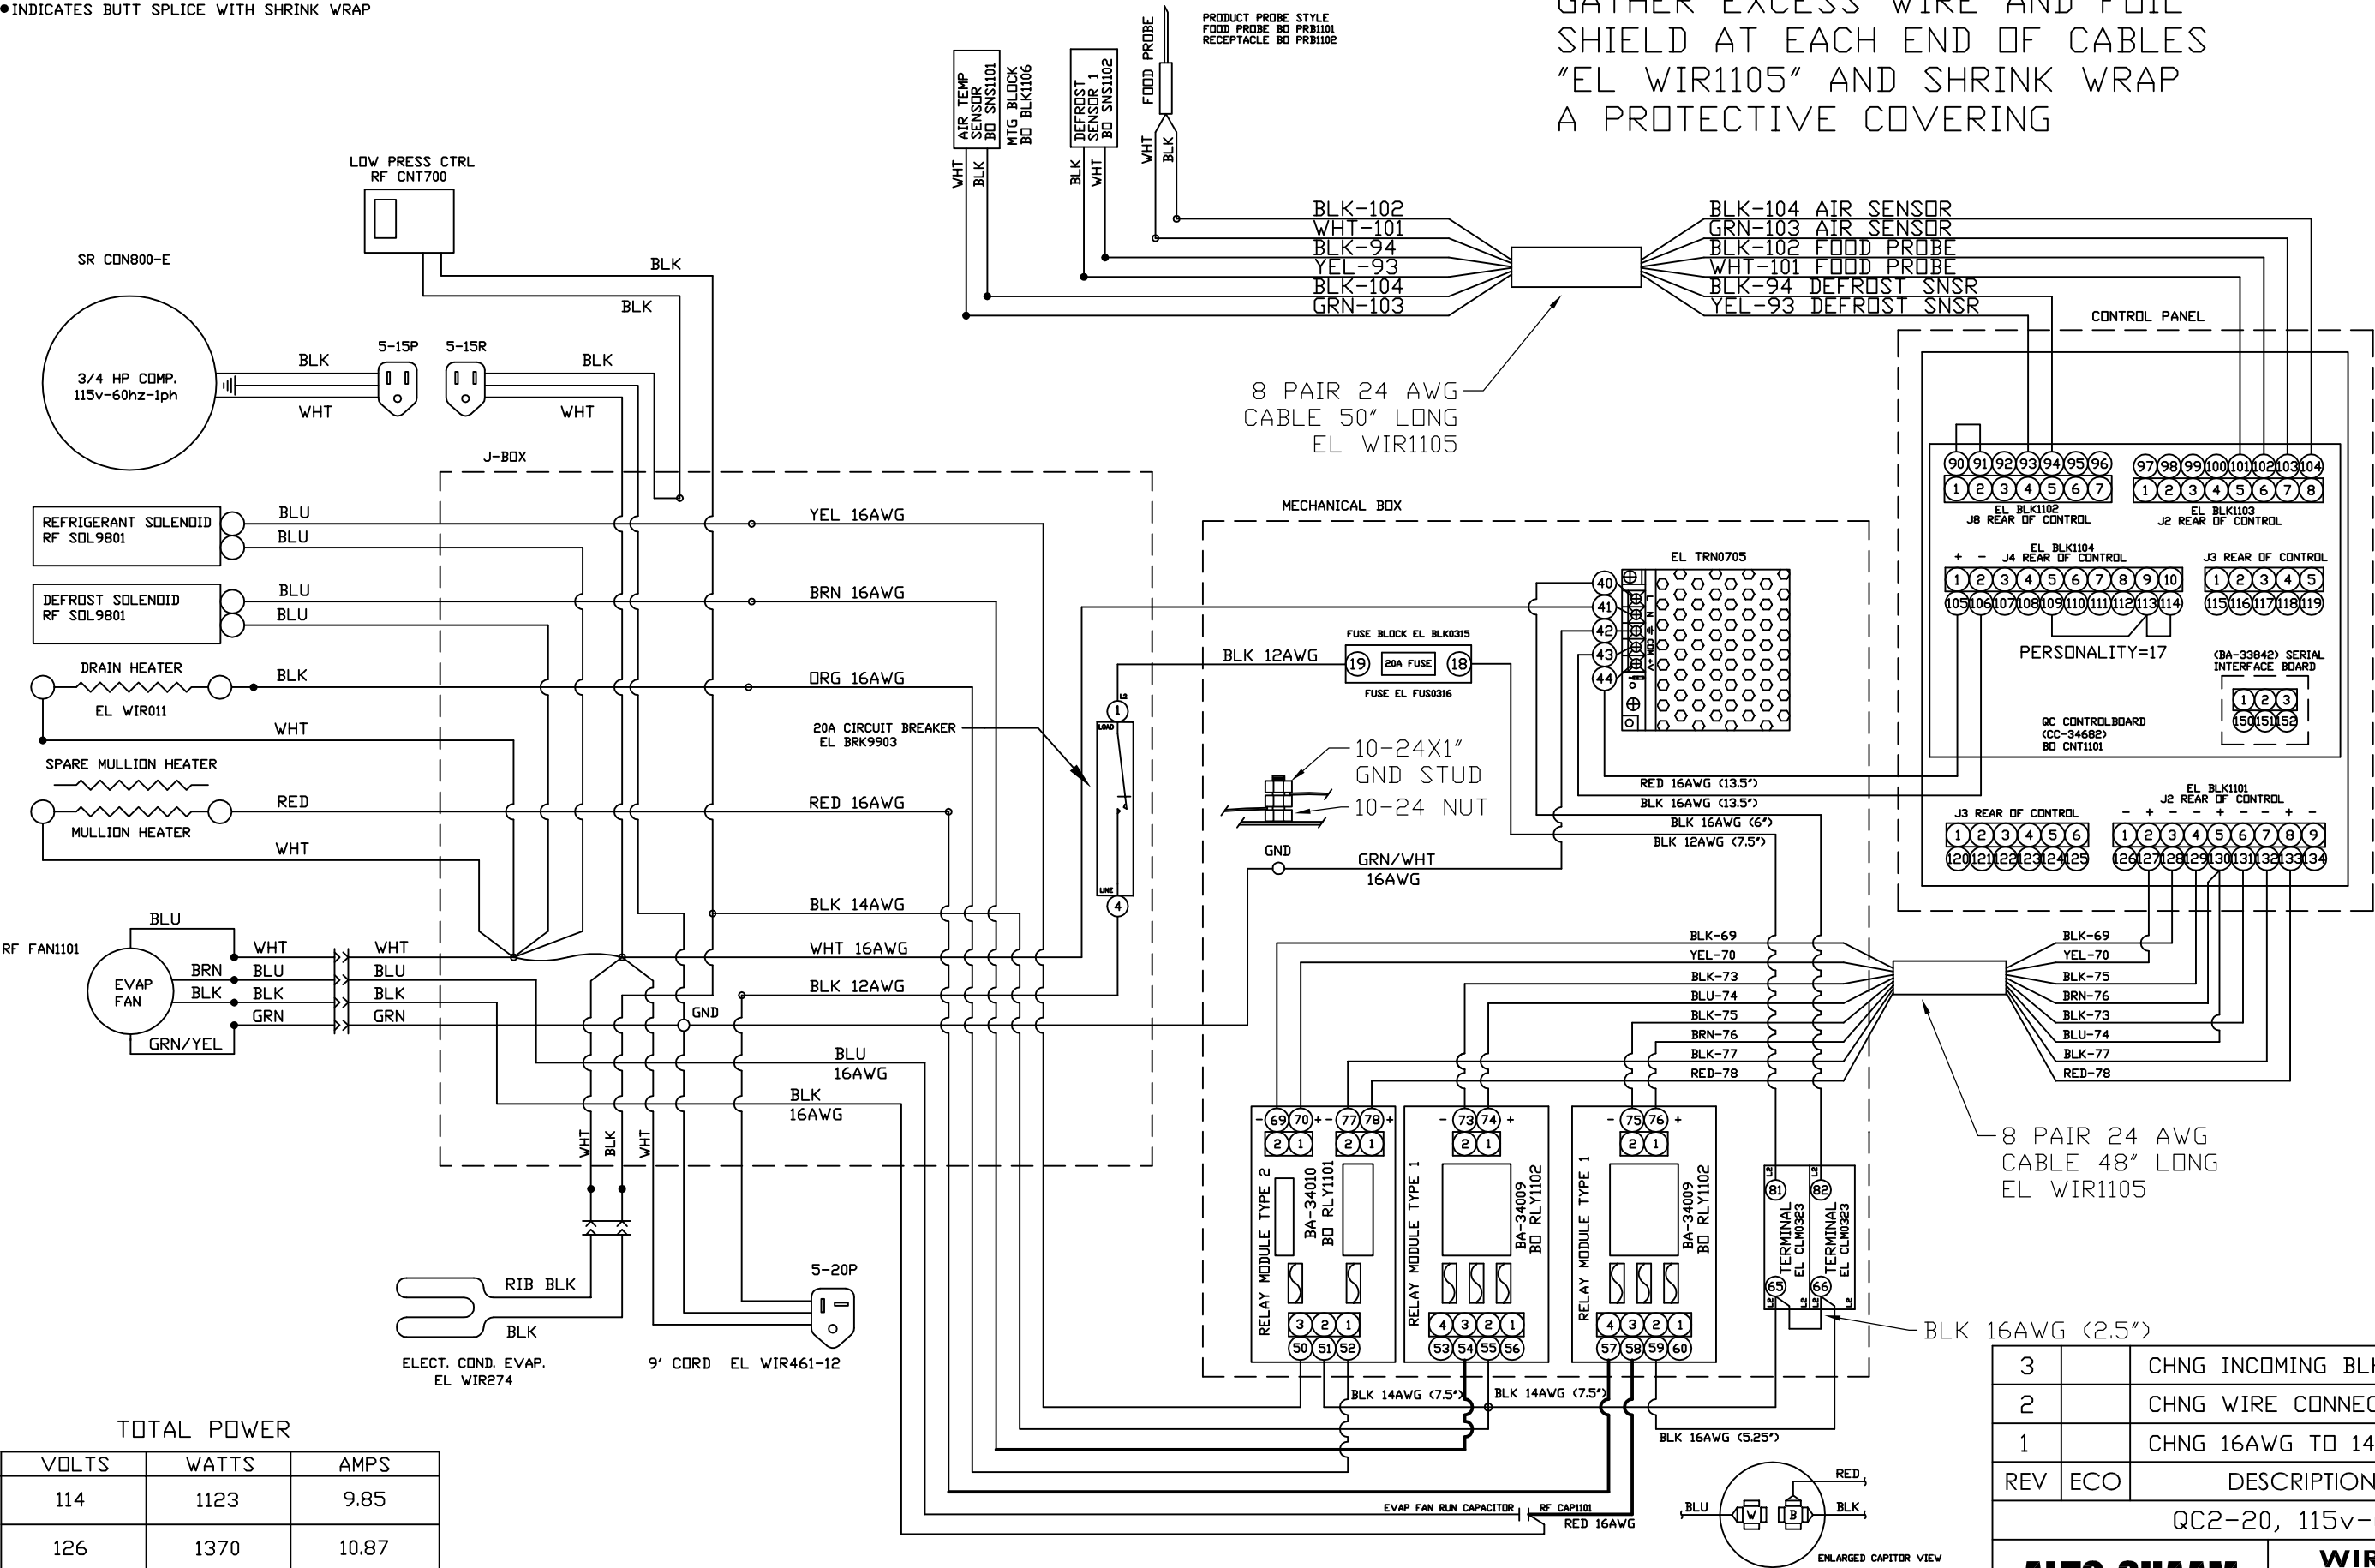

WIRE COLOR

- BRN- BROWN
- BLK- BLACK
- BLU- BLUE
- YEL- YELLOW
- ORG- ORANGE
- GRN- GREEN
- RED- RED
- WHT- WHITE


TOTAL POWER

	VOLTS	WATTS	AMPS
AG DESIGN	114	1123	9.85
	126	1370	10.87
	115	1840	16

NOTE: AG = AGENCY

3		CHNG INCOMING BLK 12AWG	10/19/12	
2		CHNG WIRE CONNECT NOTE	7/26/12	
1		CHNG 16AWG TO 14AWG	03/20/12	
REV	ECO	DESCRIPTION	DATE	APP
QC2-20, 115v-60hz-1ph				
ALTO-SHAAM		WIRING DIAGRAM		
BY: AAP DATE: 01-13-12		DWG: 77432	SHEET 1_OF_1	

- INDICATES BUCHANNAN CONNECTION FILLED WITH BLACK SILICONE
- INDICATES BUTT SPLICE WITH SHRINK WRAP

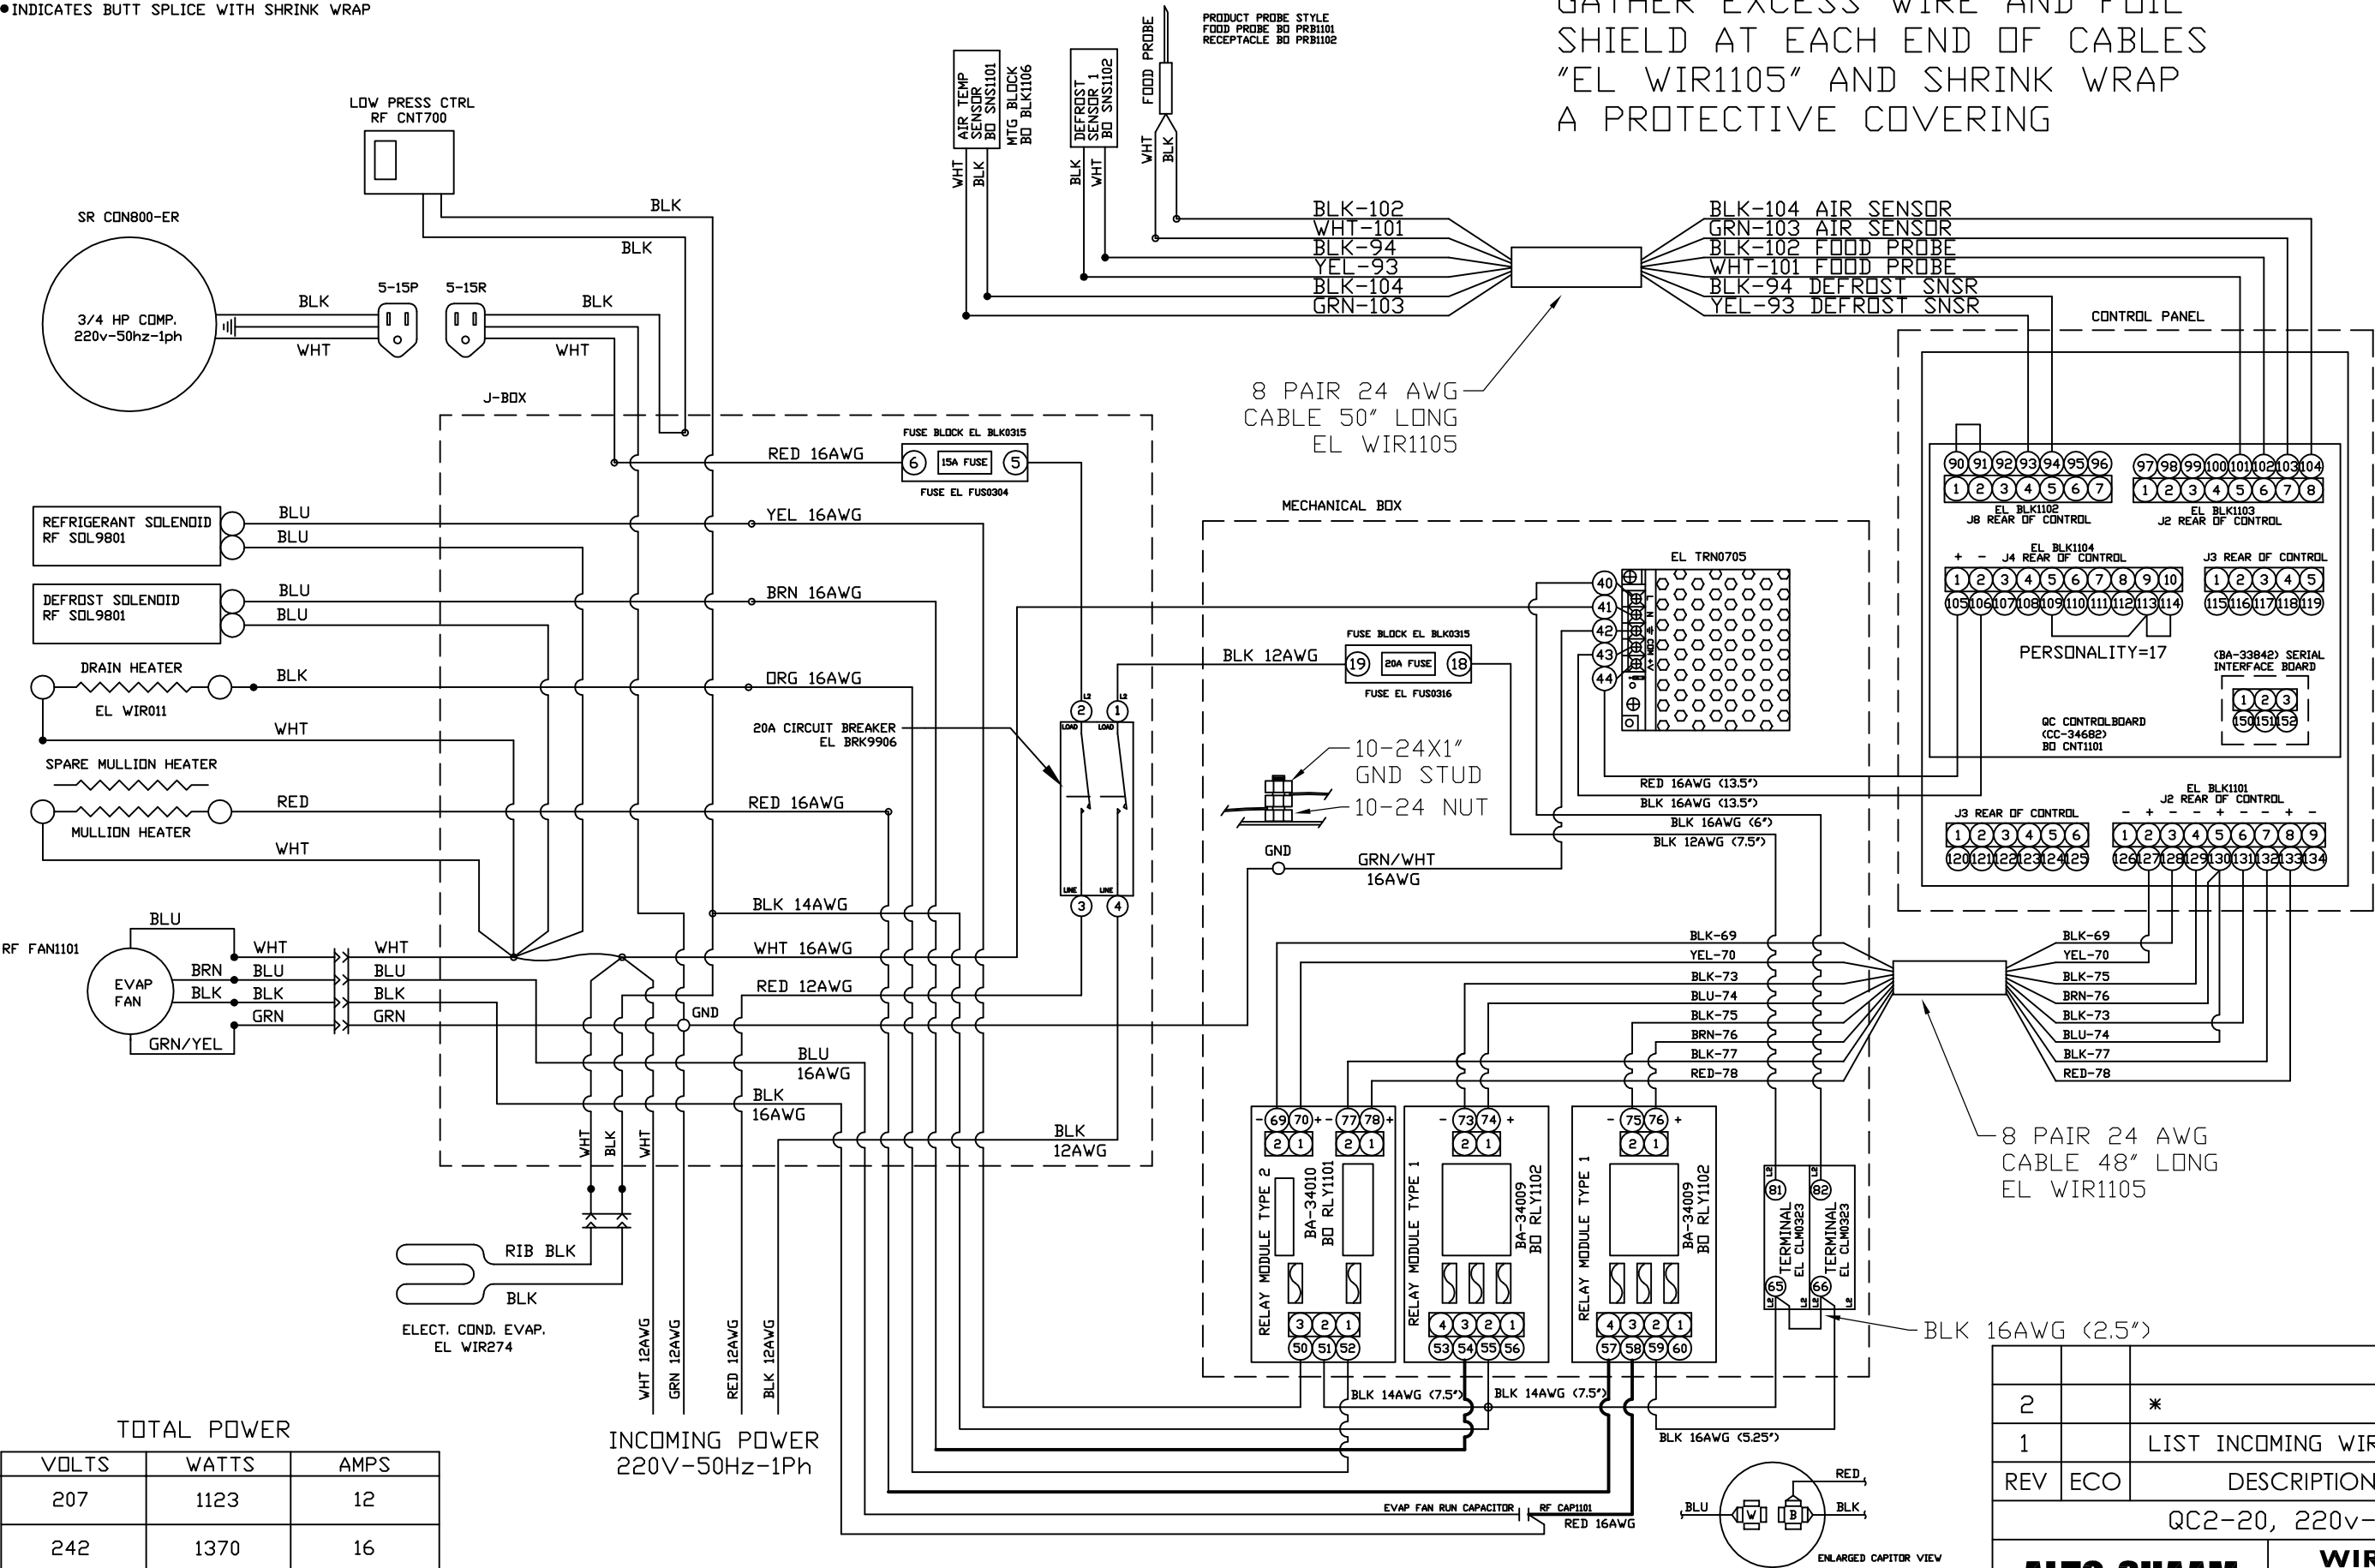


WIRE COLOR

- BRN- BROWN
- BLK- BLACK
- BLU- BLUE
- YEL- YELLOW
- ORG- ORANGE
- GRN- GREEN
- RED- RED
- WHT- WHITE

2	*	*		
1		LIST INCOMING WIRE GA	10/19/12	
REV	ECO	DESCRIPTION	DATE	APP
QC2-20, 220v-50hz-1ph				
ALTO-SHAAM		WIRING DIAGRAM		
BY: AAP DATE: 10-11-12		DWG: 77520	SHEET 1_OF_1	


- INDICATES BUCHANNAN CONNECTION
FILLED WITH BLACK SILICONE
- INSULATED BUTT SPLICE WITH SHRINK WRAP

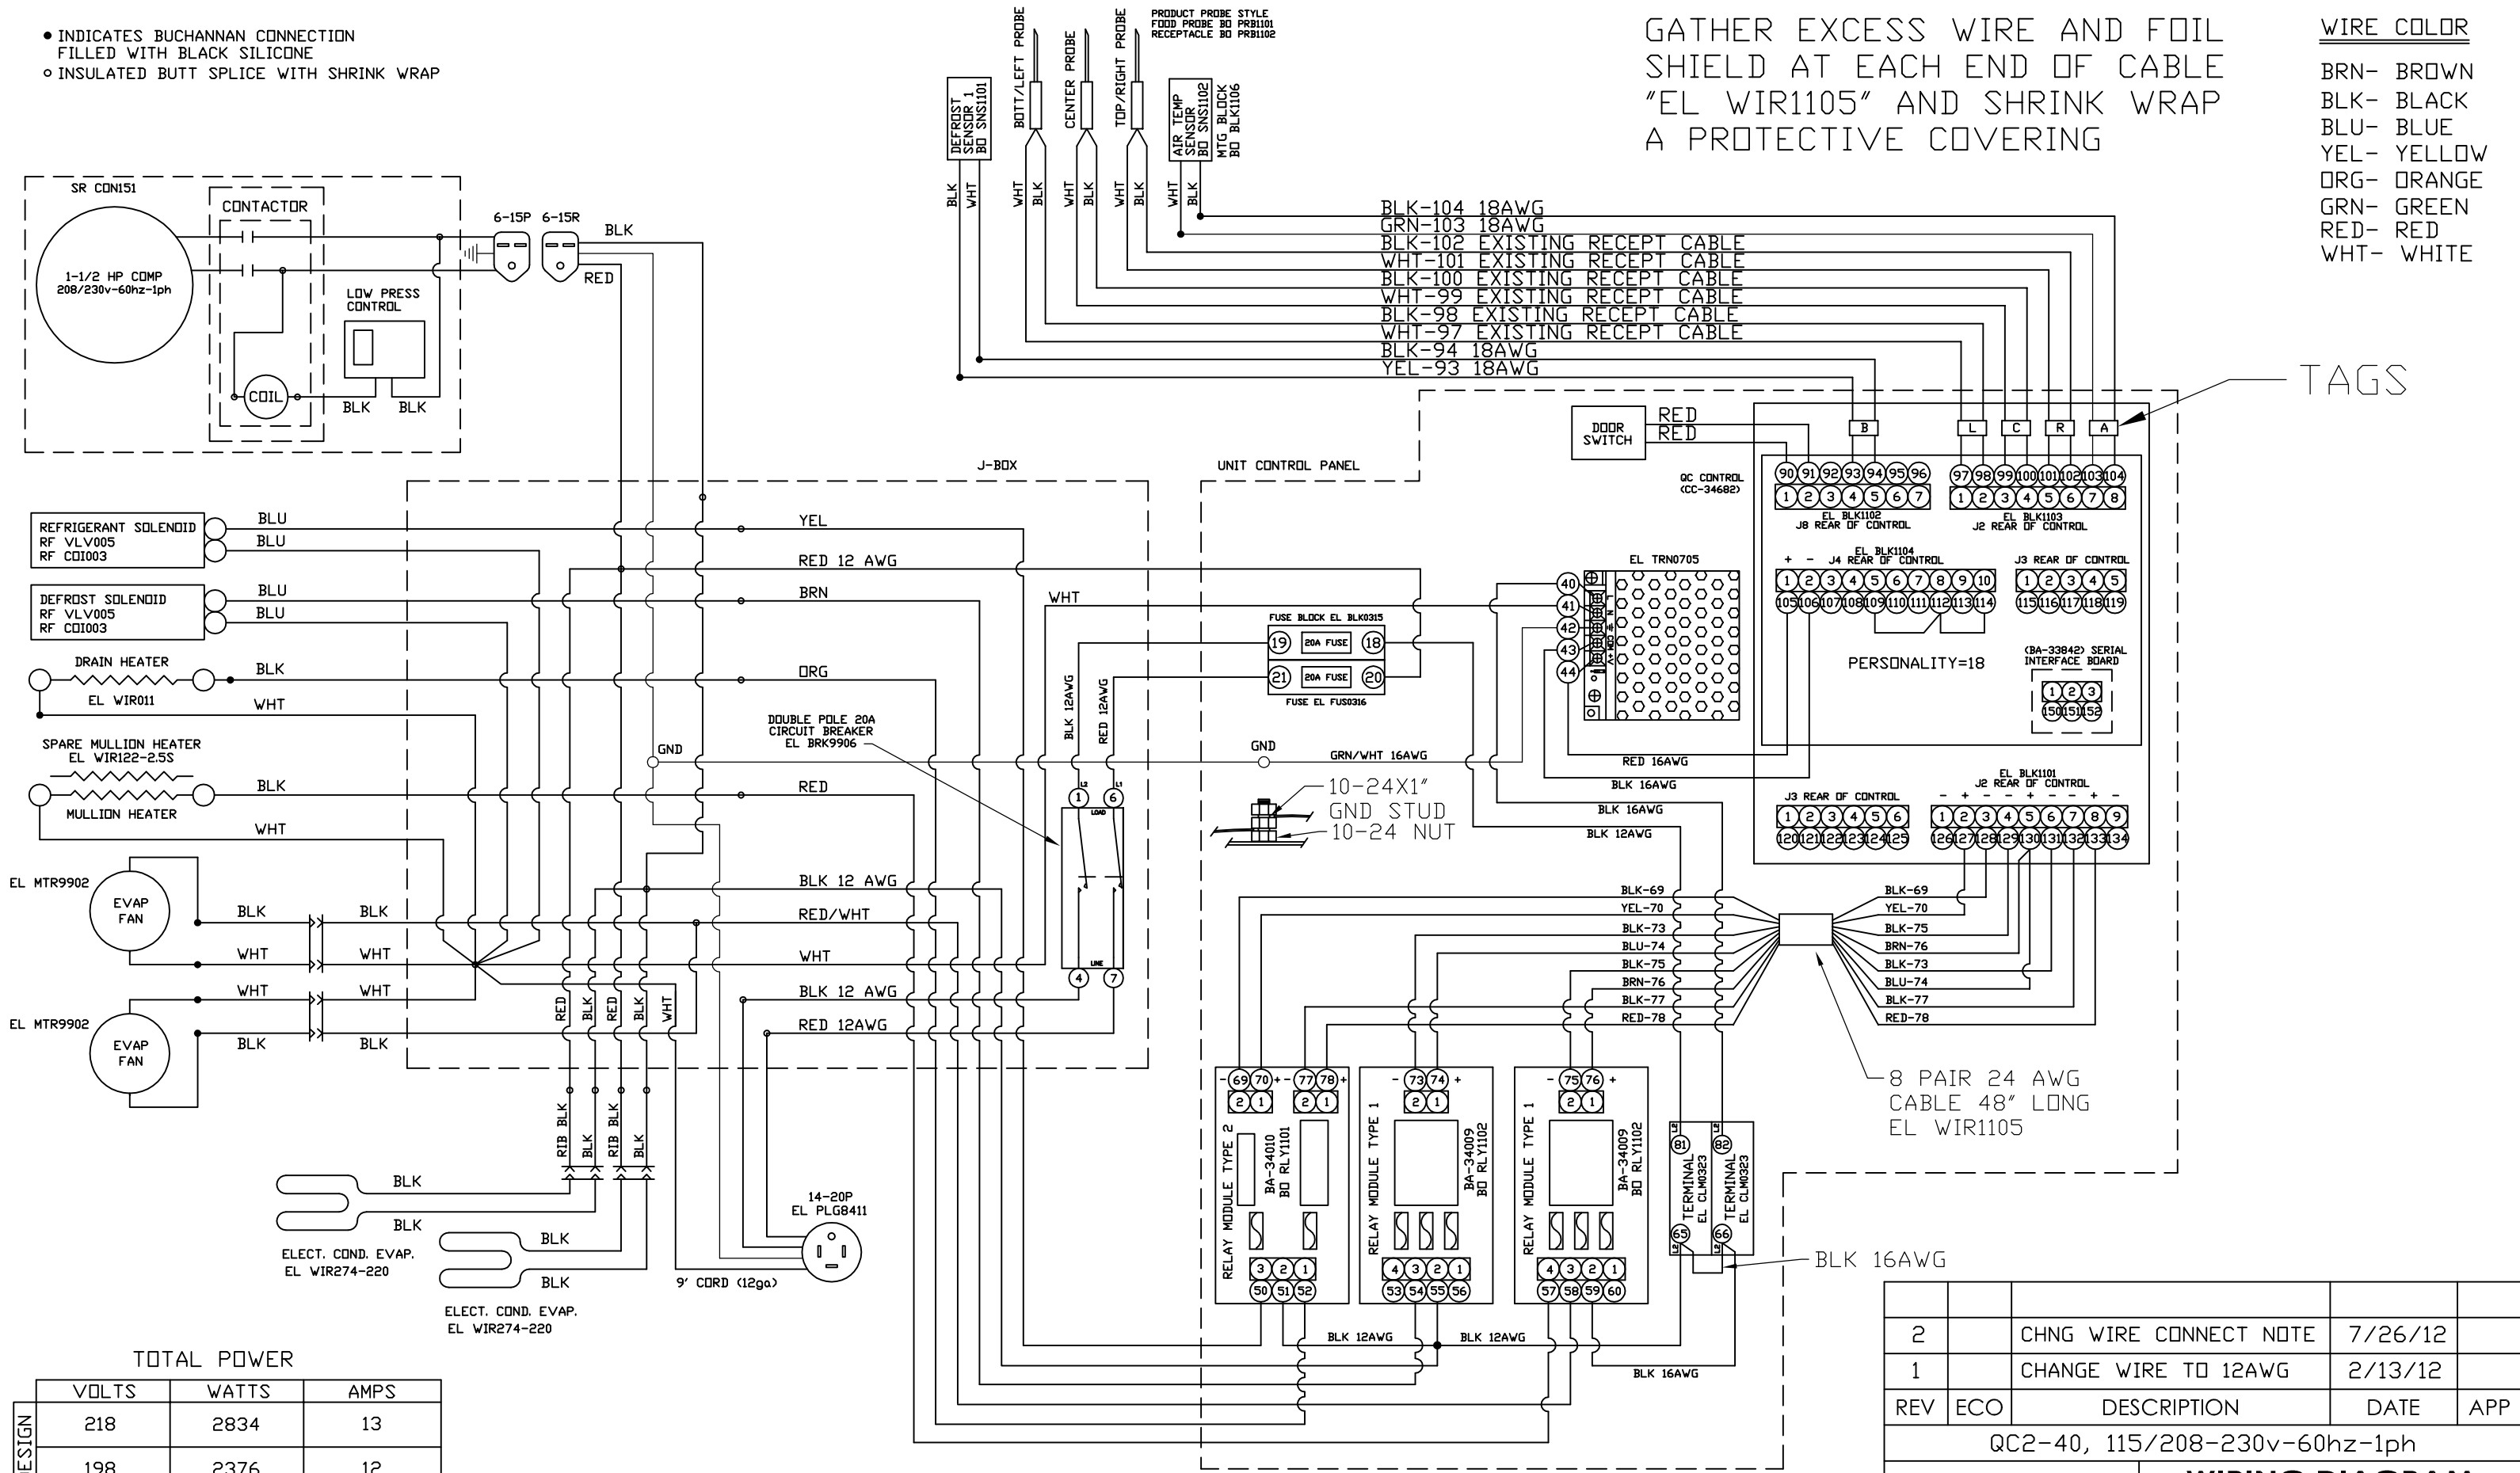


TOTAL POWER			
	VOLTS	WATTS	AMPS
AG DESIGN	218	2834	13
	198	2376	12
	115/208-230	3680	16


NOTE: AG = AGENCY

2		CHNG WIRE CONNECT NOTE	7/26/12	
1		CHANGE WIRE TO 12AWG	2/13/12	
REV	ECO	DESCRIPTION	DATE	APP
QC2-40, 115/208-230v-60hz-1ph				
ALTO-SHAAM		WIRING DIAGRAM		
BY: AAP DATE: 01-13-12		DWG: 77433	SHEET 1_OF_1	

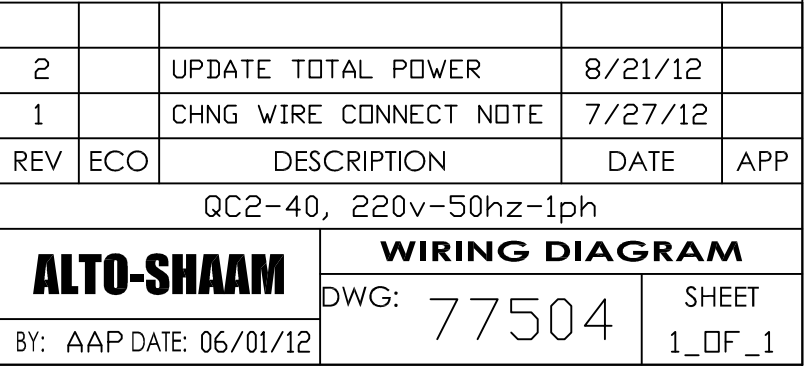

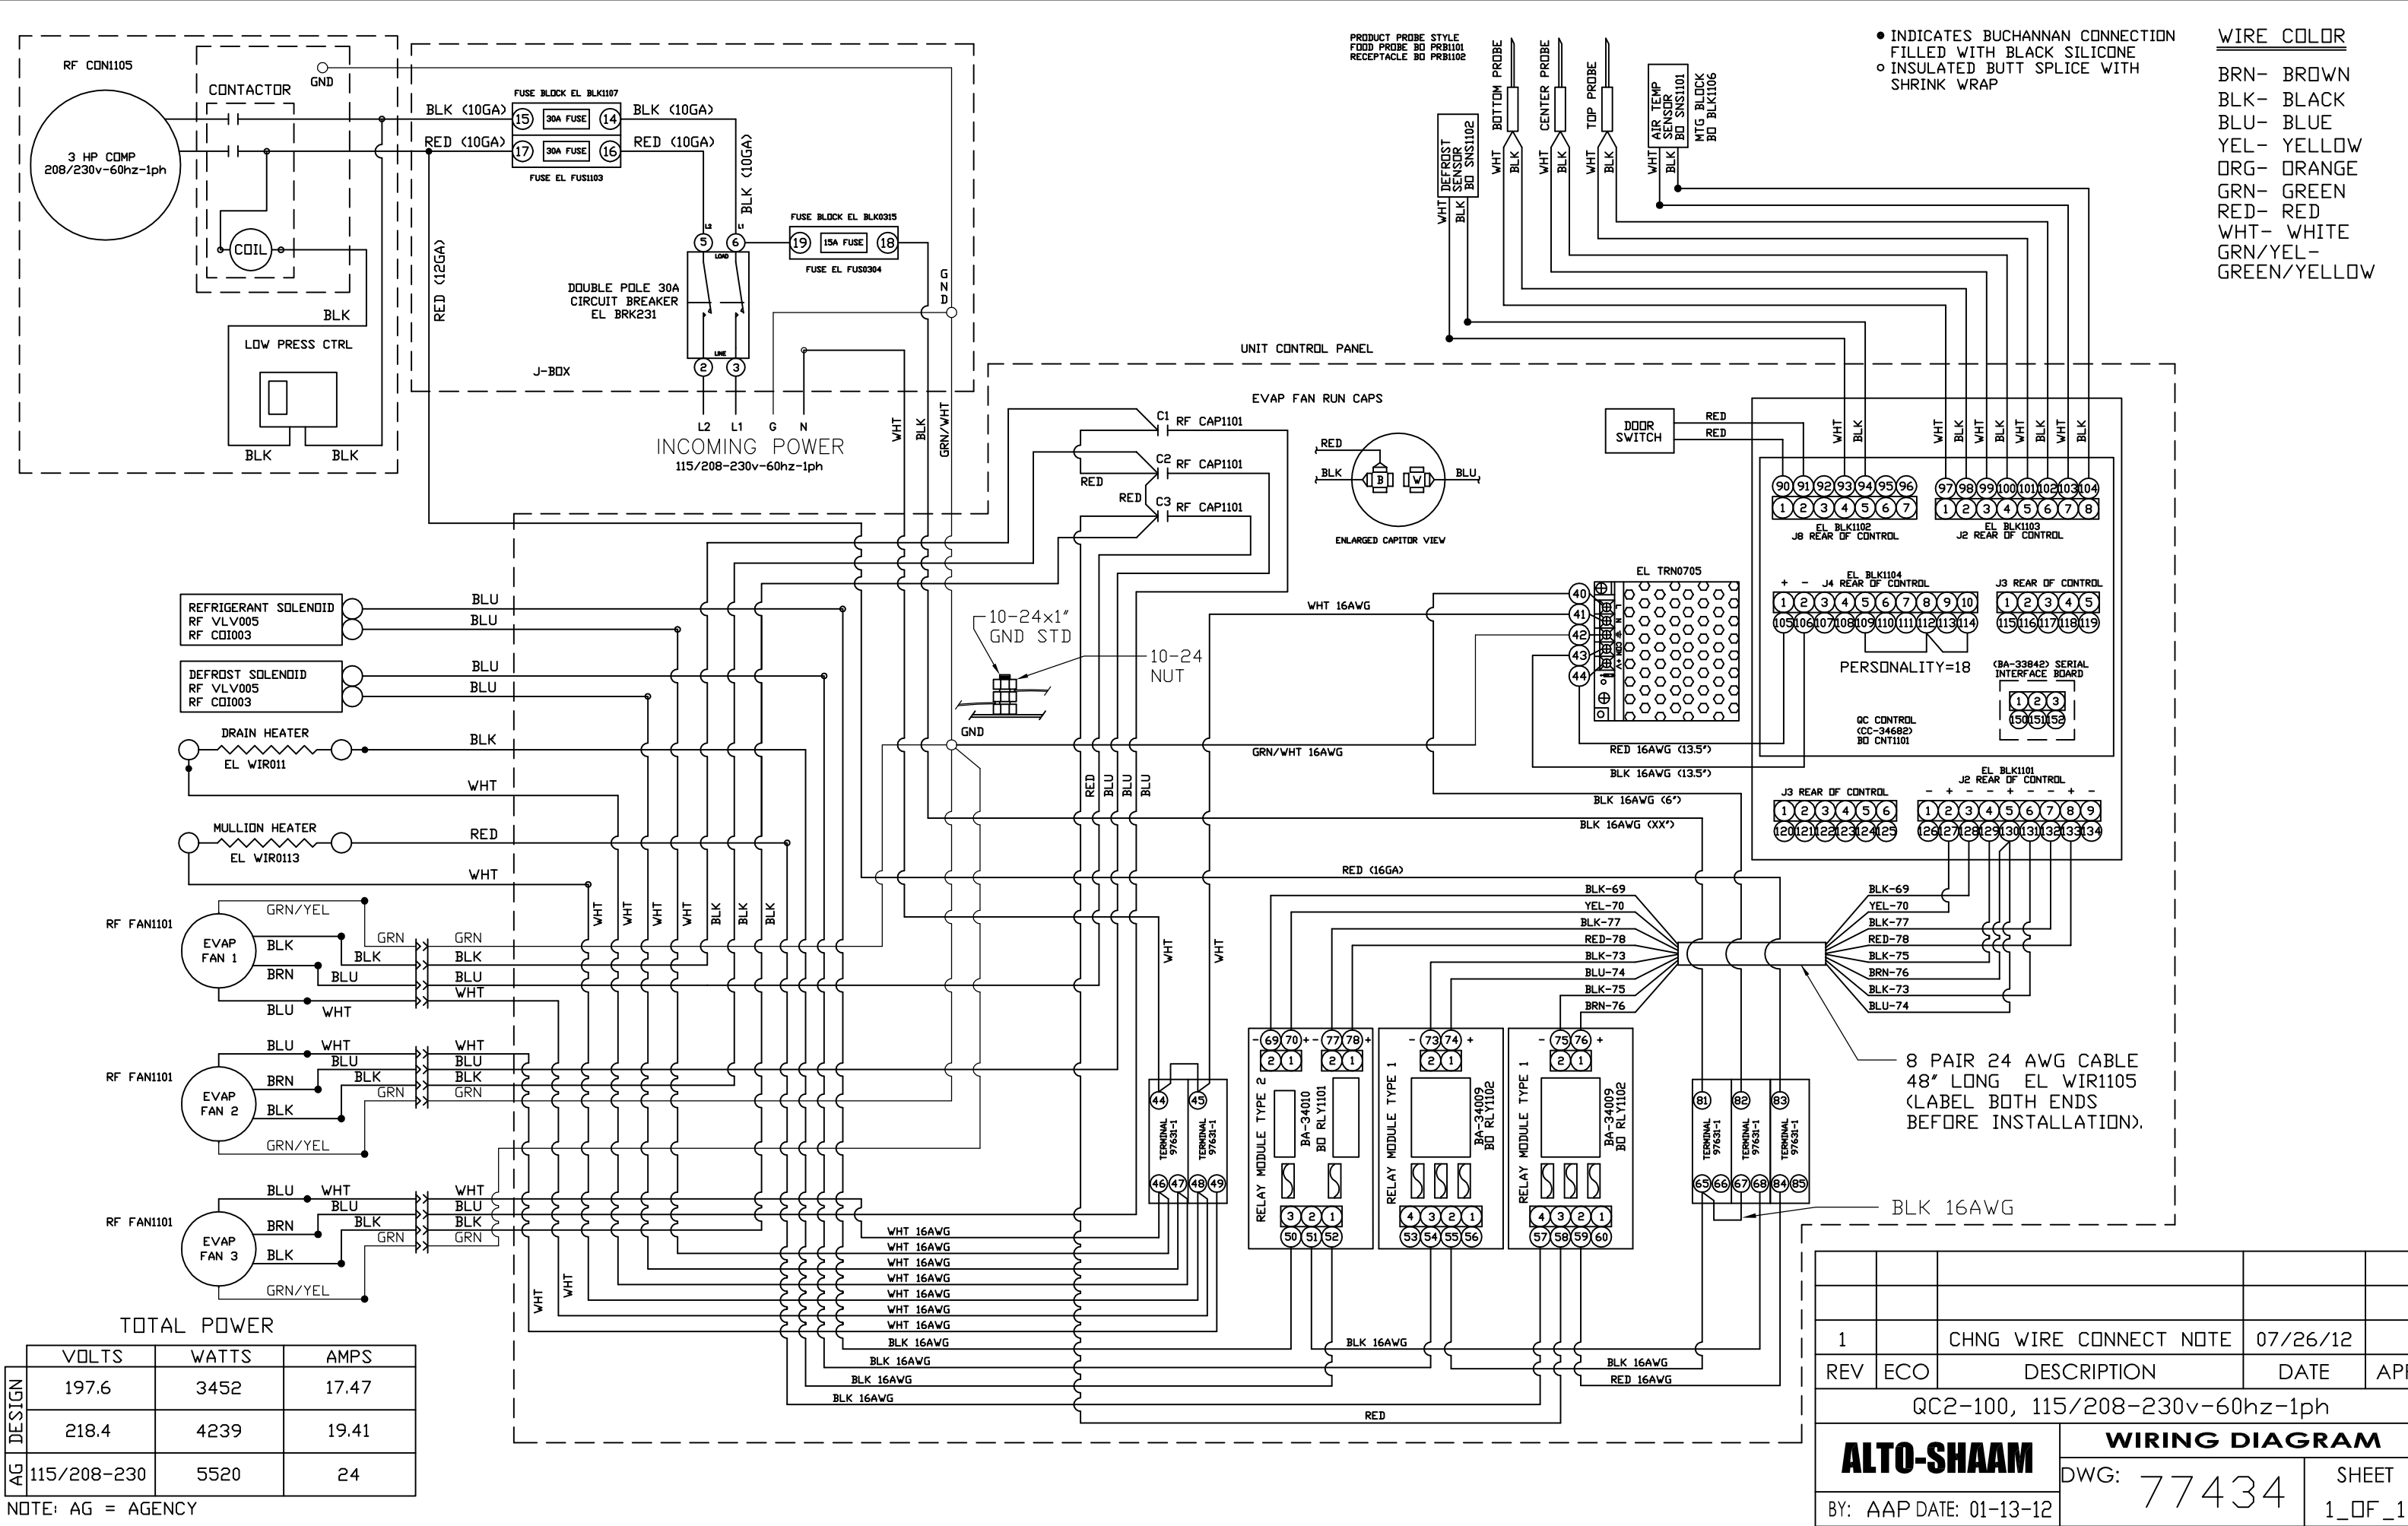

1		CHNG WIRE CONNECT NOTE	07/26/12	
REV	ECO	DESCRIPTION	DATE	APP
QC2-100, 115/208-230v-60hz-1ph				
ALTO-SHAAM		WIRING DIAGRAM		
BY: AAP DATE: 01-13-12		DWG: 77434	SHEET 1_OF_1	

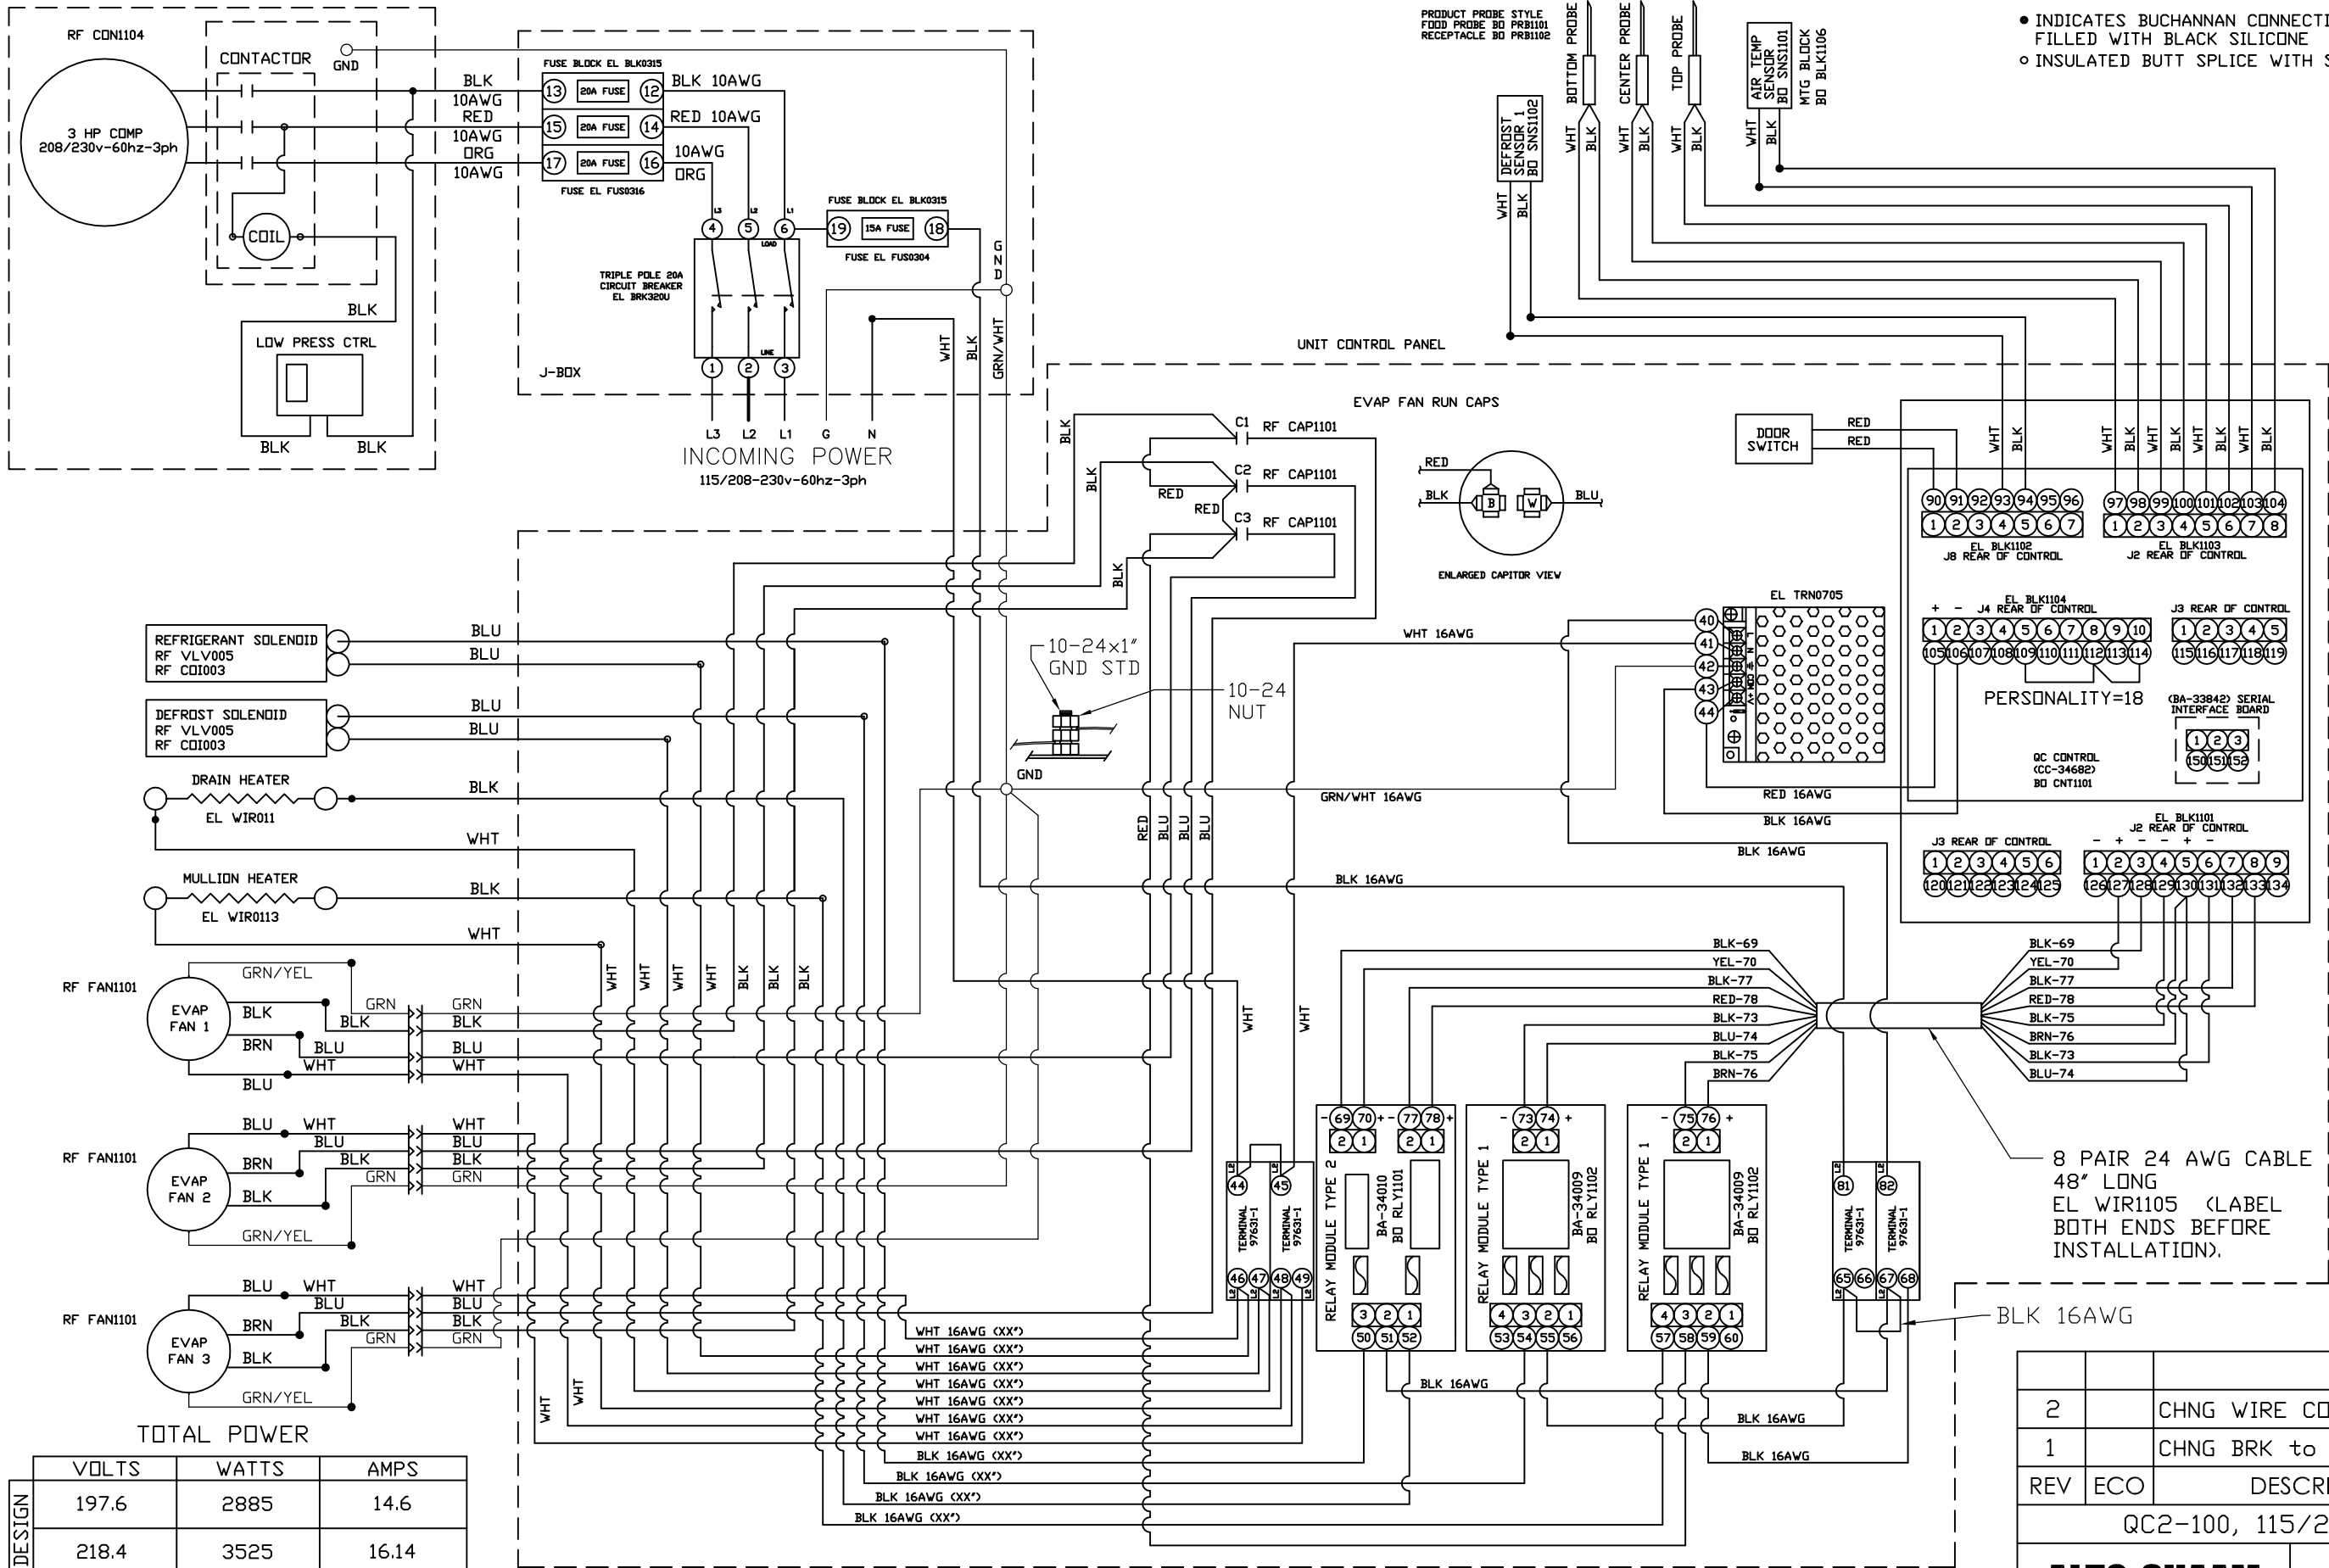

- WIRE COLOR
- BRN- BROWN
 - BLK- BLACK
 - BLU- BLUE
 - YEL- YELLOW
 - ORG- ORANGE
 - GRN- GREEN
 - RED- RED
 - WHT- WHITE
 - GRN/YEL- GREEN/YELLOW


- INDICATES BUCHANNAN CONNECTION FILLED WITH BLACK SILICONE
- INSULATED BUTT SPLICE WITH SHRINK WRAP

TOTAL POWER


	VOLTS	WATTS	AMPS
AG DESIGN	197.6	2885	14.6
	218.4	3525	16.14
AG	115/208-230	3680	16

NOTE: AG = AGENCY

2		CHNG WIRE CONNECT NOTE	07/26/12	
1		CHNG BRK to EL BRK320U	03/15/12	
REV	ECO	DESCRIPTION	DATE	APP
QC2-100, 115/208-230v-60hz-3ph				
ALTO-SHAAM		WIRING DIAGRAM		
BY: AAP DATE: 01-13-12		DWG: 77435	SHEET 1_OF_1	

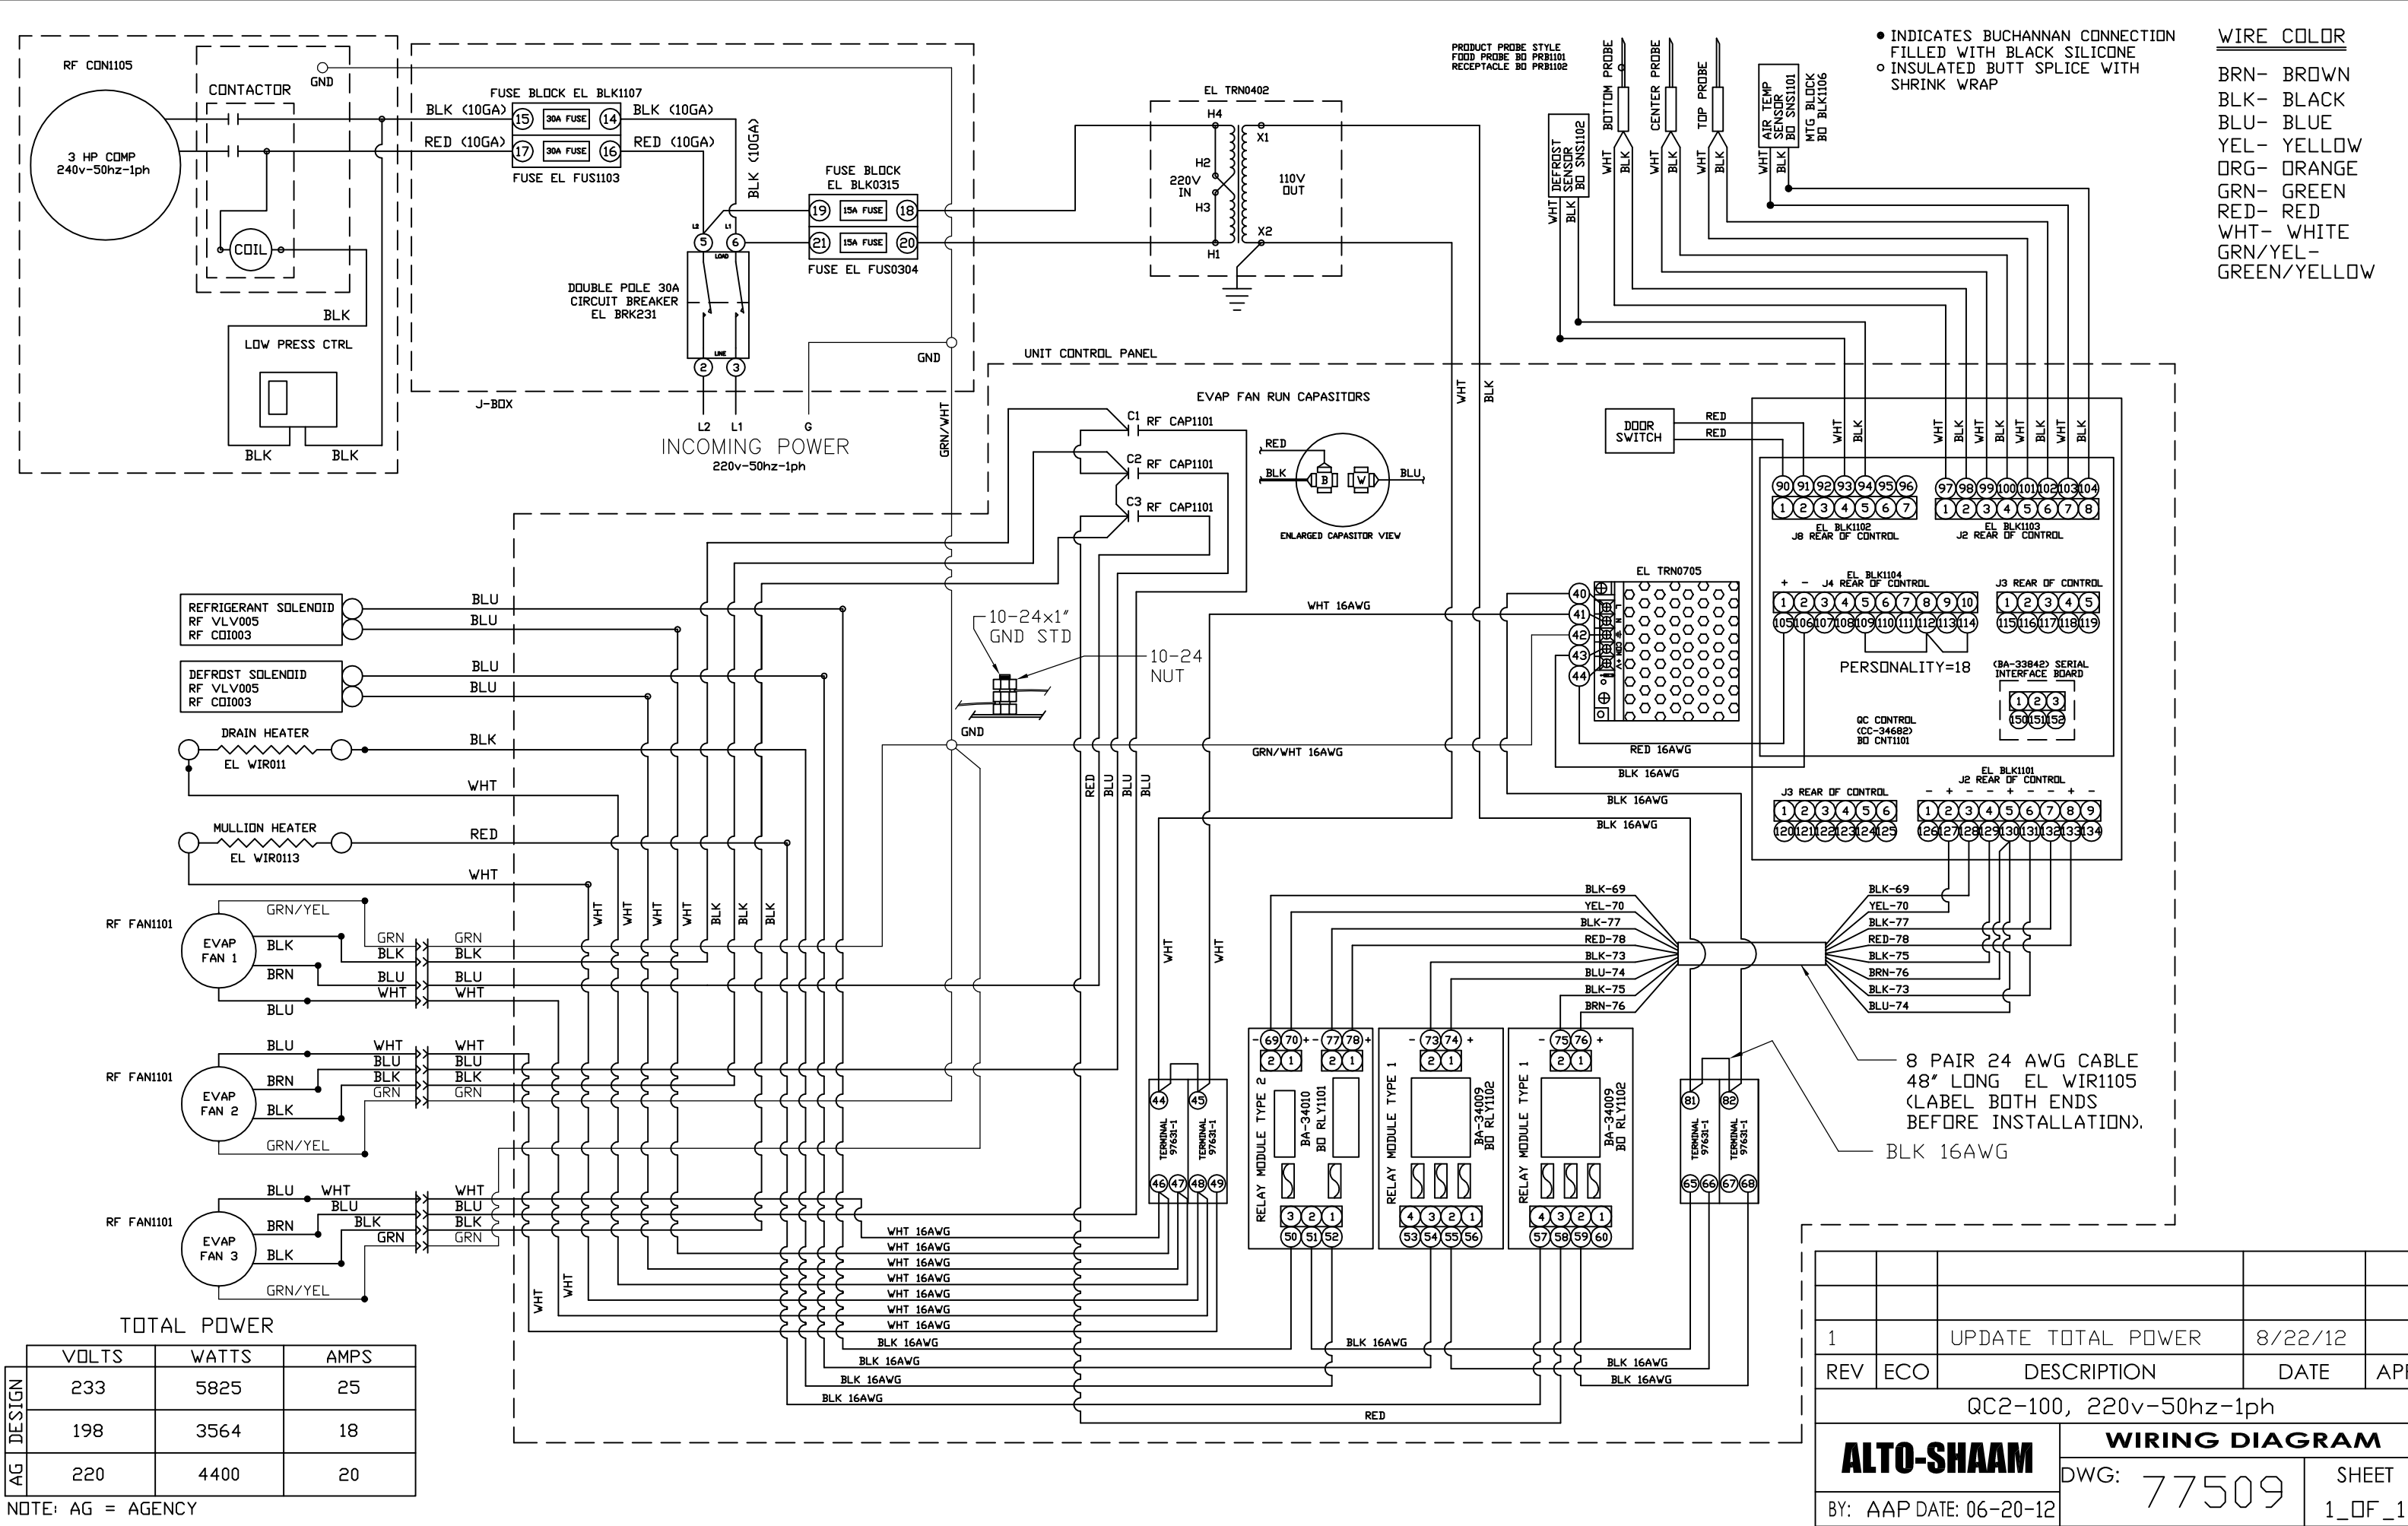

NOTE: AG = AGENCY

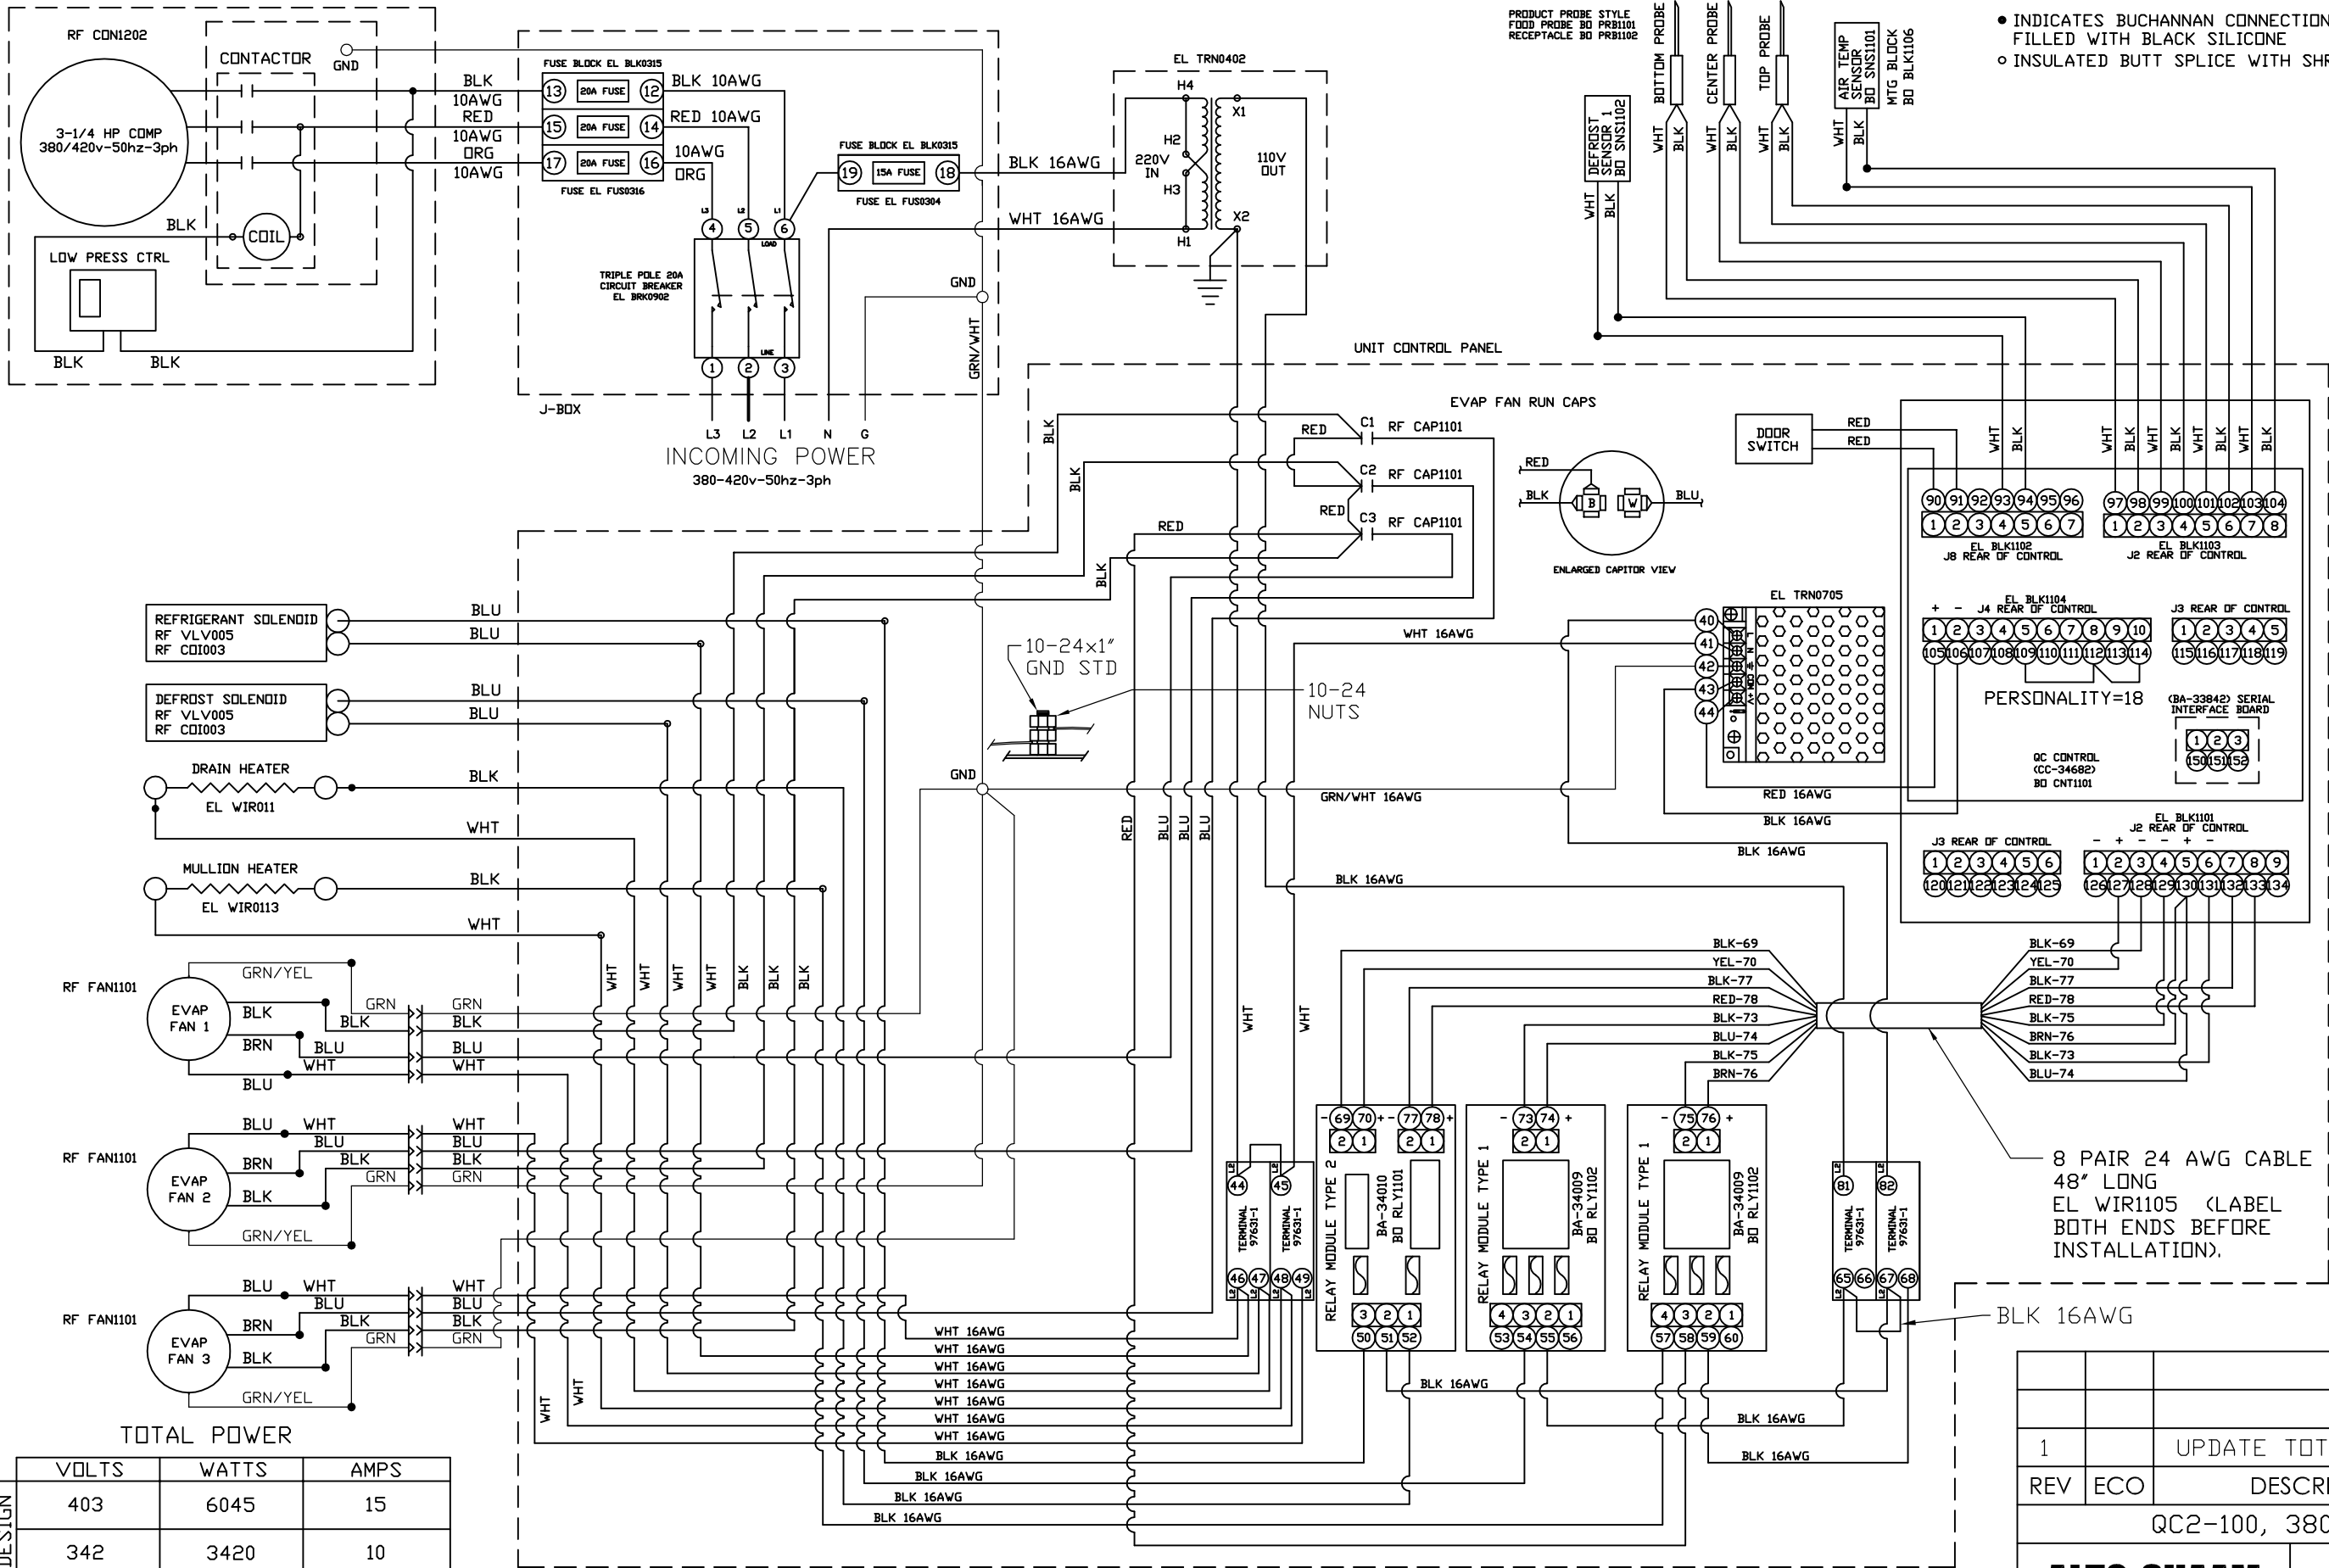

TOTAL POWER			
	VOLTS	WATTS	AMPS
AG DESIGN	403	6045	15
	342	3420	10
	380	4560	12

NOTE: AG = AGENCY



WIRE COLOR

- BRN- BROWN
- BLK- BLACK
- BLU- BLUE
- YEL- YELLOW
- ORG- ORANGE
- GRN- GREEN
- RED- RED
- WHT- WHITE
- GRN/YEL- GREEN/YELLOW




- INDICATES BUCHANAN CONNECTION FILLED WITH BLACK SILICONE
- INSULATED BUTT SPLICE WITH SHRINK WRAP

1		UPDATE TOTAL POWER	8/22/12	
REV	ECO	DESCRIPTION	DATE	APP
QC2-100, 380-420v-50hz-3ph				
ALTO-SHAAM		WIRING DIAGRAM		
BY: AAP DATE: 07-26-12		DWG: 77508	SHEET 1_OF_1	

INCOMING
POWER
240v-50hz-1ph

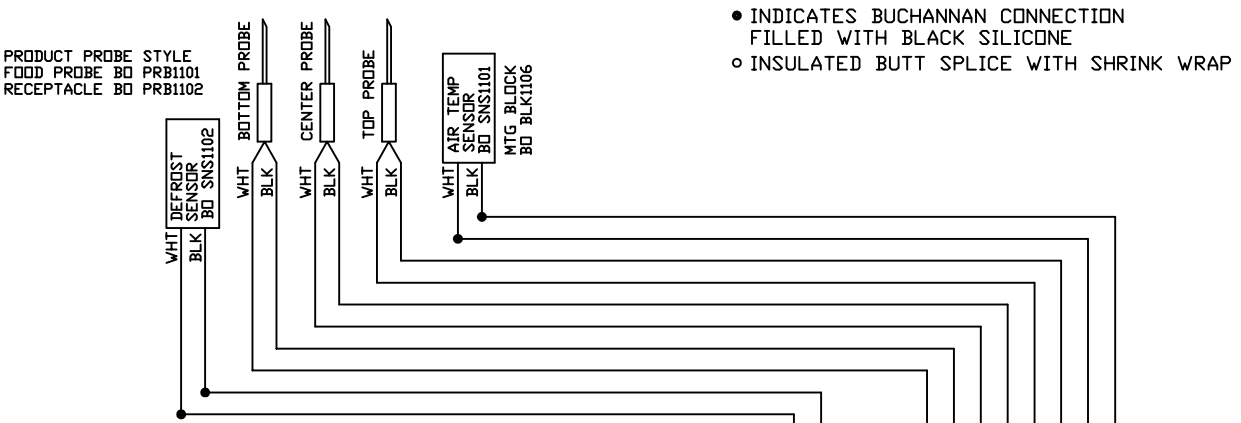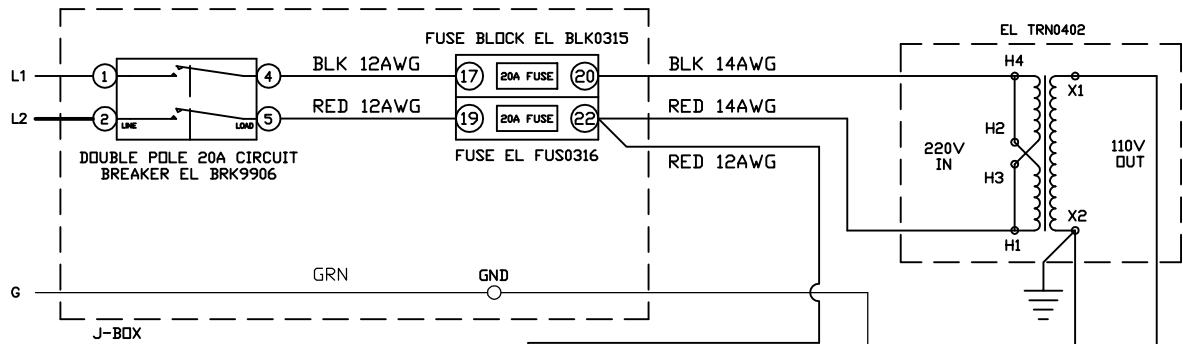

- WIRE COLOR
- BRN- BROWN
 - BLK- BLACK
 - BLU- BLUE
 - YEL- YELLOW
 - ORG- ORANGE
 - GRN- GREEN
 - RED- RED
 - WHT- WHITE
 - GRN/YEL- GREEN/YELLOW

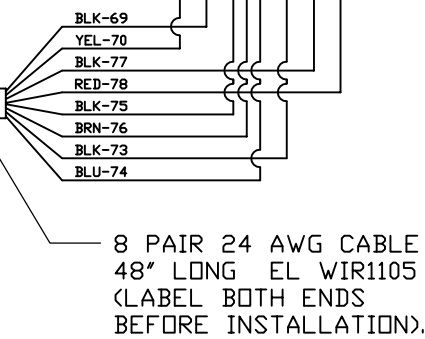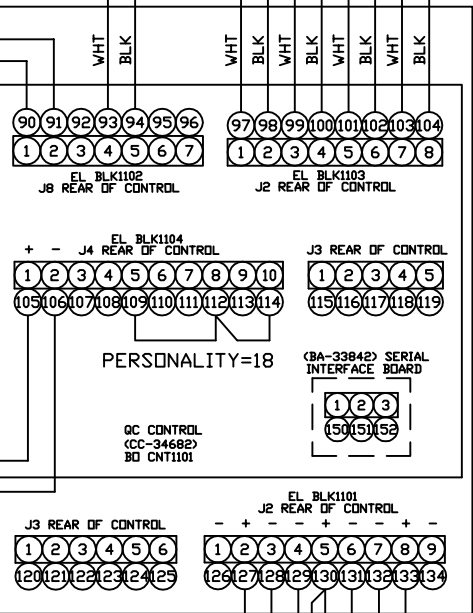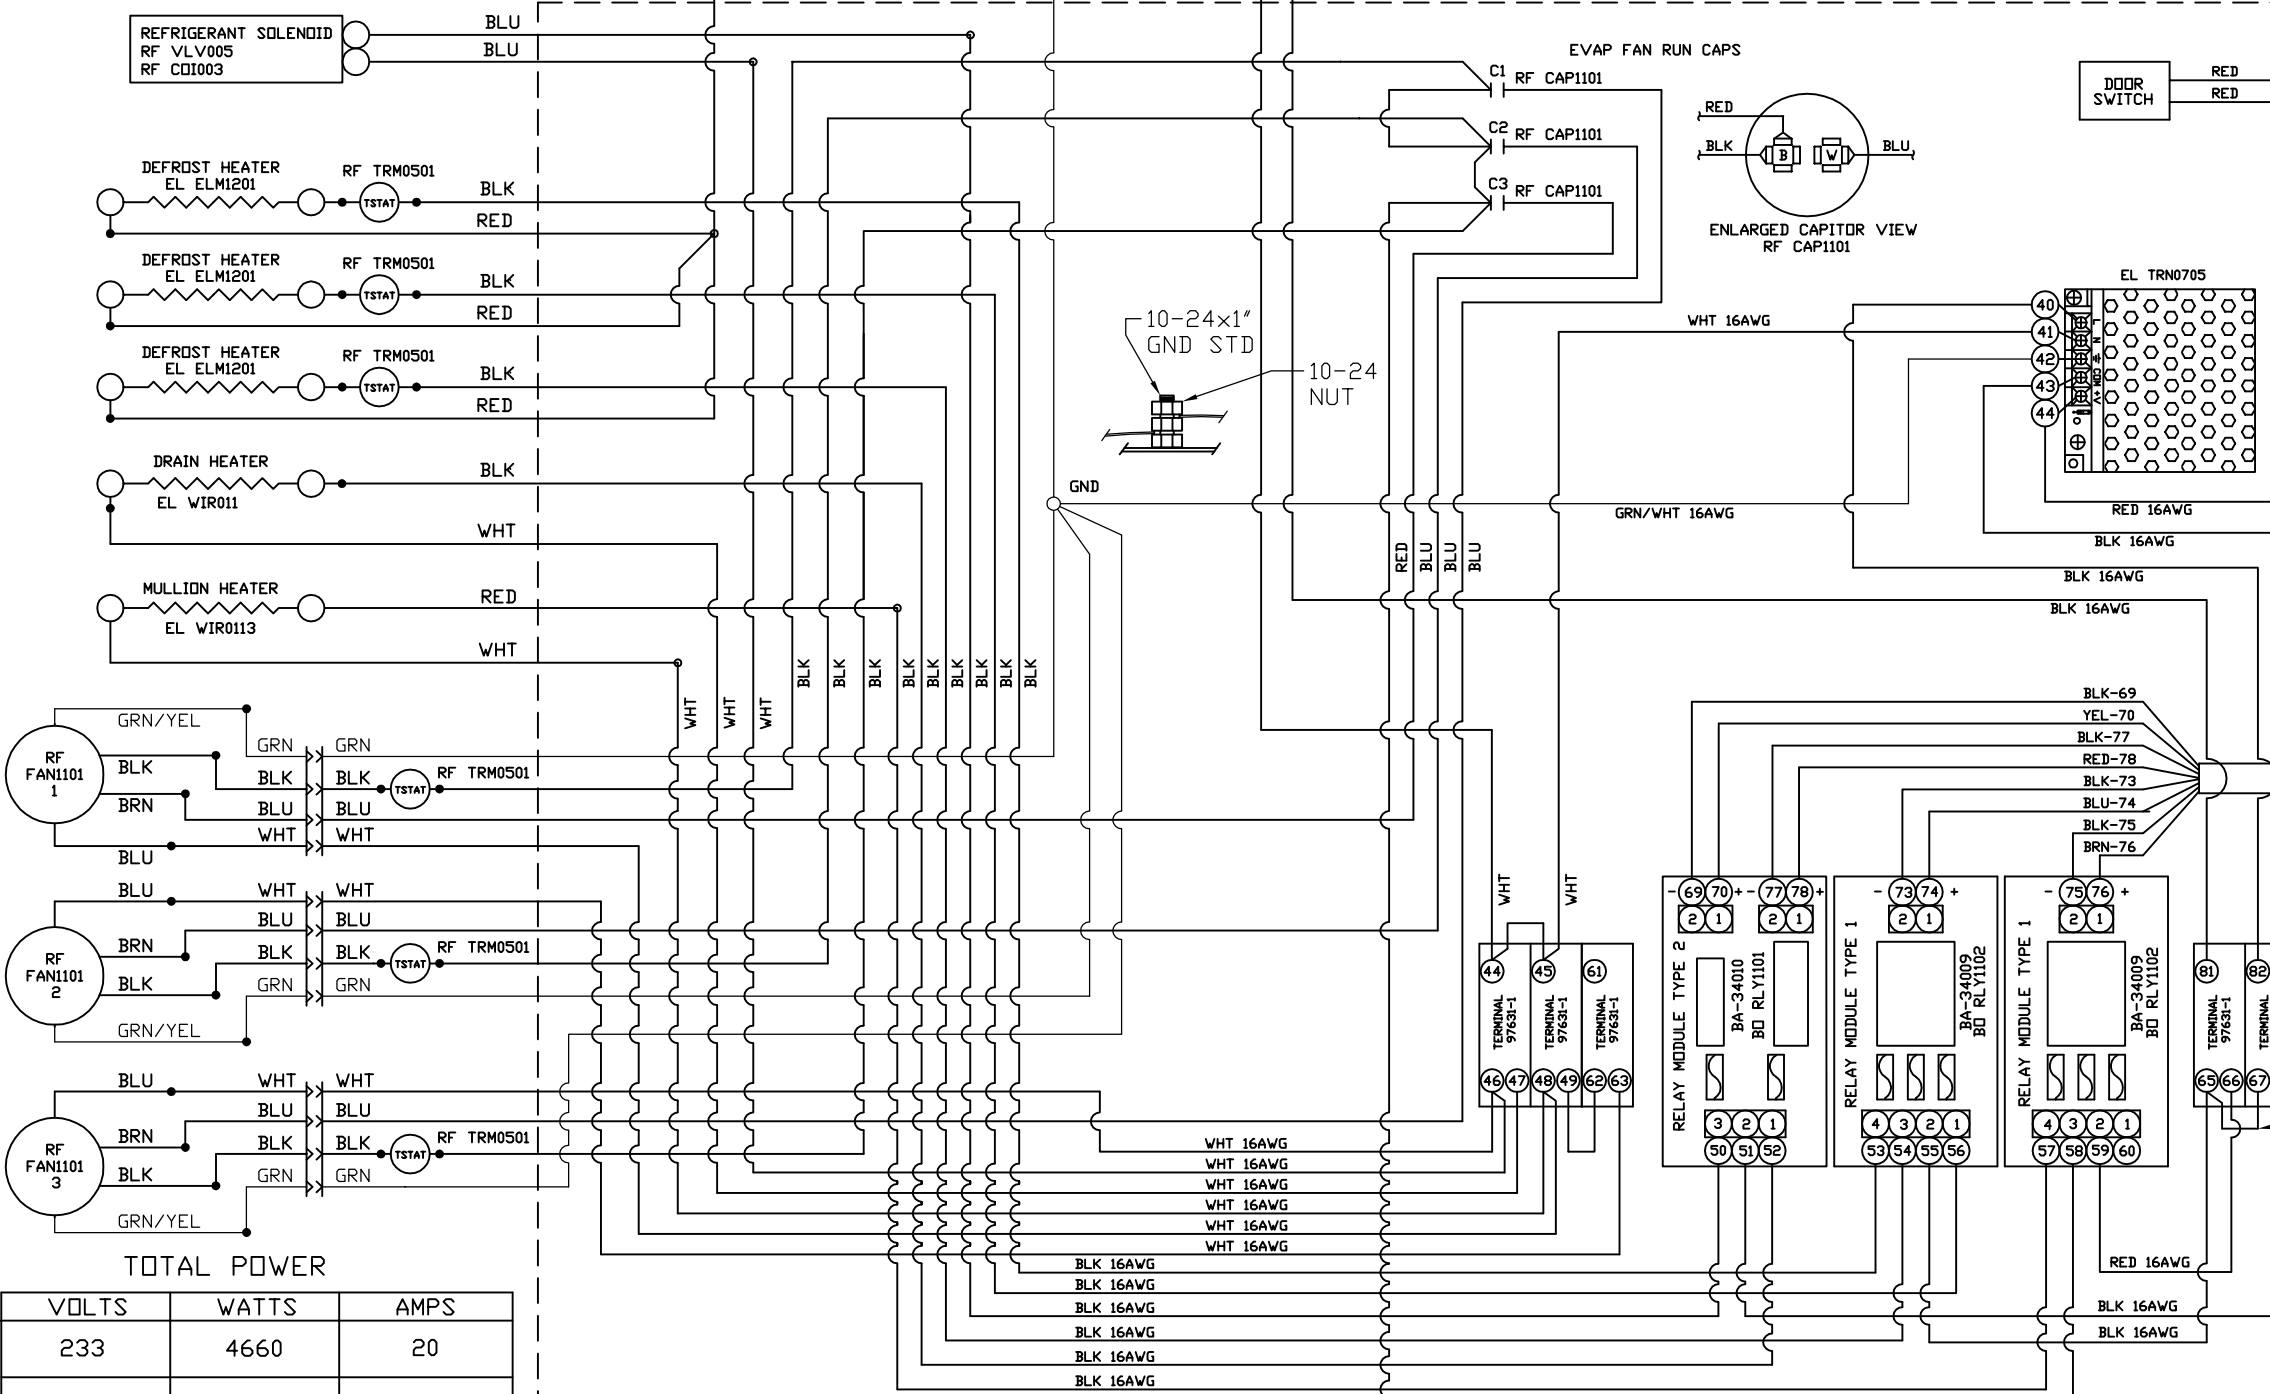


AG DESIGN	TOTAL POWER		
	VOLTS	WATTS	AMPS
	233	4660	20
	198	2772	14
	220	3520	16

NOTE: AG = AGENCY

2		UPDATE TOTAL POWER	8/23/12	
1		CHNG WIRE CONNECT NOTE	7/27/12	
REV	ECO	DESCRIPTION	DATE	APP
QC2-100R, 220v-50hz-1ph REMOTE				
ALTO-SHAAM		WIRING DIAGRAM		
BY: AAP DATE: 06-19-12		DWG: 77507	SHEET 1_OF_1	

INCOMING
POWER
380/415v-50hz-3ph

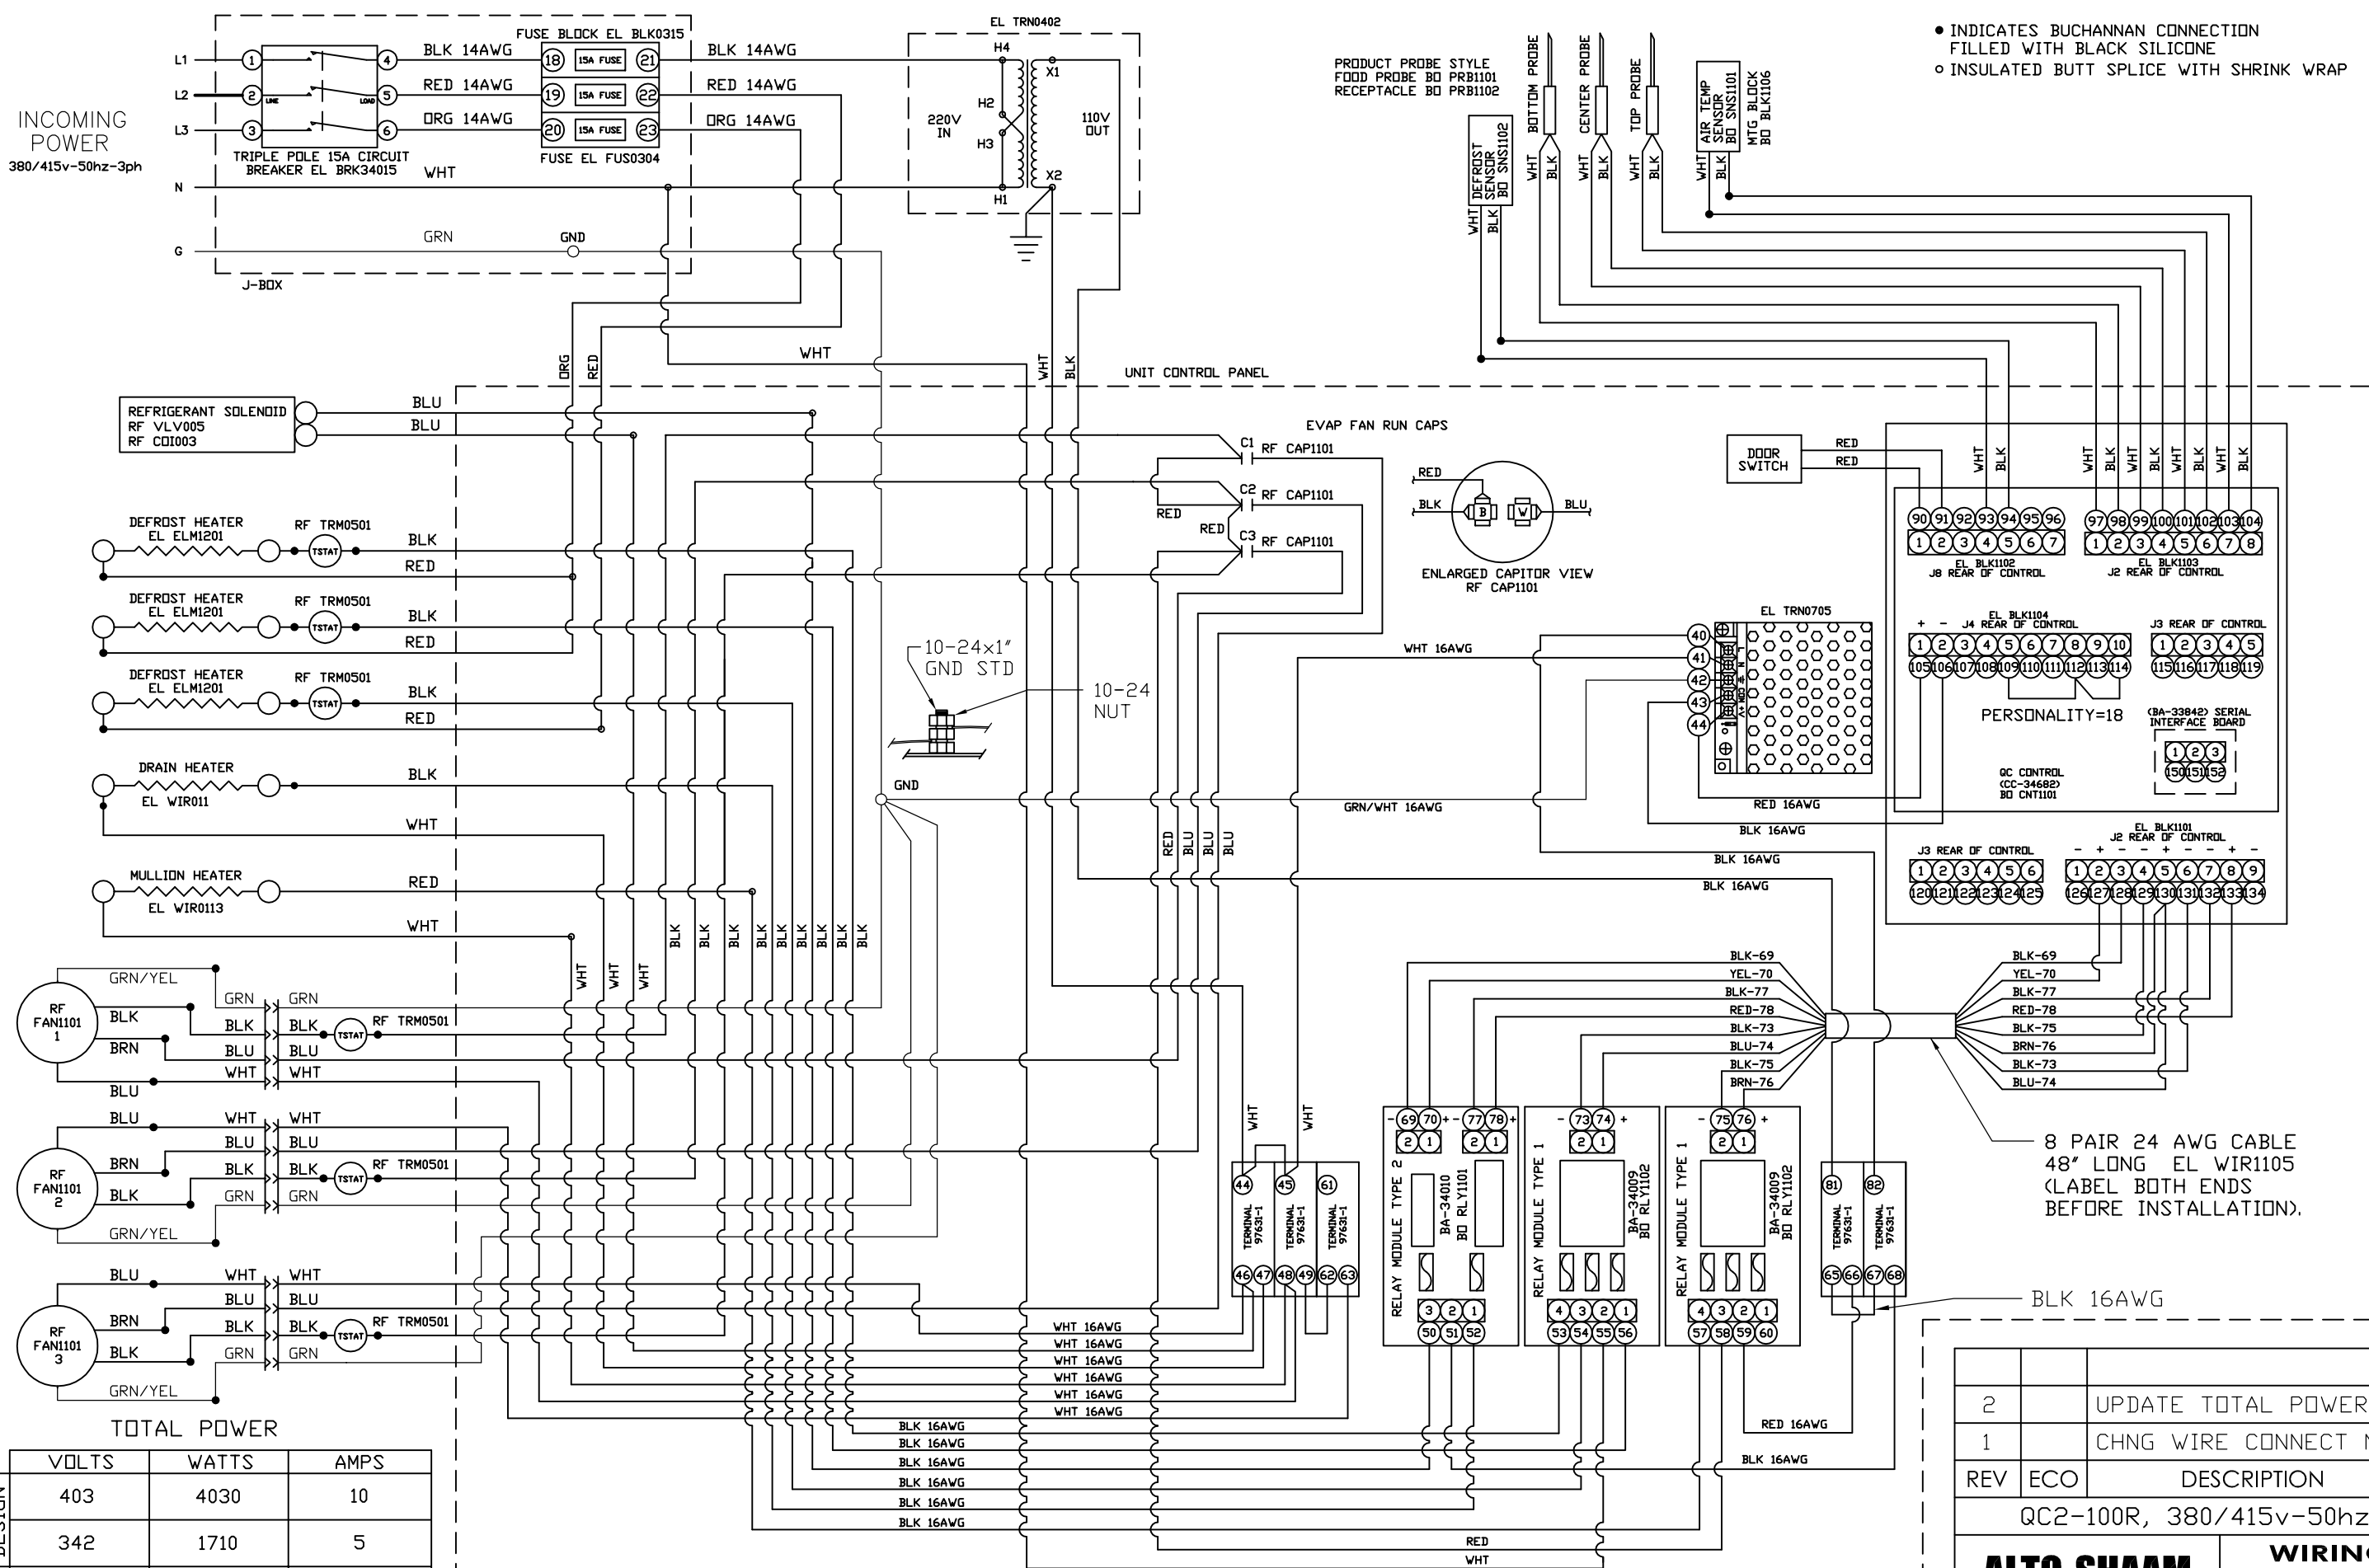

- INDICATES BUCHANAN CONNECTION
FILLED WITH BLACK SILICONE
- INSULATED BUTT SPLICE WITH SHRINK WRAP

WIRE COLOR

BRN- BROWN
BLK- BLACK
BLU- BLUE
YEL- YELLOW
ORG- ORANGE
GRN- GREEN
RED- RED
WHT- WHITE
GRN/YEL- GREEN/YELLOW

AG DESIGN	TOTAL POWER		
	VOLTS	WATTS	AMPS
	403	4030	10
	342	1710	5
	380	2660	7

NOTE: AG = AGENCY

2		UPDATE TOTAL POWER	8/22/12	
1		CHNG WIRE CONNECT NOTE	7/27/12	
REV	ECO	DESCRIPTION	DATE	APP
QC2-100R, 380/415v-50hz-3ph REMOTE				
ALTO-SHAAM		WIRING DIAGRAM		
BY: AAP DATE: 06-18-12		DWG: 77506	SHEET 1_OF_1	

TRANSPORTATION DAMAGE and CLAIMS



All Alto-Shaam equipment is sold F.O.B. shipping point, and when accepted by the carrier, such shipments become the property of the consignee.

Should damage occur in shipment, it is a matter between the carrier and the consignee. In such cases, the carrier is assumed to be responsible for the safe delivery of the merchandise, unless negligence can be established on the part of the shipper.

1. Make an immediate inspection while the equipment is still in the truck or immediately after it is moved to the receiving area. Do not wait until after the material is moved to a storage area.
2. Do not sign a delivery receipt or a freight bill until you have made a proper count and inspection of all merchandise received.
3. Note all damage to packages directly on the carrier's delivery receipt.
4. Make certain the driver signs this receipt. If he refuses to sign, make a notation of this refusal on the receipt.
5. If the driver refuses to allow inspection, write the following on the delivery receipt:
Driver refuses to allow inspection of containers for visible damage.
6. Telephone the carrier's office immediately upon finding damage, and request an inspection. Mail a written confirmation of the time, date, and the person called.
7. Save any packages and packing material for further inspection by the carrier.
8. Promptly file a written claim with the carrier and attach copies of all supporting paperwork.

We will continue our policy of assisting our customers in collecting claims which have been properly filed and actively pursued. We cannot, however, file any damage claims for you, assume the responsibility of any claims, or accept deductions in payment for such claims.

LIMITED WARRANTY

Alto-Shaam, Inc. warrants to the original purchaser only that any original part that is found to be defective in material or workmanship will, at Alto-Shaam's option, subject to provisions hereinafter stated, be replaced with a new or rebuilt part.

The original parts warranty period is as follows:

For the refrigeration compressor on Alto-Shaam Quickchillers™, five (5) years from the date of installation of appliance.

For the heating element on Halo Heat® cooking and holding ovens, as long as the original purchaser owns the oven. This excludes holding only equipment.

For all other original parts, one (1) year from the date of installation of appliance or fifteen (15) months from the shipping date, whichever occurs first.

The labor warranty period is one (1) year from the date of installation or fifteen (15) months from the shipping date, whichever occurs first.

Alto-Shaam will bear normal labor charges performed during standard business hours, excluding overtime, holiday rates or any additional fees.

To be valid, a warranty claim must be asserted during the applicable warranty period. This warranty is not transferable.

THIS WARRANTY DOES NOT APPLY TO:

1. Calibration.
2. Replacement of light bulbs, door gaskets, and/or the replacement of glass due to damage of any kind.
3. Equipment damage caused by accident, shipping, improper installation or alteration.
4. Equipment used under conditions of abuse, misuse, carelessness or abnormal conditions, including but not limited to, equipment subjected to harsh or inappropriate chemicals, including but not limited to, compounds containing chloride or quaternary salts, poor water quality, or equipment with missing or altered serial numbers.
5. Damage incurred as a direct result of poor water quality, inadequate maintenance of steam generators and/or surfaces affected by water quality. Water quality and required maintenance of steam generating equipment is the responsibility of the owner/operator.
6. Damage caused by use of any cleaning agent other than Alto-Shaam's Combitherm® Cleaner, including but not limited to damage due to chlorine or other harmful chemicals. **Use of Alto-Shaam's Combitherm® Cleaner on Combitherm® ovens is highly recommended.**
7. Any losses or damage resulting from malfunction, including loss of product, food product, revenue, or consequential or incidental damages of any kind.
8. Equipment modified in any manner from original model, substitution of parts other than factory authorized parts, removal of any parts including legs, or addition of any parts.

This warranty is exclusive and is in lieu of all other warranties, express or implied, including the implied warranties of merchantability and fitness for a particular purpose. In no event shall Alto-Shaam be liable for loss of use, loss of revenue or profit, or loss of product, or for any indirect, special, incidental, or consequential damages. No person except an officer of Alto-Shaam, Inc. is authorized to modify this warranty or to incur on behalf of Alto-Shaam any other obligation or liability in connection with Alto-Shaam equipment.



Effective November 1, 2012

RECORD THE MODEL AND SERIAL NUMBER OF THE APPLIANCE FOR EASY REFERENCE.

ALWAYS REFER TO BOTH MODEL AND SERIAL NUMBER IN ANY CONTACT WITH ALTO-SHAAM REGARDING THIS APPLIANCE.

Model: _____ Date Installed: _____
Voltage: _____ Purchased From: _____
Serial Number: _____

W164 N9221 Water Street • P.O. Box 450 • Menomonee Falls, Wisconsin 53052-0450 • U.S.A.
PHONE: 262.251.3800 • 800.558-8744 USA/CANADA FAX: 262.251.7067 • 800.329.8744 U.S.A. ONLY

www.alto-shaam.com

PRINTED IN U.S.A.