

User's Manual for Wind Blaster Express

Model No.: FN33-S

Congratulations on your purchase of the WindBlaster Express. This handy little fan keeps you cool no matter where you go.

Please read this manual thoroughly, especially noting safety and care instructions. Keep this manual for reference. This package contains one WindBlaster Express and one user's manual.

USING THE WIND BLASTER EXPRESS

Press the On/Off switch to activate the fan.

You can use the Wind Blaster in two ways. You can hold it in the palm of your hand, pointing in whatever direction that you need a cooling breeze or you can flip it open and rest it on a table or desktop.

The fan-head swivels so that you can position the cooling breeze in almost any direction.

BATTERY INSTALLATION

To install batteries into the Wind Blaster Express, you must open the battery compartment that is located on the base of the unit.

Slide the compartment open and load in the batteries, matching the polarity (- and +) as shown on the unit.

Note: If the batteries are installed incorrectly, the fan will spin opposite of its normal operation. Simply remove the batteries and re-install them.

SAFETY AND CARE

- **Do NOT** immerse the fan in water
- Though the blades are soft, keep out of reach of children and away from the face



- Remove batteries from fan when not in use
- **Do NOT** attempt to stop the fan while it is operating. This may damage the mechanisms

90-DAY LIMITED WARRANTY

EXCALIBUR ELECTRONICS, INC., warrants to the original consumer that its products are free from any electrical or mechanical defects for a period of 90 DAYS from the date of purchase. If any such defect is discovered within the warranty period, EXCALIBUR ELECTRONICS, INC., will repair or replace the unit free of charge upon receipt of the unit, shipped postage prepaid and insured to the factory address shown at right.

The warranty covers normal consumer use and does not cover damage that occurs in shipment or failure that results from alterations, accident, misuse, abuse, neglect, wear and tear, inadequate maintenance, commercial use, or unreasonable use of the unit. Removal of the top panel voids all warranties. This warranty does not cover cost of repairs made or attempted outside of the factory.

Any applicable implied warranties, including warranties of merchantability and fitness, are hereby limited to 90 DAYS from the date of purchase. Consequential or incidental damages resulting from a breach of any

applicable express or implied warranties are hereby excluded. Some states do not allow limitations on the duration of LIMITED 90-DAY WARRANTY implied warranties and do not allow exclusion of incidental or consequential damages, so the above limitations and exclusions in these instances may not apply. The only authorized service center in the United States is:

Excalibur Electronics, Inc.
13755 SW 119th Ave
Miami, Florida 33186 U.S.A.
Phone: 305.477.8080
Fax: 305.477.9516
www.ExcaliburElectronics.com

Ship the unit carefully packed, preferably in the original carton, and send it prepaid, and adequately insured. Include a letter, detailing the complaint and including your daytime telephone number, inside the shipping carton. If your warranty has expired and you want an estimated fee for service, write to the above address, specifying the model and the problem.

NOTE: Please do not send your unit without first receiving an estimate for servicing from EXCALIBUR ELECTRONICS, INC. Contact us before sending your unit. We cannot store your unit!

Excalibur Electronics, Inc. reserves the right to make technical changes without notice in the interest of progress.

FN33-S SilXPress2 011007 v1