

**Installation and Configuration Guide** 

HP J3245A

HP AdvanceStack Switch 800T

# **HP Customer Support Services**

### How to get the latest software/agent firmware

You can download from the World Wide Web, HP FTP Library Service, CompuServe, and HP BBS a compressed file (j3245a.exe) containing the latest version of the HP Switch 800T software and proprietary MIB, the HP J3108A FDDI Module software, and a software download utility file (update.exe). After you download the file, **extract** the file by typing *filename* and pressing [Enter]. For example, j3245a [Enter].

### **World Wide Web**

http://www.hp.com/go/network\_city

Select the "Support" section.

From this web site, you can also download information on the HP networking products. If you have a growing network, download the Designing HP AdvanceStack Workgroup Networks Guide or call 1-800-752-0900 in the U.S. to receive a copy through the mail.

### **HP FTP Library Service**

- 1. FTP to Internet IP Address ftp ftp.hp.com.
- 2. Log in as anonymous and press Return at the password prompt.
- 3. Enter bin to set the transfer type.
- 4. Enter cd /pub/networking/software.
- 5. Enter get *filename* to transfer the file to your computer, then quit.

### CompuServe

- 1. Login to CompuServe.
- 2. Go to the "hp" service.
- 3. Select "HP Systems, Disks, Tapes, etc."
- 4. Select "Networking Products" library.
- 5. Download filename and then quit.

#### HP BBS

Set your modem to no parity, eight bits, 1 stop bit, set speed up to 14400 bps, and with your telecommunication program (e.g., Windows Terminal) dial (208) 344-1691 in the U.S. to get the latest software for your HP networking product. For other countries, see http://www.hp.com/cposupport/eschome.html.

 $\gg$ 

(over for more services)



Obtain the latest console code (j3245a.exe) from

 $\label{eq:heaviside} \textit{HP FTP Library:} \quad \textit{ftp ftp-boi.external.hp.com}$ 

World Wide Web: http://www.hp.com/go/network\_city

HP BBS: (208) 344-1691

(over)



#### **HP FIRST Fax Retrieval Service**

HP FIRST is an automated fax retrieval service that is available 24 hours a day, seven days a week. HP FIRST provides information on the following topics:

- Product information
- **■** Troubleshooting instructions
- Technical reviews and articles
- **■** Configuration information

To access HP FIRST, dial one of the following phone numbers:

Location	Phone Number
U.S. and Canada Only	Dial 1 (800) 333-1917 with your fax machine or touch-tone phone and press 1.
Outside the U.S. and Canada	Dial 1 (208) 344-4809 from your fax machine and press 9.

To receive a list of currently available documents, enter document number 19941. The information you requested will be sent to you by return fax. For other countries, see http://www.hp.com/cposupport/eschome.html.

### **Additional HP Support Services**

In addition to the above services, you can purchase various HP telephone support services which provide you expert HP technical assistance:

- Network Phone-In Support provides you support at an hourly rate. In the U.S., call 1-800-790-5544. In other countries, please contact your local HP Response Center to see if this service is available in your country.
- HP SupportPack Comprehensive Network Support provides complete problem resolution for medium to large interconnected local and wide area networks. Contact your HP Authorized Reseller or the nearest HP Sales and Support Office for more information.

HP offers other hardware support services. Please contact your reseller for more information.

≫<

CompuServe:

Go hpsys Lib 7.

Download asfw.exe

Network Phone-In Support (hourly):

1-800-790-5544

# **HP AdvanceStack Switch 800T**

Installation and Configuration Guide HP J3245A

# © Copyright 1997 Hewlett-Packard Company All Rights Reserved.

This document contains information which is protected by copyright. Reproduction, adaptation, or translation without prior permission is prohibited, except as allowed under the copyright laws.

#### **Publication Number**

J3245-90001 March 1997

#### **Applicable Product**

HP J3245A

### **Disclaimer**

The information contained in this document is subject to change without notice.

HEWLETT-PACKARD COMPANY MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Hewlett-Packard assumes no responsibility for the use or reliability of its software on equipment that is not furnished by Hewlett-Packard.

### Warranty

A copy of the specific warranty terms applicable to your Hewlett-Packard products and replacement parts can be obtained from your HP Sales and Service Office or authorized dealer.

## **Preface**

 
# Use of This Guide and Other Switch 800T Documentation

This guide describes how to install the Switch 800T (HP J3245A) in your network and use the console interface for the HP AdvanceStack Switch 800T (hereafter referred to as the "Switch 800T").

**Important!** Before installing or removing a transceiver module, refer to the specific transceiver module documentation describing these procedures.

- If you need information on specific parameters in the console interface, refer to the online help provided in the interface.
- If you need further information on Hewlett-Packard switch technology, refer to the *HP AdvanceStack Products CD* shipped with your Switch 800T.

### **Overview of Console Applications**



Example of the HP AdvanceStack Switch 800T with Four 100Base-TX Transceivers installed

When powered-up in the factory default configuration, the Switch 800T-automatically operates as a multiport learning bridge with the following configuration:

- All ports are enabled and are members of a single broadcast domain
- Spanning tree protocol (STP) disabled

The console interface provides the following capabilities for use when you want to move beyond this basic level of operation:

- Monitoring system performance and status
- Customizing the system configuration for improved performance and unique system requirements
- Enabling network management (SNMP) access
- Setting passwords to help protect system security
- Downloading system software updates
- Troubleshooting

# Contents

1: Installation	
Installation Summary	<u>. 1-1</u>
1. Install Add-In Transceivers <i>(Optional)</i>	. 1-3
2. Verify the Switch's Operation	
3. Mount the Switch	
4. Connect a Power Supply	
5. Complete the Network Connections to the Switch	
6. Connect a Console Device (Optional)	
Where To Go from Here	
where 10 Go from Here	1-23
2: Using the Console Interface	
Overview	9_1
Starting and Ending a Console Session	
Main Menu Features	
Screen Structure and Navigation	<u>. 2-5</u>
Using Password Security	. 2-7
Rebooting the Switch	<b>2-10</b>
Resetting the Switch	2-12
3: Configuring the Switch	
Overview	. 3-1
Configurable Features	. 3-3
System Features	
Port Features	. 3-6
IPX Service Features	. 3-7
Internet (IP) Service Features	. 3-9
Virtual LAN (VLAN) Features	3-11
IP Multicast (ICMP) Service Features—Multimedia Traffic Control	3.19

SNMP Communities Features	13
Trap Receivers Features	15
Serial Link Features	16
Console Features	17
Network Monitoring Port Features	18
Spanning Tree Features	21
Traffic/Security Filter Features	22
Automatic Broadcast Control (ABC) Features—Layer 3 Switching 3-2	<u>23</u>
4: Monitoring and Analyzing Switch Operation from the Console	
<u>Overview</u> 4	<u>-1</u>
Status and Counters Menu	- <mark>2</mark>
Switch Information 4	-3
Port Status	-4
Port Counters	-5
Address Table4	-7
Port Address Table 4	-8
Spanning Tree (STP) Information	10
IP Multicast (IGMP) Status 4-	12
Automatic Broadcast Control (ABC) Information 4-	14
Event Log 4-3	<u>15</u>
5: Using SNMP To Monitor and Manage the Switch	
SNMP Management	<u>-1</u>
SNMP Configuration Process	<u>-3</u>
6: Using the Advanced Commands	
Overview 6	-1
Commands	

7: Advanced Concepts	
<u>Overview</u>	<u>7-1</u>
Spanning Tree Protocol (STP)	<u></u>
Port Trunking	<u></u>
Filters and Security	
Virtual LANs (VLANs)	7-14
Effect of VLANs on Other Switch Features	
How To Configure a VLAN	<u> 7-17</u>
VLAN Restrictions	
IP Multicast (IGMP)	
How IGMP Operates	
How To Configure IGMP	
Automatic Broadcast Control (ABC)	7-30
How ABC Operates	<u> 7-30</u>
How To Configure ABC	7-32
8: File Transfers	
<u>Overview</u>	<u>8-1</u>
Downloading an Operating System	<u></u>
Using TFTP To Download the OS File	
Switch-to-Switch Download	<u></u>
Troubleshooting TFTP Downloads	8-6
Transferring Switch 800T Configurations	
9: Troubleshooting	
Troubleshooting Approaches	<u> 9-1</u>
Diagnosing with the LEDs	<u> 9-2</u>
<u>Installation Problems</u>	<u>9-5</u>
Incorrect Hardware Installation	9-5
Console RS-232 Problems	<u> 9-5</u>
Cabling Problems	9-6
Unusual Network Activity	<u> 9-7</u>

Diagnostic Tests 9-	7
Testing Twisted-Pair Cabling 9-3	8
Testing End-to-End Network Communications 9-6	8
Customer Support Services	8
A: Cables and Connectors	
Recommended Cables A-	2
Twisted-Pair Cable/Connector Pin-Outs A-:	3
Twisted-Pair Cable Pin Assignments A-	<u>5</u>
RS-232 Connector and Cable Pin-Outs	<u>6</u>
RS-232-C "Null Modem" Cable A-	7
Minimum Cable Pin-out for Direct Console Connection A-	7
RS-232 Modem Cable	8
<b>B</b> : Specifications	
Physical	1
Electrical B-	1
EnvironmentalB-	1
Connectors	2
ElectromagneticB-	2
SafetyB-	2
C: Sample Console Configurations	
Windows 3.1 Terminal Application C-	1
<b>Procomm Plus V2.01</b> C-7	2
Other Terminal Emulators C-:	3
D: Switch Reference	
Front of Switch D-	1
Back of the Switch D-	1

E: BOOTP Operation
<u>Overview</u> <u>E-1</u>
The Bootp Process E-1
<b>Bootp Database Record Entries</b> E-2
Configuring Bootp
F: MAC Address Management
Overview F-1
Switch (Default) MAC AddressF-2
VLAN MAC Addresses F-3
MAC Addresses (for Spanning Tree Operation) F-4
Safety and Regulatory Statements
Index

## Installation

# **Installation Summary**

This chapter describes the installation procedures for the HP J3245A AdvanceStack Switch 800T (hereafter referred to as the Switch 800T). The following is a summary of those procedures:

- 1. **Site Preparation.** Ensure that the cabling infrastructure meets the network specifications for your intended use of the Switch 800T.
  - For 100Base-TX transceivers used in the Switch 800T, use category 5, four-pair, 100 ohm UTP (unshielded twisted-pair) cables. Cable lengths can be up to 100 meters. For a connection to an end node, use straight-through cable. For a connection to a hub or a switch, use a crossover cable.
  - For 100Base-FX transceivers used in the Switch 800T, use fiber optical cables that:
    - Are fitted with type SC connectors
    - Conform to ISO/IEC 793-2 type B1 and ITU-T G.652 standards

#### Caution

Ensure that the power source circuits are adequate and properly grounded. That is, ensure that any Switch 800T installation, together with any other devices, does not overload the power circuits, wiring, and overcurrent protection. To determine the possibility of overloading the supply circuits, add together the ampere ratings from the nameplates of all devices installed on the same circuits and compare the total with the rating limits for the supply circuits. For additional information, refer to appendix B, "Specifications".

2. **Install transceivers (optional).** The Switch 800T is shipped with four HP J3192B AdvanceStack 100Base-TX Twisted-Pair Transceiver Modules (referred to in this manual as "transceivers") already installed.

#### Caution

Because the Switch 800T can be damaged by installing or removing a transceiver while powered-up, the ONLY time to install additional transceivers is before powering up the switch or with the power disconnected during scheduled down times.

The J3192<u>A</u> twisted-pair transceiver is not supported in the Switch 800T. Always use the "B" version (J3192<u>B</u>) or any later J3192 transceiver(s).

- 3. **Verify the switch's operation.** This is a simple process of applying power to the Switch 800T and ensuring that the LEDs on the switch's front panel respond properly.
- 4. **Mount the switch in a rack, on a wall, or on a tabletop.**Hewlett-Packard sells 19-inch free-standing equipment racks. To order a rack, contact your HP-authorized LAN dealer.
- 5. (Optional) Connect the J2962A HP AdvanceStack Redundant Power Supply (RPS) instead of using the switch's own power supply. This optional power supply can be used instead of the switch's main power supply to provide both primary and backup (redundant) power to keep the switch operating in the event of a failure in either a power circuit or a power supply unit.
- 6. Connect the Switch 800T to a network and connect computers and/ or other devices to the switch's ports.
- 7. **Configure the Switch 800T**. The Switch 800T, in its factory default configuration, operates as a multiport transparent bridge. You will need to use the console interface utility to configure the switch for additional functionality. Initially, this requires one of the following:
  - A PC with a terminal emulator connected to the Console RS-232 port on the switch either directly or via a modem
  - An actual terminal directly connected to the Console RS-232 port on the switch

(For examples of terminal emulator configurations, refer to appendix C, "Sample Console Configurations".)

After configuring a minimal IP or IPX configuration through one of the above options, you can also access the console interface via Telnet or use a network management tool, such as Hewlett-Packard's AdvanceStack Assistant, for some configuration and monitoring functions.

# 1. Install Add-In Transceivers (Optional)

The Switch 800T is shipped with four HP J3192B AdvanceStack 100Base-TX Twisted-Pair Transceiver Modules already installed. (The switch does not support use of the "A" version—HP J3192A—of this transceiver.) Additional twisted-pair (UTP) or fiber transceivers must be purchased separately. (You need a minimum of one transceiver installed to connect the switch to your network, and one additional transceiver installed for each connection to a server, hub, switch, or other device.) The Switch 800T is designed to operate with either of the following two transceivers:

- HP J3192B AdvanceStack 100Base-TX Twisted-Pair Transceiver Module
- HP J3193B AdvanceStack 100Base-FX Fiber-Optic Transceiver Module

### Caution

To avoid damage to circuitry in the Switch 800T and transceivers, always have the power to the Switch 800T turned off while a transceiver is being installed or removed.

For proper cooling and for reduction of electromagnetic emissions, ensure that a slot cover (provided with your Switch 800T) is installed on any unused transceiver slot.

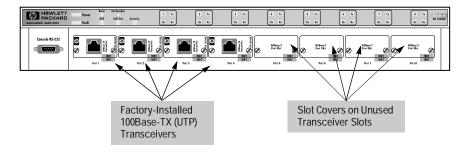


Figure 1-1. Switch 800T with Factory-Installed HP J3192B 100Base-TX (UTP)
Transceivers

It may be more convenient to install additional transceivers *before* installing the Switch 800T into a rack or other location. Inspect your installation site and determine whether the switch's module slots will be accessible.

For a description of currently available transceivers, contact your HP-authorized LAN dealer or check Hewlett-Packard's World Wide Web site listed on the card at the front of this manual.

**To Install a Transceiver into the Switch 800T:** This procedure describes the general installation of a transceiver. For information on the specific transceiver you are installing, plus specific connection and trouble-shooting information, refer to the *HP 100Base-T Transceiver Modules Installation Guide* you received with the transceiver.

1. Unplug the Switch 800T from the AC power source.

### Caution

To avoid damage to circuitry in the Switch 800T and transceivers, always have the power to the Switch 800T turned off while a transceiver is being installed or removed.

 Use a flat-bladed or Torx T-10 screwdriver to unscrew the two retaining screws from the cover plate on the slot in which you want to install the transceiver. For example, to install an HP J3192B AdvanceStack 100Base-TX Twisted-Pair Transceiver Module for port 5:

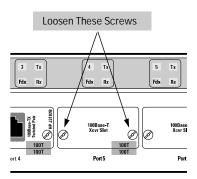


Figure 1-2. Remove the Cover Plate from the Transceiver Slot

Retain the cover plate for future use. If you remove a transceiver in the future without replacing it, cover the unused slot with one of these cover plates.

#### Caution

For proper cooling and reduction of electromagnetic emissions, ensure that the slot covers (provided with your Switch 800T) are installed on any unused slots.

- 3. While constantly touching a metal part of the Switch 800T to discharge any static electric difference between your body and the switch, carefully remove the transceiver from its protective anti-static packaging. Hold the transceiver by its edges, taking care not to touch any of its metal connectors
- 4. Slide the transceiver firmly into the open slot as far as it will go. The transceiver's faceplate should touch the face of the device.

#### Note

Ensure that the transceiver you are installing has a blue color bar with the word "100T" printed on it (100T). (See figure 1-3, below.) Any transceiver that does not have this bar will not operate with the Switch 800T and will cause a fault condition.

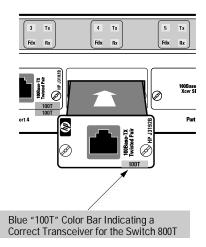


Figure 1-3. Slide the Transceiver into the Slot

- 5. Tighten the retaining screws on the transceiver until they are snug. Be careful that you do not overtighten the screws.
- 6. To install another transceiver, return to step 2. Otherwise, go on to the next procedure (page 1-6).

# 2. Verify the Switch's Operation

This process verifies that the Switch 800T is operating properly.

### Verify the Switch Hardware

1. Connect the supplied power cord to the switch's power receptacle.

 


Figure 1-4. Back Panel of the Switch 800T

2. Plug the power cord into a properly grounded electrical outlet.

Note

The Switch 800T does not have a power switch. It is powered on when the switch's power cord is connected to the switch and to a power source.

If your installation requires a different power cord than the one supplied with the switch, be sure to use a power cord displaying the mark of the safety agency that defines the regulations for power cords in your country. The mark is your assurance that the power cord can be used safely with the switch.

3. Check the LEDs on the switch's front panel.

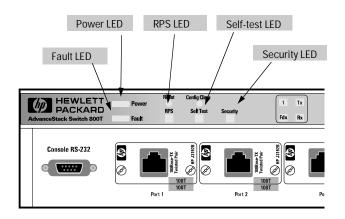


Figure 1-5. The Switch 800T System LEDs

When the switch is powered on, it performs a self-diagnostic test. During the test, the following occurs:

- All LEDs turn on momentarily.
- The Power LED remains on.
- The RPS LED turns on if an RPS is connected and supplying power.
- The Self-test and Fault LEDs remain on for less than one minute.

When the self-test completes successfully, the following events occur:

- The power LED and, if an RPS is connected, the RPS LED, remain on.
- The self-test and Fault LEDs turn off.

### Note

If any Fault LED is flashing, the Switch 800T has encountered a problem. Refer to chapter 9, "Troubleshooting".

4. After the switch has passed its self-test, turn to "3. Mount the Switch", on the next page.

### Note

If the switch's permanent location makes it difficult to access the Console RS-232 port from a terminal or PC running a terminal emulator, you may want to temporarily connect a terminal device now and configure the switch minimally for Telnet access. If you want to do this, refer to "Connect a Console Device" on page 1-21 before continuing here.

### 3. Mount the Switch

A Switch 800T can be mounted in two ways:

- In a rack or cabinet
- On a table
- On a wall

The hardware for mounting the switch is included in the accessory kit (5063-8544) packed with the switch.

Hewlett-Packard sells 19-inch free-standing equipment racks. For more information, contact your HP authorized LAN dealer.

### Mounting Precautions

Before mounting the switch, read and follow these mounting precautions:

- Plan the switch's location and orientation relative to other devices and equipment. Also consider the cabling that will be attached to the switch and ports that will be used. In the front of the switch, leave 3 inches (7.6 cm) of space for twisted-pair cables. In the back of the switch, leave 1-1/2 inches (3.8 cm) of space for the power cord.
- Ensure that any installation of a Switch 800T, together with any other devices, does not overload the power circuits, wiring, and over-current protection. To determine the possibility of overloading the supply circuits, add together the ampere ratings from the nameplates of all devices installed on the same circuits and compare the total with the rating limits for the supply circuits.
- Make sure that the power source circuits are properly grounded, then use the supplied power cord to connect the Switch 800T to the circuit. Refer to the Safety and Regulatory Statements that follow the appendixes at the back of this manual.
- Do not install the Switch 800T in an environment where the operating ambient temperature might exceed 55°C (131°F).
- For proper cooling, make sure the air flow around the sides and back of the switch is not restricted.
- If an HP J2962A AdvanceStack Switch 800T Redundant Power Supply is installed, make sure the air flow around the fan area of the RPS is not restricted.

### **Rack or Cabinet Mounting**

### Warning

The rack or cabinet should be adequately secured to prevent it from becoming unstable and/or falling over.

Install the Switch 800T only on a tabletop or an equipment rack or cabinet designed for this product. The Switch 800T weighs 9.5 lbs (4.3 kilos) with four transceivers installed. Devices installed in a rack or cabinet should be as low as possible, with the heaviest device at the bottom and progressively lighter devices installed above.

- 1. If you will be using the optional HP J2962A HP AdvanceStack Redundant Power Supply (RPS) with the Switch 800T, refer to the *Installation and Reference Guide* shipped with the RPS for instructions on how to install it in a position from which it can be used with the Switch 800T.
- As shown below, partially install one of the 5/8-inch number 12-24 screws in each rack upright. Install the screw in the upper hole of a close pair. (Some cabinets require number 10-32 screws instead, which are not included in the accessory kit.)

### Caution

Make sure you have screws that fit your cabinet or rack before mounting the switch.

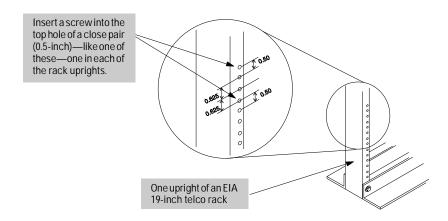


Figure 1-6. Installing the Mounting Screws

3. Using a Phillips cross-head screwdriver, attach the L-shaped mounting brackets to each side of the switch with four 10-mm M4 screws (included in the accessory kit).

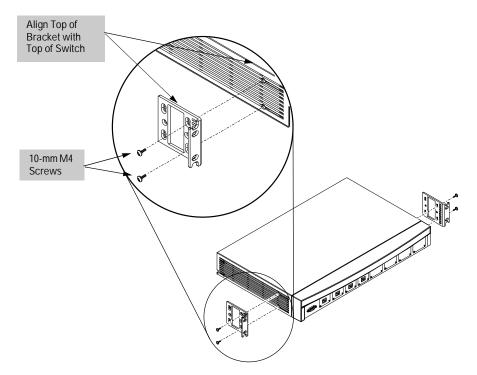


Figure 1-7. Attach the Mounting Brackets

4. Place the switch in the rack and lower it so the notches in the bottom of the bracket slide onto the screws you installed in step 1. Tighten these screws—be careful not to overtighten. (Refer to figures 1-8 and 1-10.)

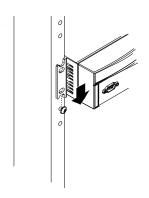


Figure 1-8. Position the Switch for Rack Mounting

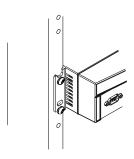


Figure 1-9. Seat the Switch in the Rack

5. Install the other two 5/8-inch 12-24 screws into the upper hole in each bracket. Include the cable-tie bracket on the side on which you want to lead your network cables. (For example, see below.) Tighten these screws—be careful not to overtighten.

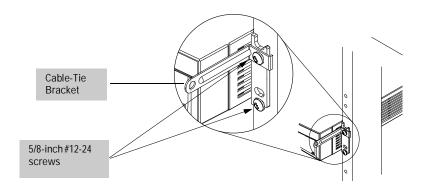


Figure 1-10. Install the Switch in the Rack

Notice that for the first AdvanceStack device mounted in a rack, the bottom notch and the top hole in the bracket are used. For the next AdvanceStack device above, the bottom hole and the top notch are used. (Refer to figure 1-11, below.) Continue to alternate "notch and hole, hole and notch" for all AdvanceStack devices to be consecutively installed.

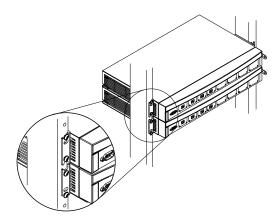


Figure 1-11. Correct Rack Mounting for Multiple AdvanceStack Devices

### Mounting the Switch on a Wall

### Caution

The Switch 800T should be mounted only to a wall or wood surface that is constructed of a minimum of 1/2-inch plywood or its equivalent.

- 1. Using a Phillips (cross-head) screwdriver, attach the mounting brackets to the switch in one of the positions shown in the following two illustrations. Use the 10-mm M4 screws included in the mounting kit.
- 2. Attach the switch to the wall or wood surface with 5/8-inch number 12 wood screws (not included).

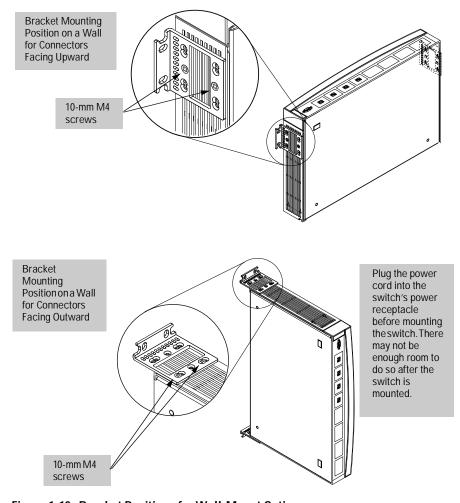


Figure 1-12. Bracket Positions for Wall-Mount Options

### **Table Mounting**

Place the switch on a table or other horizontal surface. (No special tools are necessary.)

Be certain to pick a sturdy table in an uncluttered area. You may want to secure the switch's cables to the leg of the table to help prevent people from tripping over them.

### Caution

Make sure the air flow around the sides and back of the switch is not restricted. Also, if an HP J2962A AdvanceStack Redundant Power Supply is installed, make sure the air flow around the fan area of the RPS is not restricted.

Route the power cord(s) and data cables so that they will not create a tripping hazard for people walking in the area of the switch installation.

# 4. Connect a Power Supply

The Switch 800T does not have a power switch. It is powered-on when the power cord is plugged in. The switch's power supply automatically adjusts to any AC power source between 100-127 volts and 200-240 volts. There are no voltage range settings to configure.

You can use one of the following to provide power to the Switch 800T:

- The power cord provided with the Switch 800T.
  - OR
- The optional HP J2962A AdvanceStack Redundant Power Supply (RPS).

To Use the Power Cord Provided with the Switch 800T:

#### Caution

If you use a power cord that plugs into the power cord receptacle (figure 1-13), do not use the optional redundant power supply (RPS).

If your installation requires a different power cord than the one supplied with the switch, be sure to use a power cord displaying the mark of the safety agency that defines the regulations for power cords in your country. The mark is your assurance that the power cord can be used safely with the switch.

- 1. Ensure that the switch is properly mounted. (Refer to "3. Mount the Switch" on page 1-8.)
- 2. Plug the power cord into the switch's power cord receptacle and into an AC power source.

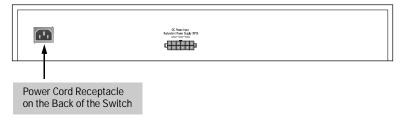


Figure 1-13. Plugging in the Power Cord

To Use the (Optional) HP J2962A AdvanceStack Redundant Power Supply (RPS):

### Caution

Remove the power cord from the Switch 800T before connecting the (optional) redundant power supply (RPS).

You can use the optional HP J2962A AdvanceStack Redundant Power Supply (RPS) instead of the Switch 800T's built-in power supply. This can help ensure continuous switch operation in the event of a power failure on an individual power supply circuit. It also eliminates reliance on a single device power supply. *To connect the RPS to the Switch 800T, it is necessary to first turn off power to the switch by removing the switch's own power cord.* Thus, if you are using the RPS, Hewlett-Packard recommends that you connect the RPS to the Switch 800T *before* connecting the switch to your network. Otherwise, you must schedule downtime to connect the RPS. When the RPS is connected to a Switch 800T and power is applied to the RPS, the RPS LED on the Switch 800T's front panel is lit.

### Note

For important information on how to install and connect the (optional) HP J2962A AdvanceStack Switch 800T Redundant Power Supply (RPS) for use with the Switch 800T, refer to the documentation provided with the RPS.


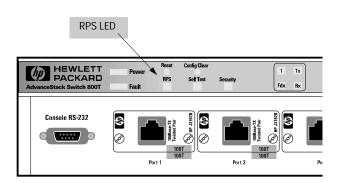


Figure 1-14. RPS LED on the Switch 800T's Front Panel

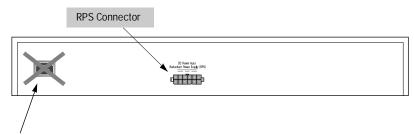

Note: Do Not Use the Power Cord Receptacle If You Plan To Use the RPS with the Switch.

Figure 1-15. Location of the RPS Connector

# 5. Complete the Network Connections to the Switch

Connect the switch to the power source. With the switch mounted, you are now ready to connect it to your network. Typical switch connections are:

- Switch-to-networked devices (i.e. servers, and printers).
- Switch-to-hub
- Switch-to-switch
- Switch-to-router

#### Note

Refer to the HP AdvanceStack Switch 800T Connectivity Quick Reference that is shipped with the Switch 800T for examples of Switch 800T connections to other devices.

For other network design guidelines, refer to *An Introduction to Ethernet LAN Switches* and *Designing Switched Networks*, both of which are included on the CD shipped with the Switch 800T. For physical topology guidelines, refer to *Designing HP AdvanceStack Workgroup Networks*, available from HP authorized LAN dealers and also on the CD shipped with your Switch 800T.

Network connections to the Switch 800T are through ports on the optional transceivers installed in the switch.

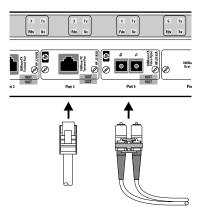


Figure 1-16. Network Connections

For connections to these ports, see the documentation you received with the specific transceiver, and to the *Connectivity Quick Reference* mentioned in the preceding note.

### Cable Management.

The mounting brackets designed for the Switch 800T provide help for the problem of managing your network cables. Each bracket has a series of holes for attaching a cable tie to bundle network cables away from the switch.

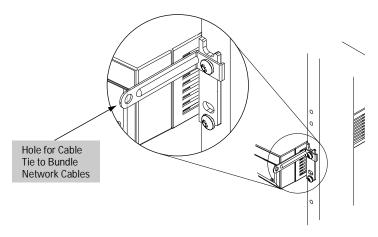


Figure 1-17. Cable Management

# 6. Connect a Console Device (Optional)

The Switch 800T console interface enables you to use a PC or a terminal to do the following:

- Control password security
- Monitor switch and port statistics
- Modify the switch's configuration, or provide a minimal configuration for Telnet or network management products (used for in-band access to the switch) such as Hewlett-Packard's AdvanceStack Assistant (ASA)
- Use the switch's event log and command line to help in troubleshooting
- Download new version of switch software (OS)

### Note

The Switch 800T is shipped with a factory default configuration that enables operation as a multiport transparent bridge (switch) when installed in a network. For this operation, connecting a console device is unnecessary. However, for some of the other uses listed above, you will need to have console access.

You can use either of the following methods for console access:

- **Console RS-232** using either a direct or modem connection to a PC terminal emulator program, or a direct connection to an actual terminal
- In-Band using Telnet from a network management workstation. (To enable Telnet—or network management access—it is necessary to first use a direct-connect or modem-connect console device to configure an IP address and subnet mask for the switch.)

The Switch 800T can simultaneously support one console session via the Console RS-232 port and one console session via Telnet.

### Direct Console Management, Using A Serial Cable and a Terminal or PC Terminal Emulator

You can use either a PC emulating an ASCII terminal (such as the terminal application included with Microsoft Windows 3.1, Windows 95, or Windows NT) or an ASCII terminal.

To directly connect a PC or terminal to a Switch 800T, follow these steps:

1. Connect the PC or terminal to the switch's Console RS-232 port using an RS-232-C console cable (included). (If you need information on pin-outs and recommended cables, see appendix A, "Cables and Connectors")

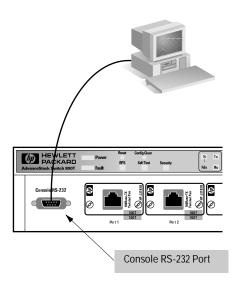


Figure 1-18. Connecting a PC or Terminal to the Console RS-232 Port

2. Turn on the terminal or PC's power (and, if using a PC, start the PC terminal emulation program). For recommended parameter settings, refer to appendix C, "Sample Console Configurations".

3. When you see this message:

Waiting for speed sense. Press enter to continue. Press [Enter]. You will then see the Switch 800T's Main Menu.

#### Note

If the terminal emulator you are using is not set to 9600 Bps, you will see a series of meaningless characters. Press <code>Enter</code> to synchronize the switch serial port speed with the terminal speed. The switch's serial port can use one of several speeds between 300 Bps and 38400 Bps. In most cases, the switch's Serial Link Baud Rate should be left at the (default) <code>Speed</code> <code>Sense</code> setting. At this setting, it will automatically sense terminal speeds in the above-mentioned range.

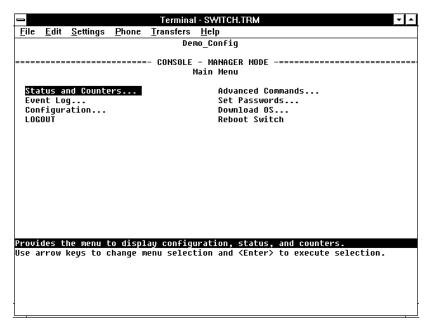


Figure 1-19. The Main Menu

4. If you want to continue with direct console management at this time, refer to chapter 2, "Using the Console Interface".

# Remote Console Management Using a Modem and a Terminal or PC Terminal Emulator

#### Note

For remote console management use a full-duplex, asynchronous (character-mode) modem.

- 1. At the Switch 800T site:
  - a. Connect the modem to the Switch 800T's console port using an RS-232-C modem cable. (For pin-outs and recommended cables refer to appendix A, "Cables and Connectors".)
  - b. If necessary, configure the modem to operate with the current configuration of the Switch 800T. (The modem's default configuration may be sufficient.)
- 2. At the remote site, connect the terminal (or PC emulating a terminal) to a modem using a modem cable. Make sure the terminal and modems are functioning properly, then use the modem instructions to establish the link between the terminal's modem and the Switch 800T's modem.
- 3. Refer to "Starting and Ending a Console Session" on page 2-2.

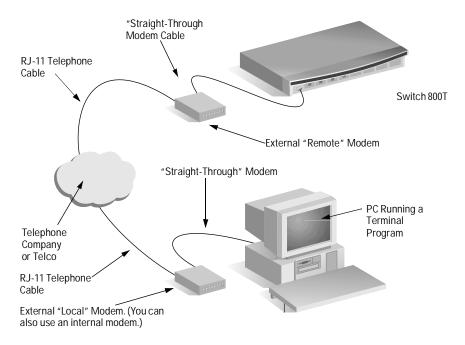


Figure 1-20. Example of Remote Access via a Modem

# Where To Go from Here

Chapter	Topics		
2 and 3	To use the console and to configure switch features		
4	To monitor and analyze switch operation from the console		
5	To prepare the switch for SNMP management and to learn which MIBs are supported by the switch		
6	To use the "Advanced Commands" functions		
7	To find further information on the following features and to configure them:  • Spanning Tree Protocol  • Port Trunking  • Filters and Security  • Virtual LANs  • Internet Group Management Protocol (IGMP)  • Automatic Broadcast Control (ABC)		
8	To download a new operating system or transfer a switch configuration		
9	Troubleshooting information		
Appendix	Торіс		
A B C D E F	Cable and connector information Switch specifications Sample console configurations LED reference Bootp information MAC address management Safety and Regulatory information		

# **Using the Console Interface**

### Overview

This chapter describes the following features:

- Starting and ending a console session (page 2-2)
- The Main Menu (page 2-4)
- Screen structure and navigation (page 2-5)
- Using password security (page 2-7)
- Rebooting the switch (page 2-10)
- Resetting the switch (page 2-12)

**About the Console Interface.** The console interface enables you to reconfigure the switch and to monitor the switch status and performance. It consists of a series of management screens accessed through a menu-driven screen structure that begins at the Main Menu, and is organized as described in this section.

The Switch 800T offers two methods of access to the console interface:

- Console RS-232 (out-of-band) access:
  - Directly connected to the Console RS-232 port, using a serial cable and a PC running a terminal emulator or an actual terminal
  - Remotely connected to the Console RS-232 port, using modems and a PC running a terminal emulator or an actual terminal

Refer to chapter 1, "Installation", for information on making RS-232 hardware connections.

■ In-Band access using Telnet from a PC or UNIX station on the network. This method requires that you first configure an IP address and subnet mask by using either out-of-band console access or Bootp. The Switch 800T allows one outbound and one inbound Telnet session to be running simultaneously.

Console access can be limited by setting Manager-level and Operator-level passwords.

# Starting and Ending a Console Session

#### Note

This manual assumes that either a terminal device is already configured and connected to your Switch 800T (as described in chapter 1, "Installation") or that you have already enabled Telnet access to the switch. (To enable Telnet access, refer to "Console Features" on page 3-17.)

#### **How To Start a Console Session:**

- Start your PC terminal emulator, terminal, or Telnet session on a remote terminal device.
- 2. Do one of the following:
  - If you are using Telnet, go to the next step.
  - If you are using a PC terminal emulator or a terminal, you should then see the following prompt:

Waiting for speed sense. Press <enter> to continue.

**Note:** If the console displays a series of random and/or unreadable characters instead of the above prompt, the Baud Rate setting for the terminal may be different from that of the console interface. The switch's autosensing feature remedies this problem when you press a key.

Press [Enter] and go to the next step.

- 3. The display then briefly displays a message indicating the baud rate at which the serial interface (Console RS-232 port) is operating, followed by the copyright screen. Do one of the following:
  - If a password has been set, the Password prompt appears. Type the password and press Enter to display the Main Menu (figure 2-1).
  - If no password has been set, you will see this prompt:

Press any key to continue.

Press Enter to display the Main Menu (figure 2-1).

If there is any system-down information to report, the switch displays it in this step and in the Event Log.

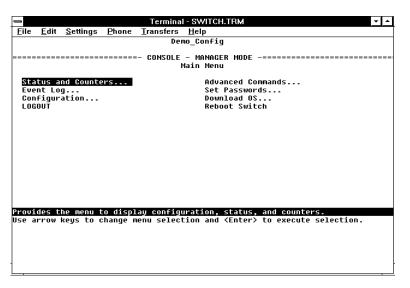


Figure 2-1. The Main Menu

For a description of Main Menu features, refer to "Main Menu Features" on page 2-4.

#### **How To End a Console Session:**

- 1. If you have not made configuration changes in the current session, go to step 3.
- 2. Configuration changes requiring a reboot of the switch are indicated by an asterisk (\*) next to the configured item in the Configuration menu. (See "Rebooting To Activate Configuration Changes" on page 2-11) If you have made configuration changes that require a reboot of the switch in order to take effect:
  - a. Return to the Main Menu.
  - Use the arrow keys (←,→,↓, and ↑) to highlight Reboot Switch in the Main Menu and press [Enter] to reboot.
- Do one of the following:
  - If you have accessed the switch through a direct connection from a terminal device, exit from the terminal application.
  - If you have accessed the switch through Telnet or a modem connection:
    - i. Return to the Main Menu.
    - ii. Highlight LOGOUT in the Main Menu and press Enter.

## Main Menu Features

The Main Menu (figure 2-1 on page 2-3) gives you access to these console interface features:

- Status and Counters: Displays information on the switch, individual ports, the address tables, protocols and spanning tree. (Refer to chapter 4, "Monitoring and Analyzing Switch Operation from the Console".)
- **Event Log:** Enables you to read progress and error messages that are useful for checking and troubleshooting switch operation. A listing of Event Log messages is included on the CD shipped with your switch. (Refer to "Event Log" on page 4-15.)
- **Configuration:** Enables you to display the current configuration settings and to reconfigure individual parameters. (Refer to chapter 3, "Configuring the Switch".)
- **LOGOUT:** Disconnects Telnet or modem access to the switch. (Refer to "How To End a Console Session" on page 2-3.)
- Advanced Commands: Provides access to a set of system management, monitoring, and troubleshooting commands. (Refer to chapter 6, "Using the Advanced Commands".)
- **Set Passwords**: Enables you to set Operator and Manager passwords to help restrict who has access to the console interface. (Refer to "Using Password Security" on page 2-7.)
- **Download OS:** Enables you to download a new software version to theswitch. (Refer to chapter 8, "File Transfers".)
- **Reboot Switch:** Performs a software reboot, which is required (in some cases) to activate configuration changes that have been made. (Refer to "Rebooting To Activate Configuration Changes" on page 2-11.)

# Screen Structure and Navigation

Console screens include these three elements:

- Parameter fields and/or read-only information such as statistics
- Navigation and configuration actions, such as Save, Edit, and Cancel
- Help banner to describe navigation options and individual parameters.

For example, in the System configuration screen:

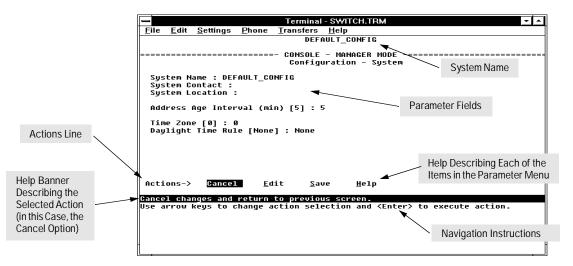


Figure 2-2. Elements of Screen Structure

Table 2-1. How To Navigate in the Console

Task:	Actions:
Execute an action from an "Actions-→ menu:	Use either of the following methods:  ■ Use the arrow keys ( , , , , or ↑) to highlight the action you want to execute, then press Enter.  ■ Press the key corresponding to the capital letter in the action name. For example, in a configuration menu, press E to begin editing parameter values.
Reconfigure (edit) a parameter setting or a field:	<ol> <li>Select a configuration area, such as System. (See figure 2-2.)</li> <li>Press E (for Edit on the Actions line).</li> <li>Use Tab or the arrow keys (A, A), or (A) to highlight the item or field.</li> <li>Do one of the following:         <ul> <li>If the parameter has preconfigured values, use the Space bar to select a new option</li> <li>If there are no preconfigured values, type in a value.</li> </ul> </li> <li>If you want to change another parameter value, return to step 3.</li> <li>If you're finished editing parameters in the displayed screen, press Enter and do one of the following:         <ul> <li>To save any configuration changes you have made (or if you have made no changes), press (for the Save action).</li> <li>To exit from the screen without saving any changes that you have made, press (for Cancel).</li> </ul> </li> <li>Note: Some parameter changes are activated when you execute Save, and it is therefore not necessary to reboot the switch after making these changes. But if an asterisk appears next to any menu item you reconfigure, it is necessary to reboot the switch to implement the change. In this case, rebooting should be done after you have made all desired changes and then returned to the Main Menu.</li> <li>When you are finished editing parameters, return to the Main Menu.</li> <li>If necessary, reboot the switch by highlighting Reboot Switch and pressing Enter). (Refer to the Note, above.)</li> </ol>
Exit from a read-only screen.	Press B (for the Back action).

# **Using Password Security**

There are two levels of console access: Manager and Operator. For security, you can set a password on each of these levels.

Level	Actions Permitted
Manager:	Access to all console interface areas. This is the default level. (That is, if a Manager password has <i>not</i> been set prior to starting the current console session, then anyone having access to the console can access any area of the console interface.)
Operator:	Access to the Status and Counters, Event Log, and minimal Configuration areas for display only. Use of the LOGOUT command. On the Operator level, the Command Prompt, Set Passwords, Download OS, and Reboot options are not available in the Main menu.

### To use password security:

- 1. Set a Manager password (and an Operator password, if applicable for your system).
- 2. Exit from the current console session. A Manager password will now be needed for full access to the console.

If you do steps 1 and 2, above, then the next time a console session is started, the console interface will prompt for a password. Assuming that both a Manager password and an Operator password have been set, the level of access to the console interface will be determined by which password is entered in response to the prompt.

If you set a Manager password, you may also want to configure the Connection Inactivity Time parameter in the Serial Link configuration screen (page 3-16). This causes the console session to end after the specified period of inactivity, thus giving you added security against unauthorized console access. (Once a Manager password is set and the console session is ended, access to the full console interface for any subsequent sessions requires the Manager password to be entered.)

#### Note

If there is only a Manager password set (with no Operator password), and the Manager password is not entered correctly when the console session begins, the switch operates on the Operator level.

If there are both a Manager password and an Operator password, but neither is entered correctly, access to the console will be denied.

If a Manager password is not set, anyone having access to the console interface can operate the console with full manager privileges, regardless of whether an Operator password is set.

Passwords are case-sensitive.

The rest of this section covers how to:

- Set a Password
- Delete a Password
- Recover from a Lost Password

#### To set Manager and Operator passwords:.

1. From the Main menu select Set Passwords. This screen appears:

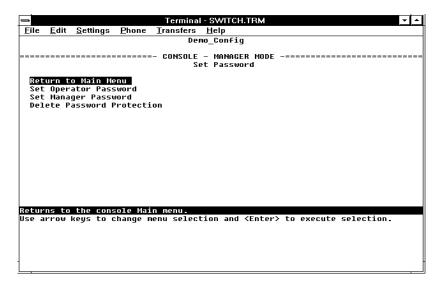


Figure 2-3. The Set Password Screen

- 2. To set a new password:
  - a. Select Set Manager Password or Set Operator Password. You will then be prompted with Enter new password.

- b. Type a password of up to 16 characters and press Enter. (Remember that passwords are case-sensitive.)
- c. When prompted with Enter new password again, retype the new password and press [Enter].
- d. To set another password, return to step 2a. Otherwise, go to step 3.
- 3. Select Return to Main Menu to exit from the Set Password screen.

After a password is set, if you use LOGOUT or reboot or reset the Switch 800T, you will be prompted to enter the password to start a new console session.

**To Delete Password Protection (Including Recovery from a Lost Password):** This procedure deletes *both* passwords (Manager and Operator). If you have physical access to the switch, press the Config Clear button to clear all password protection, then enter new passwords as described earlier in this chapter. If you do not have physical access to the switch, you will need the Manager password:

- 1. Enter the console at the Manager level.
- 2. From the Main menu select Set Passwords. You will then see the screen shown in figure 2-3.
- 3. Select Delete Password Protection. You will then see the following prompt:

Continue Deletion of password protection? No

- 4. Press the Space bar or press Y to select Yes, then press Enter.
- $5. \quad \text{Press} \ \overline{\textbf{Enter}} \ \text{to clear the Password protection message}.$
- 6. Select Return to Main Menu to exit from the Set Password screen.

### To Recover from a Lost Manager Password:

If you cannot start a console session at the manager level because of a lost Manager password, you can clear the password by getting physical access to the switch and pressing and holding the Config Clear button for at least one second.

# Rebooting the Switch

Rebooting the switch terminates the current console session and performs a reset of the operating system. Some of the reasons for performing a reboot include:

- Activating certain configuration changes that require a reboot
- Resetting statistical counters to zero

To Reboot the switch, use the Reboot Switch option in the Main menu. (If a Manager password has been previously set, Reboot Switch appears only if this password is entered at the beginning of the console session.)

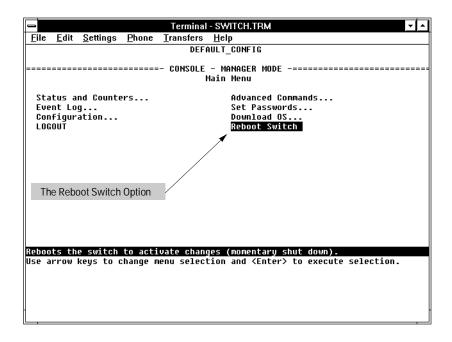


Figure 2-4. The Reboot Switch Option in the Main Menu

**Rebooting To Activate Configuration Changes.** Configuration changes for some parameters become effective as soon as you save them. However, you must reboot the switch in order to implement any changes to any parameters in the following areas:

- IPX Service
- Internet (IP) Service
- Serial Link
- **■** Console Parameters
- New VLAN Names
- System Parameters

If configuration changes requiring a reboot have been made, the switch displays an asterisk next to the configuration menu item in which the change has been made. For example, if you change and save parameter values for the switch's IP configuration, the need for rebooting the switch would be indicated by an asterisk appearing in the following screen:

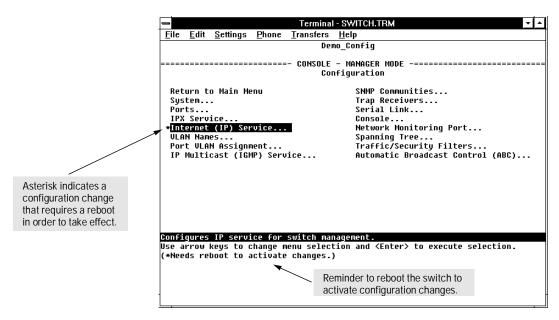


Figure 2-5. Example of a Configuration Change Requiring a Reboot

# Resetting the Switch

Resetting requires physical access to the front of the Switch 800T. There are two levels of reset:

- **Hardware reset:** Momentarily interrupts switch operation, performs a complete hardware self-test. This also clears the Event Log.
- Configuration reset: This is a drastic action that interrupts switch operation, clears any passwords, clears the event log, performs a complete self-test, and reboots the switch in its factory default configuration. You should consider performing a configuration reset only if you want all configurable parameters reset to the factory default values.

**To perform a hardware or configuration reset:** Refer to the table on page D-5 in appendix D, "Switch Reference".

# Configuring the Switch

### Overview

This chapter provides an overview of the Switch 800T configuration features.

In its factory default configuration, the Switch 800T automatically operates as a multiport learning bridge with network connectivity provided by the particular modules that you have installed. However, to "fine-tune" your switch for the specific performance and security needs in your network, you may choose to reconfigure certain switch parameters.

**Configuration Features.** The Switch 800T enables you to configure the following switch features. For information on individual configuration parameters, use the online Help provided with each configuration screen in the console user interface.

- System (page 3-5)
- Ports (page 3-6)
- IPX Service (page 3-7)
- Internet (IP) Service (page 3-9)
- SNMP Communities (page 3-13)
- Trap Receivers (page 3-15)
- IP Multicast (IGMP) Service (page 3-12)
- Serial Link (page 3-16)
- Console (page 3-17)
- Spanning Tree (page 3-21)
- Traffic/Security Filters (page 3-22)
- Virtual LAN (VLAN) (page 3-11)
- Network Monitoring Port (page 3-18)
- Automatic Broadcast Control (ABC) (page 3-23)

Note

In the factory default configuration, the Spanning Tree Protocol (STP) is off. However, if the topology of your network includes any redundant loops between switches or bridges, you should enable STP. See "Spanning Tree" (page 3-21).

To get Help on individual parameter descriptions. In all screens except the Advance Commands screen there is a Help option in the Actions menu. Whenever the Actions menu is active, you can display Help for that screen's parameters by pressing [H]. (The Actions menu is active whenever any of the choices in the Action menu is highlighted.) For example:

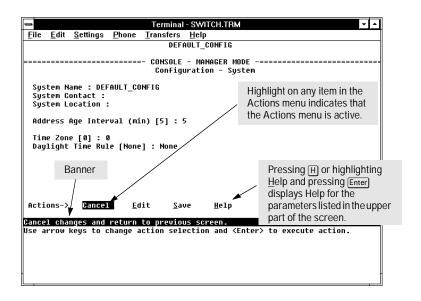


Figure 3-1. Example Showing How To Display Help

**To get Help on the actions or data fields in each screen:** Use the arrow keys ( $\leftarrow$ ,  $\rightarrow$ ,  $\uparrow$ , or  $\downarrow$ ) to select an action or data field. The banner under the action items will describe the currently selected action or data field. (For guidance in how to navigate in a configuration screen, see the instructions provided at the bottom of the screen, or refer to "Screen Structure and Navigation" on page 2-5.)

# **Configurable Features**

**How To Access the Switch 800T Configuration:** Use this procedure to access the switch's configurable features.

1. Begin at the Main Menu and select Configuration (figure 3-2):

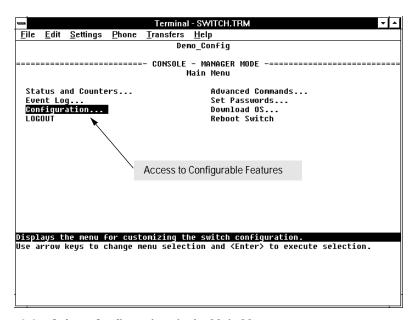


Figure 3-2. Select "Configuration" in the Main Menu

After you select Configuration, the Configuration menu appears as shown in (figure 3-3).

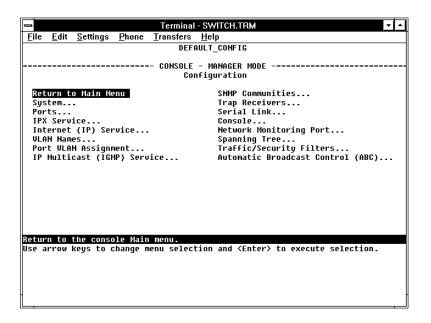


Figure 3-3. The Configuration Menu

- 2. Use the arrow keys ( $\leftarrow$ ,  $\rightarrow$ ,  $\uparrow$ , and  $\downarrow$ ) to highlight the configuration topic you want, then press Enter.
- 3. Refer to the appropriate sections in the remainder of this chapter for information on configuring specific features.

# **System Features**

Configures basic switch management information, including system data, address aging, and time zone parameters:

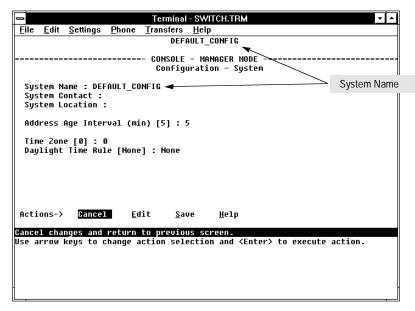


Figure 3-4. The System Configuration Screen (Default Values)

Note

To help simplify administration, it is recommended that you configure System Name to a character string that is meaningful within your system.

To set the time and date, set the Time Protocol parameters under "Internet (IP) Service Features" (page 3-9) for your time server or use the time and date commands described in chapter 6.

### **Port Features**

Configures the operating state for each port and optionally assigns selected ports to a port trunk. (For more on port trunking, refer to chapter 7.) Also optionally enables you to restrict the amount of broadcast traffic on the port. The read-only fields in this screen display the port names and port types.

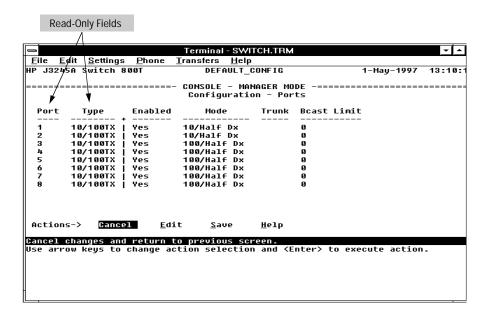


Figure 3-5. Example of the Port Configuration Screen

Port names in the configuration correspond to port number on the front of the switch.

Note

Broadcast limit (the Bcast Limit parameter) can be set for all ports in the switch (or VLAN, if VLANs are configured) from the Automatic Broadcast Control (ABC) screen (page 7-30 and following) if ABC is enabled. Setting the broadcast limit (Bcast Limit) in the above screen is on a per-port basis and overrides any settings done in Automatic Broadcast Control.

### **IPX Service Features**

Enables the switch to be managed in an IPX network. The Switch 800T automatically enables IPX, configures the IPX node address, and learns the IPX network number. Thus, in the factory default configuration, IPX is automatically enabled for the switch.

Note

In this case, the factory-assigned node address is displayed as shown below. (The switch automatically detects the IPX network number.)

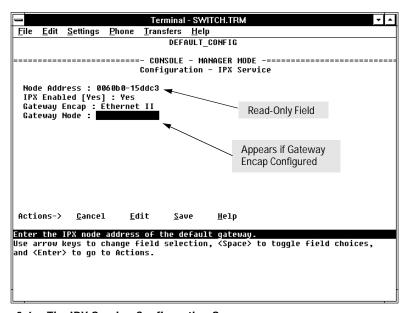


Figure 3-6. The IPX Service Configuration Screen

Note

If VLANs are configured, the above parameters appear in a horizontally formatted screen.

You can also configure an IPX gateway frame encapsulation type and gateway node so that the switch can be managed from a remote IPX network.

If VLANs are configured, the switch can automatically learn the IPX network number of each attached VLAN. For more on VLANs, refer to chapter 7, "Advanced Concepts".

# **(Optional) How To Configure IPX for Management from a Remote IPX Network.** In the factory default, IPX is already enabled. If you want to enable management from a remote IPX network, you must configure the gateway encapsulation type and gateway node.

- From the Configuration screen, select IPX Service to display the above screen.
- 2. If the IPX Enabled parameter is not already set to "Yes" (the factory default), then select this parameter and press the Space bar to select Yes.
- 3. Select the Gateway Encap field and use the Space bar to select the appropriate gateway encapsulation for the gateway device.
- 4. Press ↓ to display and select the Gateway Node field.
- 5. Type the IPX node address (MAC address) of the gateway device that is using the encapsulation defined in step 3.
- 6. Press Enter, then S (for Save).
- 7. Return to the Main Menu and reboot the switch.

### **Internet (IP) Service Features**

Enables you to configure:

- IP address, subnet mask, and (optionally) the gateway address for the switch so that it can be managed in an IP network
- The time server information (used if you want the switch to get its time information from another device operating as a Timep server)

You can manually configure an IP address, subnet mask, and a Gateway IP address by setting the IP Config parameter to Manual. Or, you can use Bootp to configure IP for the switch from a Bootp server. In this case you must also configure your Bootp server accordingly. If you plan to use Bootp, refer to appendix E, "Bootp Operation". Otherwise, set the IP Config parameter to Manual and then manually enter the IP address and subnet mask you want for the Switch 800T.

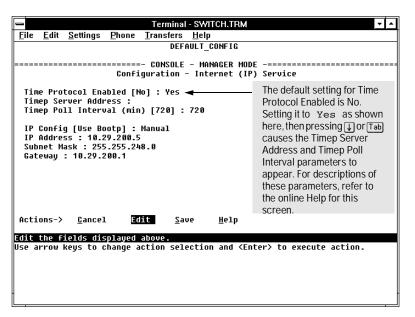


Figure 3-7. Example of the IP Service Configuration Screen

If VLANs are configured, then enable IP on a "per VLAN" basis. This is because each VLAN is a separate network and requires a unique IP address, plus a subnet mask. A gateway (IP) address is optional. For more on VLANs, refer to "Virtual LAN (VLAN) Features" on page 3-11 and in chapter 7, "Advanced Concepts".

### **How To Manually Configure for IP.**

- 1. From the Configuration screen, select Internet (IP) Service to display the above screen.
- 2. Press  $\mathbb{E}$  (for  $\mathbb{E}$ dit).
- 3. Select the IP Config field and use the Space bar to select Manual.
- 4. Select the IP Address field and enter the IP address you want to assign to the switch.
- 5. Select the Subnet Mask field and enter the subnet mask for the IP address.
- 6. If you want to reach off-subnet destinations, select the Gateway field and enter the IP address of the gateway router.
- 7. Press Enter, then S (for Save).
- 8. Return to the Main Menu and reboot the switch.

### Virtual LAN (VLAN) Features

Enables you to create up to eight port-based VLANs. A VLAN is a group of ports designated by the Switch 800T as belonging to the same broadcast domain. This feature enables you to configure port-based virtual LANs to help isolate broadcast traffic and increase security. Typically, if VLANs are used, all ports carrying traffic for a particular subnet address should be configured to the same VLAN. For more on when, why, and how to use VLANs, refer to "Virtual LANS (VLANs)" on page 7-14.

In the factory default state, VLANs are not configured. All ports belong to the same broadcast/multicast domain. This domain is called "DEFAULT\_VLAN" and appears in the "VLAN Names" screen. You can create up to seven additional VLANs by adding new VLAN names, and then assigning one or more ports to each VLAN. (The switch accepts a maximum of eight VLANs, including the default VLAN.) Note that each port can be assigned to only one VLAN. DEFAULT\_VLAN *can be renamed, but not deleted.* Any ports not specifically assigned to another VLAN will remain assigned to DEFAULT\_VLAN.

#### Note

Before you delete a VLAN, you must re-assign its ports to another VLAN.

When VLANs are used, and are managed from an SNMP workstation, you should configure the IPX and/or IP services for each VLAN. (Refer to pages 3-7 and 3-9.)

Spanning Tree protocol (STP), ABC, IGMP, and some other features operate on a "per VLAN" basis. This means you must configure such features separately for each VLAN in which you want them to operate.

For more information on VLANs and how to configure them, refer to "Virtual LANs (VLANs)" on page 7-14.

# IP Multicast (IGMP) Service Features—Multimedia Traffic Control

The IGMP (Internet Group Management Protocol) feature helps to reduce network congestion and improve security by reducing unnecessary multicast traffic on a per-port basis. This is useful in multimedia applications such as LAN TV, desktop conferencing, and collaborative computing, where there is multipoint communication; that is, communication from one to many hosts, or communication originating from many hosts and destined for many other hosts. In such multipoint applications, IGMP will be configured on the hosts, and multicast traffic will be generated by one or more servers (inside or outside of the local network). Switches in the network (such as the Switch 800T or the B-version of the Switch 2000) can then be configured to direct the multicast traffic to only the ports where needed.

In the factory default state (IGMP disabled), the switch forwards all IGMP traffic. When IGMP is enabled, you can configure the switch to any of the following states on a per-port basis:

- Automatic (the default): Causes the switch to interpret IGMP packets and to filter IP multicast traffic based on the IGMP packet information for that port.
- Blocking: Causes the switch to drop all IGMP transmissions received and block all outgoing IP Multicast packets for that port.
- Forwarding: Causes the switch to forward all IGMP and IP multicast transmissions through the port.

For more information on IGMP and how to configure it, refer to "IP Multicast (IGMP)" on 7-23.

### **SNMP Communities Features**

Enables you to add, edit, or delete SNMP communities. Use this feature if you expect to manage the switch from an SNMP management station. You can configure up to five SNMP communities, each with either an operator-level or a manager-level view, and either restricted or unrestricted write access. (For more on this topic, refer to chapter 5, "Using SNMP To Monitor and Manage the Switch", and to the online Help.)

This screen gives an overview of the SNMP communities that are currently configured. All fields in this screen are read-only.

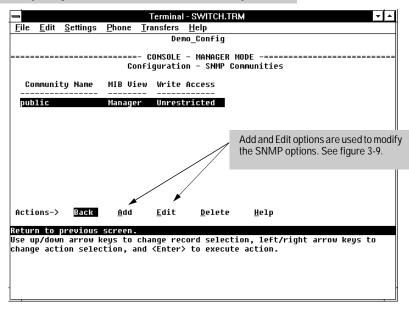


Figure 3-8. The SNMP Communities Screen (Default Values)

#### Caution

Deleting the community named "public" disables many network management functions (such as auto-discovery, traffic monitoring, and threshold setting). If security for network management is a concern, it is recommended that you change the write access for the "public" community to "Restricted".

### **How To Configure for SNMP Communities.**

Ensure that the switch has been configured for IP and/or IPX.

1. From the Configuration screen, select SNMP Communities to display a screen similar to the one above.

If you are adding a

If you are editing an existing community, the

selected Community

appear in the fields.

community, the fields in this screen are blank.

values for the currently

2. Press  $\boxed{A}$  (for  $\underline{A}$ dd) to display the following screen:

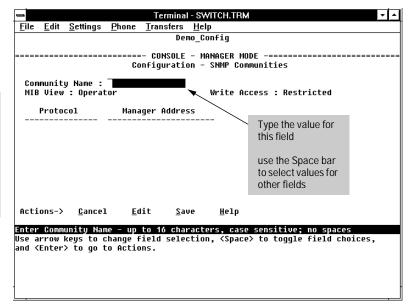


Figure 3-9. The SNMP Add or Edit Screen

#### Note

In the default configuration, no manager addresses are configured. In this case, all management stations using the correct community name may access the switch with the corresponding View and Access levels. If you want to restrict access to one or more specific nodes, you can enter up to ten IP and/ or IPX addresses of such nodes into the Manager Address field. Entering one or more IP or IPX addresses in the Manager Address field limits access to only those addresses.

- 3. Enter the appropriate value in each of the above fields (use the Tab key to move from one field to the next).
- 4. Press Enter, then S (for S ave).

### **Trap Receivers Features**

Enables you to configure up to ten IP and/or IPX management stations (trap receivers) to receive SNMP trap packets sent from the switch. Trap packets describe specific event types. (These events are the same as the log messages displayed in the event log.) The protocol, address, and community define which management stations receive the traps. An authentication trap is sent and the Security LED on the front panel of the switch begins flashing if a management station attempts an unauthorized access. (The ClearLED command turns off the Security LED—page 6-6.) Check the event log to help determine why the authentication trap was sent. (Refer to chapter 4 for information on the event log.)

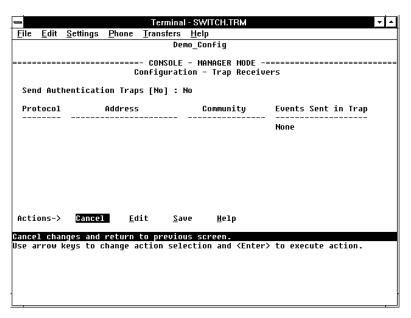


Figure 3-10. The Trap Receivers Configuration Screen (Default Values)

### Serial Link Features

Enables you to adjust the Console RS-232 configuration to customize the connection with the PC, terminal, or modem you are using for console access. Refer to the online Help for information on modem settings. Refer also to "Console Features" on page 3-17.

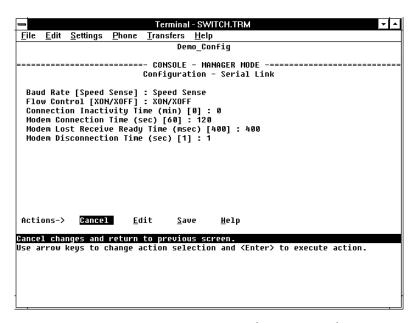


Figure 3-11. The Serial Link Configuration Screen (Default Values)

### **Console Features**

Lets you enable or disable inbound Telnet access and control the types of events displayed in the event log. Also specifies the terminal type and the console screen refresh interval used by the statistics screens (that is, the frequency with which statistics are updated on the statistics screens).

#### Note

"Inbound" Telnet is Telnet access to the switch console from another device. "Outbound" Telnet, which is using Telnet through the switch console to access another device, is always enabled as long as the switch has been configured with a valid IP address. (To configure an IP address for the switch, refer to "Internet (IP) Service Features" on page 3-9.) The switch supports one inbound and one outbound Telnet session simultaneously.

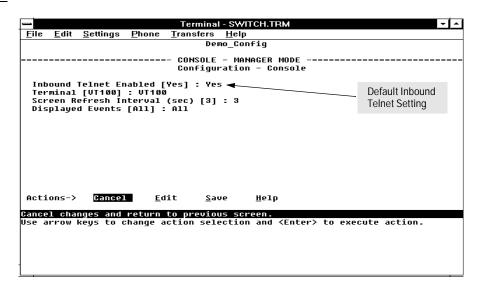


Figure 3-12. The Console Configuration Screen (Default Values)

### **Network Monitoring Port Features**

Lets you designate a port for monitoring traffic on one or more other ports or on a VLAN configured on the switch. This is accomplished by copying all traffic from the specified ports or VLAN to the designated monitoring port.

Note

If Automatic Broadcast Control (ABC) is configured and more than one port is being monitored, then broadcast packets may be duplicated on the monitor port.

**How To Configure for Monitoring:** This procedure describes configuring the switch for monitoring when monitoring is disabled. (*If monitoring has already been enabled, the screens will appear differently than shown in this procedure.*)

- 1. Select Network Monitoring Port from the Configuration screen.
- 2. In the Actions menu, press E (for Edit).
- 3. If monitoring is currently disabled (the default) then enable it by pressing the Space bar (or  $\boxed{Y}$ ) to select Yes.

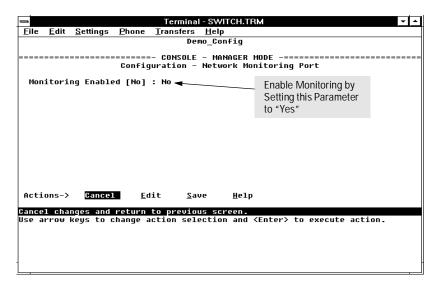


Figure 3-13. The Default Network Monitoring Configuration Screen

4. Press ↓ to display a screen similar to the following and move the cursor to the Monitoring Port parameter.

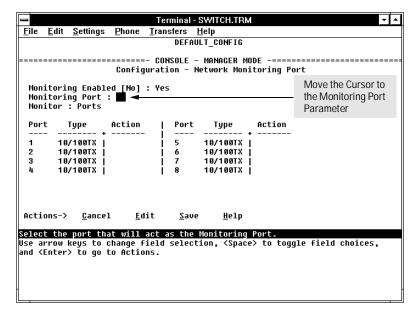


Figure 3-14. Example of Selecting a Monitoring Port

- 5. Press the Space bar to select which port to use for the monitoring port, then press \( \bar{\psi} \) to move to the Monitor parameter. (The default setting is Ports, which you will use if you want to monitor one or more individual ports on the switch.)
- 6. Do one of the following:
  - If you want to monitor individual ports, leave the Monitor parameter set to Ports and press \( \bar{\psi} \) to move the cursor to the Action column for the individual ports. Press the Space bar to select Monitor for each port that you want monitored. (Use \( \bar{\psi} \) to move from one port to the next in the Action column.) When you are finished, press \( \bar{\mathbb{Enter}} \), then press \( \bar{\mathbb{S}} \) (for Save) to save your changes and exit from the screen.
  - If, instead of individual ports, you want to monitor all of the ports in a VLAN, press the Space bar to select VLAN in the Monitor parameter, then press \(\bigcup\) to move to the VLAN parameter (figure 3-15). Then press the Space bar again to select the VLAN that you want to monitor. When you are finished, press \(\bigcup\_{\text{Inter}}\), then press \(\bigcup\) (for Save) to save your changes and exit from the screen.
- 7. Return to the Main Menu.

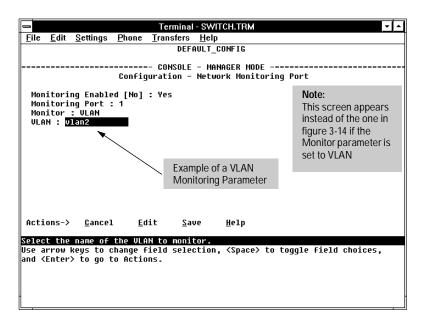


Figure 3-15. Example of Selecting a VLAN to Monitor

Note

It is possible in networks with high traffic levels to copy more traffic to a monitor port than the link can support. In this situation, some packets may not be copied to the monitor port.

### **Spanning Tree Features**

Enables you to activate the IEEE 802.1d Spanning Tree Protocol (STP) and to adjust spanning tree parameters. In the factory default, STP is off. Thus, if there are any redundant paths (loops) between nodes in your network, you should set the Spanning Tree Enabled parameter to Yes. This ensures that all redundant ports (those providing backup parallel connections) are in a blocking state and not used to forward data. In the event of a topology change such as a switch, bridge, or data link failure, STP develops a new spanning tree that may result in changing some ports from the blocking state to the forwarding state.

If VLANs are configured, then you can configure STP separately for each VLAN.

### Caution

Because the switch automatically gives faster links a higher priority, the default STP parameter settings are usually adequate for spanning tree operation. Because incorrect STP settings can adversely affect network performance, you should avoid making changes without having a strong understanding of how STP operates. For more on STP, refer to chapter 7, "Advanced Concepts", and examine the IEEE 802.1d standard.

The switch automatically senses port identity and type, and automatically defines port cost and priority for each type. The interface allows you to adjust the Cost and Priority for each port, as well as the global STP parameter values for the switch.

To configure STP, refer to "Spanning Tree Protocol (STP)" on page 7-2.

### **Traffic/Security Filter Features**

Enables you to control traffic and increase network security by creating filters based on any of the following criteria:

- Multicast address
- Source port only
- Source MAC address and source port
- Protocol frame type
  - IP (Ethernet or 802.3 SAP)
  - ARP
  - DEC LAT
  - AppleTalk
  - SNA
  - NetBIOS
  - IPX (Ethernet or 802.3 SAP)
  - VINES IP or ECHO

If you are using VLANs, they will affect source port and source MAC filter configuration. For more information on filtering, using filters with VLANs, and configuring filters, refer to "Filters and Security" on page 7-8.

## Automatic Broadcast Control (ABC) Features—Layer 3 Switching

ABC reduces the amount of IP and/or IPX broadcast traffic on a network by enabling the switch to serve as a proxy for the ultimate destination of broadcast IP ARP and RIP packets, and IPX NSQ, and RIP or SAP packets. This reduces the number of ports over which IP and/or IPX broadcasts are sent, increases the amount of network bandwidth available for other purposes, and can reduce the need for routers within a network. These factors can lower costs and reduce latency in the network. (While communication between VLANs—broadcast domains—still requires a router, ABC functions within VLANs and, by using multiple subnets per VLAN (multi-netting), can reduce or eliminate the need for routers within the VLAN.)

When enabled, ABC also allows you to set the broadcast limit parameter (Bcast Limit) in the Port Configuration screen (figure 3-5) for all ports on the switch (or all ports on the VLAN, if VLANs are configured and ABC is enabled for the VLAN).

In the factory default state, ABC is disabled. For more information on ABC and how to configure it, refer to "Automatic Broadcast Control (ABC)" on page 7-30.

# Monitoring and Analyzing Switch Operation from the Console

## Overview

The Main Menu in the switch's console interface gives you access to the following sources of read-only data for helping you to monitor, analyze, and troubleshoot switch operation:

Table 4-1. Read-Only Monitoring and Analyzing Features

Main Menu Item	Data Type	Purpose
Status and Counters Menus	Switch Information	Lists switch-level operating information.
	Port Status	Displays the operational status of each port.
	Port Counters	Summarizes port activity.
	Address (forwarding) Table	Lists the MAC addresses of nodes the switch has detected on the network, along with the corresponding switch port.
	Port Address Table	Lists the MAC addresses that the switch has learned from the selected port.
	Spanning Tree Information	Lists Spanning Tree data for the switch and for individual ports. If VLANs are configured, reports on a per-VLAN basis.
	IP Multicast (IGMP) Status	Lists IGMP groups, report, query, and type of device access on ports. If VLANs are configured, reports on a per-VLAN basis.
	Automatic Broadcast Control (ABC) Information	If VLANs are configured, reports on a per-VLAN basis.
Event Log		Lists event messages generated by the switch.

### Status and Counters Menu

Select Status and Counters from the Main Menu to display the Status and Counters menu:

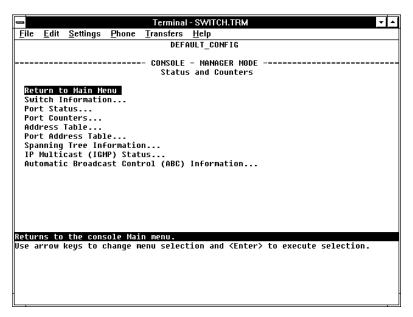


Figure 4-1. The Status and Counters Menu

Each of the above menu items accesses the read-only screens described on the following pages. Refer to the online help for a description of the entries displayed in these screens.

Note

Spanning Tree, IP Multicast (IGMP), and Automatic Broadcast Control (ABC) are reported on a per-VLAN basis. For these features you will be prompted to select a VLAN if multiple VLANs are configured.

### **Switch Information**

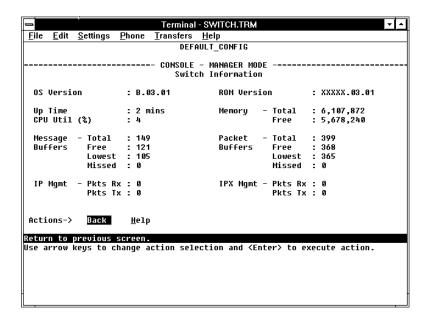


Figure 4-2. Example of Switch Information

This screen tells you which version of the OS (operating system) and ROM (low-level startup code located in read-only memory) the switch is using, and dynamically indicates how individual switch resources are being used.

### **Port Status**

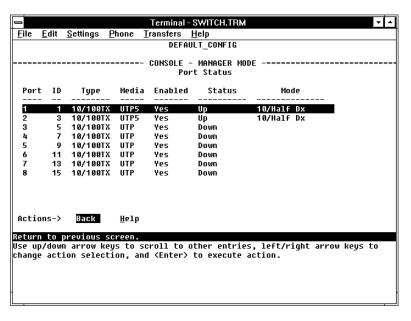


Figure 4-3. Example of Port Status

For each port, this screen tells you the type of port and media, whether the port is enabled and up or down, and the port's operating mode. (Included is the port ID number to use for SNMP MIB access.)

### **Port Counters**

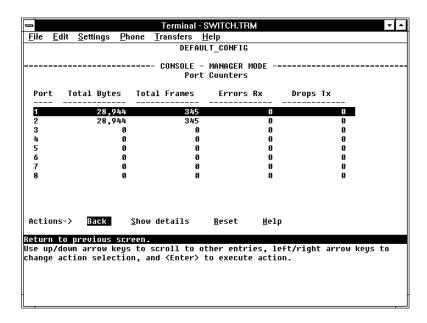


Figure 4-4. Example of Port Counters

This screen enables you to determine the traffic patterns for each port. Port Counter features include:

- Dynamic display of counters summarizing the traffic on each port since the last reboot or reset
- Option to reset the counters to zero (for the current console session). This is useful for troubleshooting. Refer to the Note, below.
- An option to display the link status, MAC address, and further port activity details for a specific port ( Show details ).

### Note

The Reset action resets the counter display to zero for the current session, but does not affect the cumulative values in the actual hardware counters. (In compliance with the SNMP standard, the values in the hardware counters are not reset to zero unless you reboot the switch.) Thus, using the Reset action resets the displayed counters to zero for the current session only. Exiting from the console session and starting a new session restores the counter displays to the accumulated values in the hardware counters.

To view the elements that comprise the traffic on a particular port, highlight that port number (figure 4-4), then select Show details. For example, selecting port 1 displays a screen similar to figure 4-5, below.

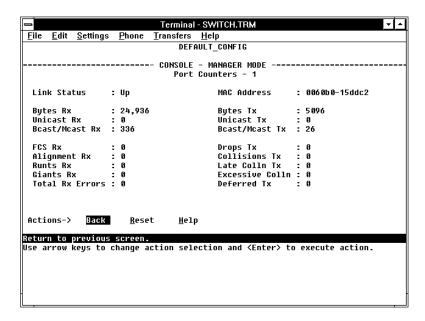


Figure 4-5. Example of the Display for Show details on a Selected Port

This screen also includes the Reset action. Refer to the note on page 4-5.

### **Address Table**

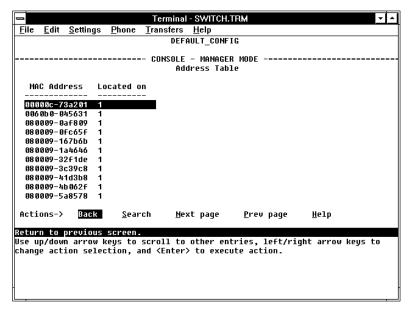


Figure 4-6. Example of the Address Table

This screen lets you easily determine which switch port is being used to access a specific device on the network. The listing includes:

- The MAC addresses that the switch has learned from network devices attached to the switch
- The port on which each MAC address was learned

You can use the  $\underline{S}$ earch action at the bottom of the screen to locate a specific device (MAC address).

### Port Address Table

This screen lets you easily determine which devices are attached to the selected switch port by listing all of the MAC addresses detected on that port.

You can use the <u>Search</u> action at the bottom of the screen to determine whether a specific device (MAC address) is connected to the selected port.

### To use the port address table:

 Select Port Address Table from the menu in the Status and Counters screen.

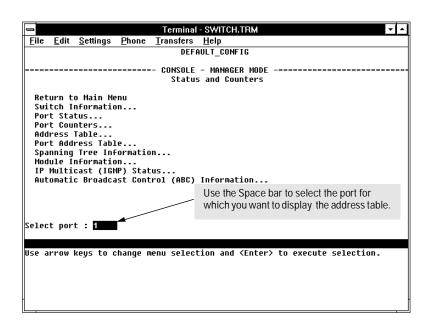


Figure 4-7. Example of How To Access the Port Address Table

2. When the Select Port prompt appears, press the Space bar to display the port you want to examine, then press Enter. (See figure 4-7, above.)

Each port is identified by the sequential port numbers on the front of the switch.

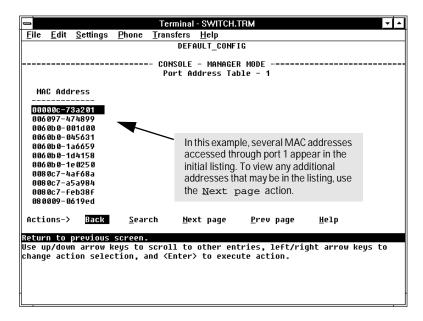


Figure 4-8. Example of a Port Address Table for a Specific Port

### Spanning Tree (STP) Information

Note

If multiple VLANs are configured on the switch, you will be prompted to select a VLAN (by using the Space bar, then pressing [Enter]) to display this screen.

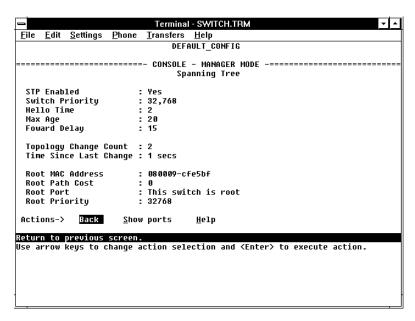


Figure 4-9. Example of Spanning Tree Information

Use this screen to determine current switch-level STP parameter settings and statistics.

You can use the <u>Show ports</u> action at the bottom of the screen to display port-level information and parameter settings for each port in the switch (including port type, cost, priority, operating state, and designated bridge).

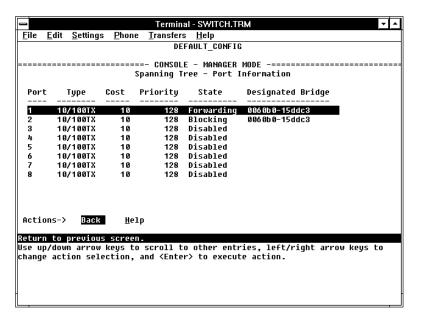


Figure 4-10. Example of STP Port Information

### Caution

Because incorrect STP settings can adversely affect network performance, you should avoid making changes without having a strong understanding of how STP operates. For more on STP, refer to "Spanning Tree Protocol (STP)" on page 7-2.

### IP Multicast (IGMP) Status

Note

If multiple VLANs are configured on the switch, you will be prompted to select a VLAN (by using the Space bar, then pressing [Enter]) to display this screen.

This screen identifies the active IP multicast groups the switch has detected, along with the number of report packets and query packets seen for each group. It also indicates which port is used for connecting to the querier.

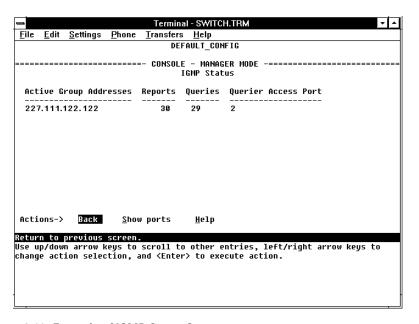


Figure 4-11. Example of IGMP Status Screen

You can also display the port status of the individual multicast groups. (That is, you can display the ports, port types, and whether the IGMP devices connected to the switch via the port are hosts, routers, or both.) To do so, select the group from the above screen and press S for show ports. For example, suppose you wanted to view the status of the IP multicast group 227.111.122.122 shown in the above screen. You would highlight the row beginning with that group number, then press S. You would then see a screen similar to the following:

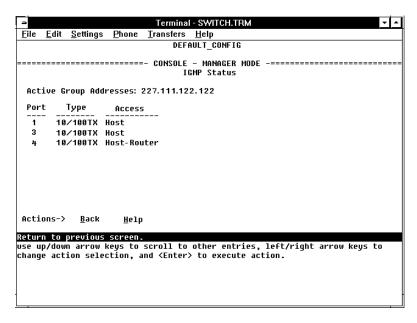


Figure 4-12. Example of an IGMP Status Screen for a Selected Multicast Group

### **Automatic Broadcast Control (ABC) Information**

Note

If multiple VLANs are configured on the switch, you will be prompted to select a VLAN (by using the Space bar, then pressing Enter) to display this screen.

This screen displays the number of IP ARP and IPX NSQ replies sent per port and whether RIP and SAP packets are being forwarded or not forwarded per port. If VLANs are configured, this data is on a per-VLAN basis.


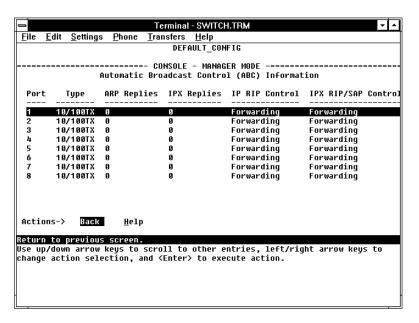


Figure 4-13. Example of Automatic Broadcast Control (ABC) Screen

## **Event Log**

 The Event Log records operating events as single-line entries listed in chronological order. Each entry is composed of five fields:



*Severity* is one of the following codes:

- I (information) indicates routine events.
- W (warning) indicates that a service has behaved unexpectedly.
- C (critical) indicates that a severe switch error has occurred.
- D (debug) reserved for HP internal diagnostic information.

Date is the date in mm/dd/yy format that the entry was placed in the log.

*Time* is the time in *hh:mm:ss* format that the entry was placed in the log.

*System Module* is the internal module (such as "ports" for port manager) that generated the log entry. If VLANs are configured, then a VLAN name also appears for an event that is specific to an individual VLAN.

Event Message is a brief description of the operating event.

**Entering and Navigating in the Event Log Display.** To enter the event log, select Event Log from the Main menu.

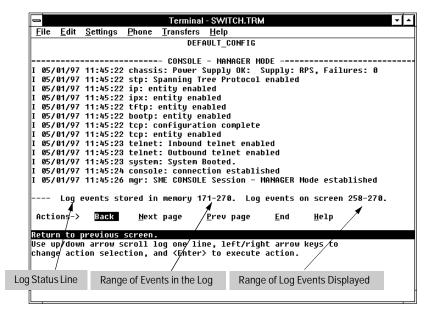


Figure 4-14. Example of an Event Log Display

To display various portions of the Event Log, either preceding or following the currently visible portion, use either the actions listed at the bottom of the display (Next page, Prev page, or End), or the keys described in the following table:

Table 4-2. Event Log Control Keys

Key	Action
N	Advance the display by one page (next page).
P	Roll back the display by one page (previous page).
$\downarrow$	Advance display by one event (down one line).
$\uparrow$	Roll back display by one event (up one line).
E	Advance to the end of the log.
H	Display Help for the event log.

The event log holds up to 100 lines in chronological order, from the oldest to the newest. Each line consists of one complete event message. Once the log has received 100 entries, it discards the current oldest line each time a new line is received. The event log window contains 20 lines and can be positioned to any location in the log.

The log status line at the bottom of the display identifies where in the sequence of event messages the display is currently positioned.

The event log will be erased if any of the following occurs:

- The switch is reset using the Reset button.
- Power to the switch is interrupted.
- A new operating system is downloaded to the switch.

(The event log is not erased by using the Reboot Switch command in the Main Menu.)

## Using SNMP To Monitor and Manage the Switch

You can manage the switch via SNMP from a network management station. (The switch supports SNMP v1 and SNMP v2c, except as noted below for SNMP v2 Notifications.) If you are using IP, you must either configure the switch with the appropriate IP address or, if you are using Bootp to configure the switch, ensure that the Bootp process provides the IP address. (The IPX address is automatically configured.) If multiple VLANs are configured, each VLAN interface should have its own IP or IPX network address. This chapter provides an overview of SNMP management for the switch and describes the configuration process for the various features. For parameter-specific information, refer to the Help provided in the individual configuration screens.

## **SNMP Management**

SNMP management features on the switch include:

- Security via configuration of SNMP communities
- Event reporting via SNMP traps and RMON (SNMP v2 Notifications are not supported at this time.)
- Managing the switch with a network management tool such as HP AdvanceStack Assistant
- Monitoring data normally associated with the SNMP agent ("Get" operations). Supported *Standard* MIBs include:
  - Bridge MIB (RFC 1493)
  - Etherlike MIB (RFC 1650)
  - Ethernet MAU MIB (RFC 1515)
  - Interfaces Evolution MIB (RFC 1573)
  - Novell Standard IPX MIB (ipx.mib)
  - RMON MIB (RFC 1757)—etherstats, events, alarms, and history
  - SNMP MIB-II (RFC 1213)

### HP Proprietary MIBs include:

- Statistics for message and packet buffers, tcp, telnet, and timep (netswtst.mib)
- Port counters, forwarding table, and CPU statistics (stat.mib)
- tftp download (downld.mib)
- 802.12 (100VG) information (vg.mib)
- Integrated Communications Facility Authentication Manager and SNMP communities (icf.mib)
- HP AdvanceStack Switch 800T configuration (config.mib)
- HP VLAN configuration information (vlan.mib) supporting hpVlanGeneralGroup
- HP EASE MIB version 4 to allow EASE sampling
- HP Linktest MIB for basic device management (linktest.mib)
- HP ICF Linktest MIB for link test features (icfbasic.mib)

The switch SNMP agent also uses certain variables that are included in a Hewlett-Packard proprietary MIB file you can add to the SNMP database in your network management tool. You can copy the MIB file from the compact disk (CD) shipped with the switch, or from following World Wide Web site:

http://www.hp.com/go/network\_city

For more information, refer to the card at the front of this manual.

## **SNMP Configuration Process**

The general steps to configuring for SNMP access to the preceding features are:

- 1. From the Main menu, select Configuration.
- 2. Enable and configure an IP address for the switch, including any necessary gateways. An IPX address is automatically configured. (For more on configuring IPX and IP, refer to page 3-7 and page 3-9.)
- 3. Configure the appropriate SNMP communities. (The "public" community exists by default and is used by HP's network management applications.) (For more on configuring SNMP communities, refer to page 3-13.)
- 4. Configure the appropriate trap receivers. (For more on configuring trap receivers, refer to page 3-15.)

In many networks, manager addresses are not used. In this case, all management stations using the correct community name may access this device with the View and Access levels that have been set for that community. If you want to restrict access to one or more specific nodes, you can enter up to 10 IP and/or IPX addresses of such nodes into the Manager Address field. Configuring one or more IP or IPX addresses in the Manager Address field means that only the network management stations at those addresses are authorized to use the community name to access the switch.

### Caution

Deleting the community named "public" disables many network management functions (such as auto-discovery, traffic monitoring, and threshold setting). If security for network management is a concern, it is recommended that you change the write access for the "public" community to "Restricted".

### Note

SNMP community and trap receiver configurations are activated when saved. Rebooting the switch is not necessary unless you have also configured other parameters that require rebooting in order to be activated. (For more on when it is necessary to reboot, refer to "Rebooting the Switch" on page 2-10.)

## **Using the Advanced Commands**

## Overview

The Advanced Commands , which are accessed from the Main Menu, gives you access to the following system management commands:

- Help
- Date
- Time
- History
- Ping
- IpxPing
- LinkTest
- Telnet
- VLAN
- ClearLED
- Config
- Delete
- GetMIB
- SetMIB
- WalkMIB
- Exit
- Get/Put (TFTP)
- ZGet/ZPut (ZMODEM)
- Version
- Log
- Repeat
- Page
- Print
- Redo

### **How To Use the Command Prompt:**

1. To access the command prompt, use the arrow keys to highlight Advanced Commands in the Main Menu and press [Enter].

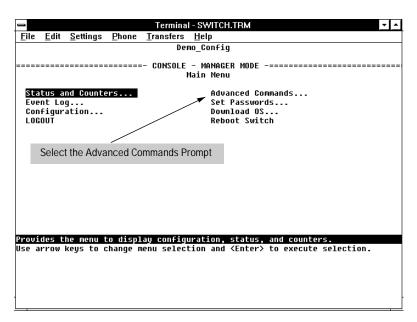


Figure 6-1. Selecting the Command Prompt

- 2. Do the following:
  - If there are no VLANs (virtual LANs) configured, go to step 3.
  - If VLANs are configured, the prompt displays the name of the default, or first VLAN, then asks you to select the VLAN in which to operate. Use the Space bar to select the VLAN in which you want to operate, then press Enter.
- 3. The command prompt appears near the bottom of the screen. The text in the prompt matches the System Name parameter. (If there are multiple VLANs configured, then the text in the prompt matches the name of the VLAN in which the command prompt is operating.) For example, in the factory default configuration (no system name or VLANs configured), the command prompt looks like this:

```
DEFAULT CONFIG:
```

4. Type in the command you want to execute and press Enter. For example, to set the time to 9:55 a.m. you would execute the following command:

```
DEFAULT CONFIG: time 9:55 Enter
```

### **How To Exit from the command prompt:**

Type exit and press Enter to return to the Main Menu.

### **How To List Available Commands:**

At the command prompt, type h and press Enter.

When you see — MORE — at the bottom of the screen:

- To advance the display one line at a time, use [Enter].
- To advance the display one screen at a time, use the Space bar.

**How To Stop the Help Listing:** Press Q.

## Commands

To execute any of these commands, select Advanced Commands from the Main Menu, type the command, and press [Enter].

### **Conventions:**

- Commands are shown in the normal typeface.
- Required parameters are shown in italics.
- Optional parameters are shown in italics, with brackets ( [...]).For example:

Command	Required Parameters	Optional Parameters
ping	ip-addr	[repetitions] [timeout]

Command Syntax	Description
H (help)	Lists the commands available at the command prompt.
date [mm/dd/yy]	Without parameters, displays the date and time currently held by the switch. With parameters in the month/date/year format, resets the date.
time [hh:mm:ss]	Without parameters, displays the date and time currently held by the switch. With parameters in the hours:minutes:seconds format, resets the time.
history	displays the times and reasons for the last four occasions on which the switch was rebooted or restarted.
ping ip-addr [repetitions] [timeout]  where:     ip-addr is the IP address of the target node in dotted decimal notation.  repetitions is the number of times to repeat the echo request. Default: send packet once.	Sends an Internet Control Message Protocol (ICMP) echo request message to a specific IP address, as a network-layer test of the reachability of the node. Ping does not support loopback (pinging this switch) or broadcast addresses. The switch must have IP configured. After transmitting the request message to the node, the switch waits for a response. If it is received within the specified or default timeout interval, the console displays a message indicating that the target is "alive". If an echo response is not received within the specified or default timeout interval, the console displays a message indicating that the target did not respond.  VLANs: If multiple VLANs are configured, the Ping command sends requests
timeout is how many seconds to wait for a response. Default: 5 seconds.	to the ports in the VLAN environment specified when the command prompt was selected.

Command Syntax	Description
ipxping ipx-addr [repetitions] [timeout] [size] where: ipx-addr is the IPX address of the target node in this format: network number :mac address	Sends an IPX echo request message to a specific IPX address, as a network-layer test of the reachability of the node. The switch must have IPX enabled. After transmitting the request message to the node, the switch waits for a response. If it is received within the specified or default timeout interval, the console displays a message indicating that the target is "alive". If an echo response is not received within the specified or default timeout interval, the console displays a message indicating that the target did not respond.
repetitions is the number of times to repeat the echo request. Default: send packet once.	<b>VLANs:</b> If multiple VLANs are configured, ipxping sends requests to the ports in the VLAN environment specified when the command prompt was selected
timeout is how many seconds to wait for a response. Default: 5 seconds.	
size is the size in bytes of the data to be sent. Default: 40 bytes.	
where:  mac_addr is the MAC address of the target node in 12-character hexadecimal format.  count is the number of test	Verifies communication to a MAC address on the LAN. Sends an 802.2 Test Packet to a specific target node on a network in the VLAN environment specified in the command prompt. The target node must be able to respond to an 802.2 Test Packet with an 802.2 Test Response packet in order for the test to work. (HP managed hubs, bridges, routers, and switches automatically respond to 802.2 Test Packets. Most HP LAN adapters can be configured to operate as a responder.
packets to send. Default: 1 packet  delay is how many seconds to wait for a response to each packet. Default: 2 seconds.	<b>VLANs:</b> If multiple VLANs are configured, the linktest command sends requests to the nodes in the VLAN environment specified when the command prompt was selected.
telnet ip-addr where: ip-addr is the IP address of the target node in dotted decimal notation.	Used to establish a Transmission Control Protocol (TCP) virtual terminal connection to a remote node, allowing you to interact with the remote node's interface. IP must be configured, and the remote node must have Telnet service enabled. The Switch 800T supports one inbound and one outbound Telnet session. In the factory default configuration, the Inbound Telnet Enabled parameter is set to Yes. (To change the Inbound Telnet Enabled parameter, use the Console configuration screen, which is accessed from the Configuration screen selected from the Main Menu.) Outbound Telnet is always enabled. To exit from an inbound Telnet session, select Logou't from the Main menu and answer the confirmation prompt by typing y. To exit from an HP router, another Switch 800T, a Switch 2000, or a UNIX login, press Ctrl D. To force a disconnection from any device, use Ctrl R. To interrupt command processing without halting an outbound Telnet session, use Ctrl C.

Command Syntax	Description		
vlan vlan_name where: vlan_name is the name of the virtual LAN you want to access.	Used where VLANs are configured. Used to select a different VLAN environment in which to execute Command Prompt commands. The command prompt will change to show the VLAN name specified by the <i>vlan_name</i> parameter.		
clearled	Turns off the Security LED on the front panel of the Switch 800T.		
config	Displays the configuration currently saved in flash memory. When — MORE — is displayed, pressing Enter displays the next line of the configuration, and pressing the Space bar displays the next screen of the configuration. To halt a config listing and return to the command line prompt, press Q.		
delete	Deletes the configuration file currently in use, returns the switch to its factory default configuration, and reboots the switch.		
getmib objectname.index	Retrieves the value of an individual MIB object in the switch.		
where:  objectname identifies the MIB object by name or number format.	Example: The following command returns the enable/disable status for a pohaving a port ID of 1. (For an example of port ID numbering, see the example of the Port Status screen on page 4-4.)		
index identifies the instance of each object name.	getmib ifAdminStatus.1		
setmib objectname.index type value	Sets a MIB object to a specific value. Valid types are:		
where: objectname identifies the MIB object by name or number format.  index identifies the instance of each object name.			
type  value identifies the numeric value for the MIB object.	-i (integer) -g (gauge) -o (octet) -t (time_ticks) -d (object identifier) -u (unsigned integer 32) -a (ip_addr) -D (Display String) -c (counter) -N (NULL)		
	Example: This command sets port 1 to disabled status.		
	setmib ifAdminStatus.1 -i 2		

Command Syntax	Description
walkmib <i>objectname</i>	Retrieves the MIB subtree for the specified MIB object. When — MORE — is displayed, pressing [Enter] displays the next line of the configuration, and pressing the Space bar displays the next screen of the configuration. To halt a walkmib listing and return to the command line prompt, press [Q].
	Examples: walkmib ifSpeed displays the speed for each port installed in the switch. walkmib ifPhysAddress displays the MAC address of each port installed in the switch.
exit	Returns you to the Main Menu.
get ip-addr config filename get ipx-addr config filename where:	Uses TFTP to transfer a configuration from a TFTP server on an attached network. The switch must have IP or IPX configured, and the configuration must have been previously transferred from a switch to the file server. TFTP must be enabled on the server.
<pre>ip_addr or ipx-addr is the IP or IPX address of the file server.</pre>	Progress of the transfer, plus successful or unsuccessful completion of the transfer are indicated in the Event Log.
filename is the directory path and name of the file containing the configuration.	<b>Note:</b> After transferring a configuration to the switch, the switch automatically reboots to invoke the new configuration.
put ip-addr object filename put ipx-addr object filename where: ip_addr or ipx-addr is the IP or IPX	Uses TFTP to transfer a configuration, a "crash record", or the output of a command from the switch to a file on a remote host. The switch must have IP or IPX configured. TFTP must be enabled on the remote host. The target file on the remote host must also exist and have write permissions. A command used as an <i>object</i> must have an output that can be stored in a file.
address of the remote host.  object is config, crashrec, or a command that generates an output	Progress of the transfer, plus successful or unsuccessful completion of the transfer are indicated in the Event Log.
that can be stored in a file.  filename is the directory path and name of the configuration file on the remote host.	<b>Note:</b> When the switch reboots itself due to an internal error, a "crash record" (crashrec) is generated. This is a binary file holding internal data needed to troubleshoot the cause of the internal error.
zget CONFIG [remote-file] [dos/unix] where:     remote-file is a file name on the console PC.	Copies a switch configuration from a file on the console PC to the switch. The PC must be emulating a VT100 or ANSI terminal. Also, the PC must be running a Zmodem-compatible terminal emulation program such as PROCOMM PLUS.
dos = 0 (specifies DOS format) unix = 1 (specifies unix format)	

Command Syntax	Description		
zput file remote-file overwrite dos/unix where:     file is CONFIG or a command.     remote-file is a file name on the     console PC.     overwrite is:         0 (don't overwrite a file of the         same name).         1 (create or overwrite a file of         the same name).         dos = 0 (specifies DOS format)         unix = 1 (specifies unix format)	Copies a switch configuration from the switch to the console PC. The PC must be emulating a VT100 or ANSI terminal. Also, the PC must be running a Zmodem-compatible terminal emulation program such as PROCOMM PLUS.		
Version	Displays the version of operating system (OS) software currently running in the switch.		
log [-a] '[keywrd]		Displays the event log.  (Press the Space bar when prompted by the MORE message.)	
	Examples:		
	log	Displays 100 lines of the current event log, since the last reboot.	
	log -a	Displays the entire event log.	
	log -a 'telnet	Displays all event log lines containing the keyword "telnet"	
	log 'telnet	Displays any event log lines, since the last reboot, of the current log that contain the keyword "telnet".	
! [repetitions]	Repeat the last	command.	
	Examples:		
	! Repeats	the last command once.	
	! 3 Repeats	the last command three times.	
Repeat	Continuously repeats the last command until a key is pressed on the console		
Page	Toggles paging mode for display commands.		
Print	Send the output of a Command Prompt command to a printer or to a file.		
Redo [?] / [number] / [string]	Display or redo	a command from the command history.	
	Examples:		
	•	Re-executes the most recent command.	
		Causes the last ten commands to be listed.	
		Re-executes the previous <i>n</i> th command (1-10).	
	Redo <i>string</i>	Re-executes a previous command that begins with the text $\emph{string}.$	

## **Advanced Concepts**

## Overview

The switch provides support for these advanced features:

- Spanning Tree Protocol—STP (page 7-2)
- Port trunking (page 7-5)
- Filtering for enhanced bandwidth usage and in-band security (page 7-8)
- Virtual LANs—VLANs (page 7-14)
- IP Multicast—IGMP (page 7-23)
- Automatic Broadcast Control—ABC (page 7-30)

## Spanning Tree Protocol (STP)

The switch uses the IEEE 802.1d Spanning Tree Protocol (STP) to ensure that only one path at a time is active between any two nodes on the network. In networks where there is more than one physical path between any two nodes, STP ensures a single active path between them by blocking all redundant paths. STP is necessary in such networks because having more than one path between a pair of nodes causes loops in the network, which can result in a switch detecting the same node on more than one port. This results in duplication of messages, leading to a "broadcast storm" that can bring down the network.

### Note

The default STP setting in the Switch 800T is "Off". If you are using the switch to provide redundant links, you should reconfigure the Spanning Tree Protocol to "On". Also, when multiple VLANs are configured, you must enable STP separately for each VLAN in which you want spanning tree to operate.

While allowing only one active path through a network at any time, STP retains any redundant physical path to serve as a backup (blocked) path in case the existing active path fails. Thus, if a active path fails, STP automatically activates (unblocks) an available backup to serve as the new active path for as long as the original active path is down. For example:

- Active path from node A to node B: 1-> 3
- Backup (redundant) path from node A to node B: 4 --> 2 --> 3

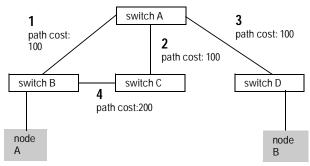


Figure 7-1. Example of Logical and Redundant Paths Between Two Nodes

**How To Configure Spanning Tree:** In most cases, the default STP parameter settings are adequate. In cases where it is not, use this procedure to make configuration changes.

### Caution

If you enable STP (step 5), it is recommended that you leave the remainder of the STP parameter settings at their default values until you have had an opportunity to evaluate STP performance in your network. Because incorrect STP settings can adversely affect network performance, you should avoid making changes without having a strong understanding of how STP operates. To learn the details of STP operation, refer to the IEEE 802.1d standard.

- 1. From the Main menu, select Configuration.
- 2. In the Configuration screen, select Spanning Tree.
- 3. If multiple VLANs are configured, select the VLAN in which you want to configure STP. If multiple VLANs are not configured, skip this step.
- 4. Select Edit to highlight the STP Enabled parameter.
- 5. Press the Space bar to select Yes. (This enables STP.)

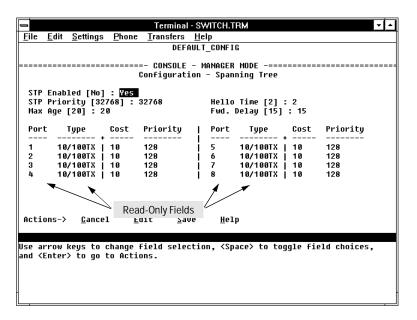


Figure 7-2. Example of the STP Configuration Screen with Ethernet Modules Installed in the Switch

- 6. If the remaining STP parameter settings are adequate for your network, go to step 9.
- 7. Use Tab or the arrow keys to select the next parameter you want to change, then type in the new value. (If you need information on STP parameters, press Enter to select the Actions line, then press H to get help.)
- 8. Repeat step 7 for each additional parameter you want to change.
- 9. When you are finished editing parameters, press Enter to return to the Actions line.
- 10. Press sto save the currently displayed STP parameter settings and return to the Configuration menu.
- 11. When you are finished configuring the switch, return to the Main Menu.

# **Port Trunking**

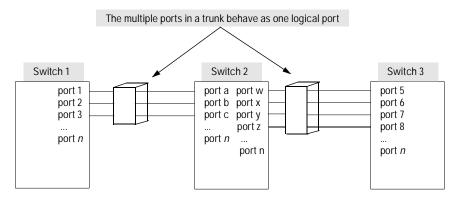


Figure 7-3. Conceptual Illustration of Port Trunking

Port trunking is used to allow up to four ports to be connected together to function as a single, higher-speed port to connect to another Hewlett-Packard switch designed for port trunking. This enables speeds of up to 400 Mbit/s in a 100Base-T trunk. On the Switch 800T you can implement up to four port trunks, and on the B-version of the Switch 2000 (J3100B), you can implement up to six port trunks, which enables either switch to function as a high-speed backbone. (The Switch 800T actually allows up to six port trunks to be configured. However, because by definition, a port trunk requires at least two ports, the eight-port Switch 800T physically allows a maximum of four trunks.) The A-version of the Switch 2000—J3100A—allows only one port trunk, but can be trunked to other Hewlett-Packard switches that support port trunking.

Traffic distribution over the trunk ports is determined when packets arrive with new source MAC addresses. Each new address is assigned to a trunk port in a sequential way that distributes the source addresses evenly over the trunk.

The switch sends broadcast, multicast, and flooded traffic over only one port within the trunk in order to prevent a broadcast loop. (The switch automatically determines which port to use.)

### Note

Using more than one media type and/or link speed in a port trunk is not supported. The console interface allows only links of the same media type within the same trunk. Similarly, it is recommended that all links in the same trunk have the same speed. You should also apply these rules when using a network management application to configure a port trunk.

A configured trunk appears as a single port (labeled Trk1, Trk2...Trk6) on other configuration screens, such as the Spanning Tree and Port VLAN Assignment screens. Also, when assigning a port trunk to a VLAN, all ports in that trunk must be assigned to that same VLAN.

When trunks are used in conjunction with filters and port monitoring, if a port is removed from the trunk, the filters and port monitoring for that port are returned to their default configuration settings.

**How To Configure the Port Trunk:** Use the Ports Configuration screen to configure trunks.

- 1. From the Main menu, select Configuration.
- 2. In the Configuration menu, select Ports.
- 3. To assign a port to the trunk:
  - a. Select Edit.
  - b. Move the cursor to the Trunk column.
  - c. Select the row for a port you want in the trunk.
  - d. Press the Space bar to select the trunk you want. (To remove a port from a trunk, repeat the space bar until the trunk assignment is blank.)

For example, in the following screen, ports 1, and 2 have been assigned to trunk Trk1, and pors 7 and 8 have been assigned to trunk Trk2.:

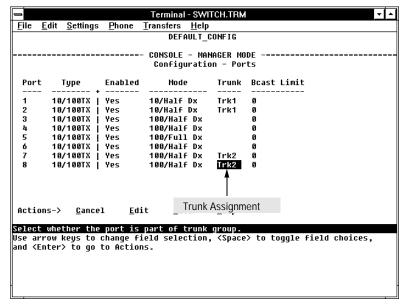


Figure 7-4. Example of Configuring a Port Trunk

- 4. To assign another port to the trunk, repeat steps 3c, and 3d.
- 5. When you are finished assigning ports to the trunk, press Enter, then S (for Save) to save the new port trunk configuration and return to the Configuration menu.
- 6. When you are finished configuring the switch, return to the Main Menu.

**To Remove a Port from the Trunk:** In step 3c, above, select the port you want to remove from the trunk. In step 3d, continue pressing the Space bar until the trunk assignment is blank.

# Filters and Security

To enhance the switch's bandwidth usage and in-band security, configure perport filters to forward desired traffic or drop unwanted traffic, as described below. The switch can support up to 50 filters.

Table 7-1. Filter Types and Criteria

Filter Type	Selection Criteria	
Multicast	Traffic having a specified multicast address will be forwarded or dropped on a per-port (destination) basis.	
Protocol	Traffic having the selected frame (protocol) type will be forwarded or dropped on a per-port (destination) basis.	
Source Port	Traffic from a designated source port will be forwarded or dropped on a per-port (destination) basis within the same VLAN.	
Source MAC	Traffic from a specified source MAC address and coming through a particular source port will be forwarded or dropped on a per-port (destination) basis within the same VLAN.	

**Multicast Filters.** This filter type enables the switch to send multicast traffic to a specified set of destination ports. This helps to preserve bandwidth by reducing multicast traffic on ports where it is unnecessary, and to isolate multicast traffic to enhance security.

### Note

IP multicast addresses occur in the range from 224.0.0.0 through 239.255.255.255. When IGMP is enabled, any Traffic/Security filters configured with a "Multicast" filter type and a "Multicast Address" within the above range are disabled and an event log message indicating this action is logged . That is, IGMP will control the IP multicast traffic flow and the Traffic/Security filter will control any multicast traffic that is not IP multicast. (Multicast addresses are entered in the "Traffic/Security Filters" screen as Ethernet addresses in the range of 01005e-000000 through 01995e-7fffff.)

If Spanning Tree is enabled, then the Spanning Tree multicast MAC address should not be filtered. (STP will not operate properly if the multicast MAC address is filtered.)

**Protocol Filters.** This filter type enables the switch to restrict traffic of a particular protocol type to a specific destination port or ports on the switch (or to be dropped for all ports on the switch). Filtered protocol types include:

- IP (Ethernet)
- IP (802.3 SAP)
- ARP
- DEC LAT
- AppleTalk
- SNA
- NetBIOS
- IPX (Ethernet)
- IPX (802.3 SAP)
- VINES IP
- VINES Echo

### Note

The switch provides filtering only for Ethernet and 802.3 format packets.

**Source Port Filters.** This filter type enables the switch to restrict traffic from *all* end nodes on the indicated source port to specific destination ports (or to be dropped for all destination ports on the switch). If VLANs are configured, the destination port must be in the same VLAN as the source port.

### Note

If more than one VLAN is configured, then the set of destination ports (Dest Port parameter) can consist of only the destination ports that are in the same VLAN as the source port.

**Source MAC Filters.** This filter type enables the switch to specify the port through which a node having a specified (source) MAC address can send traffic. Only ports that are selected are allowed to send and receive traffic for the specified node. For additional security, if traffic from the source MAC address appears on any port other than the selected one, the traffic from that source will be dropped and the Security LED on the front of the switch begins flashing. (To clear the Security LED, use the Advanced Command ClearLED command.)

### Note

If a node designated by the Source MAC parameter is moved to a different port than its original source port, any traffic to or from that node will not be forwarded by the switch. Forwarding will resume if the node is moved back to the original source port.

Traffic between ports *not* designated as a "Source Port" is not affected by the filter.

**How To Configure Traffic/Security Filters:** Use this procedure to specify the type of filters to use on the switch and whether to forward or drop filtered packets for each filter you specify. You can create up to fifty filters.

- 1. From the Main menu, select Configuration.
- 2. In the Configuration menu, select Traffic/Security Filters to display the following screen.

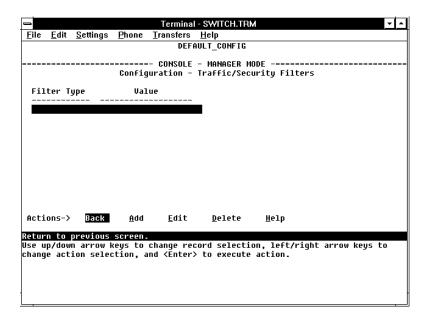


Figure 7-5. The Traffic/Security Filters List Screen (Default Values)

3. In the Actions line, press A (for Add) to display the Traffic/Security Filters Configuration screen shown in figure 7-6.

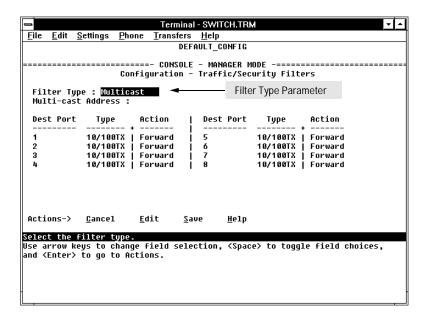


Figure 7-6. Example of the Traffic/Security Filters Configuration Screen

- 4. Press the Space bar to select the type of filter you want to configure. The options are:
  - Multicast (the default)
  - Protocol
  - Source Port
  - Source MAC
- 6. Press ↓ once to highlight the next line. Depending on the type of filter you selected in step 4, select one of the options listed in the following table:

Filter Type Option Selected in Step 4	NextLineforFilter Type Option	Action for Selected Filter Option
Multicast	Multicast Address	Type in the multicast address.
Protocol	Frame Type	Use the Space bar to select the frame type.
Source Port	Source Port	Use the Space bar to select the source port.
Source MAC	Source Port and Source MAC (address)	<ul> <li>a. Use the Space bar to select the source port.</li> <li>b. Press → to highlight the Source MAC parameter.</li> <li>c. Type the MAC address of the source device whose packets you want to filter.</li> </ul>

6. Configure the filter action for each destination port. For example:

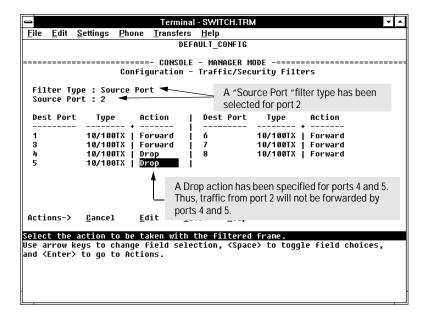


Figure 7-7. Example of Specifying Filter Actions for Individual Ports

- a. Press  $\bigvee$  to highlight the Action option for a destination port (Dest Port).
- b. Press the Space bar to select the filter action for that port (Forward filtered packets-the default-or Drop filtered packets).
- c. Do one of the following:
  - To configure the filter action for another destination port, return to step 6a.
  - If you are finished configuring actions for the current filter, go to step 7.
- 7. Press Enter to return to the Actions line, then press S (for Save) to save the current filter configuration.
- 8. Do one of the following:
  - If you want to configure another filter, return to step 3.
  - If you are finished configuring filters, press **B** (for <u>Back</u>) to return to the Configuration menu.
- 9. When you are finished configuring the switch, return to the Main Menu.

# Virtual LANs (VLANs)

The switch supports port-based virtual LANs (VLANs). A VLAN is a collection of ports that belong to a single broadcast domain. (That is, all ports carrying traffic for a particular subnet address would belong to the same VLAN.) This allows workgroups to be defined on the basis of their logical function instead of their physical location, and does not require recabling.

Port-based VLANs are typically used to enable broadcast traffic reduction and increased security. By using port groupings, traffic is isolated to specific domains. A group of network users assigned to a VLAN are a separate traffic domain so that packets are forwarded only between ports that are designated for the same VLAN. Cross-domain broadcast traffic is eliminated and bandwidth is saved by not allowing packets to flood throughout the network.

For example, if ports 1 through 4 belong to VLAN\_1 and ports 5 through 8 belong to VLAN\_2, traffic from end-node stations on ports 2 through 4 is restricted to only VLAN 1, while traffic from ports 5 through 7 is restricted to only VLAN 2. For nodes on VLAN\_1 to communicate with VLAN\_2, their traffic must go through an external router via ports 1 and 8.

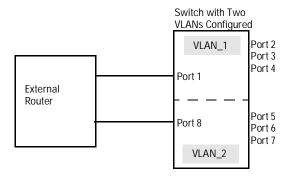


Figure 7-8. Example of Routing Between VLANs via an External Router

### Effect of VLANs on Other Switch Features

**IPX and IP Interfaces.** There is a one-to-one relationship between a VLAN and an IP or IPX network interface. Since the VLAN is defined by a group of ports, the state (up/down) of those ports determines the state of the IP or IPX network interface associated with that VLAN. When a VLAN comes up because one or more of its ports is up, the IP or IPX interface for that VLAN is also activated. Likewise, when a VLAN is deactivated because all of its ports are down, the corresponding IP or IPX interface is also deactivated.

**VLAN MAC Addresses.** The switch has one unique MAC address for each of its VLAN interfaces. You can send an 802.2 test packet to this MAC address to verify connectivity to the switch. Likewise, you can assign an IP address to the VLAN interface, and when you Ping that address, ARP will resolve the IP address to this MAC address. (For IPX networks, each VLAN interface is automatically assigned a node address that is equivalent to the MAC address for that VLAN interface.) The switch allows up to eight VLAN MAC addresses (one per possible VLAN). If STP is enabled for a VLAN, the Spanning Tree source MAC address in the STP configuration BPDU packets for the VLAN will be the VLAN MAC address itself.

### Note

If multiple VLANs are configured on the switch, you will need to configure a separate instance of Spanning Tree for each VLAN in which you want Spanning Tree to operate.

**Port Trunks.** When assigning a port trunk to a VLAN, all ports in the trunk must be assigned to the same VLAN. You cannot split trunk members across multiple VLANs.

**Port Monitoring.** If you designate a port on the switch for network monitoring, this port will not appear in the Port VLAN Assignment screen and cannot be configured as a member of any VLAN.

**VLANs Spanning Multiple Switches.** It is possible to have ports on more than one switch that are members of the same VLAN. Switches having VLANs that cross multiple switches must be interconnected by one link per VLAN. For example, if VLAN A and VLAN B span two switches, the switches must be interconnected by two independent links; one for VLAN A and one for VLAN B. This concept is illustrated in figure 7-9 on the next page.

**Adding a Transceiver Module.** If you install a transceiver module in a previously unoccupied slot, the port for that transceiver module will be automatically added to the default VLAN.

### Caution

Before installing a transceiver module in the Switch 800T, you must first turn off the power to the switch to avoid damaging switch components. Refer to "1. Install Add-In Transceivers" on page 1-3.

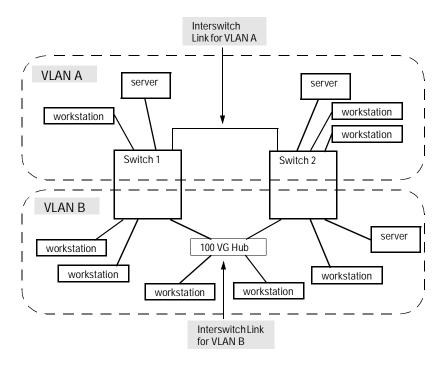


Figure 7-9. Example of VLANs Spanning Multiple Switches

## Overview of Using VLANs

To use VLANs, you will need to follow these general steps:

■ Configure at least one VLAN in addition to the default VLAN (DEFAULT\_VLAN). Refer to "How To Configure a VLAN" on the next page.

- If you are managing VLANs with SNMP in an IP network, either configure an IP address and subnet mask for each VLAN or use the (default) Bootp feature to download an IP configuration from a Bootp server. Refer to "Internet (IP) Service Features" on page 3-9 or to appendix E, "Bootp Operation".
- If you are managing VLANs with SNMP in an IPX network, configure the IPX gateway encapsulation and gateway node. (An IPX node address is automatically assigned to each VLAN interface.) Refer to "IPX Service Features" on page 3-7.

## How To Configure a VLAN

In the factory default configuration, all ports on the Switch 800T belong to a physical broadcast domain named "DEFAULT\_VLAN". You can divide the switch ports into multiple virtual broadcast domains by adding one or more VLANs. Because the default VLAN permanently exists in the switch, adding one new VLAN results in two VLANs existing in the switch. Adding another VLAN results in three VLANs existing in the switch, and so on.

### Note

If you add one or more new VLAN(s), you should then reboot the switch. (A new VLAN will not appear as an option in the Port VLAN Assignment screen until after the switch is rebooted.) If you create a new VLAN without also rebooting the switch, you will be prompted to choose whether to reboot the switch before entering the Port VLAN Assignment screen. When you move a port to a VLAN, the new assignment is automatically enabled, and it is not necessary to reboot the switch a second time.

To create a new VLAN and/or move ports into a VLAN, use the following two procedures.

**To Create a New VLAN.** Use this procedure to add a new VLAN or to edit the name of an existing VLAN.

1. Beginning at the Main Menu, select Configuration to display the configuration menu.

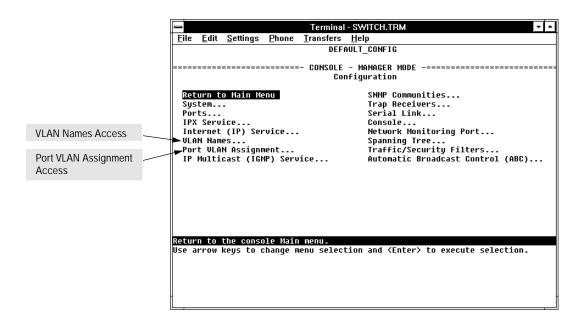


Figure 7-10. The VLAN Options in the Configuration Menu

2. From the Configuration menu, select VLAN Names. You will then see a screen similar to the following:

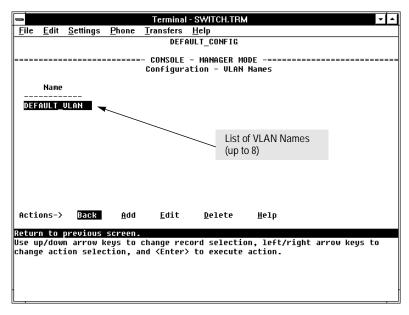


Figure 7-11. The (Default) VLAN Names Screen

3. Press  $\boxed{A}$  (for  $\underline{A}$ dd). You will then be prompted for a new VLAN name:

Name : \_

- 4. Type the name (up to 12 characters, with no spaces) of a new VLAN that you want to add, then press Enter.
- 5. Press S (for Save).
- 6. Do one of the following:
  - If you want to add another VLAN name, return to step 3.
  - If you are finished entering VLAN names, press **B** (for Back) to return to the Configuration menu.
- 7. Return to the Main Menu and reboot the switch to activate the new VLAN(s) you have just entered.

Note

You can rename "DEFAULT\_VLAN", but you cannot delete it from the Switch, regardless of which name you assign to it.

**To Move a Port to a VLAN.** Use this procedure to move a port into a VLAN. (Ports you do not specifically assign to a VLAN are automatically placed in the default VLAN.)

- 1. If you have just added a new VLAN name and have not yet rebooted the switch, do so now (step 7 in the previous procedure).
- Return to the Main Menu and select Configuration to display the Configuration menu.
- Select Port VLAN Assignment. You will then see a Port VLAN Assignment screen similar to the following:

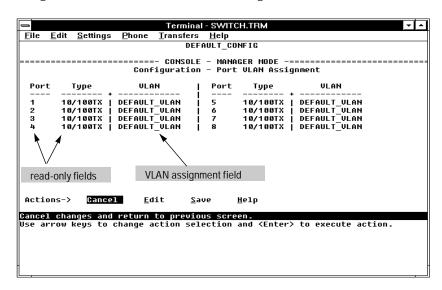


Figure 7-12. Example of the Port VLAN Assignment Screen

- 4. The VLAN column shows the VLAN to which each port on the switch is assigned. (Ports that you do not specifically assign are automatically assigned to the default VLAN.) To assign a port on the switch to a different VLAN than the current selection:
  - a. Press  $\mathbb{E}$  (for  $\underline{\mathbb{E}}$ dit) to move the highlight to the VLAN column.
  - b. Use \( \bar{\psi} \) to highlight the VLAN name for the port you want to re-assign to a different VLAN.
  - c. Press the Space bar to select a different VLAN name.
  - d. Do one of the following:
    - To re-assign another port to a different VLAN, return to step 8b.
    - If you are finished assigning ports to VLANs, press Enter and S
       (for Save) to activate the changes you've made and to return to
       the Configuration menu.

5. Return to the Main menu. (It is not necessary to reboot the switch; the new port assignments are implemented when you do the "save" in the preceding step.)

### **VLAN Restrictions**

- Each port can be assigned to only one VLAN.
- An external router must be used to communicate between two VLANs.
- Duplicate MAC addresses on different VLANs are not supported and can cause VLAN operating problems. These duplicates are possible and common in situations involving Sun workstations with multiple network interface cards, with DECnet routers, and with certain Hewlett-Packard routers using OS versions earlier than A09.70 where any of the following are enabled:
  - IPX
  - IP Host-Only
  - STP
  - XNS
  - DECnet

Currently, the problem of duplicate MAC addresses in IPX and IP Host-Only environments is addressed through the HP router OS version described below. However, for XNS and DECnet environments, a satisfactory solution is not available from any vendor at this time.

#### Note

Operating problems associated with duplicate MAC addresses are likely to occur in VLAN environments where XNS and DECnet are used. For this reason, using VLANs in XNS and DECnet environments is not currently supported on the Switch 800T.

- If you assign a port to be the Network Monitoring Port, that port cannot be configured as a member of any VLAN. If the port was previously assigned to a VLAN (including the default VLAN), it will be automatically removed from the VLAN when the Monitoring Port assignment is made. When you subsequently disable the monitoring port assignment, the port will be returned to the default VLAN.
- Before you can delete a VLAN, you must move all of its ports to another VLAN.

**HP Router Requirements.** Use the Hewlett-Packard version A.09.70 (or later) router OS release if any of the following Hewlett-Packard routers are installed in networks in which you will be using VLANs:

HP Router 440 (formerly Router ER) HP Router 470 (formerly Router LR)

HP Router 480 (formerly Router BR)

**HP Router 650** 

Release A.09.70 (or later) is available electronically through the HP BBS service and the World Wide Web. Refer to the "Customer Support Services" card at the beginning of this manual.

# Symptoms of Duplicate MAC Addresses in VLAN Environments

There are no definitive events or statistics to indicate the presence of duplicate MAC addresses in a VLAN environment. However, one symptom that may occur is that a duplicate MAC address can appear in the Port Address Table screen to be linked with one port, and then later appear to be linked to another port.

# IP Multicast (IGMP)

In a network where IP multicast traffic is transmitted for various multimedia applications, you can use the switch to reduce unnecessary bandwidth usage on a per-port basis by configuring IGMP.

## **How IGMP Operates**

The Internet Group Management Protocol (IGMP) is an internal protocol of the Internet Protocol (IP) suite. IP manages multicast traffic by using switches, multicast routers, and hosts that support IGMP. (In Hewlett-Packard's implementation of IGMP, a multicast router is not necessary as long as the switch is configured to support IGMP with the querier feature enabled.) A set of hosts, routers, and/or switches that send or receive multicast data streams to or from the same source(s) are termed a *multicast group*, and have the same multicast group address. The multicast group running version 2 of IGMP uses three fundamental types of messages to communicate:

- Query: A message sent from the querier (multicast router or switch) asking for a response from each host belonging to the multicast group. If a multicast router supporting IGMP is not present, then the switch must assume this function in order to elicit group membership information from the hosts on the network.
- **Report:** A message sent by a host to the querier to indicate that the host wants to be or is a member of a given group indicated in the report message.
- **Leave Group:** A message sent by a host to the querier to indicate that the host has ceased to be a member of a specific multicast group.

Thus, IGMP identifies members of a multicast group (within a subnet) and allows IGMP-configured hosts (and routers) to join or leave multicast groups.

**Role of the Switch.** When IGMP is enabled on the switch, it examines the IGMP packets it receives:

- To learn which of its ports are linked to IGMP hosts and multicast routers/ queriers belonging to any multicast group
- To become a querier if a multicast router/querier is not discovered on the network

Once the switch learns the port location of the hosts belonging to any particular multicast group, it can direct group traffic to only those ports, resulting in bandwidth savings on ports where group members do not reside. The following example illustrates this operation.

Figure 7-13 shows a network running IGMP.

- PCs 1 and 4, Switch #2, and all of the routers are members of an IP multicast group. (The routers operate as queriers.)
- Switch #1 ignores IGMP traffic and does not distinguish between IP multicast group members and non-members. Thus, it is sending large amounts of unwanted multicast traffic out the ports to PCs 2 and 3.
- Switch #2 is recognizing IGMP traffic and learns that PC #4 is in the IP multicast group receiving multicast data from the video server (PC X). Switch #2 then sends the multicast data only to the port for PC #4, thus avoiding unwanted multicast traffic on the ports for PCs #5 and #6.

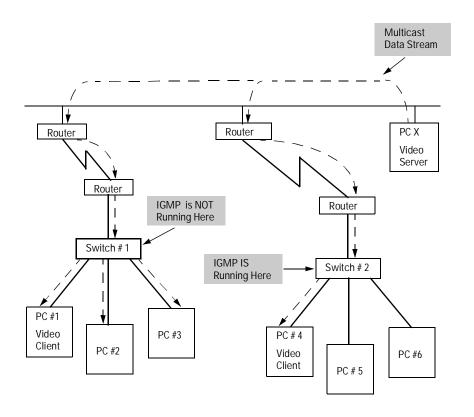


Figure 7-13. The Advantage of Using IGMP

The next figure (7-14) shows a network running IP multicasting using IGMP without a multicast router. In this case, the IGMP-configured switch runs as a querier.

PCs 2, 5, and 6 are members of the same IP multicast group.

IGMP is configured on switches 3 and 4. Either of these switches can operate as querier because a multicast router is not present on the network. (If an IGMP switch does not detect a querier, it automatically assumes this role, assuming the querier feature is enabled—the default—within IGMP.)

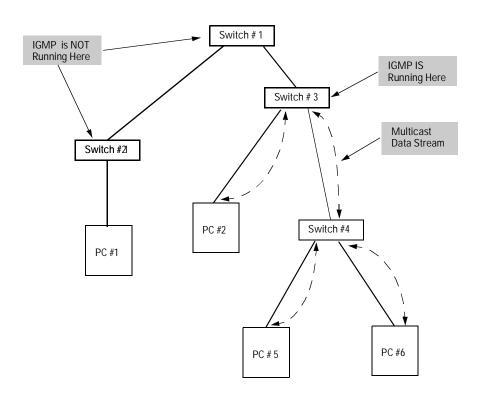


Figure 7-14. Isolating IP Multicast Traffic in a Network

■ In the above figure, the multicast group traffic does not go to switch 1 and beyond because either the port on switch 3 that connects to switch 1 has been configured as blocked or there are no hosts off of switch 1 or switch 2 that belong to the multicast group.

■ For PC #1 to become a member of the same multicast group without flooding IP multicast traffic on all ports of switches 1 and 2, IGMP must be configured on both switches 1 and 2.

### Note

IP multicast addresses occur in the range from 224.0.0.0 through 239.255.255.255. When IGMP is enabled, any Traffic/Security filters (page 7-8) configured with a "Multicast" filter type and a "Multicast Address" within the above range are disabled and an event log message indicating this action is logged. That is, IGMP will control the IP multicast traffic flow and the Traffic/Security filter will control any multicast traffic that is not IP multicast traffic.

## **How To Configure IGMP**

In the factory default configuration, IGMP is disabled. If multiple VLANs are configured, you can configure IGMP on a per-VLAN basis. The configuration options include:

- Enabling or disabling IGMP. Disabling IGMP (the default) causes all ports on the switch or VLAN to simply forward IP multicast traffic. Enabling IGMP allows the ports to detect IGMP queries and report packets and manage IP multicast traffic through the switch. If no other querier is detected, the switch will then also function as the querier. (If you need to disable the querier feature, you can do so through the IGMP configuration MIB. Refer to "Changing the Querier Configuration Setting" on page 7-29.)
- **High-priority forwarding.** Disabling this parameter (the default) causes the switch or VLAN to process IP multicast traffic, along with other traffic, in the order received. If priority forwarding is supported by the network technology you are using (such as Hewlett-Packard's implementation of 100Base-TX) enabling this parameter causes the switch or VLAN to give a higher priority to IP multicast traffic than to other traffic.

**Per-Port handling of IP multicast traffic**. In the factory default state (IGMP disabled), the switch forwards all IGMP traffic. When IGMP is enabled, you can configure the switch to do any of the following on a per-port basis:

- Automatic (the default): Causes the switch to interpret IGMP packets and to filter IP multicast traffic based on the IGMP packet information for that port.
- Blocking: Causes the switch to drop all IGMP transmissions received and block all outgoing IP Multicast packets for that port.
- Forwarding: Causes the switch to forward all IGMP and IP multicast transmissions through the port.

### Note

If you move a port from one VLAN to another, that port will retain its IP multicast (IP Mcast) parameter setting. For example, suppose port 1 is in DEFAULT\_VLAN with an IP Mcast setting of "Blocked". If you create another VLAN named VLAN2 and then move port 1 to VLAN2, the IP Mcast setting will remain the same (Blocked).

**To Configure IGMP.** Use this procedure to configure or edit the IGMP settings for a switch or VLAN.

1. Beginning at the Main Menu, select Configuration to display the Configuration menu.

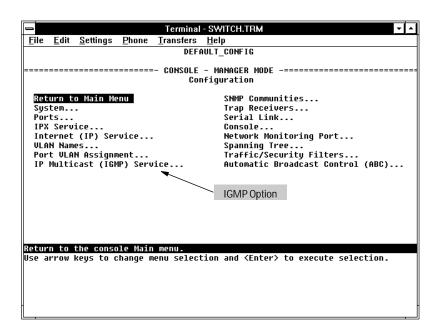


Figure 7-15. The IGMP Option in the Configuration Menu

- 2. Select IP Multicast (IGMP) Service.
- 3. If VLANs are configured, select the VLAN in which you want to configure IGMP and press  $\mathbb{E}$  (for  $\underline{\mathtt{Edit}}$ ). You will then see a screen similar to the following:

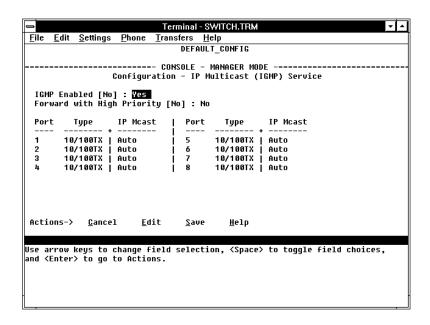


Figure 7-16. Example of the (Default) IP Multicast (IGMP) Service Screen

- 4. Press the Space bar to select Yes (to enable IGMP).
- 5. Use ↓ to highlight the Forward with High Priority parameter.
- 6. If you want IGMP traffic to be forwarded with a higher priority than other traffic on the switch or VLAN, use the Space bar to select Yes. Otherwise, leave this parameter set to No.
- 7. Use 1 to highlight the IP Mcast parameter setting for a port you want to reconfigure. (The options are: Auto, Blocked, and Forward. Refer to the online Help and/or page 7-26 for further information on these choices.)
- 8. Repeat step 7 for each port you want to configure.
- 9. When you are finished configuring the IP Mcast parameter for the displayed ports, press Enter and S (for Save) to activate the changes you've made to the IGMP configuration.
- 10. Return to the Main Menu. (It is not necessary to reboot the switch. The new IGMP configuration is implemented when you select the "Save" in step 9.)

**Changing the Querier Configuration Setting..** The Querier feature, by default, is enabled and in most cases should be left in this setting. If you need to change the querier setting, you can do so using the IGMP Configuration MIB. To disable the querier setting, select the Advanced Command prompt from the Main Menu and enter this command:

```
setmib hpSwitchIgmpQuerierState.<vlan number> -i 2
```

To enable the querier setting, select the Advanced Command prompt from the Main Menu and enter this command:

```
setmib hpSwitchIgmpQuerierState.<vlan number> -i 1
```

To view the current querier setting, select the Advanced Command prompt from the Main Menu and enter this command:

```
getmib hpSwitchIgmpQuerierState.<vlan number>
```

### where:

<vlan number> is the sequential (index) number of the specific VLAN. If no VLANs are configured, use "1". For example:

```
getmib hpSwitchIgmpQuerierState.1
```

# **Automatic Broadcast Control (ABC)**

ABC helps to conserve bandwidth and processing power for IP and/or IPX traffic within a broadcast domain without adding the levels of cost and latency normally associated with routers. ABC achieves this by using the switch to reduce IP ARP and RIP broadcast traffic and IPX NSQ, RIP, and SAP broadcast traffic normally found on a network. Also, when enabled, ABC allows you to set the global broadcast limit (Bcast Limit parameter) for all ports on the switch (or, if VLANs are configured, for all ports in the specified VLAN).

## **How ABC Operates**

**Reducing ARP Broadcast Traffic.** When enabled on the switch or a VLAN, ABC does the following to reduce ARP (Address Resolution Protocol) broadcast traffic:

- 1. Learning which port various hosts reside on by reading the address information in broadcast ARP (Address Resolution Protocol) packets and unicast ARP response packets
- 2. Proxy responding to subsequent ARP broadcast requests for those hosts from other devices instead of forwarding such requests out all ports and requiring each host to respond

For example, assume that host A has traffic for host D.

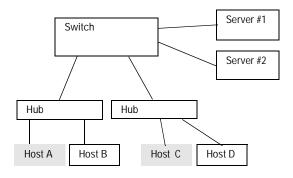


Figure 7-17. Example of a Network Using ABC

To learn host D's MAC address, host A sends a broadcast ARP request. Because the switch does not yet know the location of host D, it floods the request out all ports. However, the switch also learns from the ARP request the location of host A and stores this information in its ARP cache. Host D receives the ARP request (as will all other hosts connected to the switch), and responds with a unicast packet through the switch to host A. The switch monitors this response, learns the location of host D, and stores this information in its ARP cache. Thus, the switch now knows the address information for both host A and host D. Now, hosts A and D can send unicast packets to each other because they have learned each other's addresses. Suppose that host C now wants to communicate with host A. C sends a broadcast ARP request to the switch. Because the switch already has A's address information, it does not flood C's ARP request out all ports, but instead sends a proxy ARP reply to C that tells C the address information for host A. Host C can now send unicast packets directly to host A. From these packets, host A will learn host C's addressing information and be able to respond with unicast packets addressed to host C. The result is reduced network traffic because host C's broadcast ARP request was not flooded on the switch's ports. Similarly, for IPX networks, the switch learns service and route information from SAPs and RIPs respectively, and maintains SAP and RIP tables that contain the addresses of known servers. Using this data, the switch sends proxy responses to NSQ requests for these servers instead of flooding the requests on all ports.

### Note

The switch sends proxy ARP replies to hosts (ARP initiators) that are on a different port than the target host. However, the switch does not send a proxy ARP reply when both the initiator and the target host are on the same port. For example, the switch does not send a proxy ARP reply for host B (figure 7-17) in replying to an ARP request from host A.

The switch does not translate encapsulation types (such as 802.2 to SNAP in IPX). As a result, if a host client sends an NSQ request for a server, the switch will always send a proxy response containing the address of a server supporting the same encapsulation type. If the switch has not learned of a server using the same encapsulation type as the host client, then the switch will flood the host client's NSQ request to all ports. However, if a local server supporting the same encapsulation type exists on a port from which the NSQ request is received, the switch will not forward the request to other ports.

If Automatic Broadcast Control (ABC) is configured and more than one port is monitored, then broadcast packets may be duplicated on the monitor port.

**Reducing RIP and SAP Broadcast Traffic.** You can also configure ABC to limit IP RIP and IPX RIP and SAP broadcasts, which can further reduce broadcast traffic on your network. RIP and SAP broadcasts are normally

forwarded on all ports. However, with ABC enabled and additional RIP and SAP parameters configured, the switch will forward IP RIP and IPX RIP and SAP broadcasts only to the ports on which these types of broadcasts have been received earlier. This means that other ports are relieved of some unnecessary traffic because the RIP and SAP broadcasts will be forwarded only to ports where there are routers or servers that would use the broadcast information.

## **How To Configure ABC**

In the factory default configuration, ABC is disabled. If multiple VLANs are configured, you can configure ABC on a per-VLAN basis. Otherwise, the configuration is on the switch level. You can enable ABC for IP only, IPX only, or for both. When ABC is disabled (the default), all broadcasts are sent out either all ports in the switch or, if VLANs are configured, out all ports in VLANs where ABC is disabled. ABC can be enabled with the options described below.

## **Enabling IP Only**

Enabling ABC for IP causes the switch to send a proxy ARP reply for hosts whose addresses the switch has learned. Enabling for IP also:

- Allows you to choose whether to enable ABC for IP RIP Control. If enabled, IP RIP Control causes IP RIP broadcasts to be forwarded only to ports where IP RIPs have been previously received. This avoids sending IP RIP broadcasts to ports where there is no indication of devices that would use them.
- Activates a broadcast limit for either all ports in the switch or, if VLANs are configured, for all ports in the selected VLAN. (You can accept the default broadcast limit setting, change it, or turn it off.)

## **Enabling IPX Only**

Enabling ABC for IPX causes the switch to send a proxy NSQ (nearest server query) reply for services the switch has learned. Enabling for IPX also:

- Allows you to choose whether to enable ABC for IPX RIP/SAP control. If enabled, IPX RIP/SAP control causes IPX RIP and SAP broadcasts to be forwarded only to ports where IPX RIPs and SAPs have previously been received. This avoids sending IPX RIP and SAP broadcasts to ports where there is no indication of devices that would use them.
- Activates a broadcast limit for either all ports in the switch or, if VLANs are configured, for all ports in the selected VLAN. (You can accept the default broadcast limit setting, change it, or turn it off.)

## Enabling Both IP and IPX (IP\_IPX)

Enabling ABC for IP and IPX causes the switch to:

- Send a proxy IP ARP reply for hosts whose addresses the switch has learned.
- Send a proxy NSQ (nearest server query) reply for services the switch has learned.

Enabling for both IP and IPX also allows you to choose whether to:

- Enable ABC for IP RIP Control and/or IPX RIP/SAP control, as described in the preceding subsections.
- Set a broadcast limit for either all ports in the switch or, if VLANs are configured, for all ports in the selected VLAN.

**To Configure ABC.** Use this procedure to configure or edit the ABC settings for a switch or VLAN.

1. Beginning at the Main Menu, select Configuration to display the Configuration menu.

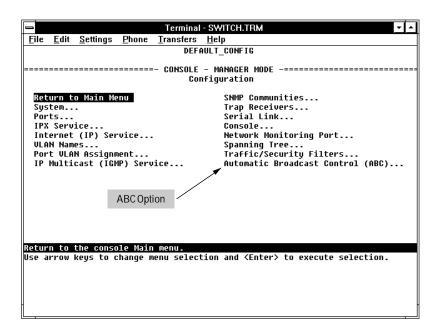


Figure 7-18. The Configuration Menu

- 2. Select Automatic Broadcast Control (ABC) and press [Enter].
- 3. If no VLANs are configured, go to step 4 . If VLANs are configured, press <u>Edit</u>, then select the VLAN in which you want to configure ABC.

### Note

The rest of this procedure assumes that VLANs are *not* configured. If you have VLANs configured on your switch, you can still use this procedure. The screen layout will be different than shown here, but the parameters are the same.

4. Press  $\mathbb{E}$  (for  $\underline{\mathbb{E}}$ dit).

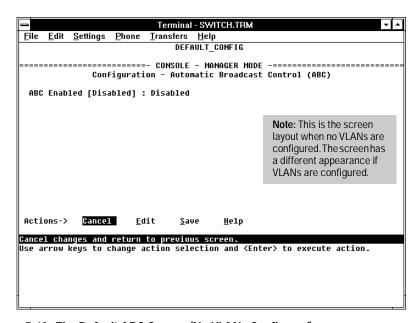


Figure 7-19. The Default ABC Screen (No VLANs Configured)

- 5. Use the Space bar to enable ABC. Select one of these options:
  - IP IPX: Enables ABC for both the IP and IPX protocols.
  - IP: Enables ABC only for the IP protocol.
  - IPX: Enables ABC only for the IPX protocol.
  - Disabled
- 6. If you want broadcast control disabled for IP RIP and/or IPX RIP and SAP broadcasts, leave the remaining parameters set to No and go to step 7.

If you  $\emph{do}$  want broadcast control for RIP or SAP broadcasts, press an

arrow key to display the remaining ABC parameters. (If VLANs are configured, these parameters already appear.) Then do  $\it one$  of the following:

• If you enabled ABC for IP\_IPX and pressed an arrow key (figure 7-20, below):

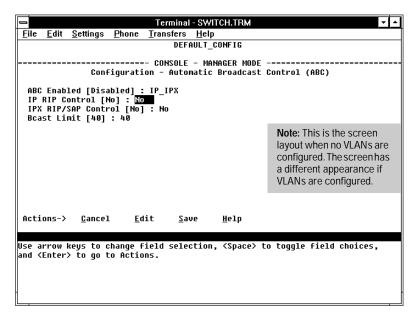


Figure 7-20. ABC Enabled With Default IP\_IPX Option (No VLANs Configured)

- i. If you want IP RIP broadcast control, then select the IP RIP Control parameter and use the Space bar to select Yes.
- ii. If you want IPX RIP/SAP broadcast control, select the IPX RIP/SAP Control parameter and use the Space bar to select Yes.
- iii. If you want to specify a different global broadcast limit for the switch or selected VLAN (if VLANs are configured), select the Bcast Limit parameter and type a value from 0 to 99. (A "0" disables broadcast limits; 40 is the default setting.)
- iv. Go to step 7 on page 7-37.

Note

The broadcast limit (Bcast Limit) parameter in the ABC screen sets a global broadcast limit value for all ports in the switch or selected VLAN (if VLANs are configured). If you want to set broadcast limits on a per-port basis, you

can override the setting in this screen by going to the Port Configuration screen (page 3-6) and setting the broadcast limit value individually for one or more specific ports.

• If you enabled ABC for IP (figure 7-21, below):

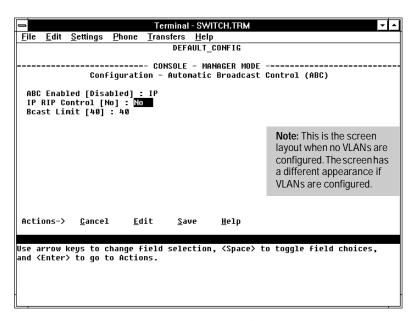


Figure 7-21. ABC Enabled With Default IP Option (No VLANs Configured)

- i. Select IP RIP Control.
- ii. Use the Space bar to select Yes.
- iii. If you want to specify a different global broadcast limit for the switch or selected VLAN (if VLANs are configured), select the Bcast Limit parameter and type a value from 0 to 99. (A "0" disables broadcast limits; 40 is the default setting.) Refer to the Note on page 7-35.
- iv. Go to step 7 on page 7-37.

• If you enabled ABC for IPX (figure 7-22, below):

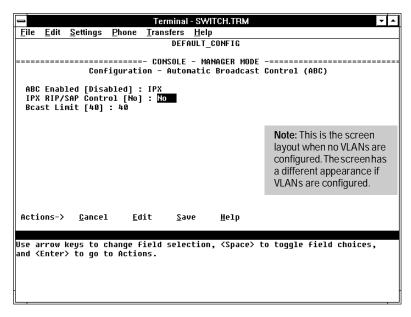


Figure 7-22. ABC Enabled With Default IPX Option (No VLANs Configured)

- i. Select IPX RIP/SAP Control.
- ii. Use the Space bar to select Yes.
- iii. If you want to specify a different global broadcast limit for the switch or selected VLAN (if VLANs are configured), select the Bcast Limit parameter and type a value from 0 to 99. (A "0" disables broadcast limits; 40 is the default setting.) Refer to the Note on page 7-35.
- iv. Go to step 7, below.
- 7. Press Enter to return to the Actions menu.
- 8. Press S (for Save) to activate the changes you have made to the ABC parameters.
- Return to the Main Menu. (It is not necessary to reboot the switch. The new ABC configuration is implemented when you select the "save" in step 8.)

## File Transfers

## **Overview**

You can download new switch software (operating system—OS) and upload or download switch configuration files. These features are useful for acquiring periodic switch software upgrades and for storing or retrieving a switch configuration.

## **Downloading an Operating System**

You can use the switch console's TFTP feature (Download OS), HP's SNMP Download Manager, or the HP Update Utility (update.exe) to download a new operating system (OS) to the switch. Downloading a new OS does not change the current switch configuration.

Using the Download OS option from the switch Main Menu (described on the following pages):

- The switch must be configured for either IP or IPX service.
- The OS software to download must be stored in a file on a TFTP server in your network or VLAN (if configured).
- The switch must be properly connected to the network.

#### Using the HP Download Manager:

- At a minimum, use a 386 8-megabyte IBM-compatible PC with a network interface.
- Obtain software and instructions from HP's BBS or World Wide Web site. (Refer to the "Customer Support Services" section in appendix G, "Troubleshooting".)

You can access Download Manager in the HP AdvanceStack Assistant network management application by clicking the right-side mouse button on the background topology view.

#### Using the HP Update Utility:

- Use a PC with a direct-connect RS-232 serial cable.
- Obtain the update utility and refer to the instructions in the readme.txt file included with the utility. The utility is in a compressed, self-extracting file available free from World Wide Web site or HP's BBS. (Refer to the "HP Customer Support Services" card at the front of this manual.)

## Using TFTP To Download the OS File

This procedure assumes that an OS file for the switch has previously been stored on a TFTP server accessible to the switch. (The OS file is typically available from HP's electronic services—refer to the card at the front of this manual.) Before you use the procedure, do the following:

- Determine the IP or IPX address of the TFTP server in which the OS file has been stored.
- If VLANs are configured on the switch, determine the name of the VLAN in which the TFTP server is operating.
- Determine the name of the OS file stored in the TFTP server for the switch (for example, B\_03\_01.swi).
- 1. In the Main Menu, select Download OS. You will then see this screen:

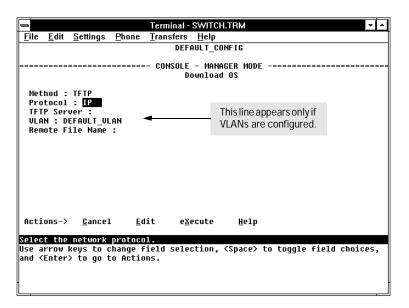


Figure 8-1. The Download OS Screen (Default Values)

- 2. Press  $\boxed{E}$  (for  $\boxed{E}$ dit).
- 3. With the Protocol field highlighted, use the Space bar to select either IP or IPX, depending on the protocol in use in your network.
- 4. Highlight the TFTP Server field and type in the IP or IPX address of the TFTP server in which the OS file has been stored.

- 5. If VLANs are configured, highlight the VLAN field. Then use the Space bar to select the VLAN in which the TFTP Server is operating.
- 6. Highlight the Remote File Name field, then type the name of the OS file. If you are using a UNIX system, remember that the filename is case-sensitive.
- 7. Press Enter, then X (for execute) to begin the OS download. The following screen then appears:

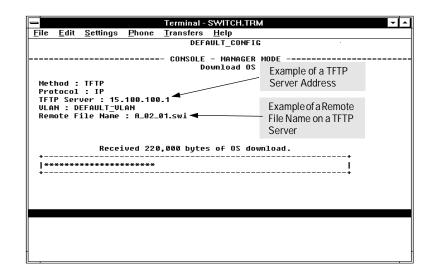


Figure 8-2. Example of the Download OS Screen During a Download

8. A "progress" bar indicates the progress of the download. When the entire operating system has been received, all activity on the switch halts and the following message appears:

```
WRITING SYSTEM SOFTWARE TO FLASH, BACK SOON
```

After the system flash memory has been updated with the new operating system, the switch reboots itself and begins running with the new operating system.

- To confirm that the operating system downloaded correctly:
  - a. Select Status and Counters from the Main Menu
  - b. Select Switch Information from the Status and Counters screen.
  - c. Check the OS Version line.

# File Transfers

## Switch-to-Switch Download

If you have two or more Switch 800Ts and/or the B-version of the Switch 2000 (HP J3100B) networked together, you can download the OS software from one switch to another by using the Download OS feature in the switch console interface. (The Switch 800T and the B-version of the Switch 2000 use the same OS.) To do so:

- 1. Go to the Download OS screen in the switch to receive the download.
- 2. Enter the IP or IPX address of the remote switch containing the OS you want to download.
- 3. Enter "OS" for the Remote File Name.
- 4. Execute the download.

#### Note

The "A" version of the Switch 2000 uses OS software that is different from the OS software used by the "B" version of the Switch 2000 and the Switch 800T. For this reason, transferring OS software between an "A" version of the Switch 2000 and either a Switch 800T or a "B" version of the Switch 2000 is not supported.

## **Troubleshooting TFTP Downloads**

If a TFTP download fails, the Download OS screen indicates the failure.

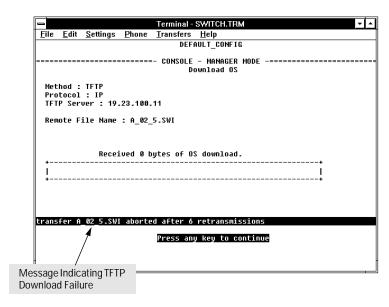


Figure 8-3. Example of Message for Download Failure

To find more information on the cause of a download failure, examine the messages in the switch's Event Log. (See "Event Log" on page 4-15.)

Some of the causes of download failures include:

- Wrong protocol specified for the Protocol parameter
- Incorrect or unreachable address specified for the TFTP Server parameter. This may include network problems.
- Incorrect name specified for the Remote File Name parameter, or the specified file cannot be found on the TFTP server. This can also occur if the TFTP server is a Unix machine and the case (upper or lower) for the filename on the server does not match the case for the filename entered for the Remote File Name parameter in the Download OS screen.
- One or more of the switch's IP or IPX configuration parameters are incorrect.

- For a Unix TFTP server, the file permissions for the OS file do not allow the file to be copied.
- Another console session (through either a direct connection to a terminal device or through Telnet) was already running when you started the session in which the download was attempted.

#### Note

If an error occurs in which normal switch operation cannot be restored, the switch automatically reboots itself. In this case, an appropriate message is displayed in the copyright screen that appears after the switch reboots. You can display the same information by selecting the Advanced Commands option from the Main Menu and executing the History command.

## Transferring Switch 800T Configurations

You can use the following commands to transfer Switch 800T configurations between the switch and a PC or Unix workstation.

Command	Function		
Get	Download a Switch 800T configuration file from a networked PC or Unix workstation using TFTP.		
Put*	Upload a Switch 800T configuration to a file in a networked PC or Unix workstation using TFTP.		
ZGet	Uses a Zmodem-compatible terminal emulation program to download a Switch 800T configuration file from a PC or Unix workstation connected to the switch's console port (either directly or via a modem).		
ZPut*	ZPut*  Uses a Zmodem-compatible terminal emulation program to upload a Switch 800T configuration to a file in a PC or Unix workstation connected to the switch's console port (either directly or via a modem).		
*Can also be	*Can also be used to send the output of certain commands to a file on another device. Refer		

<sup>\*</sup>Can also be used to send the output of certain commands to a file on another device. Refer to chapter 6, "Using the Advanced Commands".

# Using Get and Put To Transfer a Configuration Between the Switch and a Networked PC or Unix Workstation

To use Get or Put, you need the following:

- The IP or IPX address of the remote PC or Unix workstation that is acting as a TFTP server
- The name assigned to the configuration file you will use on the remote PC or Unix workstation

#### Note

Get or Zget overwrites the switch's current configuration with the downloaded configuration. The switch then automatically reboots itself.

- 1. From the Main Menu select Advanced Commands line.
- 2. At the command prompt, execute one of the following commands:

To upload a configuration to a file on a PC or Unix workstation:

```
put IP_address CONFIG remote_file
put IPX address CONFIG remote file
```

To download a configuration from a file on a PC or Unix workstation:

get IP\_address CONFIG remote\_file get IPX\_address CONFIG remote\_file

where: IP address or IPX address is the address of the PC or Unix workstation in which the configuration is to be stored.

remote\_file is the name of the configuration file in the PC or Unix workstation

#### Using ZGet and ZPut To Transfer a Configuration Between the Switch and a PC or Unix Workstation

The PC or workstation must be operating as a VT100 or ANSI terminal, and can be connected either directly or via a modem to the switch's console port. Also, the PC or workstation must be running a Zmodem-compatible terminal emulation program. If a manager password has been set, you must log on to the switch using that password in order to execute the Zget or Zput commands.

#### Note

ZGet overwrites the switch's current configuration with the downloaded configuration. The switch then automatically reboots itself.

To use ZGet or ZPut, you need the name assigned to the configuration file on the PC or workstation.

- 1. On the PC or workstation, start the Zmodem-compatible terminal emulation program, then follow the instructions provided with the program to prepare for a file transfer.
- 2. From the switch's Main Menu select Advanced Commands line.
- 3. At the command prompt, execute one of the following commands:

To upload a configuration to a file on a PC or Unix workstation:

zput config remote\_file [overwrite] [dos/unix]

To download a configuration from a file on a PC or Unix workstation:

zget config remote\_file [dos/unix]

where: remote\_file is the name of the file in which the configuration is stored

[overwrite] is one of the following optional values:

- 0 (the default) allows a new file to be created, but does not allow an existing file to be overwritten.
- 1 creates a new file or overwrites an existing file.

[dos/unix] is one of the following optional values:

- 0 (the default) specifies the DOS file format.
- 1 specifies the Unix file format.

If the PC or workstation does not respond to a ZPut or ZGet command within approximately 70 seconds, the command times out and control returns to the Advanced Command line.

# **Troubleshooting**

- **■** Troubleshooting Approaches
- Diagnosing with the LEDs
- Installation Problems
- Unusual Network Activity
- Diagnostic Tests
- Customer Support Services
- **■** Replacement Instructions

# **Troubleshooting Approaches**

There are four primary ways to diagnose switch problems:

- Checking the LEDs
- **■** Checking the installation
- Checking the cables
- Checking the Console RS-232 interface

## Diagnosing with the LEDs

Most problems with the switch can be diagnosed using the LEDs on its front panel. This section describes:

- The normal LED pattern when the switch is being self-tested
- The LED patterns that indicate error conditions on the switch

#### **LED Pattern During Self-Test**

Whenever the switch is powered on or reset, it performs a self-diagnostic test. During the self-test:

- 1. All LEDs turn on momentarily, then all but the Power, Self-test, and Fault LEDs turn off.
- 2. The Power LED remains on; the Self Test and Fault LEDs remain on for less than one minute.

When the self-test completes successfully, the LEDs go into their normal operational states. If a switch hardware fault exists, the switch will not complete self-test. This will be indicated by the Fault LED.

The tables on the following pages list the switch's LEDs, their possible states, and diagnostic tips to resolve any error conditions.

#### **LED Error Indications**

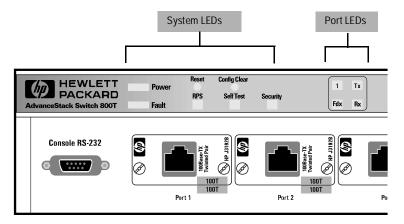


Figure 9-1. System and Port LEDs

## **LED Error Indications**

LED	State	Diagnostic Tip
Power (green)	Off	If the Power LED is off and the fan is not running, verify that the power cord is plugged into an active power source and to the switch. Make sure these connections are snug. Try power cycling the switch by unplugging and plugging the switch back in.
		If the Power LED is still not on, verify that the AC power source works by plugging another device into the outlet. Or try plugging the switch into a different outlet or try a different power cord.
		If this condition persists, the switch may have failed. Call your HP-authorized LAN dealer or HP representative for assistance.
	On then turns off	Make sure the power cord connection is snug into the switch and into the power outlet.
		Verify that the fans are running and that the chassis intake vents and exhaust ports are clear, and that the area around them is unobstructed.
		Check the power outlet for power losses or surges.
		If this condition persists, the switch may have failed. Call your HP-authorized LAN dealer or HP representative for assistance.
(orange) t		The Fault LED should remain off during normal operation. If it is on, a self-test failure or a software error has occurred. Power cycle the switch. If this condition persists, the switch may have failed. Call your HP-authorized LAN dealer or HP representative for assistance.
	Flashing	The switch is operable, but a fault condition has occurred in the switch or an installed module, a fan, or a connected redundant power supply (RPS). Check the event log for an indication of the problem source.
RPS	Off	Should be on if an RPS is installed and operating properly.
(green)		If there is an RPS problem, this LED is off and the Fault LED flashes. (Check the Event Log in the console user interface for further information on the failure.) Check the connection between the RPS and the power outlet. Verify that power is being supplied to the power outlet. Remove and then reinstall the RPS according to the documentation shipped with the RPS. If the fault condition continues, schedule down time and replace the RPS.
Self-Test (green)	On	The Self-test LED should be steadily on (for up to approximately 60 seconds) only during the power-on and reset self-tests.
	Flashing	The Self-test LED flashes simultaneously with the Fault LED if the switch has failed its self-test. Check the Event Log. (It also flashes during a reset if the Config Clear button is pressed.)
		If the self-test LED remains on at other times, especially in conjunction with the Fault LED, the switch may have failed. Call your HP authorized LAN representative for assistance.

## LED Error Indications (continued)

LED	State	Diagnostic Tip
Security	Flashing	Should remain off during normal operation.
(orange)		Flashes if an SNMP authentication failure has occurred or if a traffic filter violation has occurred. Use the ClearLED command in the console interface to clear this condition. (ClearLED turns off the Security LED if the condition causing the LED to flash has been corrected.)
1 through 8 (Port Enabled)	Off	The port is not enabled or the link is not operational.
(green)	On	The port is enabled and the link is operational.
		The ports on the Switch 800T are preconfigured to operate as MDI-X with the 100Base-TX J3192A (or B) Transceiver Modules installed. In this case, ensure that the port on the connected hub or other switch is either an MDI port connected by a straight-through cable, or (if the port on the other device is an MDI-X port) that a crossover cable is used to connect them.
Rx and Tx Port Receive and Transmit (green)	Off	The Rx and Tx LEDs should be on or flashing as packets are forwarded from or to other ports. If the LEDs do not flash, check the Port Enabled (1 through 8) LED. If it is off, the port is not enabled. If the Port Enabled LED is on, then verify that the physical network configuration is correct. Check the console interface for proper configuration and operation.
Fdx (Full Duplex)	Off	If the Port Enabled LED (above) is on, then the Full Duplex (Fdx) LED should be on for ports that have been configured for full-duplex mode. The Fdx LED should be off for ports that are disabled or have been configured for half-duplex operation (the default). Check the port configuration in the console interface to ensure that the Mode parameter for the port has been set to Full Duplex.
		<b>Note:</b> Full-duplex should be used only if it is also configured and supported on the media and in the device to which the port is connected.

## **Installation Problems**

By carefully following the installation procedures described in chapter 1, "Installation", you can avoid most problems caused by improper installation of the switch or one of its components.

#### **Incorrect Hardware Installation**

Incorrectly installing the switch or power cord can result in one or both of these components malfunctioning or not functioning at all. If one or both of these components appear not to be functioning, recheck the installation procedure and, if necessary, reinstall the component correctly.

If the switch will not power on or intermittently resets itself, the switch's processor may be faulty or the hardware/software setup may be wrong.

#### Console RS-232 Problems

If the switch powers on but the console interface will not start up, follow these steps:

- Check the external Console RS-232 connection. If you are not using a modem connection, ensure that the cable is a null modem cable.
- Check the console device settings against the settings listed in appendix C, Sample Console Configurations.
- Try a different baud rate setting in your console device. The switch's default setting, "Speed Sense", automatically matches the Console RS-232 baud rate to the rate used by your PC, terminal, or modem. (However, if the Baud Rate parameter in the switch's Serial Link screen has been configured to a specific value, the Speed Sense operation is disabled.) The switch operates at 300, 600, 1200, 2400, 4800, 9600, 19200, or 38400 bps.
- If you are using a terminal emulation program, try exiting the program and then restarting it.

If the diagnostic information does not appear, or is unintelligible, try changing the baud rate on your terminal or PC terminal emulator. Try 9600 first. If the problem continues, try each of the other rates listed above.

## **Cabling Problems**

A high percentage of network problems are due to faulty cabling. Cabling problems usually result in the failure of a switch to connect to a network, a hub, or the end nodes.

#### **Connections**

All cables attached to the switch should be checked to see that they are properly connected.

If a PC or network device cannot communicate through the switch, check the following:

- The cable and its connection
- The LED that corresponds to the network device

If the PC or network device establishes a connection with the switch (the port LED is on), but does not communicate reliably through the switch, check the cable and the connection.

#### Non-standard Cables

Miswired cables may cause numerous network collisions, and can seriously impair network performance. Before connecting cables into your network, you should verify that they comply with the applicable standards. For a list of compatible cables and a description of the pin-outs for each port on the switch (which can be used to confirm the compatibility of unlisted cables), see appendix A, "Cables and Connectors".

#### **Topology**

It is important to make sure you have a valid network topology. Common topology faults include excessive cable length and excessive repeater delays between nodes. Refer to the following sources for further topology information:

- For connecting the Switch 800T to other switches and hubs: HP AdvanceStack Switch 800T Connectivity Quick Reference (shipped with the switch)
- For network design guidelines: An Introduction to Ethernet LAN Switches and Designing Switched Networks, both of which are included on the CD shipped with your switch

■ For physical layer topology guidelines:

Designing HP AdvanceStack Workgroup Networks available on the CD shipped with your switch.

## **Unusual Network Activity**

Network activity that exceeds accepted norms often indicates a hardware problem with one or more of the network components, possibly including the switch. Unusual network activity is usually indicated by the LEDs on the front of the switch or measured with the ASCII console interface or with a network management tool such as the HP AdvanceStack Assistant. Refer to "Diagnosing with LEDs" earlier in this chapter for information on using LEDs to identify unusual network activity.

**Duplicate MAC Addresses Across VLANs.** Duplicate MAC addresses on different VLANs are not supported and can cause VLAN operating problems. There are no explicit events or statistics to indicate the presence of duplicate MAC addresses in a VLAN environment. However, one symptom that may occur is that a duplicate MAC address can appear in the Port Address Table of one port, and then later appear to be linked to another port. (This can also occur in a LAN where there are redundant paths between nodes and Spanning Tree is turned off.) For more information, refer to "VLAN Restrictions" on page 7-21.)

## Diagnostic Tests

If you believe that the switch is not operating correctly, you can test the switch's circuitry by removing, then reinstalling the switch's power cord.

This procedure power-cycles the switch and executes the switch self-test. If the Fault LED stays on, the switch may have failed its self-test. See "Diagnosing with the LEDs" earlier in this chapter to interpret the LED display.

## **Testing Twisted-Pair Cabling**

The twisted-pair cable attached to the switch and used for 100Base-T connections must be compatible with the IEEE 802.3u 100Base-TX standard for Catalog 3 cable. Twisted-pair cable attached to the switch and used for 10Base-T connections must be compatible with the IEEE 802.3 10Base-T standard. To verify that your cable is compatible with this standard, use a qualified cable test device. HP also offers a wire testing service. Contact your HP-authorized LAN dealer or your local HP sales office for more information.

## **Testing End-to-End Network Communications**

Both the switch and the cabling can be tested by running an end-to-end communications test — a test that sends known data from one network device to another through the switch — such that you can verify that the data was correctly transmitted between the devices. For example, if you have two PCs on the network that have HP LAN adapter cards, you can use the "Link Test" option from the card's test program to verify the entire communication path between the two PCs.

See your LAN adapter card's manual for information on running an end-to-end communication test.

## **Customer Support Services**

Hewlett-Packard offers switch support 24 hours a day, seven days a week through the use of automated electronic services including:

- World Wide Web
- Hewlett-Packard FTP Library Service on the Internet
- CompuServ
- Hewlett-Packard BBS
- HP FIRST FAX Retrieval Service
- HP Network Phone-In Support (NPS)

These services are described on the card at the front of this manual.

Your reseller can also provide you with assistance, both with services that they offer and with services offered by Hewlett-Packard.

## **Cables and Connectors**

- Recommended Cables
- **■** Twisted-Pair Cable/Connector Pin-Outs
- Twisted-Pair Cable Pin Assignments
- RS-232 Connector and Cable Pin-Out

This appendix lists cables that have been tested and verified for use with the Switch 800T. It also includes minimum pin-out information so, if you wish to use an unlisted cable, you can verify that the cables used in your installation are correctly wired. Note that each pin-out diagram does not necessarily match the pin-out for the corresponding HP cable, but cables manufactured to follow the minimum pin-out will function correctly.

#### Note

Incorrectly wired cabling is the most common cause of problems for LAN communications. HP recommends that you work with a qualified LAN cable installer for assistance with your cabling requirements.

# **Recommended Cables**


Cable Function	Port Type on PC, or Modem	Cable Type	Specification or HP Product Number			
Network connections to	Network connections to the switch:					
Transceiver-based RJ- 45 connection from switch to networked device	_	Twisted-pair "straight- through" and "cross- over" type cable	Hewlett-Packard recommends category 5 or better unshielded twisted-pair (UTP) cable. (Category 5 cable is required for 100Base-T twisted-pair connections.)			
Transceiver-based SC fiber-optic connection from switch to networked devices	_	Multimode Fiber-Optic	1300nm wavelength cable conforming to the ISO/IEC 793-2 type B1 and ITU-T G.652 standards			
Console PC connection to	o the switch's Consc	ole RS-232 port:				
Connecting the PC directly to the switch's	9-pin male	RS-232-C9-pinfemale to 9-pin female null modem or "crossover" cable	RS-232-C cable provided with the switch (HP p/n 5182-4794)			
Console RS-232 port	25-pin male	RS-232-C9-pinfemale to 25-pin female null modem or "crossover" cable	HP 24542H			
Connecting a modem to the switch's Console RS-232 port	25-pin female	RS-232-C9-pinfemale to 25-pin male standard modem or "straight- through" cable	HP 24542M			

You can contact your HP-authorized dealer or (in the U.S.A.) call HP at 1-800-538-8787 to order these parts.

## Twisted-Pair Cable/Connector Pin-Outs

Twisted-Pair Cable from Switch-Based MDI-X Module or Transceiver to an MDI Networked Device

To connect PCs or other MDI network devices to an MDI-X port on the switch, use a "straight-through" cable. The twisted-pair wires must be twisted through the entire length of the cable. The wiring sequence must conform to AT&T 258A (not USOC). See "Twisted-Pair Cable Pin Assignments" on page A-5 for a listing of the signals used on each pin.

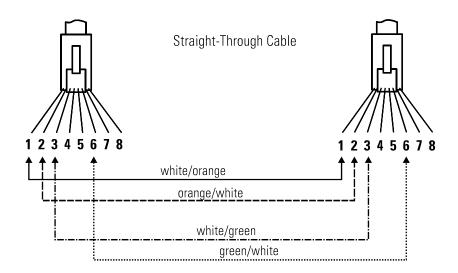


Note

Pins 1 and 2 *must* be wired to a twisted pair. Pins 3 and 6 *must* be wired to a twisted pair.

Pins 4, 5, 7, and 8 are not used in this application, although they may be wired in the cable.

# Twisted-Pair Cable from Switch-Based MDI-X Module to an MDI-X Hub Port

To connect an MDI-X port on a hub to the Switch 800T, use a "crossover" cable. The twisted-pair wires must be twisted through the entire length of the cable. The wiring sequence must conform to AT&T 258A (not USOC). See "Twisted-Pair Cable Pin Assignments" on page A-5 for a listing of the signals used on each pin.

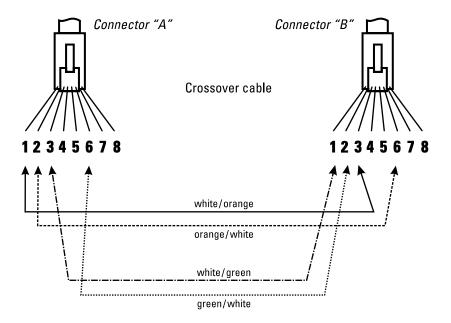

Note

Pins 1 and 2 on connector "A" *must* be wired as a twisted pair to pins 3 and 6 on connector "B".

Pins 3 and 6 on connector "A" *must* be wired as a twisted pair to pins 1 and 2 on connector "B".

Pins 4, 5, 7, and 8 are not used in this application, although they may be wired in the cable.

# Twisted-Pair Cable Pin Assignments

Twisted-Pair Straight-Through Cable for 10/100Base-T Connection From the Switch to a Networked Device

Switch End (MDI-X)				lode (NIC or Transceiver) ner MDI Port
Signal	Pins		Pins	Signal
(receive +) (receive -) (transmit +) (transmit -)	1 2 3 6	<del></del>	1 2 3 6	(transmit +) (transmit -) (receive +) (receive -)

Twisted-Pair Crossover Cable for Module-Based 10/100 Base-T Connection from the Switch 800T to an MDI-X Port

Switch End (MDI-X)				ch Port or Other X Port
Signal Pins			Pins	Signal
(receive +) (receive -) (transmit +)	1 2 3		3 6 1	(transmit +) (transmit -) (receive +)
(transmit –)	6	<del></del>	2	(receive –)

## RS-232 Connector and Cable Pin-Outs

The switch's Console RS-232 connector is wired as if it is a terminal (DTE), ready to be connected to a modem (DCE). The Switch 800T includes a null modem cable that can be used to directly connect a PC to be used as the console. To connect a modem to the switch, use a standard RS-232-C modem cable.

This section provides pin assignment information for the cables you can use on the RS-232 port.

#### Pin-Out for Switch's RS-232 Port Connector

PIN	US	CCITT	DIN
1	DCD	109	M5
2	Rx	104	D2
3	Tx	103	D1
4	DTR	108	S1
5	GND	102	-
6	DSR	107	M1
7	RTS	105	S2
8	CTS	106	M2
9	RI	125	M3

## RS-232-C "Null Modem" Cable

This cable type is supplied with the switch for connection to a PC having a 9-pin connector.

PC End 9-pin male	Switch End 9-pin male	
1	 1	DCD
2	2	Rx
3	3	Tx
4	 4	DTR
5	5	GND
6	6	DSR
7	7	RTS
8	8	CTS
9	 9	RI

## Minimum Cable Pin-out for Direct Console Connection

PC End 9-pin male		Switch End 9-pin male	
2	•	2	Rx
3		3	Тх
5		<del>-</del> 5	GND
1			
4			
6			
7			
8			

## RS-232 Modem Cable

Modem (DCE) End 25-pin male		Switch End 9-pin male	Signal
2	•	3	Тх
3		2	Rx
4	•	7	RTS
5	<b></b>	8	CTS
6	<b></b>	6	DSR
7		5	GND
8	<b></b>	1	CD OR DCD
20	<b>←</b>	4	DTR
22		9	RI
23	•		DRS—typically on V.24 (European) modems (not connected)

# **Specifications**

## Physical

 Width:
 44 cm (17.3 in)

 Depth:
 30 cm (11.8 in)

 Height:
 6.3 cm (2.5 in)

Weight (with four factoryinstalled HP J3192A Transceiver Modules

**Installed):** 4.3 kg (9.5 lbs)

## **Electrical**

 AC voltage:
 100 - 127 volts
 200-240 volts

 Maximum current:
 1.5A max
 0.75A max

 Frequency range:
 50/60 Hz
 50/60 Hz

## **Environmental**

	Operating	Non-Operating
Temperature:	0°C to 55°C (32°F to 131°F)	-40°C to 70°C (-40°F to 158°F)
Relative humidity: (non-condensing)	15% to 95% at 40°C (104°F)	15% to 90% at 65°C (149°F)
Maximum altitude:	4.6 km (15,000 ft)	4.6 km (15,000 ft)

## Connectors

The RS-232-C console port conforms to V.22 bis.

## Electromagnetic

**Emissions**: FCC part 15 Class A

EN 55022 / CISPR-22 Class A

VCCI Level I

Complies with Canadian EMC Class A requirements.

Immunity: See the Declaration of Conformity for details at the end of the

Regulatory Statements in this guide.

## Safety

EN60950 (1992) + A1, A2 / IEC950: 1991 + A1, A2 UL 1950 CSA 950 NOM-019-SCFI-1993

# Sample Console Configurations

# Windows 3.1 Terminal Application

You can use a PC with the Windows 3.1 Terminal Application for console management access to the switch. This section provides an example of the configuration settings to use with the Windows 3.1 Terminal Application.

## **Option Settings:**

- Terminal Emulation: DEC VT-100 (ANSI)
- **■** Terminal Preferences:
  - Terminal Modes:
    - Line-Wrap: On
    - Sound: On
  - CR > CR/LF: No
  - Use Function, Arrow, Ctrl keys for Windows: NO

#### **Communications:**

- 9600 Baud or 19.2 baud recommended
- No Parity
- 8 bits
- 1 stop bit
- Xon/Xoff
- Carrier Detect

## **Procomm Plus V2.01**

## **Terminal Options**

**■** Terminal Emulation: VT-100

■ Duplex: FULL

■ Software Flow Control: Xon/Xoff

**■** Hardware Flow Control: Off

Screen Scroll: ONCR Translation: CR

**■** BS Translation: NON-DESTRUCTIVE

Break Length: 350Enquiry: CIS B

■ ANSI 7 or 8 bit command: 7 bit

■ ASCII Protocol Options

■ Echo Locally: NO

Expand Blank Lines: NO

■ Expand Tabs: YES

■ Clear pacing: 1 ms

■ Line pacing: 1

■ Pace character: 0

■ Strip 8 bit: NO

■ ASCII download timeout: 10

■ CR translation (upload): NONE

■ LF translation (upload): NONE

■ CR translation (download): NONE

■ LF translation (download): NONE

# Other Terminal Emulators

For other communication programs, use the following table as a configuration guide:

Option	Setting
Baud rate	300, 600, 1200, 2400, 9600, 19200, or 38400. (9600 or 19200 recommended)
Parity	None
Data bits and stop bits	8, 1
Autobaud upon break	On
Handshaking	None
Terminal emulation	VT100. For Windows, disable the "Use Function, Arrow, and Ctrl Keys for Windows" option, located in the Terminal Preference menu.
Duplex	Full
Soft flow control (XON/XOFF)	On (input and output)
Hard flow control (RTS/CTS)	Off
Line wrap	On
Screen scroll	On
CR translation	CR
Backspace (BS) translation	Destructive
Break length (milliseconds)	350
Enquiry (ENQ)	Off
EGA/VGA true underline	Off
Terminal width	80
ANSI 7 or 8 bit commands	7

## **Switch Reference**

## Front of Switch

All LEDs used by the Switch 800T are on the front panel. During the power-on or reset cycles, all LEDs are on.

#### **Switch Status LEDs**

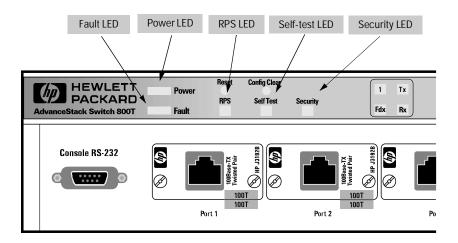


Figure D-1. Example of Status LEDs for the Switch 800T

LED	State	Meaning of LED	
Power (green)	on	The switch is receiving power from the main power supply or from the optional RPS (redundant power supply).	
	off	The switch is not receiving power. See chapter 9, "Troubleshooting".	
Fault (orange)	on (steady)	Either the switch hardware has failed the self-test or a software error has occurred and auto-reboot is off. In this case, push the Reset button. See chapter 9, "Troubleshooting".	
		Also operates in conjunction with the Self-test LED during the power-on and reset self-test cycles. See "Self-test", below.	
	flashing	The switch is operable, but a fault condition has occurred in the switch or an installed transceiver module, a fan, or a redundant power supply (RPS—if connected). The corresponding fault LED for the affected component will flash simultaneously. Refer to chapter 9, "Troubleshooting".	
RPS (green)	on	An (optional) Redundant Power Supply (RPS) is connected and functioning properly.	
	off	No RPS is connected to the switch, or the RPS has failed. See chapter 9, "Troubleshooting".	
Self-test (green)	off	Normal operation, except as described below.	
	on (steady)	Power-on or reset self-test. During this time the Fault LED is also on and the switch is inoperable.	
	flashing	<ul> <li>Indicates one of the following:</li> <li>A self-test failure has occurred, but the switch remains partially operable.</li> <li>The Config Clear button is being pressed during a reset. Release the button. (Refer to "Reset and Config Clear Buttons" on page D-4.)</li> </ul>	
Security (orange)	flashing	Either an SNMP Authentication failure or a traffic filter violation has occurred. Refer to chapter 9, "Troubleshooting".	

#### **Port Status LEDs**

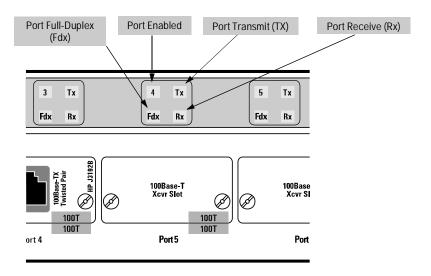


Figure D-2. Example of Port Status LEDs for the Switch 800T

LED	State	Meaning of LED
1 through 8 (port enabled LED) (green)	on	The indicated port on the indicated transceiver module is enabled and the link is operational.
Tx (green)	on or flashing	The indicated port is transmitting packets.
Rx (green)	on or flashing	The indicated port is receiving packets.
Fdx (green)	on	The indicated port is enabled and configured for full-duplex operation.

## **Reset and Config Clear Buttons**

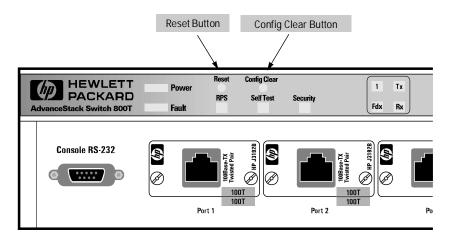


Figure D-3. Reset and Config Clear Buttons on the Switch 800T

Button	Action
Reset	Performs a software and hardware reset, including a hardware self-test. (This achieves the same result as disconnecting the power from the switch, then reconnecting it.)
Config Clear	<ul> <li>When used as described below, causes the switch to delete the current configuration, and to reboot to a default configuration. This resets the switch to the factory default and is a drastic action that interrupts switch operation and can seriously diminish or even halt network operation. Depending on the current network operating condition, it may be best to avoid a reset until you can schedule system downtime. Some reasons for a reset include:         <ul> <li>The switch appears to be malfunctioning, and pressing just the Reset button does not clear the problem.</li> <li>Several elements in the configuration may be inconsistent with each other and it is more efficient to start with the defaults than to try to adjust individual parameters.</li> </ul> </li> </ul>

### To clear the current configuration and reboot the switch:

- 1. Press and release the Reset button. All LEDs turn on momentarily.
- While all LEDs are turned on, press and hold the Config Clear button until the Self-test LED begins flashing, then immediately release the Config Clear button. If a console is connected, you will see the following message when the switch has reset itself to the factory default configuration and rebooted.

Waiting for speed sense. Press enter to continue.

3. Press [Enter] to restart the console.

### To clear the password(s)

Press and release the Config Clear button.

### Console RS-232 Port

The switch's Console RS-232 port is a standard RS-232 serial link used to connect a Windows-based PC, a terminal, or a modem. (For pinouts, refer to appendix A, Cables and Connectors.)

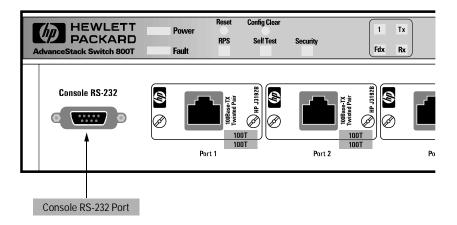


Figure D-4. Front Panel of the Switch 800T

### Back of the Switch

Note

If you use the optional redundant power supply (RPS) do not use the power cord that plugs into the power cord receptacle (figure D-5).

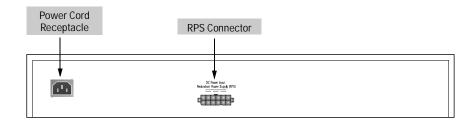


Figure D-5. Back Panel of the Switch 800T

### **Power Connector**

The Switch 800T does not have a power switch; it is powered on when the power cord is plugged into the power connector. The switch's power supply automatically adjusts to any AC power source between 90 and 240 volts. There are no voltage or frequency range settings needed.

### The HP J2962 AdvanceStack Redundant Power Supply (RPS)

The HP J2962 AdvanceStack Redundant Power Supply is an optional power supply you can connect to your Switch 800T *instead of the switch's own power cord* to provide a redundant power source. That is, the RPS replaces the switch's single AC power supply and single DC power converter with a dual AC power supply and dual DC power converter. For more on using the optional RPS with the Switch 800T, refer to "Connect a Power Supply" on page 1-16, and to the documentation provided with the RPS.

# **BOOTP Operation**

### Overview

Bootp is used to download configuration data from a Bootp server to the switch or to a VLAN configured on the switch. Either a minimal IP configuration or a full configuration can be retrieved from the Bootp server.

Note

The Switch 800T supports only the DHCP (Dynamic Host Configuration Protocol) implementations that are backwards compatible with Bootp.

# The Bootp Process

Whenever the switch reboots with the IP Config parameter set to Use Bootp (the default), Bootp requests are broadcast on all local networks. When the Bootp server receives the request it searches its Bootp database for a record entry that matches the MAC address in the Bootp request. If a match is found, the configuration data in the associated database record is returned to the switch. For most Unix systems, the Bootp database is contained in the /etc/bootptab file.

# **Bootp Database Record Entries**

An entry in the Bootp table file /etc/bootptab to update an IP address and subnet mask to the Switch 800T or a VLAN configured in the switch would be similar to this entry:

```
j3245switch:\
ht=ether:\
ha=080009123456:\
sm=255.255.248.0:\
lg=11.22.33.44:\
hn:\
ip=55.66.77.88:\
vm=rfc1048
```

An entry in the Bootp table file /etc/bootptab to tell the switch or VLAN where to obtain a configuration file download would be similar to this entry:

```
j3245switch:\
ht=ether:\
ha=080009123456:\
sm=255.255.248.0:\
lg=11.22.33.44:\
hn:\
ip=55.66.77.88:\
T144="switch.cfg":\
vm=rfc1048
```

### where:

j3245switch	is a user-defined symbolic name to help you find the correct section of the bootptab file. If you have multiple switches that will be using Bootp to get their IP configuration, you should use a unique symbolic name for each switch.
ht	is the "hardware type" . For the HP AdvanceStack Switch 800T, set this to $\bf ether$ (for Ethernet). This tag must precede the ha tag.
ha	is the "hardware address" . Use the switch's (or VLAN's) 12-digit MAC address.
sm	is the subnet mask of the subnet in which the switch (or VLAN) is installed.
lg	TFTP server address (source of final configuration file)
hn	send nodename (boolean flag, no "=value" needed)
ip	is the IP address to be assigned to the switch (or VLAN).
T144	is the vendor-specific "tag" identifying the configuration file to download.
vm	is a required entry that specifies the Bootp report format. For the HP AdvanceStack Switch 800T, set this parameter to rfc1048.

# **Configuring Bootp**

In its default configuration, the switch is configured for Bootp operation. However, if an IP address has previously been configured or if the IP Config parameter has been set to Disabled, then you will need to use this procedure to reconfigure the parameter to enable Bootp operation.

This procedure assumes that a Bootp database record has already been entered into an appropriate Bootp server, and that the necessary network connections are in place.

### To configure the switch or a VLAN for Bootp:

- 1. In the Main Menu, select Configuration.
- 2. In the Configuration screen select Internet (IP) Service.
- 3. Press E (for Edit mode), then use ↓ to move the cursor to the IP Config parameter field.
- 4. Use the Space bar to select the Use Bootp option for the IP Config parameter. (This disables access to the IP Address, Subnet Mask, and Gateway parameters.)
- 5. Press Enter to exit from edit mode, then press S to save the configuration change.

When you reboot the switch with Bootp enabled, it will do one of the following:

- Receive a minimal configuration (IP address and subnet mask).
- If the reply provides information for downloading a configuration file, the switch then uses TFTP to download the file from the designated source, then reboots itself. (This assumes that the switch or VLAN has connectivity to the TFTP file server specified in the Bootp database configuration record and that the Bootp database record is correctly configured.)

# **MAC Address Management**

# Overview

The Switch 800T assigns MAC addresses in the following three areas:

- Default MAC address assigned at the factory
- Automatically assigned MAC address(es) corresponding to any VLANs you configure in the switch
- The Spanning Tree Protocol (STP) uses either the default MAC address for the switch or, if VLANs are configured, the MAC addresses automatically assigned to the VLANs.

# Switch (Default) MAC Address

A default MAC address is assigned to each Switch 800T at the factory. This address is on the label below the Console RS-232 port (shown below):

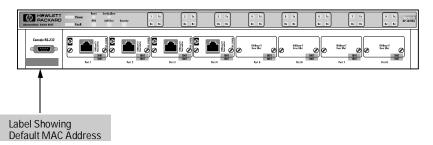


Figure F-1. Location of the Default MAC Address Assigned to the Switch

If there are no VLANs configured on the Switch 800T, then the factory-assigned MAC address is the same for all ports on the switch.

### To display the MAC address assigned to a port:

- 1. Select Status and Counters from the Main Menu.
- 2. Select Port Counters in the Statistics menu.
- 3. Select the desired port.
- 4. Select the Show details option to display the port counter details for the selected port. Included will be the MAC address assigned to that port. If VLANs are configured, refer to "VLAN MAC Address" on page F-3.

### VLAN MAC Addresses

If you add VLANs to the Switch 800T, each VLAN is automatically assigned a different MAC address. All ports in a particular VLAN will have the same MAC address. To determine the MAC address assigned to a particular VLAN, display the port data for any port assigned to that VLAN.

### To display the MAC address and other data for a selected port:

- 1. From the Main Menu, select Status and Counters.
- 2. Display the Port Counters screen.
- 3. Select a port that is assigned to the VLAN for which you want to determine the corresponding MAC address.
- 4. Select the Show details option to display the port counter details for the selected port. Included will be the MAC address assigned to that port (and the corresponding VLAN).

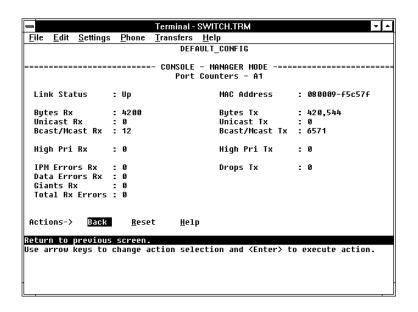


Figure F-2. Example of the Port Counter Details for a Selected Port

# MAC Addresses (for Spanning Tree Operation)

When no VLANs are configured, STP uses the MAC address assigned to the switch. (This is the MAC address printed on the label on the front of the switch.) When VLANs are configured, STP must be configured separately for each VLAN. In this case, the MAC address assigned to each instance of STP is the MAC address assigned to the corresponding VLAN. These addresses appear in the Spanning Tree Information screen . Refer to the "Switch (Default) MAC Address" on page F-2, or "VLAN MAC Addresses" on page F-3.)

# Safety and Regulatory Statements

# **Safety Information**

### **Safety Symbols.**



Documentation reference symbol. If the product is marked with this symbol, refer to the product documentation to get more information about the product.

WARNING

A WARNING in the manual denotes a hazard that can cause injury

or death.

CAUTION

A CAUTION in the manual denotes a hazard that can damage

equipment.

Do not proceed beyond a WARNING or CAUTION notice until you have understood the hazardous conditions and have taken appropriate steps.

### Grounding.

These are safety class I products and have protective earthing terminals. There must be an uninterruptible safety earth ground from the main power source to the product's input wiring terminals, power cord, or supplied power cord set. Whenever it is likely that the protection has been impaired, disconnect the power cord until the ground has been restored.

### For LAN cable grounding:

- If your LAN covers an area served by more than one power distribution system, be sure their safety grounds are securely interconnected.
- LAN cables may occasionally be subject to hazardous transient voltages (such as lightning or disturbances in the electrical utilities power grid).
   Handle exposed metal components of the network with caution.

### Servicing.

There are no user-serviceable parts inside these products. Any servicing, adjustment, maintenance, or repair must be performed only by service-trained personnel.

These products do not have a power switch; they are powered on when the power cord is plugged in.

### Informations concernant la sécurité

### Symboles de sécurité



Symbole de référence à la documentation. Si le produit est marqué de ce symbole, reportez-vous à la documentation du produit afin d'obtenir des informations plus détaillées.

WARNING

Dans la documentation, un WARNING indique un danger susceptible d'entraîner des dommages corporels ou la mort.

CAUTION

Un texte de mise en garde intitulé CAUTION indique un danger susceptible de causer des dommages à l'équipement.

Ne continuez pas au-delà d'une rubrique WARNING ou CAUTION avant d'avoir bien compris les conditions présentant un danger et pris les mesures appropriées.

Cet appareil est un produit de classe I et possède une borne de mise à la terre. La source d'alimentation principale doit être munie d'une prise de terre de sécurité installée aux bornes du câblage d'entrée, sur le cordon d'alimentation ou le cordon de raccordement fourni avec le produit. Lorsque cette protection semble avoir été endommagée, débrancher le cordon d'alimentation jusqu'à ce que la mise à la terre ait été réparée.

Mise à la terre du câble de réseau local:

- si votre réseau local s'étend sur une zone desservie par plus d'un système de distribution de puissance, assurez-vous que les prises de terre de sécurité soient convenablement interconnectées.
- Les câbles de réseaux locaux peuvent occasionnellement être soumis à des surtensions transitoires dangereuses (telles que la foudre ou des perturbations dans le réseau d'alimentation public). Manipulez les composants métalliques du réseau avec précautions.

Aucune pièce contenue à l'intérieur de ce produit ne peut être réparée par l'utilisateur. Tout dépannage, réglage, entretien ou réparation devra être confié exclusivement à un personnel qualifié.

Cet appareil ne comporte pas de commutateur principal ; la mise sous tension est effectuée par branchement du cordon d'alimentation.

### Hinweise zur Sicherheit

### Sicherheitssymbole.



Symbol für Dokumentationsverweis. Wenn das Produkt mit diesem Symbol markiert ist, schlagen Sie bitte in der Produktdokumentation nach, um mehr Informationen über das Produkt zu erhalten.

WARNING

Eine WARNING in der Dokumentation symbolisiert eine Gefahr, die Verletzungen oder sogar Todesfälle verursachen kann.

CAUTION

CAUTION in der Dokumentation symbolisiert eine Gefahr, die das Gerät beschädigen kann.

Fahren Sie nach dem Hinweis WARNING oder CAUTION erst fort, nachdem Sie den Gefahrenzustand verstanden und die entsprechenden Maßnahmen ergriffen haben.

Dies ist ein Gerät der Sicherheitsklasse I und verfügt über einen schützenden Erdungsterminal. Der Betrieb des Geräts erfordert eine ununterbrochene Sicherheitserdung von der Hauptstromquelle zu den Geräteingabeterminals, den Netzkabeln oder dem mit Strom belieferten Netzkabelsatz voraus. Sobald Grund zur Annahme besteht, daß der Schutz beeinträchtigt worden ist, das Netzkabel aus der Wandsteckdose herausziehen, bis die Erdung wiederhergestellt ist.

### Für LAN-Kabelerdung:

- Wenn Ihr LAN ein Gebiet umfaßt, das von mehr als einem Stromverteilungssystem beliefert wird, müssen Sie sich vergewissern, daß die Sicherheitserdungen fest untereinander verbunden sind.
- LAN-Kabel können gelegentlich gefährlichen Übergangsspannungen ausgesetzt werden (beispielsweise durch Blitz oder Störungen in dem Starkstromnetz des Elektrizitätswerks). Bei der Handhabung exponierter Metallbestandteile des Netzwerkes Vorsicht walten lassen.

Dieses Gerät enthält innen keine durch den Benutzer zu wartenden Teile. Wartungs-, Anpassungs-, Instandhaltungs- oder Reparaturarbeiten dürfen nur von geschultem Bedienungspersonal durchgeführt werden.

Dieses Gerät hat keinen Netzschalter; es wird beim Anschließen des Netzkabels eingeschaltet.

### Considerazioni sulla sicurezza

### Simboli di sicurezza.



Simbolo di riferimento alla documentazione. Se il prodotto è contrassegnato da questo simbolo, fare riferimento alla documentazione sul prodotto per ulteriori informazioni su di esso.

WARNING

La dicitura WARNING denota un pericolo che può causare lesioni o

morte.

CAUTION

La dicitura CAUTION denota un pericolo che può danneggiare le

attrezzature.

Non procedere oltre un avviso di WARNING o di CAUTION prima di aver compreso le condizioni di rischio e aver provveduto alle misure del caso.

Questo prodotto è omologato nella classe di sicurezza I ed ha un terminale protettivo di collegamento a terra. Dev'essere installato un collegamento a terra di sicurezza, non interrompibile che vada dalla fonte d'alimentazione principale ai terminali d'entrata, al cavo d'alimentazione oppure al set cavo d'alimentazione fornito con il prodotto. Ogniqualvolta vi sia probabilità di danneggiamento della protezione, disinserite il cavo d'alimentazione fino a quando il collegamento a terra non sia stato ripristinato.

### Per la messa a terra dei cavi LAN:

- se la vostra LAN copre un'area servita da più di un sistema di distribuzione elettrica, accertatevi che i collegamenti a terra di sicurezza siano ben collegati fra loro;
- i cavi LAN possono occasionalmente andare soggetti a pericolose tensioni transitorie (ad esempio, provocate da lampi o disturbi nella griglia d'alimentazione della società elettrica); siate cauti nel toccare parti esposte in metallo della rete.

Nessun componente di questo prodotto può essere riparato dall'utente. Qualsiasi lavoro di riparazione, messa a punto, manutenzione o assistenza va effettuato esclusivamente da personale specializzato.

Questo apparato non possiede un commutatore principale; si mette scotto tensione all'inserirsi il cavo d'alimentazione.

# Consideraciones sobre seguridad

### Símbolos de seguridad.



Símbolo de referencia a la documentación. Si el producto va marcado con este símbolo, consultar la documentación del producto a fin de obtener mayor información sobre el producto.

WARNING

CAUTION

Una WARNING en la documentación señala un riesgo que podría resultar en lesiones o la muerte.

Una CAUTION en la documentación señala un riesgo que podría resultar en averías al equipo.

No proseguir después de un símbolo de WARNING o CAUTION hasta no haber entendido las condiciones peligrosas y haber tomado las medidas apropiadas.

Este aparato se enmarca dentro de la clase I de seguridad y se encuentra protegido por una borna de puesta a tierra. Es preciso que exista una puesta a tierra continua desde la toma de alimentación eléctrica hasta las bornas de los cables de entrada del aparato, el cable de alimentación o el juego de cable de alimentación suministrado. Si existe la probabilidad de que la protección a tierra haya sufrido desperfectos, desenchufar el cable de alimentación hasta haberse subsanado el problema.

Puesta a tierra del cable de la red local (LAN):

- Si la LAN abarca un área cuyo suministro eléctrico proviene de más de una red de distribución de electricidad, cerciorarse de que las puestas a tierra estén conectadas entre sí de modo seguro.
- Es posible que los cables de la LAN se vean sometidos de vez en cuando a voltajes momentáneos que entrañen peligro (rayos o alteraciones en la red de energía eléctrica). Manejar con precaución los componentes de metal de la LAN que estén al descubierto.

Este aparato no contiene pieza alguna susceptible de reparación por parte del usuario. Todas las reparaciones, ajustes o servicio de mantenimiento debe realizarlos solamente el técnico.

Este producto no tiene interruptor de potencia; se activa cuando se enchufa el cable de alimentación.

# **Safety Information**

安全性の考慮

安全記号



マニュアル参照記号。製品にこの記号がついている場合はマニュアルを参照し、注意事項等をご確認ください。

WARNING マニュアル中の「WARNING」は人身事故の原因となる危険を示します。

CAUTION マニュアル中の「CAUTION」は装置破損の原因となる危険を示します。

「WARNING」や「CAUTION」の項は飛ばさないで必ずお読みください。危険性に関する記載事項をよく読み、正しい手順に従った上で次の事項に進んでください。

これは安全性クラスIの製品で保護用接地端子を備えています。主電源から製品の入力配線端子、電源コード、または添付の電源コード・セットまでの間、切れ目のない安全接地が存在することが必要です。もしこの保護回路が損なわれたことが推測されるときは、接地が修復されるまで電源コードを外しておいてください。

LAN ケーブルの接地に関して:

- もし貴社の LAN が複数の配電システムにより電力を受けている領域をカバーしている場合には、それらのシステムの安全接地が確実に相互に結合されていることを確認してください。
- LAN ケーブルは時として危険な過度電圧(例えば雷や、配電設備の電力網での障害)にさらされることがあります。露出した金属部分の取扱いには十分な注意をはらってください。

本製品の内部にはユーザーが修理できる部品はありません。サービス、調整、保守および修理はサービス訓練を受けた専門家におまかせください。

本製品には電源スイッチがありません。電源コードを接続したとき電源入となります。

# **Regulatory Statements**

### FCC Statement (U.S.A.)

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### VCCI Class 1 (For Japan Only).

### 注意

この装置は、情報処理装置等電波障害自主規制協議会(VCCI)の基準に基づく第一種情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

## **European Community**

This equipment complies with CISPR22/EN55022 Class A.

### Note

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

### **DOC Statement (Canada)**

 $Complies \ with \ Canadian \ EMC \ Class \ A \ requirements.$ 

# Safety and Regulatory Statements

### **Declaration of Conformity**

The following Declaration of Conformity for the HP AdvanceStack Switch 800T complies with ISO/IEC Guide 22 and EN 45014. The declaration identifies the product and related accessories, the manufacturer's name and address, and the applicable specifications that are recognized in the European community.

### DECLARATION OF CONFORMITY

according to ISO/IEC Guide 22 and EN45014

Manufacturer's Name: Hewlett-Packard Company

Manufacturer's Address: 8000 Foothills Blvd.

Roseville, CA 95747-5502

U.S.A.

declares that the product:

Product Name: HP AdvanceStack Switch 800T

Model Number: HP J3245A

Accessories covered: HP J3192A, HP J3192B, HP J3193B

conforms to the following Product Specifications:

Safety: EN60950 (1992)+A1,A2 / IEC 950:1991+A1,A2

EMC: EN 55022 (1994) / CISPR-22 (1993) class A

EN50082-1 (1992)

prEN 55024-2 (1992) / IEC 801-2 (1991) 4 kV CD, 8 kV AD

prEN 55024-3 (1991) / IEC 801-3 (1984), 3 V/m

prEN 55024-4 (1992) / IEC 801-4 (1988): 1 kV-(power line) 0.5 kV-(signal line)

### **Supplementary Information:**

The product herewith complies with the requirements of the Low Voltage Directive 73/23/EEC and the EMC Directive 89/336/EEC and carries the CE marking accordingly. LED's in this product(s) are Class-1 in accordance with EN60825-1:1994.

Tested with Hewlett-Packard Co. products only.

Roseville, February 18, 1997

Sandra L. Shechan Sandra L. Sheehan, Quality Manager

European Contact: Your local Hewlett-Packard Sales and Service Office or Hewlett-Packard GmbH, Department TRE, Herrenberger Strasse 130, D-71034 Böblingen (FAX:+49-7031-14-3143).

# **Safety and Regulatory Statements** Regulatory Statements

Safety and Regulatory Statements

# Index

Numerics	automatic reboot D-2
100T, blue bar 1-5	
802.2 7-31	В
802.3 SAP 3-22	backbone, high speed 7-5 bandwidth
A	conserving 7-30
A.09.70 router release 7-22 ABC 3-23 configuration 7-32, 7-37 encapsulation type 7-31 example 7-30 operation 7-30 use 7-30 VLAN 7-30, 7-32 access manager operator 3-13	reduce usage 7-23 savings 3-23, 7-24 usage, filters 7-8 Baud rate C-3 baud rate 2-2, 9-5 BBS 9-8 blocked port 7-2 blocking state 3-21 Bootp 2-1, 3-9, 5-1, E-1 configuring E-3 table file E-2 Unix systems E-1
accessory kit 1-8, 1-10	Bootptab file E-2
actions 2-5, 2-6 Actions menu 3-2	brackets 1-10
active path 7-2	brackets, mounting 1-10
address	bridge 1-2, 1-21
aging 3-5 manager 3-14 network manager 5-3 resolution protocol 7-30 table 4-1 table, port 4-7	broadcast 7-32 ARP 7-30 control 7-30, 7-34 domain iv, 3-11, 3-23, 7-14, 7-30 loop 7-5 restricting 3-6 storm 7-2
advanced commands 6-1	traffic, IP/IPX 3-23
AdvanceStack Assistant 5-1, 8-2	traffic, port trunk 7-5
air flow ventilation 1-8  ANSI terminal 8-9  ARP 7-30, 7-31  ARP filter 3-22  ARP, proxy 7-31  ASCII terminal 1-22  asterisk 2-6  authentication trap 3-15  auto-discovery 5-3  automatic broadcast control	buffers, message 4-3 buffers, packet 4-3 button D-5 Config Clear D-2, D-5 Reset D-2, D-5
See ABC.	

C	console 1-2, 1-21, 1-24, 9-5, 9-7
	navigation 2-5, 2-6
cabinet, rack 1-9	operation 2-6
cable 1-15 crossover 9-4	console configuration
	connection 2-3
network connections A-2	interface 2-1
problems 9-6	port 2-1, 2-2, D-6
RS-232 1-24' A-2	ProComm Plus V2.01 C-2
serial port A-7	remote 1-23
space 1-8	RS-232 1-7, 2-1, 2-2, 3-16
twisted-pair connector pin-outs A-3	session 2-2
CD 1-19	terminal emulators C-3
clearled 6-6	Windows 3.1 terminal C-1
ClearLED command 3-15	Console Configuration screen 3-17
command prompt 2-4, 2-12, 6-2	cooling 1-8
exit 6-3	copyright screen 2-2
VLAN 6-2	crash information 2-2
commands, advanced 6-1	crossover cable 9-4
commands, system management 6-1	
communities, SNMP 3-13	D
compact disk 1-19	D
config 6-6	date format 4-15
Config Clear button 2-9, D-2, D-5	date parameter 3-5
configuration 2-4, 7-2	DEC LAT filter 3-22
access 3-3	Declaration of Conformity 13
activating 5-3	default MAC address F-2
Bootp E-2	DEFAULT_CONFIG 6-2
console 3-17	DEFAULT_VLAN 3-11, 7-17
factory default iv, 1-2, 1-21, 2-12, 3-1, 3-2,	delete config 6-6
3-11, 3-21, 6-2	DHCP E-1
features 3-1	diagnosing with the LEDs 9-2
IPX 3-7	diagnostic test 1-7
IP 3-9	diagnostic tests 9-7
network monitoring 3-18	testing twisted-pair cabling 9-8
port 3-6	direct-connect console 2-3
port trunk 7-6	domain 3-11
reset 2-12	domain, broadcast iv, 3-23, 7-30
screen 3-3	down time 2-2
serial link 3-16	download configuration 8-8
SNMP 3-13	Download Manager 8-2
spanning tree 3-21, 7-2	download
system 3-5	IP 8-2
traffic/security filter 3-22, 7-10	IPX 8-2
transfer 8-8	operating system 2-4
trap receivers 3-15	OS 4-17, 8-5
VLAN 3-11	TFTP 8-2, 8-3
configure SNMP 5-3	duplicate MAC address7-22, 9-7
connector specifications B-2	

E	ground
ECHO filter 3-22	electrical 1-8
electrical outlet, grounded 1-6	grounded power supply 1-6
electrical specifications B-1	
electromagnetic specifications B-2	Н
enabled, port 4-4	
environmental specifications B-1	hardware reset
Event Log 2-2	reset 2-12
event log 2-4, 2-12, 3-15, 3-17, 4-15, 4-17	Help 2-5, 3-2, 6-4
navigation 4-16	Help, listing 6-3
severity code 4-15	Help, stop listing 6-3
exit 6-7	history 6-4
exit from command prompt 6-3	History command 8-7
exit from command prompt 0-3	host-only 7-21
_	HP J2962A 1-2
F	HP proprietary MIB 5-2
factory default configuration 3-2	HP Router 440 7-22
failure, OS download 8-6	HP Router 470 7-22
fan 9-3	HP Router 480 7-22
fault D-1	HP Router 650 7-22
fault LED D-2	hub connection 1-19
feet, rubber 1-15	
filter 3-22, 7-8	I
configuration 7-10	
effect of IGMP 7-26	ID, port 4-4
port trunk 7-6	IEEE 802.1d 3-21, 7-2, 7-3
protocol types 3-22	IGMP
types 7-8	configuring 7-26, 7-28
flooded traffic, port trunk 7-5	effect on filters 7-26
format, date 4-15	example 7-24, 7-25
format, time 4-15	high-priority forwarding 7-26
forwarding state 3-21	IP multicast address range 7-26
	leave group 7-23
forwarding table.  See address table.	multicast group 7-23, 7-26
four-port 10Base-T module D-3, D-4	multicast traffic 3-12
	multimedia 3-12
FTP library service 9-8	operation 7-23
	querier setting, changing 7-29
G	query 7-23
gatoway	report 7-23
gateway	VLAN, port moves 7-27
frame encapsulation type 3-7	in-band 1-21
IP 3-10	in-band access 2-1
IP address 3-9	in-band security 7-8
IPX 3-7 router 3-10	inbound Telnet 3-17
	installation problems 9-5
get 6-7, 8-8	Interconnect Manager
getmib 6-6, 7-29	See AdvanceStack Assistant.

IP	LED 1-7
broadcast traffic 3-23	diagnosing the switch status 9-2
configuration 3-9	Dx 9-4
download 8-2	fan fault D-1
gateway (IP) address 3-9	fault 1-7, 9-3, 9-7, D-1, D-2
gateway address 3-9	meanings described D-2
host-only 7-21	pattern during self test 9-2
mgmt 4-3	port D-1
SNMP 5-1	port enabled 9-4
subnet mask 3-9, 3-10	port Rx D-3
1-21, 3-17	port Tx D-3
IPX 3-7	power 9-3, D-1
broadcast traffic 3-23	power fault D-1
configuration 3-7	Power LED D-2
download 8-2	power-on D-1
encapsulation 3-7	power-on cycle D-1
factory default configuration 3-7	Reset cycle D-1
gateway 3-7	RPS 1-17, D-1, D-2
Gateway Encap 3-8	Rx 9-4
gateway encapsulation 7-17	security 3-15, 9-4, D-1, D-2
mgmt 4-3	self-test 9-3, D-1, D-2
MIB 5-1	status D-1
network number 3-7	Tx 9-4
node number 3-7	link speed, port trunk 7-6
ipxping 6-5	link status, port 4-5
-rr8 ··· · ·	Link, serial 3-16
T	linktest 6-5
L	log 6-8
LAN adapter cards	LOGOUT 2-3, 2-9
to test end-to-end communications 9-8	LOGOUT command 2-4
latency 3-23, 7-30	loop, broadcast 7-5
learning bridge 3-1	loop, redundant 3-2
leave group	roop, roughtune o z
See IGMP.	
	M
	MAC address E-1, F-1
	default F-2
	duplicate 9-7
	factory assigned
	label F-2
	learned 4-7
	on port 4-8
	port F-2
	port counters screen F-3
	VLAN 7-15, F-2, F-3
	Main many 192 9 4 2 9 4 1

manager	navigation, event log 4-16
access 3-13	NETBIOS filter 3-22
address 3-14	network
address field 5-3	connection 1-19
password 2-7 — 2-10	design guidelines 1-19
Manual, IP address 3-10	device connection 1-19
MDI 9-4	management 1-2
MDI-X 9-4	management functions 5-3
media type, port trunk 7-6	manager address 5-3
media, port 4-4	number, IPX 3-7
memory 4-3	VLAN monitoring parameter 3-20
message buffers 4-3	topology 9-6
mib 7-29	traffic overload 3-20
access, port ID 4-4	Network Monitoring Port screen 3-18
HP proprietary 5-1	node address, IPX 3-7
IPX 5-1	Novell Standard IPX MIB 5-1
listing 5-1	NSQ reply, proxy 7-32
9	NSQ Tepty, proxy 7-32
standard 5-1 walkmib 6-7	
	0
Microsoft Windows 3.1 1-22	operating temperature 19
mode, port 4-4	operating temperature 1-8
modem 1-21, 1-24, 2-3, 2-4, D-6	operator access 3-13
modem access 2-1	operator mode 2-8
modem cable pin-out A-8	operator password 2-8, 2-9
Monitor parameter 3-19	password 2-7
monitoring 4-1	OS
monitoring a VLAN 3-20	download 4-17
monitoring traffic 3-18	download failure 8-6
MORE 6-3	download, TFTP 8-3
mount	download, troubleshooting 8-6
brackets 1-10	switch-to-switch download 8-5
precautions 1-8	update utility 8-2
table 1-15	version 4-3, 8-4
multicast address range 7-8	outbound Telnet 3-17
multicast address, spanning tree 7-8	out-of-band access.
multicast filter 7-8	See console RS-232
multicast group	out-of-band management
See IGMP.	RS-232 port pin-out A-6
multicast traffic, port trunk 7-5	
multimedia	P
See IGMP.	_
multiple VLAN 5-1	packet buffers 4-3
multiport bridge 3-1	packet traffic 4-3
multiport transparent bridge, 1-2	page 6-8
- •	
BT.	

navigation ... 2-5, 2-6

password 2-1, 2-2, 2-4	power supply 1-17, D-2
case-sensitive 2-9	power supply, grounded 1-6
clear 2-12	power-on cycle D-1
delete 2-9	precautions for mounting 1-8
incorrect 2-8	print 6-8
length 2-9	priority
lost 2-9	See spanning tree.
setting 2-8	proprietary MIB 5-2
path cost 7-2	protocol filter 7-8
performance 4-3	protocol filter types 3-22
physical specifications B-1	protocol filters 7-9
	proxy ARP 7-31
ping 6-4	proxy NSQ reply 7-32
pin-outs	
minimum cable A-7	public SNMP community 5-3
Port Address Table screen 7-22	put 6-7, 8-8
Port Counters screen F-2, F-3	
port	Q - R
address table 4-7	•
blocked 7-2	querier 7-29
configuration screen 7-6	query7-23
cost	rack 1-2, 1-8, 1-10
counters 4-5	mount 1-9
counters, reset 4-5	readme.txt 8-2
data 4-4	reboot 2-4, 2-6, 2-10, 2-12, 5-3, D-5
MAC address F-2	automatic D-2
traffic patterns 4-5	recommended cables A-2
monitoring 7-15	reconfigure 2-6
monitoring, port trunk 7-6	redo 6-8
name 3-6	redundant loops 3-2
traffic patterns 4-5	redundant path 7-2
port trunk 7-5	spanning tree 3-21
configuration 3-6, 7-6	redundant power supply 1-2, 1-16, D-7
filters 7-6	refresh interval, screen 3-17
limit 7-5	Regulatory statements 11
media type 7-6	remote console 1-24
network management 7-6	repeat 6-8
number allowed 7-5	report
source MAC address 7-5	See IGMP.
	reset 2-10, 2-12, 4-17
VLAN 7-6, 7-15	Reset button 4-17, D-1, D-2, D-5
VLAN Assignment screen 7-20	_
power D-1	Reset cycle D-1
connector D-7	reset port counters 4-5
cord 1-6, 1-15, 1-16, 1-17, D-7	restricted access 3-13
grounded 1-8	restricted write access 3-13
LED D-2	
LED pattern during 9-2	
overload 1-8	
space 1-8	

RFC	SNMP 5-1
1213 5-1	authentication failure 9-4, D-2
1493 5-1	communities 3-13, 5-3
1515 5-1	Communities screen 3-13
1573 5-1	configure 5-3
1650 5-1	IP address 5-1
1757 5-1	manager address 3-14
RIP 7-30, 7-31	MIB access, port ID 4-4
RMON 5-1	public community 3-1, 5-3
ROM version 4-3	restricted access 3-13
router 3-23, 7-22, 7-23, 7-30	traps 5-1
gateway 3-10	v1 agent 5-1
router connection 1-19	software, OS 2-4
router release A.09.70 7-22	source MAC filter 7-8
RPS 1-2, 1-8, 1-15, 1-16, 9-3, D-7	source MAC filters 7-9
install 1-17, D-7	source port filter 7-8
LED 1-17, D-2	source port filters 7-9
instead of power cord 1-16, 1-17	spanning tree 3-2, 7-2
RS-232 1-2, 1-21, 1-24, 2-1, 2-2, 9-5	blocked port 7-2
cables for connecting, 8-2, A-2	blocking 3-21
console 3-16	caution 4-11
port 1-7, D-6, F-2	default 3-21
Rx	disabled by VLANs 3-21
see LED.	filter 7-8
	forwarding state 3-21
S	global information 4-10
3	link priority 3-21
Safety information 5	multiple VLANs 7-15
SAP 7-30, 7-31	not in menu 3-21
security 3-11, 7-14, D-1	port cost 3-21
filter 3-22	priority 3-21
in-band 7-8	Spanning Tree Configuration screen 3-21
LED 3-15, D-2	specifications B-1
self-test 1-7, 2-12, 9-2, D-1	connectors B-2
failure D-2	electrical B-1
self-test LED D-2	electromagnetic B-2
serial cable.	environmental B-1
See RS-232.	physical B-1
serial link D-6	speed sense 1-23, 2-2, 9-5, D-5
Serial Link Configuration screen 3-16	standard MIB 5-1
server, Bootp 3-9	statistics 2-4, 4-1
server, TFTP 8-8	clear counters 2-10
setmib 6-6, 7-29	update frequency 3-17
setting a password 2-8	status and counters menu 4-2
severity 4-15	status LED
severity code, event log 4-15	See LED.
SNA filter 3-22	status, port 4-4
SNAP 7-31	

STP	Traffic/Security Filters screen 3-22
See spanning tree.	transceiver, blue 100T bar 1-5
STP, duplicate MAC 7-21	Trap 3-15
subnet 7-23	authentication trap 3-15
subnet address 3-11, 7-14	limit 3-15
subnet mask 1-21, 3-9, 3-10	Trap Receivers Configuration screen 3-15
IP 3-9	authentication trap 3-15
subnetting, multiple 3-23	receiver 5-3
Sun workstation 7-21	SNMP 3-15
switch 2000, "A" version 7-5	Trap Receivers Configuration screen 3-15
switch connection 1-19	troubleshooting 4-1
system configuration screen 3-5	approaches 9-1
system down 2-2	cabling problems 9-6
system name 6-2	diagnosing with the LEDs 9-2
system name v z	diagnostic tests 9-7
	installation problems 9-5
T	LED pattern during power-on 9-2
table mount 1-15	OS download 8-6
Telnet 1-2, 1-7, 1-21, 2-1, 2-2, 2-3, 2-4	
disable or enable 3-17	testing the twisted-pair cables 9-8
	topology faults 9-6
telnet 6-5	unusual network activity 9-7
Telnet, inbound 3-17	trunk
Telnet, outbound 3-17	See port trunk.
temperature, operating 1-8	twisted-pair cable
terminal emulator 1-2, 1-7	pin assignments A-5
terminal, ANSI 8-9	pin-outs A-3
terminal, VT100 8-9	switch-to-computer connection A-3, A-4
testing twisted-pair cabling 9-8	testing 9-8
TFTP	Tx
server 8-8	See LED.
TFTP download 8-2, 8-3	type, port 4-4
TFTP OS download 8-3	
threshold setting 5-3	U
command 6-2	
format 4-15	unauthorized access 3-15
parameter 3-5	Unix, Bootp E-1
server 3-9	unrestricted write access 3-13
Time Protocol Enabled 3-5	unusual network activity 9-7
Time Protocol parameter 3-9	update utility, OS 8-2
time server 3-9	upload configuration 8-8
timep 3-9	
Timep Poll Interval 3-9	V
Timep Server 3-9	V
topology faults 9-6	ventilation 1-8, 1-15, 9-3
traffic filter violation 9-4, D-2	version, OS 6-8, 8-4
traffic monitoring 5-3	version, OS and ROM 4-3
traffic, monitoring 3-18	Vines IP filter 3-22
traffic, port 4-5	

```
virtual LAN
    See VLAN.
VLAN ... 3-9, 3-11, 3-19, 3-20, 6-6, 7-14, 7-15, 7-22, 9-7
    ABC ... 7-30, 7-32, 7-34
    address ... 5-1
    Bootp ... E-1, E-2
    command prompt ... 6-2
    configuration ... 7-20
    configuring ... 7-19
    configuring Bootp ... E-2
    DEFAULT_VLAN ... 3-11
    deleting ... 7-21
    event log entries ... 4-15
    IPX network number ... 3-7
    limit ... 3-11
    MAC address ... F-2, F-3
    management ... 3-11
    multiple ... 5-1, 6-2
    network monitoring ... 3-18
    network monitoring port, effect ... 7-21
    OS download ... 8-2, 8-3
    port monitoring ... 7-15
    port trunk ... 7-6, 7-15
    restrictions ... 7-21
    source port filters ... 7-9
    spanning tree disabled ... 3-11
    spanning tree enabled ... 3-21
    spanning tree usage ... 7-15
    switch capacity ... 3-11
VT100 terminal ... 8-9
W - Z
walkmib ... 6-7
warranty ... ii
web ... 9-8
web site, HP ... 5-2
weight ... 1-9
world wide web ... 9-8
world wide web site ... 5-2
write access ... 3-13
XNS ... 7-21
ZGet ... 6-7, 8-8
```

ZModem ... 8-8 ZPut ... 6-8, 8-8



Technical information in this document is subject to change without notice.

© Copyright 1997 Hewlett-Packard Company Printed in Singapore 3/97

Manual Part Number J3245-90001

