



Dodge Raminator Monster Truck

60-4357

What's Included

Dodge Raminator Plastic Antenna Tube
Transmitter
Box Wrench Owner's Manual

Step One

Installing Batteries


You will need...

One 9V battery for the transmitter (not included)

One 7.2V battery pack for the Dodge Raminator (not included)

Put Battery in the Truck


- Turn the truck off.
- Lift the two latches on the back of the truck to open the battery compartment cover.
- Attach the battery pack's connector to the vehicle's connector. Do not force them together. They fit one way only. Place the connectors in the space inside the compartment and place the battery pack in the compartment. Be sure the wires do not touch any moving parts.
- Replace the cover and secure the tabs.

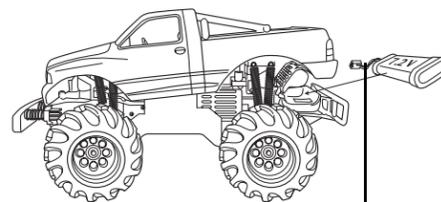

Battery Pack Connector

Put Battery in the Transmitter


- Press **OPEN** on the battery compartment cover and slide it off.
- Insert one 9V battery in the battery compartment, matching the polarity symbols (+ and -) as marked inside.
- Replace the cover and snap it on.

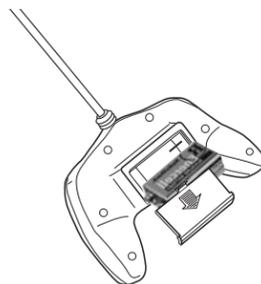

Step Two

Installing the Antenna Tube


Route the antenna wire's loose end through the supplied plastic tube and insert the tube securely into the truck's antenna tube holder.

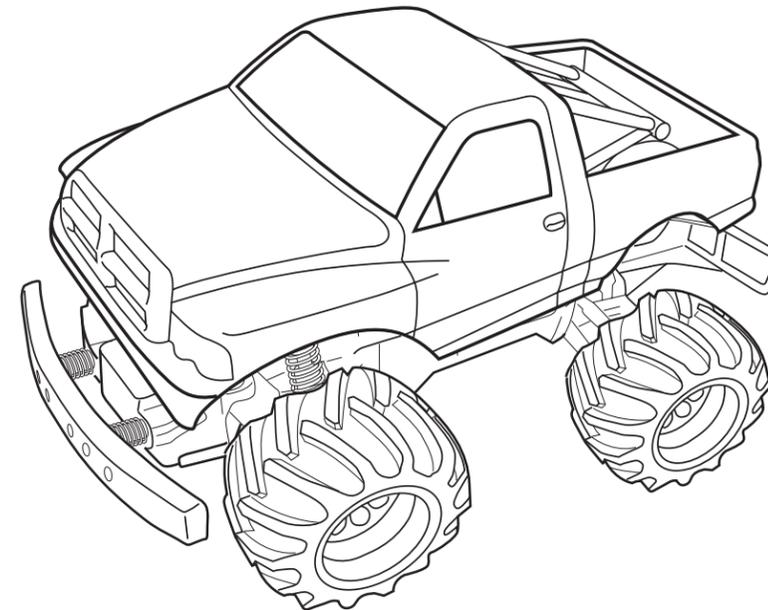

Step Three

Driving the Dodge Raminator

- Turn the Dodge Raminator on. The headlights illuminate.
- Use the transmitter's controls to drive and steer the truck.
- When you finish driving the vehicle, turn the transmitter and vehicle off.

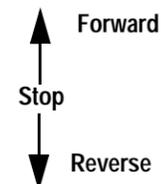


Left Control Lever

- Push forward to move forward. For turbo speed, push forward and to the right.
- Pull backward to move backward.
- Release to stop.

Right Control Lever

- Push to the left to turn left.
- Push to the right to turn right.
- Release to go straight.

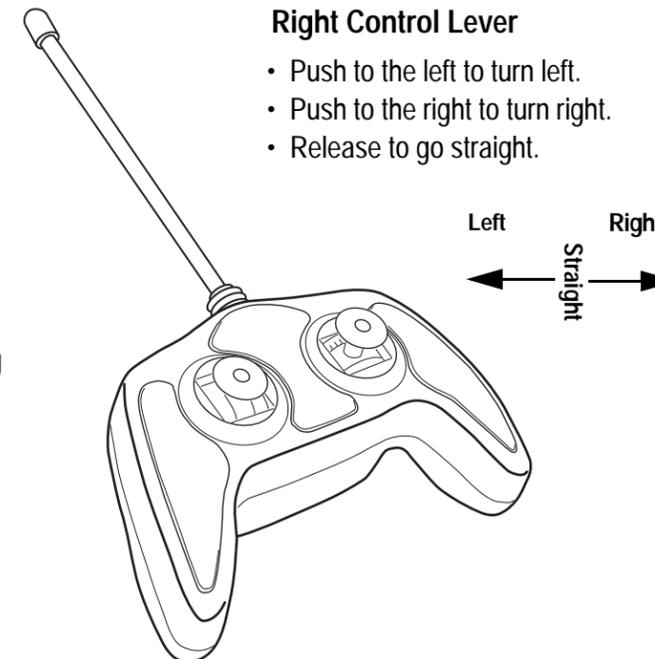

Battery Notes

- Use only fresh batteries of the required size and recommended type.
- Use only the recommended battery pack and charger. You may purchase a charger at your local RadioShack store.
- When the transmitter's range decreases, replace its battery. Never leave dead or weak batteries in the vehicle or transmitter.
- Do not charge the battery pack while it is in the vehicle or immediately after use. Allow it to cool first.
- After you charge the battery pack (12 to 14 hours), disconnect it from the charger. Overcharging the battery pack might damage it.
- Do not mix old and new batteries, different types of batteries (alkaline, standard, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the vehicle for a week or more, remove the batteries from it and the transmitter. Batteries can leak chemicals that may destroy electronic parts.
- Ensure the connectors and wires are positioned so they do not touch moving parts.
- Dispose of old batteries promptly and properly. Do not burn or bury them.

The FCC Wants You to Know

Your vehicle might cause TV or radio interference even when it is operating properly. To determine whether your vehicle is causing the interference, turn it off. If the interference goes away, your vehicle is causing it. Try to eliminate the interference by:

- moving your vehicle away from the receiver
- contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using your vehicle.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications to this product not expressly approved by RadioShack, or operation of this product in any way other than as detailed by the Owner's Manual, could void your authority to operate the product.

FCC Declaration of Conformity

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Product:	Dodge Raminator Monster Truck
Model:	60-4357
Responsible Party:	RadioShack 100 Throckmorton Fort Worth, TX 76102
Phone:	817-415-4300

The EPA certified RBRC® Battery Recycling Seal on the nickel-cadmium (Ni-Cd) battery indicates RadioShack is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life, when taken out of service in the United States or Canada. The RBRC program provides a convenient alternative to placing used Ni-Cd batteries into the trash or the municipal waste stream, which may be illegal in your area. Please call 1-800-THE-SHACK (1-800-843-7422) for information on Ni-Cd battery recycling and disposal bans/restrictions in your area. RadioShack's involvement in this program is part of the company's commitment to preserving our environment and conserving our natural resources.



Hints & Tips

- The supplied box wrench lets you easily remove and replace the truck's wheels. Be careful not to discard the wrench when you unpack the truck.
- Driving your Dodge Raminator for long periods of time can generate a high heat level, which causes wear and tear on the motor. To help keep heat levels down, when your vehicle's battery power dies, let it cool for at least 10 minutes before recharging the battery.
- Do not touch the motor immediately after using the Dodge Raminator, as it may become hot during use.
- If your vehicle's motor runs, but does not respond to the transmitter, move closer to the vehicle and try again.
- If someone uses a CB nearby, it might interfere with the control of your Dodge Raminator. If this happens, move the vehicle away from the CB.
- You cannot operate your vehicle near devices with transmitters that use the same frequency as your vehicle (27 MHz or 49 MHz). Check the box to see which frequency you have.
- If your vehicle moves slowly, or not at all, and you have installed new batteries, check the wheel mechanism for lint, dust, hair or thread.
- When the transmitter's range decreases, replace its battery.
- If your vehicle does not drive in a straight line, adjust the wheel alignment control on the bottom of the vehicle. If the vehicle pulls to the right, turn the control toward L, and if it pulls to the left, turn the control toward R.

Care & Use

- Do not play with your vehicle in the street.
- The Dodge Raminator reaches much higher speeds (780 ft. per minute) than most radio-controlled cars. Avoid high-impact collisions with people and objects.
- If the Dodge Raminator gets stuck under an object, immediately release both controls on the transmitter. Then, retrieve the vehicle.
- Wipe the vehicle occasionally with a damp cloth to keep it looking new.
- Tampering with your vehicle's electronic parts may cause damage to the vehicle. If your vehicle does not operate properly, take it to your local RadioShack store for assistance.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, crash, collision, impact, violent contact, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

©2003. RadioShack Corporation.
All Rights Reserved.
RadioShack and RadioShack.com are trademarks
used by RadioShack Corporation.

60-4357
Printed in China
06A03