

Sunbeam

Express Stainless

1.7 litre cordless kettle with easy-fill spout

Instruction Booklet

KE7300

Please read these instructions carefully
and retain for future reference.



Contents

Sunbeam's Safety Precautions	1
Features of your Express Stainless	2
Using your Express Stainless	4
Sunbeam's 3-Way Safety System	5
Care and Cleaning of your Express Stainless	6

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich daß die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώστε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید کہ احتیاطهای بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenliik önlemlerinin anlaşıldığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

Sunbeam's Safety Precautions

SAFETY PRECAUTIONS FOR YOUR SUNBEAM KETTLE.

- Always operate the kettle on a flat, level surface.
- Boiling water will scald. Do not leave a boiling or hot kettle near or where children may touch it.
- Do not leave the power cord near the edge of a bench top where children may touch or pull it.

Sunbeam are very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- Close supervision is necessary when your appliance is being used near children or infirm persons.
- Never leave an appliance unattended while in use.
- Young children should be supervised to ensure that they do not play with the appliance.
- Boiling water may be ejected, if overfilled.
- Do not remove lid while water is boiling.
- Do not operate the kettle without water.
- Always turn the power off and unplug the cord while the kettle is NOT in use.
- Your Express Stainless kettle must only be used with the power base supplied.
- Do not move kettle while switched on.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven. Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- For safety reasons and to avoid maintenance by unskilled persons, some appliances are 'sealed' using tamperproof screws. Such appliances should always be returned to the nearest Sunbeam Appointed Service Centre for adjustment or repair if required.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been dropped or damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.

If you have any concerns regarding the performance and use of your appliance, please visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line. Ensure the above safety precautions are understood.

Features of your Express Stainless

Lid with cool touch knob.

The cool touch knob prevents burns and allows for easy removal and placement of the lid.

Large spout.

Enables quick and easy filling at the tap, without the need for removal of the lid.

Removable mesh filter.


Keeps the water clean of any foreign matter and is removable or easy cleaning.


2400 watt concealed element.

The fast boil 2400 watt element is concealed in the base of the kettle for longer element life. The smooth stainless floor reduces scale build up and allows for easy cleaning.

Stylish stainless steel design.

Long life stainless steel to suit any kitchen décor.

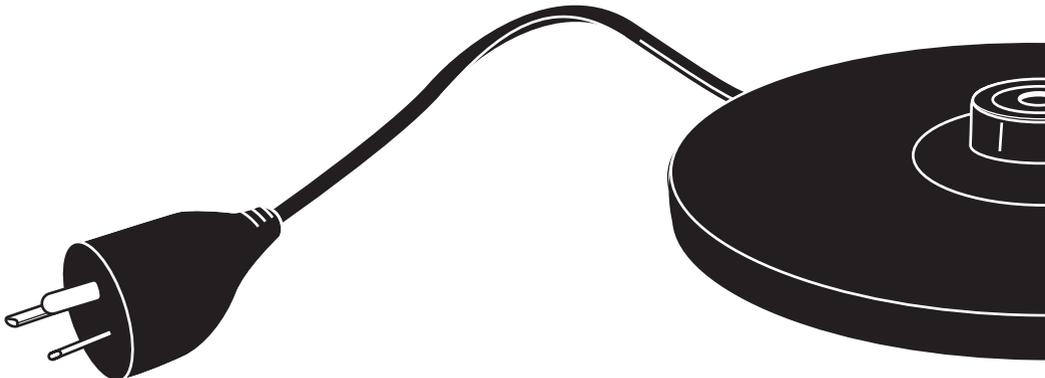

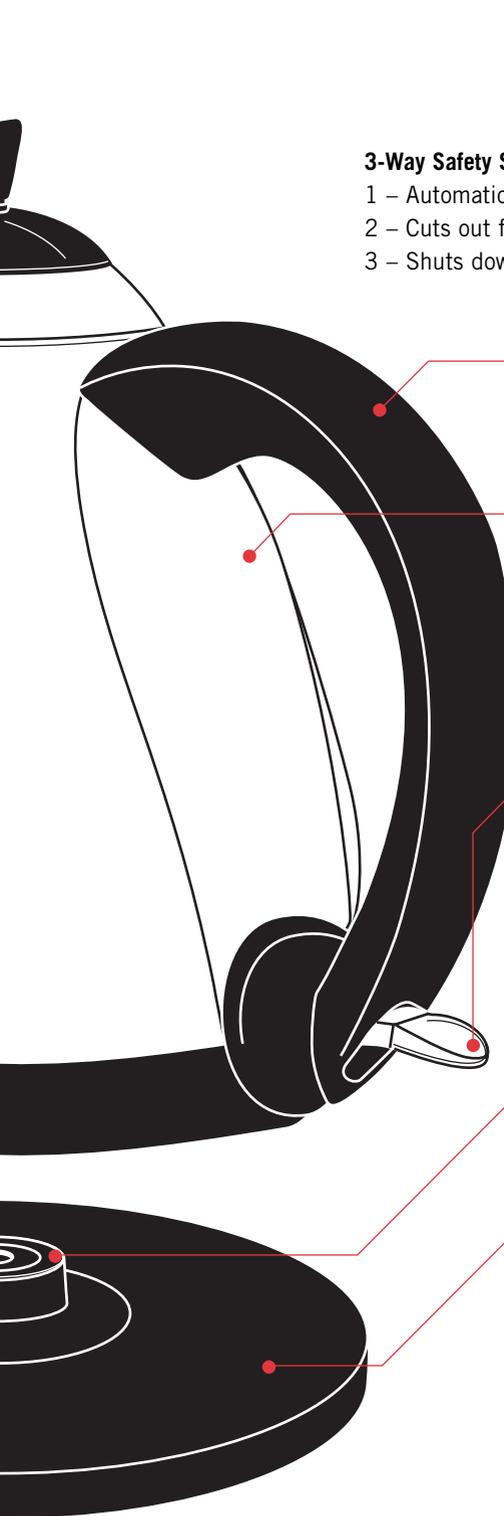

3-Way Safety System.

- 1 – Automatically switches the kettle off after boiling.
- 2 – Cuts out for boil-dry production.
- 3 – Shuts down in case of overheating.



Soft grip handle.

Contoured design for easy handling and pouring.

Hand heat guard.

Designed for added safety, the heat guard protects your hand whilst pouring water from the kettle.

Neon ON/OFF switch with auto cut-out.

Lights up to indicate that the kettle is on and heating. Switches the kettle off automatically after boiling.

360 degree cordless power base.

Designed to allow you to place the kettle on the base in any direction.

Cord storage facility.

Excess cord can be wound around the cord storage facility underneath the power base.

Using your Express Stainless

Before using your kettle.

Fill the kettle with water up to the maximum level indicator, boil and discard.

Using your kettle.

1. To fill the kettle with the desired amount of water (minimum 1 cup/250ml) you can either:

- fill the kettle through the large spout, or
- remove the lid by holding the cool touch knob firmly and pulling out.

NOTE: Do not fill above the maximum level indicator (marked on the water gauge as "MAX") as water may spill out of the spout when boiling.

2. If you filled the kettle by removing the lid, replace the lid by positioning it on top of the kettle and pressing firmly until it locks into position.

3. Place the kettle on the power base and connect the plug into a 230/240 Volt AC power outlet. Turn the power ON.

4. Press the ON/OFF switch downwards. The light will illuminate to indicate the kettle is heating.

Note: Do not remove the lid while the kettle is in use.

5. The kettle will switch off automatically once the water has boiled.

Note: Ensure that the ON/OFF switch is clear of obstructions. The kettle will not turn off if the ON/OFF switch is constrained. Do not remove the kettle from the power base while in use.


6. Lift the kettle from the power base and pour the water.

7. The kettle may be stored on the power base while not in use. The kettle will not re-boil until the ON/OFF switch is pressed downward.

Note: Ensure the power is turned off at the power outlet when the kettle is not in use. Should you accidentally allow the kettle to operate without water, it will cut out for boil-dry protection. If this occurs, allow the kettle to cool before filling with cold water and re-boiling.

Cord Storage Facility.

Excess cord can be stored by winding the cord around the storage facility underneath the power base.

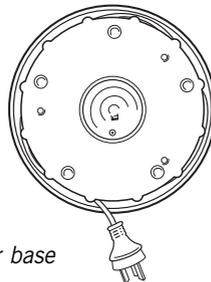

360° power base

Sunbeam's 3-Way Safety System



Safety is a major consideration in the design of a Sunbeam kettle. This is why we have developed our 3-Way Safety System, which ensures that your kettle will:

1. Automatically switch off after boiling.

For convenience, safety and energy efficiency, your Sunbeam kettle features an auto cut-out device.

2. Cut-out for boil-dry protection.

If the kettle is operated without water, it will automatically cut-out, preventing any damage to the element.

3. Shut-down in case of overheating.

In the event of overheating, the kettle will automatically shut down to prevent further damage. Should this occur, take your kettle to a Sunbeam Service Centre or Appointed Service Agent.

Care and Cleaning

Always disconnect the kettle from the power outlet before cleaning.

Never immerse the kettle switch area, cord or power base in water, or allow moisture to come into contact with these parts.

Removal of mineral deposits.

Mineral deposits in tap water may cause the interior of the water gauge to discolour. To remove this build-up, use Sunbeam Liquid Descaler, a simple to use, non-toxic cleaner available from Sunbeam Appointed Service Agents.

Alternatively:

1. Fill the kettle with 3 cups of white vinegar and the remainder with water and allow to stand overnight. **DO NOT BOIL.**
2. Empty the solution from the kettle. Fill the kettle with clean water, bring to boil and then discard the water. Repeat and the kettle will then be ready to use.

To clean the polished exterior.

The stainless steel surface may be wiped over with a damp cloth and polished with a soft dry cloth.

CAUTION: Do not use chemical, steel wool, or abrasive cleaners to clean the outside of the kettle, as these will scratch the stainless steel surface.

To clean the mesh filter.

Press the button at the top of the handle to open the hinged lid. Grasp the top of the scale filter and pull upwards to remove. Wash in warm soapy water and dry thoroughly before replacing in the kettle.



Consumer Hotline

Australia

1800 025 059

New Zealand

(09) 912 0747

Consumer information:

1800 025 059 or www.sunbeam.com.au

 is a registered Trademark of Sunbeam Corporation Limited. ACN 000 006 771.

© Sunbeam Corporation Limited 2002.