



CVP800

MINI PORTABLE DIGITAL VIDEO RECORDER

Mini Magnétoscope Portatif De Digital



User's Manual

Manuel de l'utilisateur

www.svat.com

TABLE OF CONTENTS

- Table of Contentspg 2
- Safety Precautions pg 3
- Features & What Is Included pg 4
- Name & Function of Each Part pg 5
 - Front View pg 5
 - Side View pg 6
- Basic Configuration pg 7
- Operation pg 8
 - 6.1 Power On pg 8
 - 6.2 Live Mode pg 8
 - 6.3 Record Mode pg 9
 - 6.4 Playback Mode pg 10
 - 6.5 PC Playback pg 11
 - 6.6 SD Card Maintenance pg 12
 - 6.7 How To Download The Updated Software pg 12
- Menu Setup pg 12
 - 7.1 Main Menu pg 12
 - 7.2 Date/Time pg 13
 - 7.3 Motion Detection pg 13
 - 7.4 Manual Record & Schedule Record pg 14
 - 7.5 SD Card Options pg 15
 - 7.6 System Status pg 16
 - 7.7 Factory Default pg 16
- Specifications pg 17
- Product Warrantypg 18,19

IMPORTANT SAFETY PRECAUTIONS PLEASE READ BEFORE INSTALLING

Congratulations on your purchase of the Mini Portable Digital Video Recorder. Please read these safety and operating instructions carefully before installing and using this system.

- Keep the DVR and AC/DC adapter cords out of reach of children.
- Do not place the DVR or AC/DC adapter cords in a crib or playpen.
- Do not use the DVR near water or in damp and wet environments, such as a bathtub, laundry tub, kitchen sink or wet basements.
- Locate the DVR or AC/DC adapter where there is adequate ventilation.
Do not locate the DVR in direct sunlight.
- Do not locate the DVR and AC/DC adapter near heat sources such as heat registers, radiators, ovens, furnaces or other appliances with high operating temperatures.
- Do not use with extension cords. Use only the AC/DC adapter provided with this system.
***Note: Use of other adapters may damage the units and void your warranty.
- Only plug components into standard household voltage outlets (110V - 240V AC, 50Hz or 60Hz).
- Do not place cords from the AC/DC adapter where they can be pinched or stepped on. Protect the cord by keeping them out of the way of children, pets and routine household traffic. Do not place heavy objects on power cords or cover cords with rugs or carpet.
- When cleaning, use a DRY, lint-free cloth. Unplug the camera, monitor and AC/DC adapter before cleaning. NEVER immerse any components in water and do not spray cleaners or solvents on the units. Doing so may damage the units or cause electrical shock.
- Unplug the AC/DC adapter from the wall outlet when the system is not in use.
- Mishandling, alterations or modifications not approved by the manufacturer will void the warranty.

CAUTION!

- Connect this unit **ONLY** to other compatible units. Do not connect it to any other type of alarm or auxiliary device. Connecting anything else to this unit may damage it or prevent it from operating properly.
- Do not paint over the DVR unit.

IMPORTANT!

ACCESSORIES- Do not place product on an unstable cart, stand or table. The CVP800 may fall causing serious injury to a child or adult and serious damage to the equipment. Wall or shelf mounting should follow the manufacturer's instruction and should use a mounting kit approved by the manufacturer.

VENTILATION- Slots and openings in the cabinet and the back or bottom are provided for ventilation and to ensure reliable operation of the video monitor or equipment and to protect them from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the video monitor on a bed, sofa, rug, or other similar surface. Video monitor or equipment receiver should never be placed near or over a radiator or heat register. Video monitor or equipment receiver should not be placed in a built-in installation such as a bookcase unless proper ventilation is provided.

FEATURES & WHAT IS INCLUDED

The DVR supports NTSC or PAL video systems and auto detects video loss.

The DVR is built-in with MPEG4-SP video and G.726 audio codec. It supports 1 channel video and 1 channel audio recording and playback operation.

Audio/Video data is recorded directly on the SD card with FAT13/32 file system and ASF file format. Simple data backup method to a PC.

Audio/Video data is recorded directly as ASF file format. You can view the data straight from your PC and playback the ASF files with popular media players.

For 1 GB SD Card, the record time is about 5 hours at Standard Quality
for NTSC: 30fps @ 352x240 and PAL: 25 fps @ 352x280

The DVR supports: manual, motion detection and schedule recording mode with independent video size, quality, and frame rate set up.

For motion detection, multiple detection blocks and appropriate motion trigger level can be set up.

Support key lock function.

Use anywhere, the device supports both AC power adapter or nickel metal hydride (NiMH), alkaline batteries.

 
WHAT IS INCLUDED



One Mini Portable
Digital Video Recorder



Two RCA
Audio/Video Cables

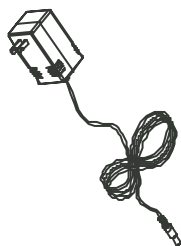

One AC Power Adapter

Not Shown: Instruction Manual, One Year Warranty and Toll Free Tech Support

NAME & FUNCTION OF EACH PART, FRONT VIEW

FRONT VIEW



- 1) Power LEDPower Indicator
- 2) Play LEDPlay Indicator
- 3) Menu/Lock LEDMenu/Key Lock Indicator
- 4) Rec LEDWhen SD card is writing data during recording, record indicator
.....will flash slowly. When SD card is "read only" recording function
.....is disabled and the record indicator will flash quickly.

⚠ Warning on Unusual Operation


.....Record function is invalid when SD card is not inserted, full,
.....damaged or setup to "read only" and (2)(3)(4) LED indicators
.....will flash quickly; press Enter ← button to release warning.

- 5) ■ Stop/Exit ButtonStop Record or Play/Exit Menu
- 6) ● Rec ButtonManual Record Button
- 7,8) ▲ Up ButtonCursor Movement Up/Down to select item in the Setup Menu
▼ Down Button
- 9,10) ◀/– Left ButtonPlayback - Press Fast Forward or Fast Rewind
▶/+ Right ButtonStep Playback - Press to Step Playback
.....Menu - Press to Increase/Decrease Setup Value
- 11) ↵ Enter ButtonSub-Menu - Press to enter Sub-Menu
- ⚠ /Unlock SwitchMonitoring/Playback - Simultaneously pressing Enter ↵ first and
.....then Menu □ button to switch the Key Lock Function ON/OFF
- 12) ★ Display ButtonStatus Line ON/OFF switch
- 13) ▶ Play ButtonMonitoring - Press Playback
- 14) || Pause ButtonPlayback - Playback - Press to Pause
- Menu ButtonPress to enter Menu Setup

NAME & FUNCTION OF EACH PART, SIDE VIEW


SIDE VIEW

 15) AV/IN: Audio/Video Input

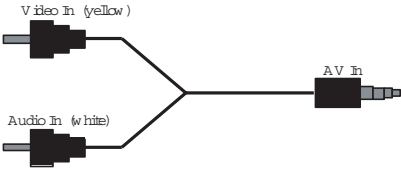

Audio/Video IN: 3.5 mm jack for audio/video line in.

 16) AV OUT: Audio/Video Output

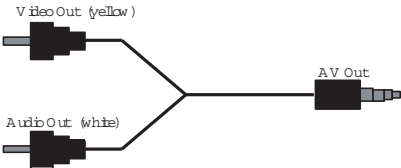

Audio/Video OUT: 3.5 mm jack for audio/video line out

17) POWER: AC/Battery Power Switch

18) AC 5V IN: 5V/1A Power Input

 
19) SD Card Slot

20) Battery Compartment Cover



BASIC CONFIGURATION

1. **Power:** Use the power adapter supplied, nickel metal hydride (NiMH) or alkaline batteries.
2. **Video System:** Connect the camera, the device auto detects NTSC/PAL video system (the output video system will be setup the same as its input video system). Without connecting the camera, the video system setup will be the same as its previous setup.
3. **Power Switch:** Switch to DC when using the supplied power adapter or switch to BATT when using batteries.

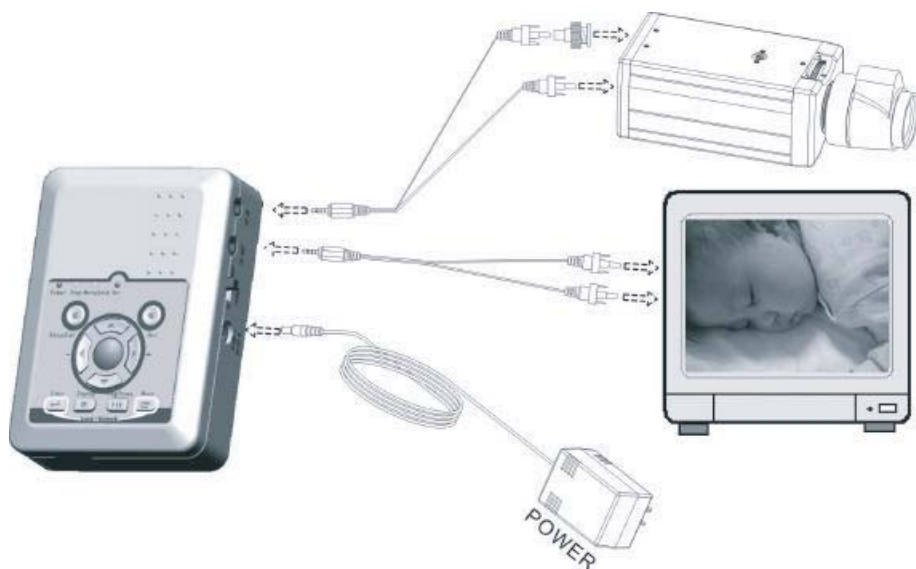


IMPORTANT

***Please use appropriate SD Memory Card (256MB or above), otherwise the recording data will present intermittent conditions.

***Withdraw SD card only when the device is switched off or currently under main menu display, otherwise system may be unstable or data stored in the SD card may be damaged.

OPERATION

POWER ON

1. The power switch is situated on the right side of the device, switch to DC when using the supplied power adapter or switch to BATT when using the batteries.
NOTE: Each time after power-on, the system auto-detects its peripherals. When the REC LED flashes, this indicates that the SD card is testing (complete boot time is several seconds). When an image file error has been detected, the system will initiate auto repairing.
2. After power on, the system automatically enters live monitoring. When the system is currently under schedule recording, it auto enters record mode.
3.  icon shown on the status line, indicates that the SD card is operating normally.
4. When the SD card is not inserted or a problem occurs with the SD card, Play, Menu, and Rec indicators will flash quickly. Please re-format before proceeding.
5. You can playback while the SD card is "read only", but you cannot record; Play, Menu and Rec indicator will flash quickly.
6. When the SD card is writing data during recording, the record indicator will flash slowly.
7. Simultaneously press the "Enter" and "Menu" buttons to switch the Key Lock function ON/OFF. When the function key is locked, the key lock indicator will be lit.
8. After power-loss the system automatically returns to the previous recording mode.

IMPORTANT

 
Do not withdraw the SD card while booting. It may destroy the data stored within the SD card.

LIVE MODE

Live mode is the default setup after system start-up




Monitoring Display:

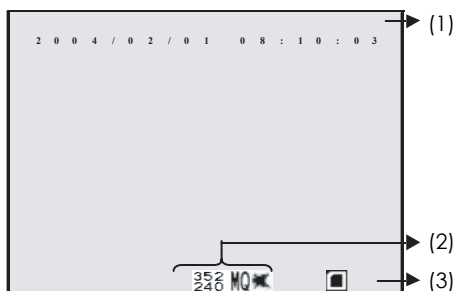Press the  Display button to switch between LCD display mode and OSD info.







(1) **Time Display:** System Date and Time

(2) **Record Status Display:** Manual Record Parameter


-  Record Resolution, please refer to Record Setup for Video Size setup
-  Record Quality, please refer to Record Setup for Video Quality setup
-  Audio Off Record, please refer to Record Setup for Audio Record setup

OPERATION CONTINUED

(3) SD Card Status:

-  SD Card has not been inserted or is malfunctioning
-  SD Card is proceeding file testing
-  SD Card is functioning normally
-  Disk full and overwrite record

IMPORTANT

 When SD card is not inserted, record and playback function is inapplicable, but monitoring is applicable.

RECORD MODE

1. START RECORD: 3 types of recording mode




Manual Record: Suitable to record anytime. Press Rec ● Button, to enter manual recording status (start recording). For more information, please refer to Record Setup.

Motion Detection Record: Suitable to record, when there are severe image changes. Motion detection triggers schedule recording, but it will only start recording when the variation exceeds the alarm limitation value. For more information refer to Record setup.

Continuous Record: Suitable on few constant frame recording or on long-term continuous recording. For more information, please refer to Record Setup.

2. STOP RECORD

Pressing the Stop ■ button stops the manual recording only. By Entering Play ▶ || or Menu schedule recording (Motion Detection and Continuous Record), every type of recording will be stopped. To continue recording, please follow the methods below to restart recording.

 Manual Record	Repress REC button
 Schedule Record	After exit playback or menu mode, whether the setup has been changed or not, the system will automatically re-check the record schedule setup again.
 Motion Detection	

3. RECORD DISPLAY:

 Indicates recording is in progress

 Manual Record

 Schedule Record


 Motion Detection Record




OPERATION CONTINUED

4. The event status is determined by the system recording, and according to the order of priority.
5. The order of priority: Manual Record, Motion Detection and then Schedule Record.
6. Different recording modes may have different kinds of setups. Basic setup: video size, recording frames, video quality, and audio recording. When different recording modes are triggered, they system starts recording according to the different setup. This kind of design provides flexibility to ensure efficient recording time and quality. Example: Work hour from 8:00 am to 6:00pm, setup schedule record to low video quality with less recording frames to extend the recording time. And off work hour, setup Motion Detection Record to enable high video quality with the highest recording frames, when an event occurs.
7. Video or audio may be recorded in the SD card (SD card not included). When the video has been stored, the record LED flashes indicates that the system is currently loading the file into the SD card.

IMPORTANT

 Do not withdraw the SD card while recording. It may destroy the data stored within the SD Card.

 Power loss during recording results incomplete video or errors.

 Video loss during recording, the system stops recording, backups the files, and when the videos are normal again, the system will continue recording.

Playback Mode

Selectable Playback format: Continuous Playback and Searching Playback

1. NORMAL PLAYBACK:

Press Play ▶ and Pause || buttons to playback according to the SD card file order recorded.

▶ Normal speed playback

◀▶ Fast Rewind and Fast Forward
(Speed: x2/x4/x8/x16/x32)
Press Play Pause button to return to normal speed playback.

|| During playback, press Play ▶Pause || button to pause playback and press it twice to return to playback status.

◀▶▶▶ During pause, press ◀▶▶▶ buttons to step back one frame or to step forward one frame and press ▶ Play/|| Pause buttons to return to normal speed playback.

★ Display Switch to Hide Status Info, Hide LCD Monitor and Display LCD Monitor and Status Info.

 
Press ■ Stop button to stop playback function and to return to live status.



OPERATION CONTINUED

2. SEARCH AND PLAYBACK:

Enter MENU and select SEARCH AND PLAY

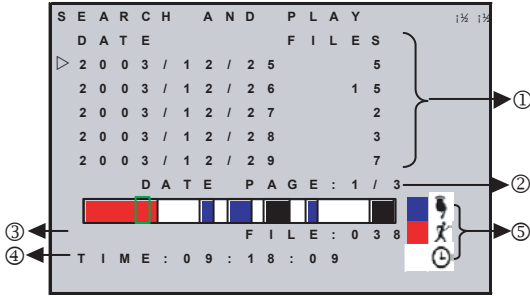

- (1) File directory shows dates and the amount of contents under the directory. The user may press ▲ or ▼ buttons to move the cursor up or down.
- (2) Current location page.
- (3) Each colour distinguishes different recording events, the user may press ◀ / + or - / ▶ buttons to move the cursor left or right and immediately shows the first image of the highlighted event on the screen display background.
- (4) Displays the time highlighted by the event bar.
- (5) Blue: Manual Record/ Red: Motion Detection Record/ White: Schedule Record.
- (6) Press STOP button to stop playback and the system will return to SEARCH and PLAY which enables the user to select the preferred input source.



The device supports playback only images recorded by this device, other ASF video files are not guaranteed.

PC PLAYBACK

1. The device uses the SD card as its main storage. User may read the data stored in the SD card from the computer that supports SD card reader devices.
2. All files (under DVMPG4 folder) have an approximate size of 1 MB and file names are ordered according to recorded times(sequence).
File Playback: User may use Microsoft, Microsoft Media Player or DivX, DivX Player (<http://www.divx.com/>) to playback video files.
Backup Playback: User may playback backup files from the computer (copy files to the SD card under /DVMPG4 folder).

IMPORTANT



When using Media Player for the first time to playback, it requires the most updated decoder from the Microsoft software website.

OPERATION CONTINUED & MENU SETUP

SD CARD MAINTENANCE

1. The device supports only FAT 16/32 file system; therefore it is unable to determine other file systems. Please format the SD card (Enter MENU/SD CARD OPTIONS and select "Format").
2. The system supports only partial SD card file system repair. The system is unable to detect any file system damage, therefore please format the SD card (Enter MENU/SD CARD OPTIONS and select "Format").

HOW TO DOWNLOAD THE UPDATED SOFTWARE

 
1. Use the SD card to update your system firmware.
2. Please follow the steps below to update the software:
 - (1) Copy the new system firmware into the new directory of the SD card from your computer.
 - (2) Insert the SD card; switch off the main power and then restart.
 - (3) Wait for 5 to 6 seconds, the system update will be completed and return back to live mode.

IMPORTANT



Do not withdraw the SD card while booting, when power-loss occurs while proceeding step (3), please repeat step (2) and (3).

MAIN MENU

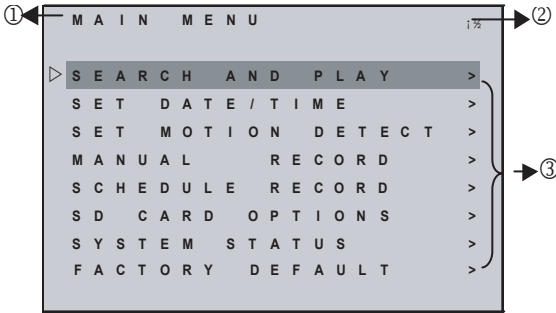

- (1) **Main Menu:** Item subject.
- (2) **Menu Layer Indication:** The device consists of three menu layers.
 - 1/2 First Menu Layer (Main Menu)
 - 1/2 1/2 Second Menu Layer
 - 1/2 1/2 1/2 Third Menu Layer
- (3) **Menu Content:** Basic Menu Operations.
Press ▲ or ▼ button, to move the highlight bar and the cursor ▷
Press MENU/ENTER [] button, to enter the sub menu.
Press STOP [] button.

 
Under second or third menu layer, the system will return to the previous menu layer (second layer to first layer or third layer to second layer).

Under main menu (first menu layer), the system will enter live mode.
Press ◀ or ▶ button, to increase or decrease the setting values that has been highlighted.

MENU SETUP CONTINUED


DATE/TIME

- (1) **Date Format:** Y/M/D, M/D/Y, D/M/Y
- (2) **Date/Time Adjustment:**
Year settings are from 2000 to 2099

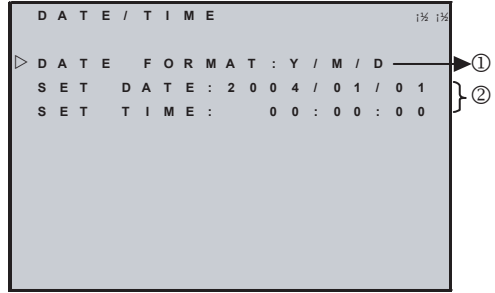

MOTION DETECTION

 1. Window Setup:

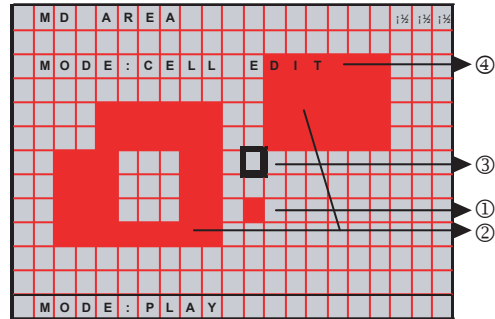

- (1) **Detection Cell:** Whole screen is divided into 22x15 square cells.
 - (2) **Detection Block:** Two or more cells form a block.
 - (3) **Cursor:** Press PLAY button to switch to Select/Edit mode.
 - (4) Detection Block.
2. **Cursor Movement:** Press PLAY button, switch cursor to setup mode (cursor color is black). Press ◀ / ▶ buttons to move the cursor freely.
3. Detection Area Setup:


- (1) Press PLAY button to select edit detection block function.

FUNCTION	DESCRIPTION
CELL EDIT	Single detection cell setup (detection/non-detection)
DEL BLOCK	Disable a block
DEL ALL	Disable all cells
ADD BLOCK	Enable a block
ADD ALL	Enable all cells

- (2) Press PLAY button, switch cursor to edit mode (cursor color is pink). Press ◀ / ▶ buttons, follow step (1) to change the size of the detection block.
- (3) Detection area is displayed by the colour red and non-detection area is represented by the colour blue. Press ENTER to enable/disable the detection area.
- (4) When a detected object is moving in the detection area, detection area turns from red to transparent (this indicates moving status).

MENU SETUP CONTINUED

 - (5) **Video Detection Block Sensitivity Setup:**
Changing the alert value setup may effect the recording sensitivity of the Motion Detection.

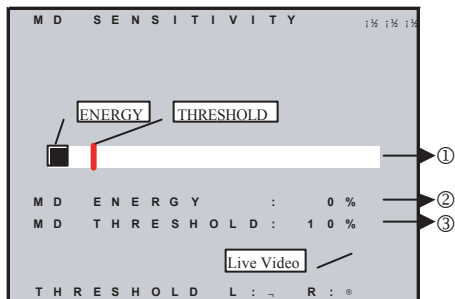

Sensitivity Bar: Colour black indicates image variable value & colour red indicates the MD threshold.

 
MD Energy: Current image variation value.

MD Threshold: Press ◀/▶ buttons, to change the motion detection threshold value.

MANUAL RECORD & SCHEDULE RECORD

Selectable manual or schedule recording, basic setups are shown below:

1. **MANUAL RECORD:** Press REC ● button to start recording.

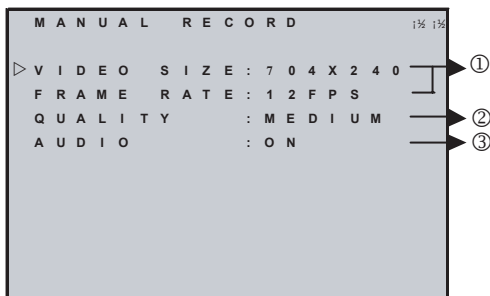

- (1) **Video Size/Frame Rate:**

NTSC	<u>352x240</u>	704x240	704x480
FRAME RATE (MAX)	30 fps	24 fps	12 fps
PAL	<u>352x280</u>	704x280	704x560
FRAME RATE (MAX)	25 fps	20 fps	10 fps




- (2) **Image Quality:**

HIGH QUALITY	HQ	Using high recording quality (more SD card storage capacity will be required)
MEDIUM QUALITY	<u>MQ</u>	Using medium recording quality
LOW QUALITY	LQ	Using low recording quality (less SD card storage capacity will be required)

- (3) **Audio Record:** Enable or disable audio recording.

MENU SETUP CONTINUED

   2. **SCHEDULE RECORD (Continuous/Motion Detection):** Schedule Record: Records only within the setup time range.

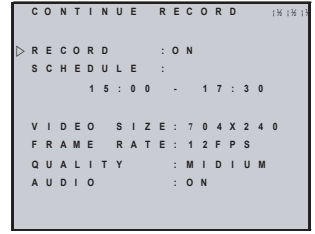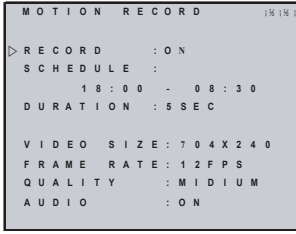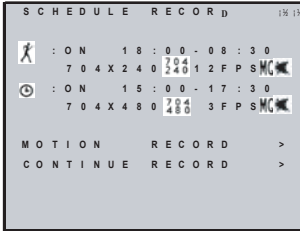



RECORD SCHEDULE Enable or disable schedule recording (ON/OFF)
ab:cd - ab:cd = 24 hour recording and 00:00 - 00:01 = Recording of one minute image from 00:00 to 00:01

Motion Detection Recording DURATION TIME Setup:

DURATION Duration time when motion detection has been triggered (5 SEC /10 SEC/ 15 SEC/20 SEC/30 SEC)

 SD CARD OPTIONS

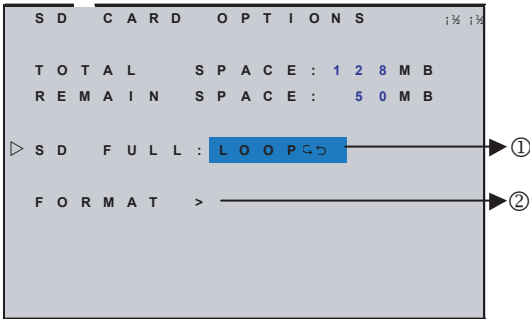


SD Card Full: LOOP  (continuous recording)/STOP (stop recording).
Preset Record = Stop Record:
When SD card storage capacity is full, it will stop recording.
Preset Record = Continuous Record:
When SD card storage capacity is full, it will start overwriting information from the earliest videos (auto repeating continuous recording).

SD Card Format: It will delete all data stored in the SD card and will create a new directory DVMPG4 under root directory.

NOTE: Proceeding continuous recording, old videos can be deleted and overwritten. Please confirm before setup. Recording time depends on the SD card capacity, different recording modes and degree of video variation.


MENU SETUP CONTINUED

 
SYSTEM STATUS

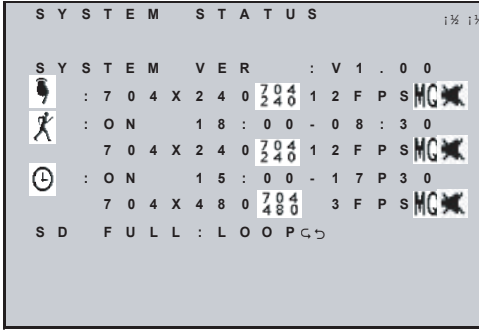


Press any button to return to the Main Menu.

 FACTORY DEFAULT

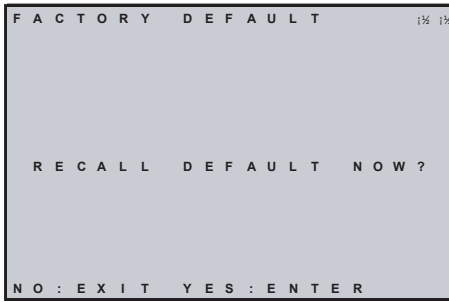

Press Enter  button, this returns all settings to the factory default value.

Press Stop  button, this exits the current screen display and returns to the main menu.

NOTE: Returning to factory default will erase all configuration values and return to the Factory Default values except Date & Time setup. Be sure to confirm before proceeding.

SPECIFICATIONS

System NTSC/PAL Video System & Video Loss Auto Detection
Video Codec MPEG4-SP ASF File Format
Video Record Frame rate . 1,2... , Maximum fps selectable
 Maximum NTSC fps 30fps@352x240/24fps@704x240/12fps@704x480
Video Record Quality Low/Medium/High
Recording Date/Time Overlay with video images in ASF file
Video Input 1 CH composite video line in
Video Output 1 CH composite video line out
Audio Sampling Rate44.1 KHz
Audio CodecG.726/32kbps
Audio Input 1 CH audio line in
Audio Output 1CH audio line out
Storage Media SD Card (FAT16/32)
Recording Mode Manual/Schedule Motion Detection/Schedule Continue
Motion Detection Setting . . Multiple Blocks and adjustable sensitivity
Event Search Function . . . Property & first image of selected file is displayed
Playback Function Play/Fast Forward/Fast Rewind/Pause/Step Forward
 /Step Backward
Playback Speed x1/x2/x4/x8/x16/x32
Power Supply DC 5V 10% 1A/2 AA (Batteries)
Battery Life 2 AA Alkaline: 100min
Operating Environment . . . 30%~80% RH, 5o~45o C or 41o~113o F
Storage Environment 30%~90% RH, 0o~50o C or 32o~122o F
Product Weight 89 g (without Battery/SD card)
Dimensions 2.5(W) x 3.5(H) x 1.1(D) inches

Video Record Time

Low: 400 mins. 30fps@352x240, 240 mins. 24fps@704x240, 240 mins. 12fps@704x480
Med: 300 mins. 30fps@352x240, 150 mins. 24fps@704x240, 150 mins. 12fps@704x480
High: 150 mins. 30fps@352x240, 75 mins. 24 fps@704x240, 75 mins. 12fps@704x48

NOTES

PRODUCT WARRANTY



We take quality very seriously. This is why all of our products come with a one year warranty from the original purchase date against defects in workmanship and materials.

If you have warranty or support issues please contact us using any of the following methods:


SVAT Electronics USA
2315 Whirlpool St., Unit 333
Niagara Falls, New York
USA 14305

SVAT Electronics Canada
4080 Montrose Road
Niagara Falls, ON
Canada L2H 1J9


Phone: 866.946.7828
Fax: 888.771.1701
Email: support@svat.com
Website: www.svat.com

Warranty Terms

1. SVAT products are guaranteed for a period of one year from the date of purchase against defects in workmanship and materials. This warranty is limited to the repair, replacement or refund of the purchase price at SVAT's option.
2. When service is required, the warranty is validated by the submission of a fully completed warranty card.
3. This warranty becomes void if the product shows evidence of having been misused, mishandled or tampered with contrary to the applicable instruction manual.
4. Routine cleaning, normal cosmetic and mechanical wear and tear are not covered under the terms of this warranty.
5. The warranty expressly provided for herein is the sole warranty provided in connection with the product itself and no other warranty, expressed or implied is provided. SVAT assumes no responsibilities for any other claims not specifically mentioned in this warranty.
6. This warranty does not cover the shipping cost, insurance or any other incidental charges.
7. You **MUST** call SVAT before sending any product back for repair. You will be given a Return Authorization number. When returning the product for warranty service, please pack it carefully in the original box with all supplied accessories, and enclose your original receipt or copy, and a brief explanation of the problem (include RA #).
8. This warranty is valid only in Canada and the U.S.A.
9. This warranty card cannot be re-issued.



CAUTION
RISK OF ELECTRIC SHOCK, DO NOT OPEN



**TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (BACK).
NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO
QUALIFIED SERVICE PERSONNEL.**

Graphic Symbol Explanation:

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating maintenance (servicing) instructions in the literature accompanying the appliance.



WARNING: TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE

Disclaimer: SVAT does not endorse of any of SVAT products for any illegal activities.

SVAT is not responsible or liable in any way shape or form for any damage, vandalism, theft or any other action that may occur while a SVAT product is in use by the purchaser.

GARANTIE DE PRODUIT



Nous prenons la qualité très sérieusement. C'est pourquoi tous nos produits viennent avec une garantie d'un an de la date originale d'achat contre des défauts en exécution et matériaux.

Si vous avez les issues de garantie ou de soutien satisfait nous contactent employant n'importe laquelle des méthodes suivantes :


SVAT Electronics USA
2315 Whirlpool St., Unit 333
Niagara Falls, New York
USA 14305

SVAT Electronics Canada
4080 Montrose Road
Niagara Falls, ON
Canada L2H 1J9

Phone: 866.946.7828
Fax: 888.771.1701
Email: support@svat.com
Website: www.svat.com


Limites De Garantie

1. Les produits de SVAT sont garantis pour une période d'une année de la date d'achat contre défectuosités l'exécution et défectuosité des matériels. Cette garantie est limitée à la réparation, le remplacement ou le remboursement du prix d'achat à l'option de SVAT.
2. Quand le service est exigé, la garantie est validée par la soumission d'une carte de garantie entièrement complétée.
3. Cette garantie devient vide si le produit montre l'évidence d'ayant été employé improprement, malmené ou a altéré contraire au manuel d'instruction applicable.
4. Le nettoyage de routine, l'usure normale normal, cosmétique et mécanique n'est pas couverte sous les termes de cette garantie.
5. La garantie a pourvu expressément à en ceci est la garantie seule fournie à propos du produit lui-même e aucune autre garantie, exprimée ou suggérée est fournie. SVAT ne suppose pas de responsabilités pour les autres réclamations pas en particulier mention né dans cette garantie.
6. Cette garantie ne couvre pas le coût expédiant, l'assurance ou les autres charges accessoires.
7. En retournant le produit pour le service de garantie, s'il vous plaît l'emballer soigneusement dans la boîte originale avec tous accessoires fournis, et enclote votre carte de garantie, le reçu original ou la copie, et une explication brève du problème.
8. Cette garantie est valide seulement dans le Canada et les ETATS-UNIS.
9. Cette carte de garantie ne peut pas être la réédition.



ATTENTION

LE RISQUE DE DÉCHARGE ÉLECTRIQUE, NE S'OUVRENT PAS



POUR RÉDUIRE LE RISQUE DE DÉCHARGE ÉLECTRIQUE, N'ENLEVEZ PAS LA COUVERTURE (ARRIÈRE). AUCUNES PIÈCES DE L'UTILISATEUR SERVICEABLE À L'INTÉRIEUR. RÉFÉREZ-VOUS L'ENTRETIEN AU PERSONNEL DE SERVICE QUALIFIÉ.

Explication Graphique De Symbole :

Le flash de foudre avec le symbole de pointe de flèche, dans un triangle équilatéral, est prévu pour alerter l'utilisateur à la présence "de la tension dangereuse" non isolée dans la clôture du produit qui peut être de la grandeur suffisante pour constituer un risque de décharge électrique aux personnes.



Le point d'exclamation dans un triangle équilatéral est prévu pour alerter l'utilisateur à la présence des instructions de fonctionnement importantes d'entretien (entretien) dans la littérature accompagnant l'appareil.



AVERTISSEMENT : POUR EMPÊCHER DES RISQUES DU FEU OU DE CHOC, N'EXPOSEZ PAS CETTE UNITÉ À LA PLUIE OU À L'HUMIDITÉ

Déni : SVAT n'approuve d'aucun de produits de SVAT pour aucune activités illégales. SVAT n'est pas responsable ou responsable de quelque façon forme ou forme d'aucun dommage, de vandalisme, de vol ou d'aucune autre action qui peuvent se produire tandis qu'un produit de SVAT est en service par l'acheteur.



If you require more information on this product
or other SVAT products visit

Si vous exigez plus d'information sur ce produit ou ces
autres produits de SVAT visitez

www.svat.com