

Philips
CD lens cleaner



SAC256 1W



Safely cleans CD lens

Regular cleaning of your CD player's lens ensures optimum performance of your equipment. It is important to keep a CD player optical laser lens clean and dust free. This dry-brush system safely removes dust, debris and other contaminants

Maintain original sound quality

- Safe dry brush cleaning system

Easy to use

- Voice instructions in 14 languages

PHILIPS
sense and simplicity

Specifications

Storage Media

- **Supported formats:** CD-Audio, CD-ROM, DVD-ROM

Accessories

- **User Manual:** 3 languages

Outer Carton

- **Gross weight:** 1.55 lb
- **Outer carton (L x W x H):** 6.8 x 3.6 x 9.1 inch

- **Nett weight:** 1.323 lb
- **Tare weight:** .227 lb

Packaging dimensions

- **Packaging dimensions (W x H x D):** 6.3 x 8.7 x .6 inch
- **Gross weight:** .25 lb
- **Nett weight:** .22 lb
- **Tare weight:** .03 lb

Product highlights

Dry brush system

The dry brush cleaning system safely removes dust, debris and other contaminants from the CD/DVD players laser lens, leaving it clean and performing optimally.

Voice instructions

The voice instructions on this easy to use CD lens cleaner guide you through the cleaning process in one of the 14 languages provided.



Issue date 2008-11-15

Version: 2.1.8

12 NC: 8670 000 34796
UPC: 6 09585 14460 6

© 2008 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com