

# STERLING

A KOHLER COMPANY

## 1 Before you begin

### INSTALLATION INSTRUCTIONS


## CERAMIC SINGLE CONTROL KITCHEN FAUCET

with or without Spray

Use this diagram to familiarize yourself with the various parts of the faucet assembly. Make sure you have all the illustrated parts before you begin installation.

If you are putting in a new sink, it is easier to mount the faucet, drain and any other accessories **before** installing the sink into the countertop.

- Observe all local plumbing codes.
- Carefully inspect the valve parts for any damage.
- Flush all piping thoroughly before installing.
- Shut off hot & cold water supplies.
- Do not use plumber's putty or thread sealants on mounting nuts or coupling nuts.

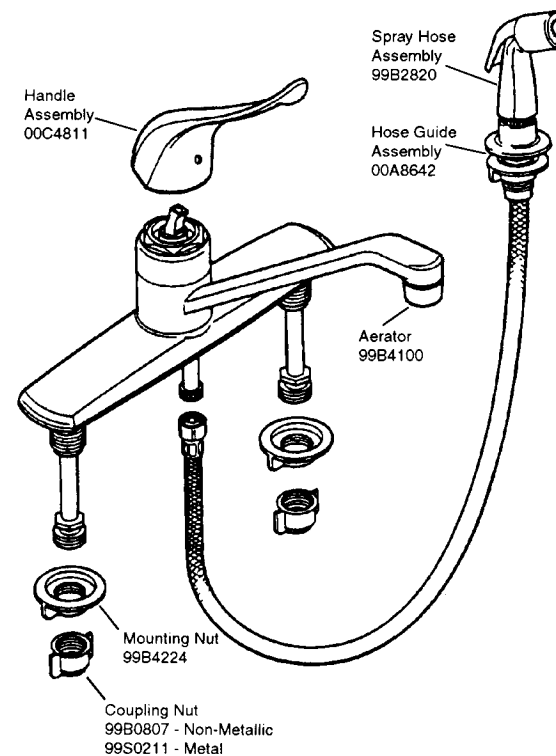

E043700

5/99

# STERLING


A KOHLER COMPANY

P.O. Box 427, Oklahoma Street  
Sheridan, Arkansas 72150-0427

E043700

# SINGLE CONTROL KITCHEN FAUCET

## 2 Items you need

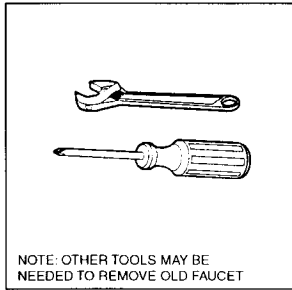


- 1 Phillips and crescent wrench

### OPTIONAL MATERIALS:

- Supply stops (2) Some installations may require stops to be installed.
- Supply tubing (2) and fittings will need to be provided.


- 2 You may need the above materials.

### HELPFUL OPTION:

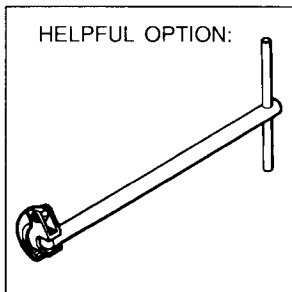


- 3 Basin wrench for removing old faucet.


## 3 Remove old faucet

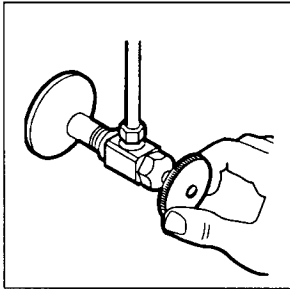

- 1 Turn off both water supplies.

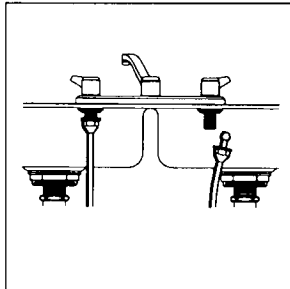


- 2 Disconnect supply lines.

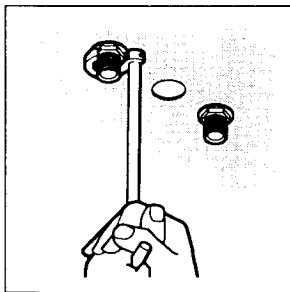


- 3 Remove mounting nuts, lift off faucet.


## 4 Install faucet

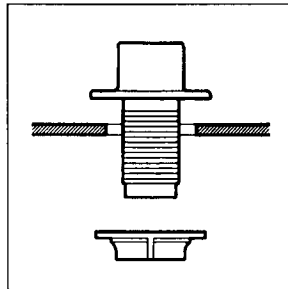

- 1 Insert hose guide in far right hole in sink. Thread mounting nut onto hose guide shank. FINGER tighten.

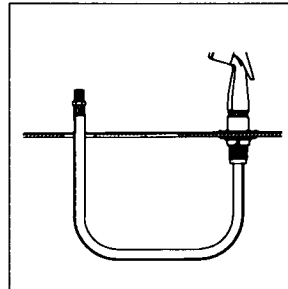


- 2 Insert spray hose down through hose guide and up through center hole in sink.

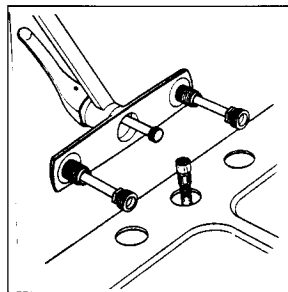


- 3 Position putty plate. Attach spray hose to spray outlet, by rotating faucet body. Tighten securely with wrench.


## 5 Flush lines

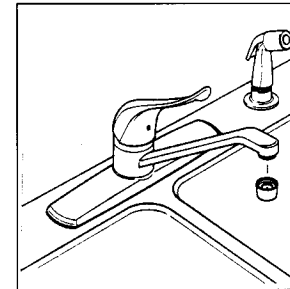


- 1 Turn on water supplies and check for leaks. With faucet off remove aerator, turn on water rotating hot through cold to flush lines and faucet. Turn faucet off and replace aerator.

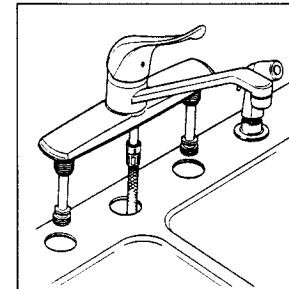

- 4 Place a bead of plumber's putty around base of faucet. Insert shank into holes in sink with spout to front over sink.

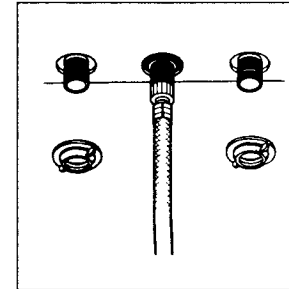

- 5 Thread mounting nuts on hot and cold supply shanks. FINGER tighten securely.

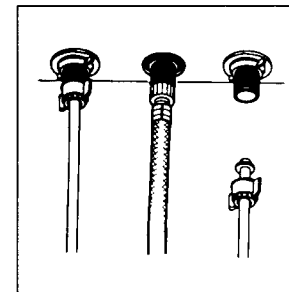

- 6 Connect hot & cold supply lines onto faucet shanks with coupling nuts. FINGER tighten securely.

## Sterling Limited Lifetime Warranty

Sterling Plumbing Group, Inc. ("Sterling") warrants this faucet to be free of manufacturing defects and to be drip free for as long as you own your home. Damage due to improper installation, maintenance or handling are not considered manufacturing defects and are not covered by this warranty. Labor, shipping and installation costs or other charges incidental to warranty service are to be borne by the original purchaser. This warranty is valid for the original purchaser only.

Sterling will, at its election, repair or replace a faucet where Sterling's inspection discloses any such defects occurring in normal residential usage.

To obtain warranty service return the defective part(s) to your cooperating retail seller or send them to our Customer Service Department, P.O. Box 427, Sheridan, AR 72150. Refer any questions to our Customer Service Department at 1-800-245-2207.

IMPLIED WARRANTIES INCLUDING THAT OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY LIMITED TO ONE YEAR FROM DATE OF PURCHASE. STERLING DISCLAIMS ANY RESPONSIBILITY FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of special, incidental or consequential damages, so these limitations or exclusions may not apply to you. This warranty gives you special legal rights. You may also have other rights which vary from state to state.

**This is our exclusive written warranty.**

For more information on Sterling Faucets, please call 1-800-STERLING.

**STERLING**

P.O. Box 427, Sheridan, AR 72150