



FP098

**Adjustable Volume
Controls**

**8 One Touch
Speed-dial
Memories**

Mute Button

OWNER'S

MANUAL

CONTENTS

 
Contents and Features	1
Your FP098 Package	2
Set Up	2
Back-up Battery Installation	2
Location and Controls & Connections	3
Installation	4
Operation	5
Speed Dial Number	6
Warranty	7

FEATURES

- 8 one touch speed-dial memories
- Wall mountable
- Last number redial
- Mute
- Adjustable handset volume control
- Adjustable ringer volume control
- In use LED indicator
- Hearing aid compatible
- Centrex compatible
- Visual ringer lamp
- Flash (call-waiting) or Centrex transfer

YOUR FP098 PACKAGE


Your FP098 Package will contain:

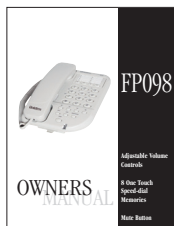


This Manual



 
2 screws

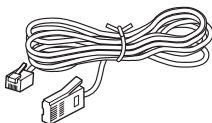

1 - Telephone line cord (New Zealand)

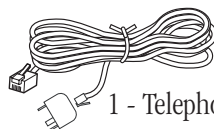 

 -or-
1 - Telephone line cord (Australia)

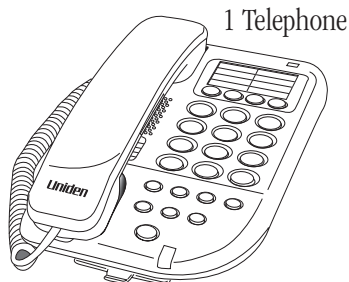


1 Telephone

SET UP

Connecting Line Cords

 Plug one end of the supplied telephone cord into the telephone wall jack. Then plug the other end into the telephone base line jack. Plug the handset cord into the side of the base.

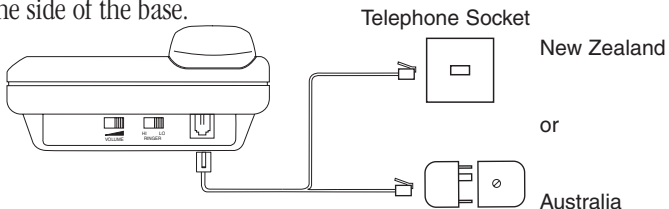


OPTIONAL BACK UP BATTERY INSTALLATION

If back up batteries are either flat or not fitted, speed dial numbers will last one hour after the FP098 is unplugged from the telephone jack.

1. Remove the screw from the battery compartment cover from underneath the FP098 using a phillips screwdriver.

2 x AAA Batteries
+ -

 
2. Remove the battery compartment cover.


 **NOTE** Disconnect the telephone line cord before replacing the batteries.

3. Fit 2 x AAA Alkaline Batteries.

4. Replace the cover and secure with screw.


 **NOTE** Uniden recommend replacing the batteries annually.

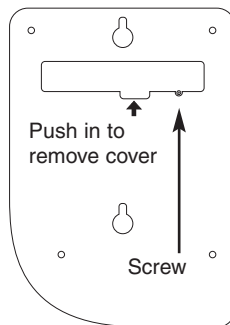


 **NOTE**
Batteries are not required for normal operation of the FP098

LOCATION OF CONTROLS & CONNECTIONS

 Handset Base Unit

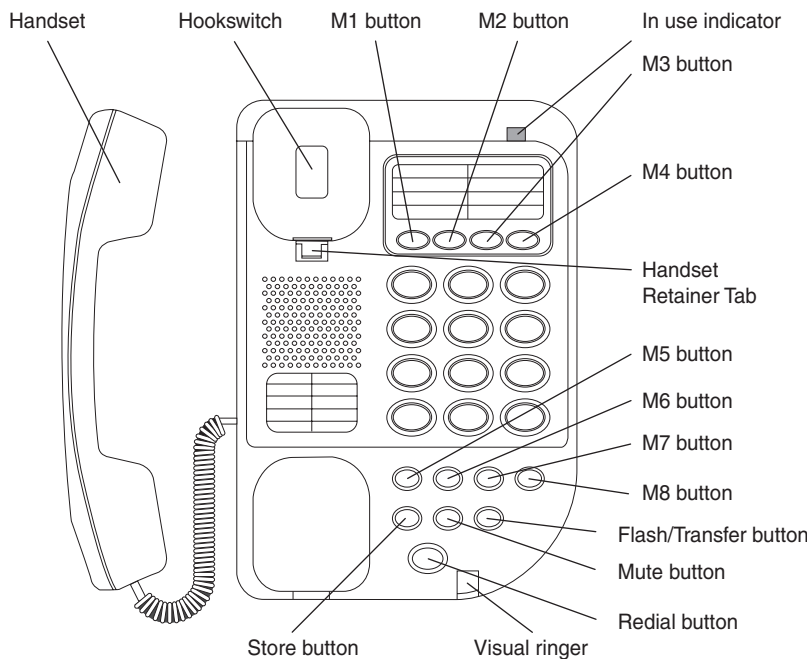

Rear of Base Unit

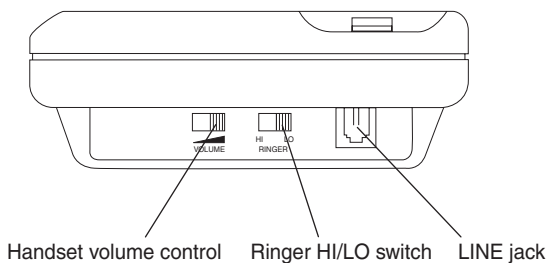 


INSTALLATION

WALL MOUNTING



You can mount your phone directly on a wall. Before mounting your phone, consider the following:

- Select a location away from electrical cables, pipes or other items behind the mounting location that could cause a hazard when inserting screws into the wall.
- Make sure the wall material is capable of supporting the weight of the Telephone.
- Use the screws (supplied) with anchoring devices suitable for the wall material where the telephone is placed.

 1. Insert two mounting screws 85 mm apart. Allow about 5mm between the wall and screw heads for mounting the phone.



  2. Gently remove and turn the Handset Retainer Tab 180° and return.
3. Place the Base Unit on the screws and push down until it's firmly seated.

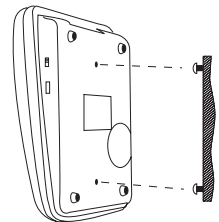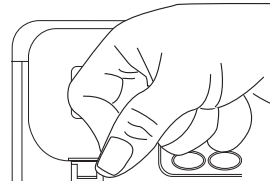

Handset resting
clip

For your convenience, there is a handy clip located on top of the base unit. This allows you to rest the handset there without disconnecting the call.

OPERATION



If any button is pressed before (flash), the last number will not redial.

Redial

If you need to call the last number dialed, simply pick up the handset and press (redial). The telephone will automatically redial the last number dialed.

Flash - Call Waiting

If the Call Waiting tone sounds while you are on a call -

New Zealand: Press (flash) to switch between callers.

Australia: Press (flash) then (2) to switch between callers.

Centrex - Transfer

If you subscribe to the Telecom Centrex service, flash may be used to transfer calls. Press flash followed by the extension number you wish to transfer to.

Adjusting Volume Controls

Ringer volume:

You can adjust the ringer volume by moving the ringer volume switch, located at the rear of the telephone base, to the desired **HI** or **LO** position.

Handset volume:

You can adjust the handset earpiece volume by moving the volume control located at the rear of the telephone base, to the desired level.

Placing a Call on Mute

To allow you to privately speak with another person while you have a caller on the line, press (mute). This will turn off the handset microphone, preventing any private conversation from being heard by the caller.

Press (mute) again to resume the telephone conversation with the calling party.

SPEED DIAL NUMBERS

Eight speed dial numbers can be programmed into the memory of your telephone ((M1) - (M8)). Each memory location can store a maximum of 16 digits.

Storing One-Touch Speed Dial Numbers

1. Pick up the handset.
2. Press (store) .
3. Enter phone number using the keypad (up to 16 digits).
4. Press (store) .
5. Press the speed dial location you wish to store the number to
(M1) - (M8) .
6. Hang up the handset.



If back up batteries are either flat or not fitted, speed dial numbers will last one hour after the FP098 is unplugged from the telephone jack.

Dialing Speed Dial Numbers

To dial a stored memory number:

1. Pick up the handset.
2. Press the desired speed dial button, (M1) - (M8) .

Chain Dialing

On certain occasions (such as telephone banking), after dialing one number, you may wish to dial another number without hanging up. This is known as chain dialing or cascade dialing.

Simply store the second number in another speed dial location. During your call, press the first speed dial button. Then at the relevant time press the next speed dial button.

THANK YOU

FOR PURCHASING A UNIDEN PHONE

WARRANTY

One Year Limited Warranty

Important: Evidence of original purchase is required for warranty service.

Warrantor: Uniden Australia Pty Limited A.B.N. 58 001 865 498
Uniden New Zealand Limited

ELEMENT OF WARRANTY: Uniden warrants to the original retail owner for the duration of this warranty, its FP098 (herein after referred to as the Product), to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original retail owner only, shall terminate and be of no further effect 12 months after the date of original retail sale. This warranty will be deemed invalid if the product is; (A) Damaged or not maintained as reasonable and necessary, (B) Modified, altered or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) Improperly installed, (D) Repaired by someone other than an authorised Uniden Repair Agent for a defect or malfunction covered by this warranty, (E) Used in conjunction with any equipment or parts or as part of a system not manufactured by Uniden, (F) Warranty is only valid in original country of purchase.

PARTS COVERED: This warranty covers for one (1) year, the FP098 Unit and Handset only. All accessories (Cables etc) are covered for 90 days only.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, the warrantor at its discretion, will repair the defect or replace the product and return it to you without charge for parts or service. **THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. THIS GUARANTEE IS IN ADDITION TO AND DOES NOT IN ANY WAY AFFECT YOUR RIGHTS UNDER THE CONSUMER GUARANTEE ACT.**

PROCEDURE FOR OBTAINING PERFORMANCE OR WARRANTY: In the event that the product does not conform to this warranty, the Product should be shipped or delivered, freight pre-paid, with evidence of original purchase (eg. a copy of the sales docket), to the warrantor at:

UNIDEN AUSTRALIA PTY LIMITED
SERVICE DIVISION
345 Princes Highway,
Rockdale NSW 2216
Ph (02) 9599 3355 Fx (02) 9599 3278
Toll Free 1300 366 895

www.uniden.com.au

UNIDEN NEW ZEALAND LIMITED
SERVICE DIVISION
150 Harris Road,
East Tamaki, Auckland
Ph (9) 273 8383 Fx (9) 274 4253
Toll Free 0800 4 UNIDEN
(4 864 336)

www.uniden.co.nz

Customers in other States should ship or deliver the Product freight pre-paid to their nearest Uniden Authorised Repair Centre (Contact Uniden for the nearest Warranty Agent to you).

Uniden

© 2002

Uniden Australia Pty Limited
Uniden New Zealand Limited