 



RUE-4187


Remote Control Unit

Owner's Manual

Controls on Remote Control

- ① **Power Button**
Press the button to turn the power on/off.
- ② **Source Button**
Press to select the audio source.
- ③ **▶/||/Enter Button**
Press the button to switch between the Play and Pause modes for CD or MD and Tape.
Audio Processor Mode: Enter button
Press this button to adjust the MODE that is called by pressing the A.PROC button.
- ④ **ANGLE ▲▼ Buttons**
Press the button to adjust the angle of the movable display.
- ⑤ **Band/Program Button**
Radio mode: BAND Button
Changer mode: BAND Button
Switches changers (when a Multi-Changer Switching device is connected).
TAPE mode: PROG Button
Press the button to change between the A and B side of the tape.
- ⑥ **Volume Adjustment Buttons**
To increase the volume level:
Press the [▲] button
To decrease the volume level:
Press the [▼] button
- ⑦ **▲ Button**
Radio mode: Pressing the button will select, in ascending order, stations programed into the radio's presets as shown below.

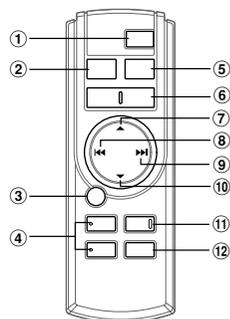 - CD Changer mode: DISC Select (UP) Button
Press the button to select a disc in ascending order.
Tape mode: Pressing this button enters the Program Sensor Up mode. This allows for music selection towards the end of the tape.
Audio Processor Mode: Press this button to adjust the MODE that is called by pressing the A.PROC button.



- ⑧ **◀◀ Button**
Radio mode: SEEK (DN) Button
CD/CD changer mode: Press the button to go back to the beginning of the current track.
Tape mode: REW Button
Audio Processor Mode: Press this button to adjust the MODE that is called by pressing the A.PROC button.
- ⑨ **▶▶ Button**
Radio mode: SEEK (UP) Button
CD/CD changer mode: Press the button to advance to the beginning of the next track.
Tape mode: FF Button
Audio Processor Mode: Press this button to adjust the MODE that is called by pressing the A.PROC button.
- ⑩ **▼ Button**
Radio mode: Pressing the button will select, in descending order, stations programed into the radio's presets as shown below.

CD Changer mode: DISC Select (DN) Button
Press the button to select a disc in descending order.
Tape mode: Pressing this button enters the Program Sensor Down mode. This allows for music selection towards the beginning of the tape.
Audio Processor Mode: Press this button to adjust the MODE that is called by pressing the A.PROC button.
- ⑪ **Mute Button**
 - Press the button to lower the volume by 20 dB instantly. Press the button again to cancel.
 - Press the button for at least 2 seconds to raise the monitor. Press the button again to lower the monitor. (Head unit with Monitor Display, etc.)
- ⑫ **Audio Processor Button****
Press the button to call the external audio processor mode.*

* For the operation of external audio processor, refer to the Owner's Manual of the external audio processor you purchased.
** This button is used in conjunction with an optional Ai-NET processor.

NOTE
Depending on the device you are using, you cannot operate or may need to operate differently some devices on the remote control.
For details, refer to the Owner's Manual of the device you purchased.

Handling Precautions


Do not drop or apply shock to the unit. It may be get permanently damaged.
Keep the unit away from water and moisture, direct sun and heat, and excessive dust.
Never use scouring pads, steel wool, abrasive powders or harsh chemical agents, such as lye solution, for cleaning.

Clean with a soft, lint-free cloth or cotton swab slightly dampened with a mild solution of detergent and water.
Do not operate this unit in a manner that could distract you from driving safety.

Battery Replacement

Applicable battery: Use two "AAA" sized dry batteries or equivalent.

- 1 **Opening the battery cover.**
Slide out the battery cover while firmly pressing the direction of arrow.
- 2 **Replacing the battery.**
Put the batteries in the case observing the polarities as illustrated.
- 3 **Closing the cover.**
Push the cover as illustrated until a click is heard.

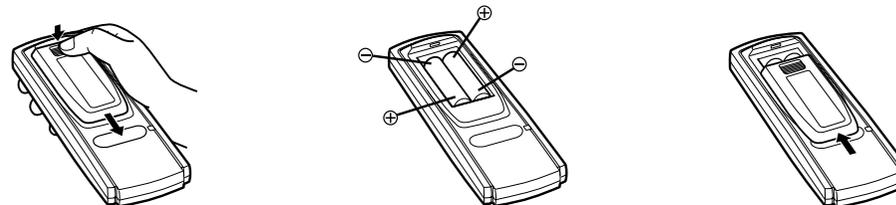

In Case of Difficulty

Problem	Cause	Solution
Remove Control Inoperative.	Reverse placement of battery.	Place the battery correctly into its cradle in the compartment.
	Dead battery.	Replace the battery with a new one.
	Remote Control not pointed toward the head unit.	Point the remote control directly toward your head unit.

Specifications

Battery Type AAA sized dry batteries
 Battery Quantity 2
 Dimensions(W x H x D) 42 x 121 x 23mm
 (1-21/32" x 4-25/32" x 29/32")
 Weight (without battery) 50g (1.8 oz)
 Accessory Remote Control Unit Holder