

# EGO<sup>TM</sup> Instruction Manual:

**WATERPROOF SOUND CASE with speakers<sup>TM</sup>**


Compatible with



# 25906033

## ***Contents***

	Page
Introduction	1
Parts List	2
Quick Start	3
Safety Instructions	4
Operation Guide	5-8
Trouble Shooting	9
Care and Maintenance	10-12
Warranty & Return Policy	13-15
Specifications	16
FCC Compliance Statement	17

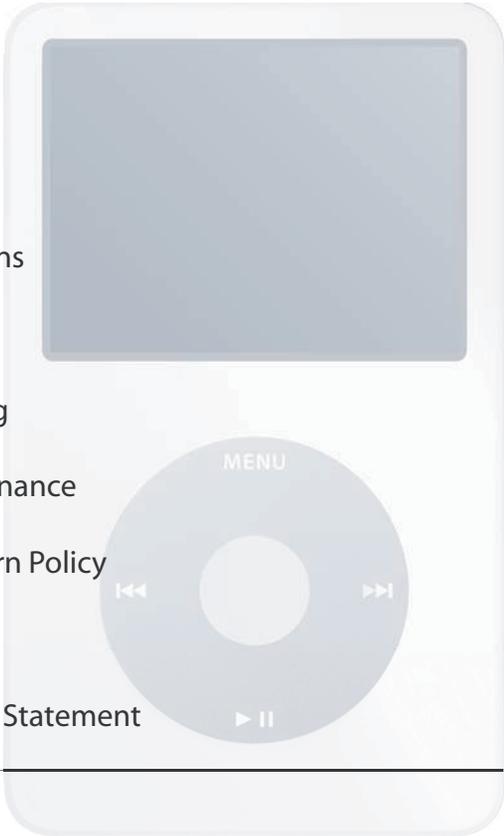

## ***Introduction***

Thank you for purchasing the Waterproof Sound Case™. This product fits the following Apple™ iPod® digital music players:

iPod® 4thGen/photo 20GB/30GB/40GB/60GB

iPod® 5th Gen/video 30GB/60GB/80GB

iPod® mini 4GB/6GB

iPod® nano 1st Gen & 2nd Gen  
1GB/2GB/4GB/8GB



Designed to enhance your iPod experience, the Waterproof Sound Case gives you uninterrupted music in any environment. Its design will protect your iPod from sand, water and dust during usage. A tough polycarbonate body with rubber bumpers ensures shockproof protection. If used properly, the Waterproof Sound Case will provide you with iPod enjoyment for a very long time.

### ***Copyright***

\*Apple™ and iPod® are trademarks of Apple Computer, Inc. Registered in the U.S. and other countries

## Parts List



Waterproof Sound Case™



Carrying Bag



4 AA alkaline  
batteries



Shoulder Strap



Wrist Strap



Spacer - iPod 4G / photo®  
iPod 5G / video®



Spacer- iPod mini®




Spacer - iPod nano® 1G  
iPod nano® 2G

\* iPod 4G / photo 60GB requires no insert

\*\*iPod® not included

## Quick Start

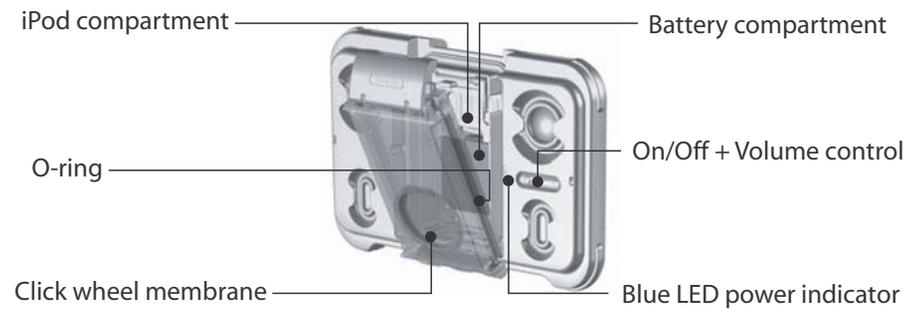

## ***Safety Instructions***

---

Please read and follow all safety and operating instructions before using this product. Retain this manual for future reference.

Please observe all warnings on the product and in the operating instructions.

Do not take product apart for any reason. There are no user serviceable parts inside, and any attempt at modifying or repairing your unit will void the warranty. (See Warranty & Return Policy on page 13)

Do not apply excessive force to the controls, or put heavy objects on top of the speaker. Keep sharp objects away from speakers.

Protect from direct sunlight and excessive heat. Avoid using the product for long periods of time in hot temperatures. High temperature may damage contents or shorten the life of sealing components. Do not store in closed cars, etc.

Make sure unit is dry before opening and removing or accessing iPod.


Although the product is waterproof, it is not designed for use underwater. **Do not submerge underwater.**

Note: Failure to follow all safety instructions may void your warranty.


## Operation Guide

### 1. Install batteries

New Alkaline batteries recommended  
Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries  
\*See battery safety rules on page 12

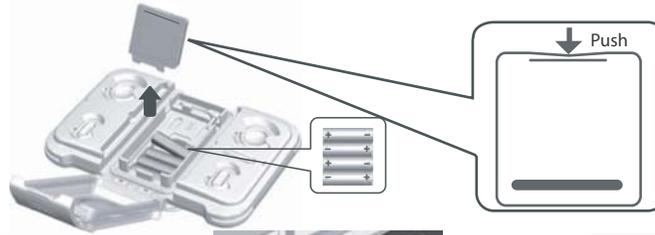

### 2. Connect iPod : Use correct spacer for your iPod (see page 2). nano

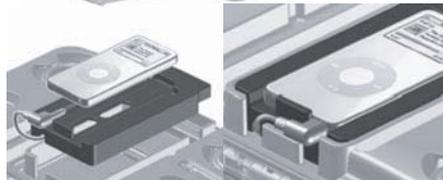


iPod nano  
1G & 2G

### 2A. Connect other iPod :



iPod mini

iPod 4G\* & 5G

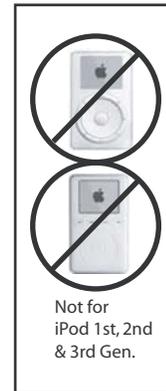


Not for  
iPod 1st, 2nd  
& 3rd Gen.

\*iPod 4G photo 60GB requires no spacer

## Operation Guide

3. Check O-ring placement and condition

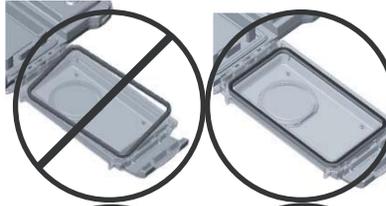

Make sure there are no hair, fibers, sand or other particles

4. Close the iPod compartment latch completely



  
Caution  
Do not open when wet  
or in wet environment



Dry completely before opening

5. Attach wrist and/or shoulder straps



## Operation Guide

### 6. Volume control



LED power on indicator  
Power On/Off  
Volume Control

The Waterproof Sound Case will shut down automatically if no audio input is detected for 2.5 minutes. It will resume at the last volume setting the next time you turn it on.

#### Quick Tip

1. Set the iPod volume level to a comfortable listening level.
2. Control the volume via the Waterproof Sound Case for easiest and safest operation.



Due to variances in the sound level of audio files and iPods, sound distortion (clipping) may occur at high volume settings. When this occurs, and also when LED power indicator dims too often, reduce volume accordingly and listen at a safe level.

If problems persist, try replacing the batteries.

### 7. Replacing batteries



New alkaline batteries recommended

\*See battery safety rules on page 12

## Operation Guide

### 8. Setting your iPod


#### 8a. Turn Sound Check On

#### 8b. Set volume limit to this level




### iPod Settings:


Sound Check Off

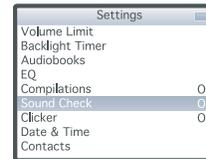

Sound Check On

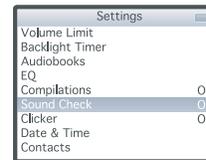

Volume Limit

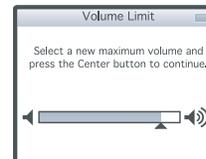

Note: For better Bass, select EQ setting to bass booster, Hip Hop, or Pop.

## ***Troubleshooting***

<u>Problem</u>	<u>Solution</u>
No power	<ol style="list-style-type: none"><li>1. Check if batteries are installed properly</li><li>2. Batteries may be low. Replace with new batteries*</li><li>3. Press power button  on the Waterproof Sound Case and iPod</li></ol>
No sound	<ol style="list-style-type: none"><li>1. Check if the 3.5mm mini jack is plugged into iPod</li><li>2. Check volume by pressing  volume button</li><li>3. Check volume on iPod and adjust volume</li><li>4. Check if the power is on  on the Waterproof Sound Case and iPod</li><li>5. Batteries may be low. Replace with new batteries*</li></ol>
iPod doesn't fit in case	<ol style="list-style-type: none"><li>1. Check if the correct iPod spacer is used for your iPod (See page 2)</li><li>2. Make sure the 3.5mm mini jack and cord is not blocking the iPod</li><li>3. Clear iPod compartment of any debris</li><li>4. Make sure O-ring is properly fitted</li></ol>
Waterproof Sound Case emits noises, or distorted sounds	<ol style="list-style-type: none"><li>1. Use iPod Settings on page 8</li><li>2. Replace with new batteries.</li></ol>

\* see Battery & Safety Rules on page 12 under Care and Maintenance.

If problems still persists, call the EGO helpline at (562) 903-9550 or (800) 747-2660 (within U.S. only)

## ***Care and Maintenance***

---

Put the unit in the provided protective carrying case during transportation.



Remove any debris (e.g. sand, dirt, hair) stuck to the sealing ring to avoid water leakage.

Use a damp cloth without any solvents to clean the exterior of unit. Please make sure that you have securely locked the iPod compartment to prevent water from entering the unit.



## ***Care and Maintenance***

Wipe the interior of the unit with a soft dry cloth.

**Do not wash the interior with water.**



Do not use oil or chemicals during maintenance, as this will cause corrosion to the sealing ring.



### **Caution: Air Tightness**

Significant change in altitude or temperature (e.g. during and after plane travel) may cause the unit to be sealed shut. Greater force than normal may be required to open the unit. Open latch and pull gently to release pressure.

Speaker Jamming may also occur during pressure change. This may be fixed by opening the iPod compartment to release pressure. Do not open when wet or in wet environment. Dry completely before opening unit.

## Care and Maintenance

### Battery safety rules:

Batteries must be inserted with the correct polarity. Only batteries of the same or equivalent type should be used.

Do not mix old and new batteries.

Do not mix alkaline & rechargeable batteries.

Remove old or exhausted batteries from unit.

Remove the batteries if the unit will be unused for long period of time.

Never throw batteries into a fire.  
Do not expose batteries to fire or other heat sources.



Low batteries may cause unit to emit noises or distorted sounds.  
If this happens, remove batteries and replace with new alkaline or fully charged rechargeable batteries.

**\*Battery & Electronic Device Disposal:** Spent or discharged batteries & electronic devices must be properly disposed of and recycled in compliance with all applicable laws. For detailed information, contact your local solid waste authority for authorized state and federal locations.



## ***Warranty and Return Policy***

Please register online at [www.atlantic-inc.com](http://www.atlantic-inc.com)  
or mail in your registration card

**One Year Limited Warranty.** Atlantic, Inc. warrants to the original purchaser that its products are free from defect in materials or workmanship for a period of one year, which starts with the date of original purchase. This warranty is void if the product has been damaged by accident, unreasonable use, neglect, improper service or other causes not arising out of defect in material or workmanship. This limited warranty applies to products purchased in the U.S. and Canada.

### Warranty Disclaimer

This warranty does not cover damage to the product or any iPods or other electronic devices used with this product, caused by accidental damage, misuse, improper care, alteration or unauthorized repair and excludes claims for incidental or consequential loss. Atlantic is not liable for loss of use of the product or loss of data / files.

## ***Warranty and Return Policy***

### ***Return Policy***

During the One-year Limited Warranty period, a defective product can be replaced. Follow these instructions.

- 1) Return to retailer
- 2) For U.S. and Canada only: If the retailer's return period has been exceeded, call for the Ego Helpline for return instructions.  
(Please be ready to provide model & lot #'s)

**EGO Helpline:**

(Within U.S. & Canada)

562) 903-9550 or Toll Free (800) 747-2660

M-F, 8am-5pm, P.S.T.

- 3) A Return Merchandise Authorization (RMA) number for your return will be assigned.
- 4) RMA number must be clearly marked on four sides of package. A missing or unclear RMA number may result in a delay of your service.
- 5) Please ship the product postage paid. COD shipments cannot be accepted. Atlantic cannot assume responsibility for loss of damage during incoming shipment. For your protection, carefully package the shipment and insure it with the carrier.

## ***Warranty and Return Policy***

---

For your records:

Model No \_\_\_\_\_

Lot No \_\_\_\_\_

Date of Purchase \_\_\_\_\_

Location of purchase \_\_\_\_\_

**Important: We recommend you keep all of your original packing material and proof of purchase (store receipt), in the event you have to ship the product for service.**

## ***Specifications***

Amplifier output	3W x 2 (RMS)
Frequency range	50- 20,000Hz
Power supply	4 x AA (LR6) Blue LED power indicator, auto shut-down after 2.5 minutes without audio signal
Speaker unit	Custom designed waterproof speakers with 45mm neodymium drivers
Dimensions	9.8"(24.9 cm) L x 1.8"(4.6 cm) W x 6.5"(16.5 cm) H
Weight	2.05lb / 0.93kg
Playtime	Over 30 hours at medium to high volume (Alkaline & most rechargable batteries)

\*specifications subject to change without notice

## ***FCC Compliance Statement***

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation


Tested to Comply with FCC Standards

For Home or Office Use

Trade Name: EGO Waterproof Sound Case™



**ATLANTIC®**

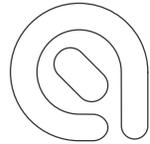

©2006 Atlantic Inc.

Santa Fe Springs, CA U.S.A.

[www.atlantic-inc.com](http://www.atlantic-inc.com)

U.S. and other foreign patents pending

All Rights Reserved

Made in China

R2.0 06101 # 25906033