# QUICK REFERENCE GUIDE DC1010S

# CONTENT

1	DC1010S Auditron
-	
1.1	Entering/Exiting Auditron Mode
1.2	Create /Modify Accounts
1.3	Review Account
1.4	To Delete All Copy Volume
1.5	To Activate Auditron ( password )
2	DC1010S Scan Mode
2.1	To Create Mailbox Name
2.2	To Create Mailbox Password
2.3	To Scan



Page

2



# DC1010S AUDITRON

### **Entering/Exiting Auditron Mode**

- Press System Settings / Meter Check
- Select Auditron Administration Mode
- Touch Switch
- Open (green) control panel cover
- Touch Auditron Adminstrator Mode
- Using keypad, key in Auditron Administrator Password (11111)
- Touch Confirm

# Create /Modify Accounts

- Select Create / Modify Accounts
- \* Key in Accounts Nos.(e.g 101)
- Touch Modify Account Data
- Touch User Password (e.g 1234)
- Enter xxxx (password)
- Touch Confirm
- To repeat go to \* or
- Touch Save
- Touch Close
- Touch Exit
- Touch **Back** (from monitor)

# Review Account

- Touch Review Accounts
- A to scroll through all accounts usage
- Touch **Close** ( to exit )
- Touch Exit Auditron
- Touch **Back** (from monitor)

# To Delete All Copy Volume

- Touch Delete Account Data
- Touch Delete All Copy Volumes
- Touch Confirm
- Touch **Close** ( to exit )
- Touch Exit Auditron
- Touch **Back** (from monitor)

# To Activate Auditron ( password )

- Touch Auditron Setup
- Touch On
- Touch Save
- Touch Exit Auditron
- Touch **Back** (from monitor)

# DC1010S-SCAN MODE

## To Create Mailbox Name

- Touch Edit/Print Files
- Touch Hard Disk (Scan File)
- Select Desire Mailbox
- Touch Enter / Change mailbox Name
- Key in Name
- Touch Save

# To Create Mailbox Password

- Touch System Settings/Meter Check
- Touch Create Mailbox
- Select Desire Mailbox
- Touch Enter / Change Password
- {New Password} Key in 4 Digit Number
- Touch Confirm
- {Confirm Password} xxxx Key in 4 Digit Number
- Touch Confirm
- Touch Close 3X

## <u>To Scan</u>

- Touch Scan
- Select desire Mailbox
- Touch Select Mailbox
- Select Basic Features
- Press Start button

© All Rights Reserved

This Quick Reference guide may not be reproduced, in full or in part, and in any form or by any means, electronic or mechanical, including photocopying without the written permission of Fuji Xerox Singapore Pte Ltd.