


# OWNER'S MANUAL



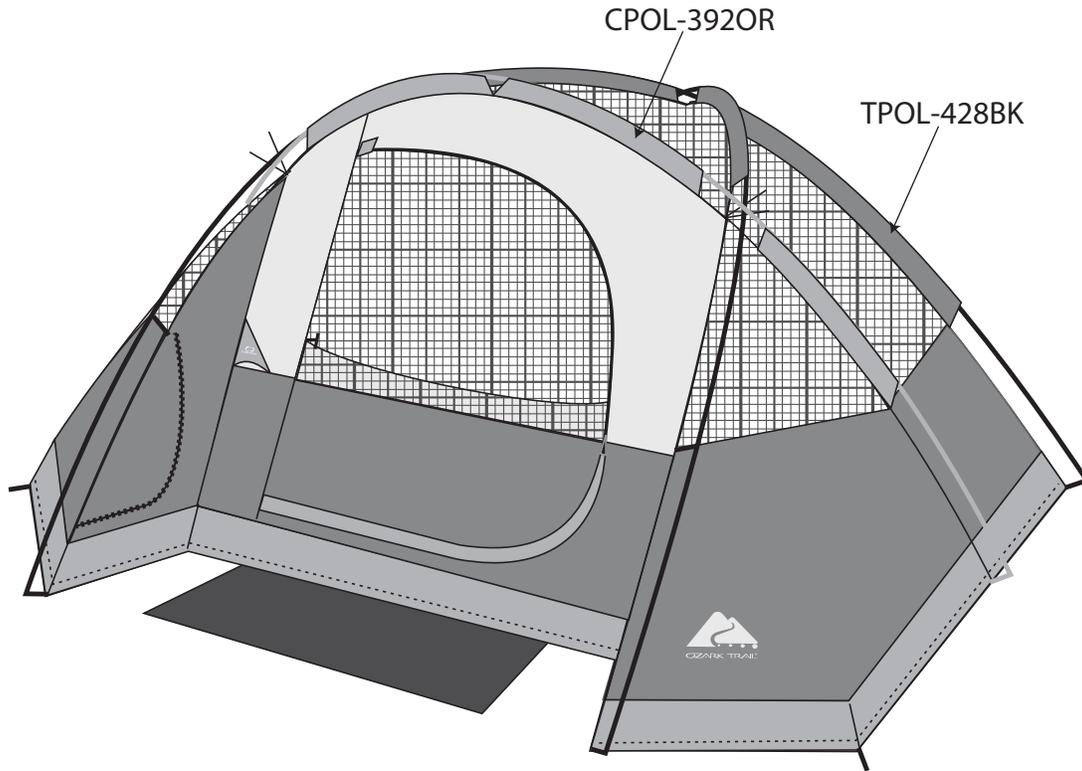

**Model # WMT-9920N Sport Dome Tent  
9 ft. x 8 ft. x 48in.**

✓	QTY.	DESCRIPTION	PART NUMBER
		<b><u>FABRIC BODY:</u></b>	
—	1	Dome Tent Body	N/A
		<b><u>POLES:</u></b>	
—	2	Fiberglass, shock-corded Tent Pole- black;	TPOL-428BK
—	1	Fiberglass, shock-corded Cross Pole- orange;	CPOL-392OR
—	1	Fiberglass, shock-corded Rainfly Pole - black;	FPOL-187BK
		<b><u>If you wish to order a complete set of poles, please use:</u></b>	
—	1	Pole Set of Four shock-corded Fiberglass Poles- orange/black	PSET-ORBK
		<b><u>RAINFLY:</u></b>	
—	1	Rainfly w/ 6 S-Hooks; orange/grey	RFLY-ORGY08
		<b><u>CARRY BAG:</u></b>	
—	1	Carry Bag- orange/grey;	CBAG-660ORGY
		<b><u>UNIVERSAL PARTS:</u></b>	
—	1	Gear Loft	GEAR-20TRI
—	1	Pole bag	PBAG-27IN
—	1	Stake Bag	SBAG-9IN
		<b><u>STAKES:</u></b>	
—	1	Stake Set of Eight 7 in. steel stakes	SSET-8ST7IN

Review your parts list above to make sure all parts listed above have been included in your package.  
Please do NOT return product to store.

## ASSEMBLY INSTRUCTIONS

THIS RECREATIONAL PRODUCT REQUIRES TWO PEOPLE TO ASSEMBLE.

- ★ Unless otherwise specified all instructions will be given assuming the assembler is facing the front opening of the tent.
- ★ Carefully fold out your poles, using caution to prevent snapping the shock-cording. Make sure each pole segment is “seated” into the next section before flexing the pole during set-up. Sort POLES by type and length; refer to parts list descriptions.
- ★ Do not drop tent bag or pole bag. Do not bounce tent bag on its end to remove tent, as these actions may damage the shock-cord and/or pole ends.

### STEP 1: Verify Package Contents

Verify package contents by emptying contents of bag(s) and confirming all parts are included and undamaged.  **Tip: Do this at home before you leave on your trip.**


### STEP 2: Set Up the Tent

**A)** Select a smooth level site and spread out your tent.

**B)** Extend the tent poles and place in position ready for installation. Push each of the three tent poles through pole sleeves, orange pole will go to the orange pole sleeve.

**C)** After sliding poles through sleeves, gently flex poles into an arch and insert ends onto pin-rings at tent base.

**D)** Snap Quick Clips (attached to tent body) onto tent poles to shape tent.

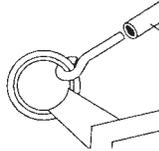


### Step 4: Stake Tent

Stake tent by driving stakes through the pin-rings at the base of tent.



### Step 5: Adding Accessories

The gear loft is for extra storage of light weight items (i.e. maps, eye glasses). Attach its s-hooks to the fabric loops inside tent ceiling.

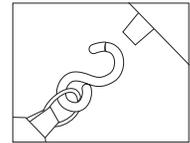

### STEP 3: Attach the Rainfly

**A)** Extend rainfly pole and place in position ready for installation.

**B)** Insert one end of rainfly pole into pole pocket on underside of rainfly. Gently flex pole and insert opposite end into other pole pocket.

**C)** Align rainfly front to front of tent and drape rainfly over tent.

**D)** Attach the s-hooks to the pin-ring at the tent base.

### CAMPERS WANT TO KNOW *Should I use a seam sealer?*

***We highly recommend seam sealing your tent seams.*** Use a seam sealer compound (tube or bottle type) that applies directly to the stitching for best coverage. Make sure compound is completely dry before rolling up your tent. Follow the manufacturer's directions.

## DISASSEMBLY INSTRUCTIONS

- \* Make sure all doors are zipped nearly closed, leaving space to allow air to escape when repacking.
- \* Store all Poles and Stakes in their corresponding Bags to prevent any possible tearing or damage to the fabric piece(s).

### STEP 1: Remove the Stakes

Carefully remove stakes by pulling out the hook ends. **Tip:** Do not pull or tug at the stake loops sewn onto the fabric body. Remove excess soil from the stakes and store them in their bag.

### STEP 2: Take Down Gear Loft

Detach gear loft by unhooking gear loft s-hooks from fabric loops on ceiling. Fold gear loft for storage.

### STEP 3: Remove Rainfly

**A)** Detach S-hooks and nylon fasteners that hold down rainfly.

**B)** Remove pole from pole pockets.

### STEP 4: Take Down the Tent

**A)** Unfasten Quick Clips from tent poles.


**B)** Remove poles from pin-rings.

**C)** Slide poles out by carefully pushing them through the sleeves, away from the end at which you are standing.

**D)** Carefully fold poles and store them in their bag.

### STEP 5: Fold the Tent

Fold tent into a rectangular shape the same width as pole bag. Lay pole bag at one end of tent and roll tightly together, slowly squeezing air out as you go. (You can roll rainfly together with tent in this step.) Store tent in carry bag provided. (Following these

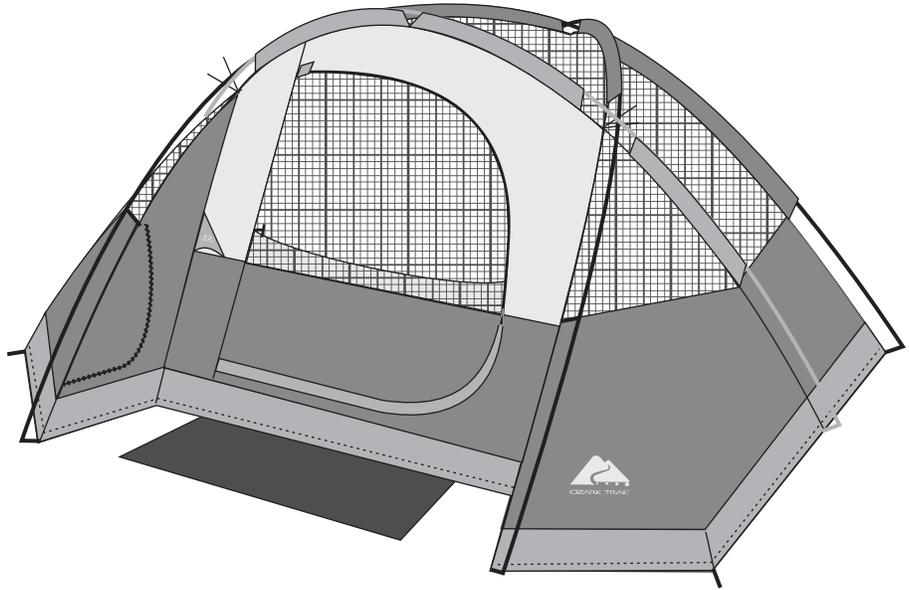

## Limited 6 Month Warranty

If your product does not work properly because of a defect in materials or workmanship, NorthPole Limited will, for 6 months from the date of purchase, at its option either (a) repair our product with new or refurbished parts, or (b) replace it with a new product. The decision to repair or replace will be made by NorthPole Limited. NORTHPOLE LIMITED RESERVES THE RIGHT TO MAKE SUBSTITUTIONS TO WARRANTY CLAIMS IF PARTS ARE UNAVAILABLE OR OBSOLETE.

If repair is needed during the limited warranty period, the purchaser will be required to furnish a sales receipt as proof of purchase indicating date of purchase, amount paid, and place of purchase. Product will not be covered under warranty due to damages resulting from misuse, excessive or abusive usage, and/or inclement weather conditions (i.e. wind storms, hurricanes, lightning storms, tornadoes). Acts of God resulting in damage to tent and its components are not covered under this limited warranty. In such event, the consumer assumes cost of needed parts. NorthPole Limited is not responsible for normal wear and tear, zipper exhaustion, or the natural breakdown in materials that occurs with extended use.

UNDER NO CIRCUMSTANCES SHALL NORTHPOLE LIMITED BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

NORTHPOLE LIMITED EXPRESSLY EXCLUDES ALL WARRANTIES, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow the exclusion or limitation of implied warranties, so the above exclusion may not apply to you.

NOTWITHSTANDING ANYTHING TO THE CONTRARY, NORTHPOLE'S AGGREGATE LIABILITY, WHETHER IN CONTRACT OR TORT, SHALL BE LIMITED TO ACTUAL DIRECT MONEY DAMAGES IN AN AMOUNT NOT TO EXCEED THE PRICE PAID BY THE END-USER FOR THIS PRODUCT.

**HOW TO OBTAIN WARRANTY SERVICE:** Call the toll free number during the business hours mentioned below. You must have a copy of your purchase receipt from an authorized dealer as proof of purchase at time of call.

**HOW TO ORDER REPLACEMENT PARTS:** When ordering replacement parts, always include the Model Number, Part Number, and Part Description.

## A Message To Our Customers

Thank you for purchasing a quality product manufactured by NorthPole Limited. As the world leader in outdoor recreational products, we pride ourselves in delivering high quality and customer friendly products. As with any new product, it is very important to read all the information on safety, assembly/disassembly and care of your new purchase prior to usage.

As a valued customer, your satisfaction is very important to us. We at NorthPole Limited welcome your feedback and look forward to continuing our relationship with the development of new, innovative products to suit your needs.

Please visit your favorite retailer for other quality products from NorthPole Limited.

**IMPORTANT:** We advise you to assemble this product at least once at home before going on a trip to ensure that you have attained a satisfactory knowledge of the assembly process. Being familiar with your product will make it easier if you have to set up in the dark or under adverse conditions.

### IMPORTANT SAFETY AND TIP INFORMATION

TO MAXIMIZE THE ENJOYMENT OF YOUR PRODUCT PLEASE ASSEMBLE AND USE YOUR PRODUCT AS SAFELY AS POSSIBLE. THE PURPOSE OF THE SAFETY ALERT SYMBOL  IS TO CALL YOUR ATTENTION TO POSSIBLE HAZARDS RELATING TO THE USE AND ASSEMBLY OF YOUR PRODUCT. THE PURPOSE OF THE TIP SYMBOL  IS TO CALL YOUR ATTENTION TO SUGGESTIONS THAT WILL ASSIST YOU IN THE ASSEMBLY/DISASSEMBLY PROCESS AND ENHANCE YOUR CAMPING EXPERIENCE. WHEN YOU SEE THESE SYMBOLS, PLEASE CLOSELY FOLLOW THE INFORMATION PROVIDED.

## WARNING

- KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This fabric is not fireproof! It is made with flame resistant fabric, which meets CPAI-84 specifications. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective. Do not erect this product near an open flame.
- Never use any fuel burning, oxygen consuming devices, or any device that produces fumes (including, but not limited to cooking stoves, lanterns, candles, hibachis, or heaters) in or around your product. Inhalation of fumes may result in carbon monoxide poisoning, injury and/or death.
- THIS PRODUCT IS NOT WATERPROOF!
- Your product is water repellent, however, during heavy rain some leakage may occur. Keep objects from touching the inside, as objects may cause leakage at the point of contact.
- To prevent seam leakage (floor seams in particular), a seam sealer compound must be applied to the seams. Use recommended water repellent compounds on our product. Read the label on any product before using. Questions? Call our Customer Service number.
- Your recreational product is made from synthetic fabric that has been treated and is highly resistant to the sun's Ultraviolet (UV) light. No fabric can withstand prolonged exposure to sunlight. UV damage is not covered by the limited warranty.
- Do not spray or apply insecticide or pesticide on your product. It may damage UV resistant and/or water repellent properties of your product. Any damage caused by applying insecticide or pesticide on your product is not covered by the limited warranty.
- Our recreational products are constructed to rigid specifications. They are not made, however, for extreme weather, climates, or environments. Modification, abuse and extreme weather are some conditions that may adversely affect the structural integrity.
- Additional precautions may be necessary during inclement or "surprise" weather conditions. Here are some tips that may help during these times:
  -  Use guy lines to help secure your structure during periods of heavy winds.
  -  Storms or steady rains may collect in water pockets on the roof. This will add weight, which can weaken the overall structure causing the uprights to collapse. Maintain a watchful eye and remove any water accumulation that may occur.
- Your product must be stored dry. One of the easiest ways to damage your product is storing it while it is wet. Storing a wet tent as short as 24 hours in warm weather is likely to cause mildew on the fabric. Once mildew sets in, the stains are permanent. Stains cannot be removed without potential harm to the fabric coatings and are not covered by the limited warranty.
- If you must close camp in the rain, open your product and set it up to allow it to dry as soon as possible. Even when your product appears to be dry after use, it is always best to unfold and assure it is completely dry before storing. Hanging it outside or even leaving loosely clumped in your house for a few days, turning it inside and out to assure it has dried everywhere, can help prevent damage.
- This product is not machine washable. To clean product, use mild soap and let it dry thoroughly before storage.

# NOTICE!

**FOR MISSING PARTS:**

**1-800-775-1965 or 1-800-366-1599**

**PLEASE DO NOT  
RETURN THIS UNIT TO  
THE RETAIL STORE**

## TROUBLESHOOTING GUIDE

PROBLEM	SOLUTION
1. CONDENSATION	THIS IS CAUSED BY LOWER TEMPERATURES ON OUTSIDE OF PRODUCT COMBINED WITH BODY HEAT ON INSIDE OF PRODUCT. WHEN THIS OCCURS, AVOID TOUCHING WALLS TO REDUCE CONTACT LEAKAGE. LEAVING DOORS AND WINDOWS OPEN WILL REDUCE CONDENSATION.
2. MILDEW	TO AVOID MILDEW, NEVER STORE YOUR PRODUCT WET OR DAMP. HOWEVER, IF MILDEW OCCURS, USE A SOFT BRISTLE BRUSH OR SPONGE WITH MILD SOAP TO CLEAN. LET DRY IN THE SUNLIGHT AND APPLY SEAM SEALER COMPOUND ON INSIDE SEAMS.
3. REPAIRING A TEAR	FOR SMALL TEARS USE A SELF-ADHESIVE PATCH KIT. WE RECOMMEND A REPAIR SHOP FOR LARGER TEARS.
4. FAULTY ZIPPER	ALL OF OUR TENTS COME WITH SELF-REPAIRING NYLON COIL ZIPPERS. IF THE ZIPPER SEPARATES, YOU CAN MOVE THE SLIDER TO THE BEGINNING OF THE ZIPPER TAPE AND REWORK THE ZIPPER. LOCAL AWNING AND UPHOLSTERY REPAIR SHOPS MAY BE ABLE TO ASSIST YOU.
5. FLOOR CONDENSATION (ONLY APPLICABLE ON PRODUCTS WITH FLOOR)	TO PREVENT FLOOR CONDENSATION USE A GROUND CLOTH. PLACING A GROUND CLOTH UNDER YOUR PRODUCT WILL PROLONG ITS LIFE. GROUND CLOTH SIZE SHOULD BE SLIGHTLY SMALLER THAN PRODUCT FLOOR SIZE.

### WARNING

This Tent/Shelter has been developed and is intended to provide protection from sun and light rain. This product is **NOT WATERPROOF**. This product is not intended for use during heavy rain, wind, hail, snow or other inclement weather (i.e. acts of God /Mother Nature); before the onset of such inclement weather, this product should be dismantled to avoid damage to product. Excess water build-up can cause the frame system to become unstable, and possibly collapse, causing injury. Any personal accessories or modifications to product (if used) should be removed during windy conditions to avoid damage to your person or this product. **DO NOT** use any gas or flame sources under or near this product. This product is not a toy. This product is not designed for use by children without adult supervision. Under no circumstances should this product be used as a permanent or temporary storage facility for children's toys, garden tools, personal belongings or similar.

PERHAPS WE'VE MISSED SOMETHING IN OUR TROUBLESHOOTING GUIDE. FEEL FREE TO GIVE US YOUR IDEAS ON "TRICKS OF CAMPING", REPAIR PROCEDURES, FEATURES YOU'D LIKE TO SEE, OR OTHER RECOMMENDATIONS. SEND THEM TO: