# **Installation Instructions for Transmission/Gear Pressure SWICHGAGE®**

Please read the following information before installing. A visual inspection of this product for damage during shipping is recommended before mounting.





**CAUTION:** Certain dangers to human safety and to equipment may occur if some equipment is stopped without pre-warning. It is recommended that monitored functions be limited to alarm-only or to alarm before shutdown.

### **Base Model Description**

20P, 25P, A20P and A25P SWICHGAGE®


The gage pointer makes with an adjustable contact to complete a pilot-duty circuit.

#### 20PE, 25PE, A20PE and A25PE SWICHGAGE®

Features internal snap-acting SPDT switches, instead of the single pole/pointer contacts. When the switch closes on falling pressure, it becomes <u>Set</u>, as pressure rises the switch <u>Resets</u>.

#### 20PABS, 25PABS, A20PABS and A25PABS SWICHGAGE®

Same as 20P, 25P, A20P and A25P with internal SPDT snap-switch for pre-alarm.

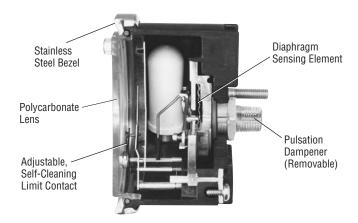

## **Specifications**

**Case Material**: 20P and 25P Series: *Plated steel*. A20P and A25P Series: *Polycarbonate*.

**Pressure Connection**: 1/8-27 NPT.

Contact Rating: Standard is 2A @ 30 VAC/DC resistive (pilot-duty only). Models 20PE, A20PE, 25PE and A25PE have non-adjustable snap-switch rated 3A @ 30 VDC inductive, 4A @ 125 VAC inductive.

#### **Warranty**

A limited warranty on materials and workmanship is given with this FW Murphy product. A copy of the warranty may be viewed or printed by going to <a href="https://www.fwmurphy.com/support/warranty.htm">www.fwmurphy.com/support/warranty.htm</a>




# IMPORTANT Installation Recommendations

#### SWICHGAGE® Used On Transmission/Clutch Oil Pressure

1. Install the SWICHGAGE\* using a Murphy pulsation snubber PD2160 in the pressure connection at the transmission or gear and at the SWICH-GAGE\*. The snubber helps reduce pressure spikes/surges which will damage the gage sensing element. It also stabilizes the gage readout through all operating cycles. Failure to isolate gage in this manner will void Murphy warranty and possibly cause equipment damage.

2. Models with pre-alarm have two switch points and when used with Murphy SS300 speed switch–allows changing between high and low switch points according to engine RPM. This configuration does away with nuisance alarms when shifting or when at idle–yet maintains maximum pressure protection. See Murphy Application Tip AT-01 for further details.

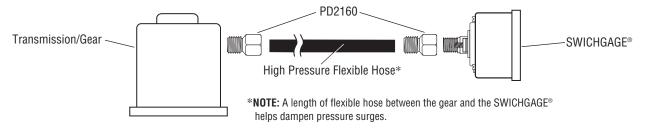



FW Murphy
P.O. Box 470248
Tulsa, Oklahoma 74147 USA
+1 918 317 4100
fax +1 918 317 4266
e-mail sales@fwmurphy.com
www.fwmurphy.com

#### **CONTROL SYSTEMS & SERVICES DIVISION**

P.O. Box 1819; Rosenberg, Texas 77471; USA +1 281 633 4500 **fax** +1 281 633 4588 **e-mail** sales@fwmurphy.com

#### MURPHY DE MEXICO, S.A. DE C.V. Blvd. Antonio Rocha Cordero 300, Fracción del Aguaje

Blvd. Antonio Rocha Cordero 3UU, Fracción del Agua San Luis Potosi, S.L.P.; México 78384 +52 444 8206264 fax +52 444 8206336 Villahermosa Office +52 993 3162117 e-mail ventas@murphymex.com.mx www.murphymex.com.mx

#### FRANK W. MURPHY, LTD.

Church Rd.; Laverstock, Salisbury SP1 1QZ; U.K. +44 1722 410055 fax +44 1722 410088 e-mail sales@fwmurphy.co.uk www.fwmurphy.co.uk

#### MURPHY SWITCH OF CALIFORNIA

41343 12th Street West
Palmdale, California 93551-1442; USA
+1 661 272 4700 fax +1 661 947 7570
e-mail sales@murphyswitch.com
www.murphyswitch.com

#### MACQUARRIE CORPORATION

1620 Hume Highway Campbellfield, Vic 3061; Australia +61 3 9358 5555 fax +61 3 9358 5558 e-mail murphy@macquarrie.com.au

