

Quick Start Guide





Step A Connect

Step B Setup





Step C Enjoy

What's in the Box?

You should find these items upon opening the box.

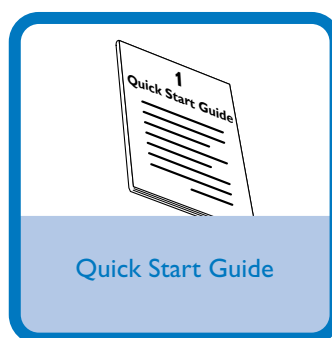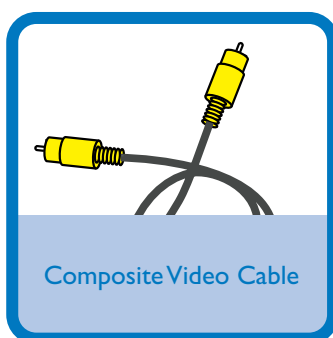

Remove the plastic protective sheet

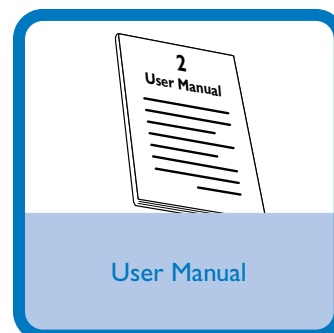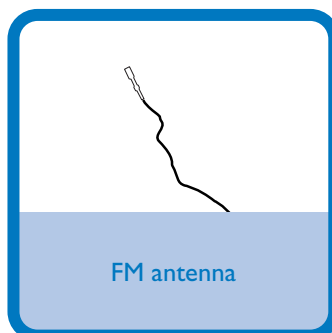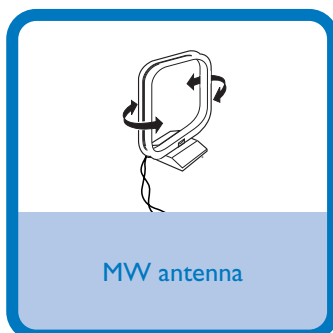
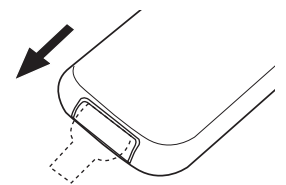


Step A Connect


Tip

See the User Manual for other TV connection options.

- 1 Connect the speaker cables.
- 2 Connect the FM and MW antenna.
- 3 Connect the composite video cable to a TV.
- 4 Connect the power cords of the system and TV.

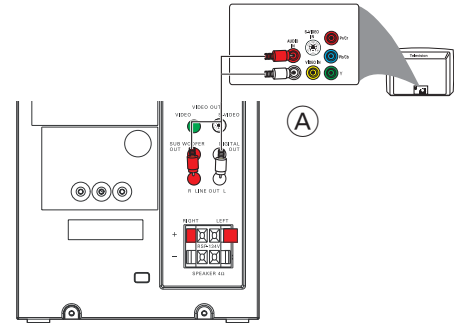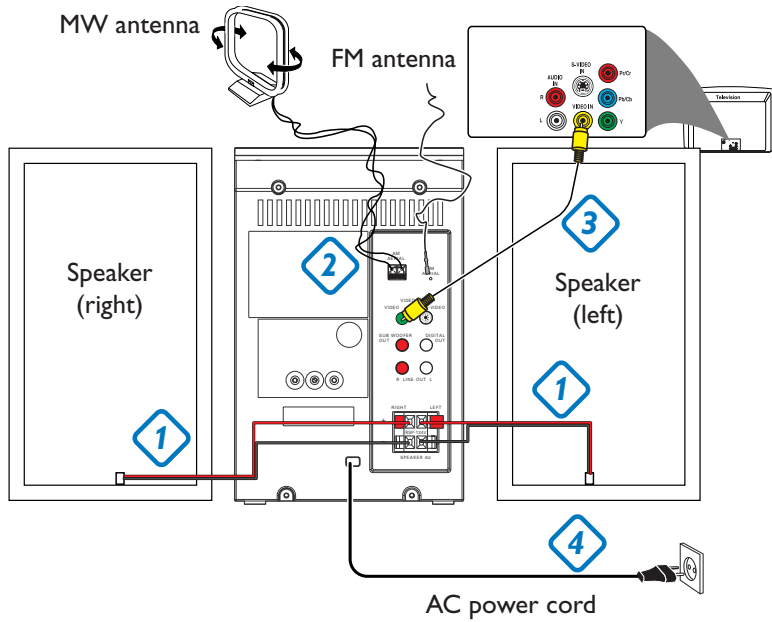

- Ⓐ To listen to the sound of this DVD Player through your TV, use the audio cables (white/red-not supplied) to connect **LINE OUT (L/R)** jacks of the DVD Player to the corresponding **AUDIO IN** jacks on the TV.

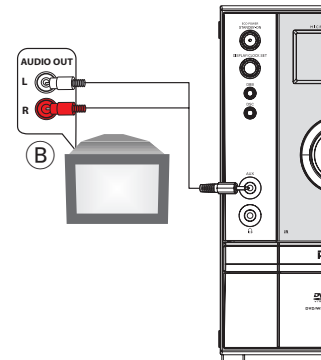


- Ⓑ To listen to the sound of your TV through this DVD player, use a cinch cable (not supplied) to connect **AUX** on the front panel of the DVD player to the corresponding **AUDIO OUT** jacks on the TV.

Step B Setup

Setting up the TV


- 1 Press **SOURCE** (**DISC** on the remote) to select disc source.
- 2 Turn on the TV and set it to the correct Video In channel.

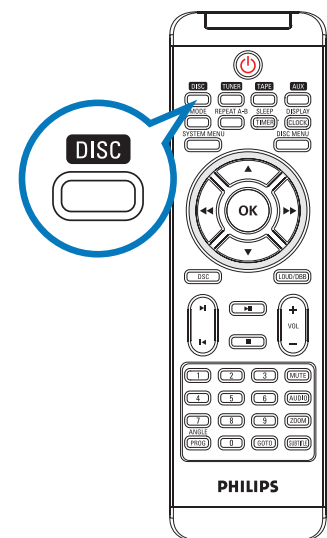

Step B Setup

Setting the clock


- 1 In standby mode, press and hold **DISPLAY/CLOCK SET** on the system.
- 2 When the hour digits flash, press **◀/▶** on the front panel or on the remote to set the hours.
- 3 Press **DISPLAY/CLOCK SET** again and the minute digits flash. Then press **◀/▶** on the front panel or on the remote to set the minutes.
- 4 Press **DISPLAY/CLOCK SET** again to confirm the time setting.

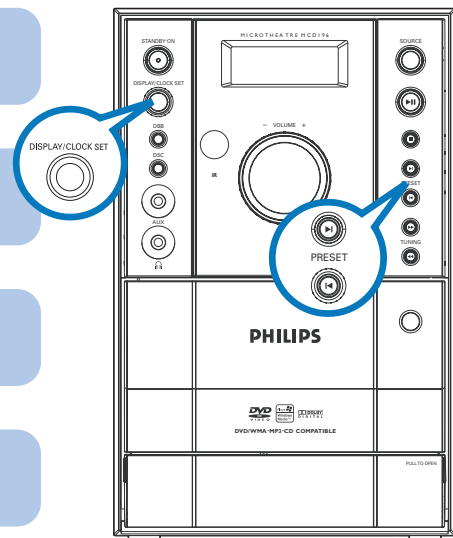

Setting system menu options

<p>SYSTEM SETUP</p> <ul style="list-style-type: none">TV SYSTEMSCREEN SAVERTV TYPEPASSWORDRATINGDEFAULT	<p>LANGUAGE SETUP</p> <ul style="list-style-type: none">OSD LANGUAGEAUDIO LANGSUBTITLE LANGMENU LANG
<p>VIDEO SETUP</p> <ul style="list-style-type: none">COMPONENTTV MODEBRIGHTNESSCONTRASTHUESATURATION	<p>AUDIO SETUP</p> <ul style="list-style-type: none">DIGITAL OUTDOWNMIX3D PROCESSINGLPCMNIGHT MODE

Tip
See chapters "Preparations" and "System Menu Options" in the User Manual for detailed descriptions.

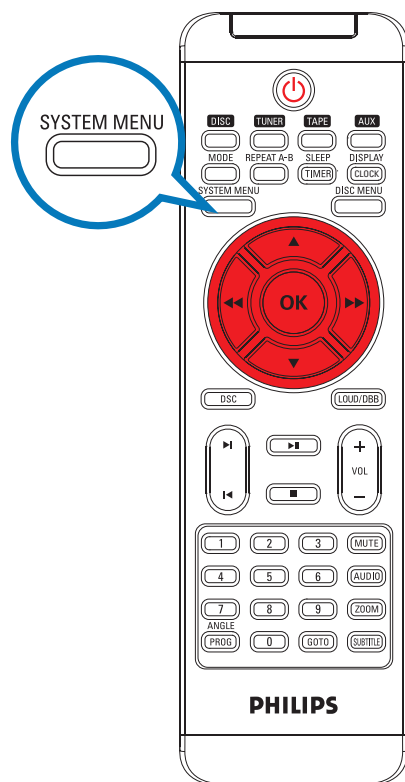

Playing a disc



1 Press **OPEN•CLOSE** to open the disc tray and load in a disc, then press the same button again to close the disc tray.
→ Make sure the label side of the disc is facing up.

2 Playback will start automatically. If not press **▶ ||**.

3 To stop playback, press **■**.

Programming and tuning to radio stations

1 Press **SOURCE (TUNER)** on the remote to select tuner source.

2 Press **PROG/ANGLE** for more than two seconds to program all available stations in order of waveband.

3 Press **PRESET** **◀/▶** until the desired preset station is displayed.

Tip

Detailed playback features and additional functions are described in the accompany owner's manual.

