

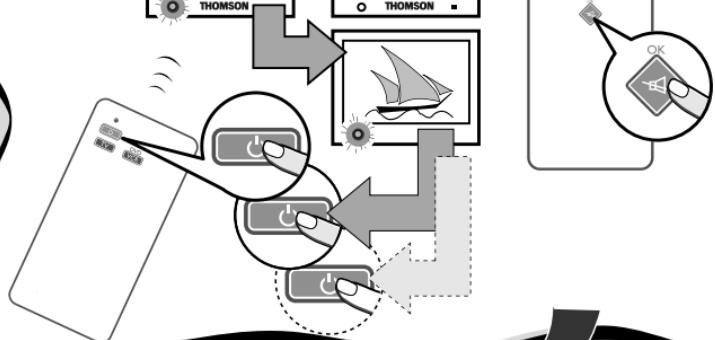
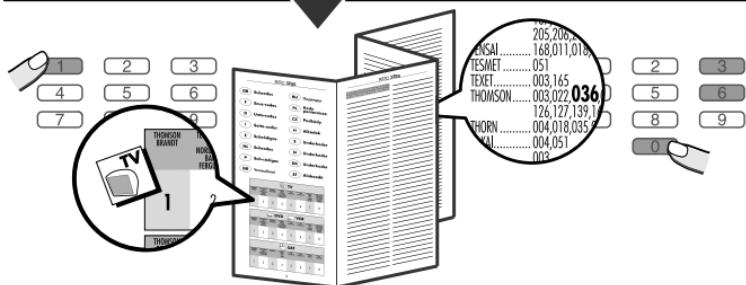
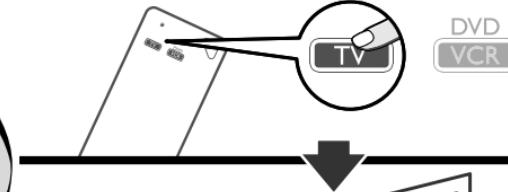




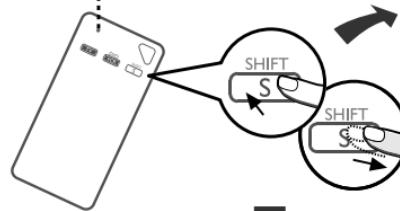


THOMSON

ROC2206

User manual

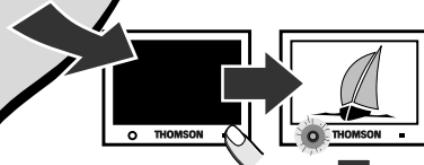

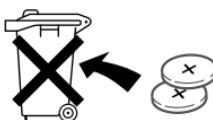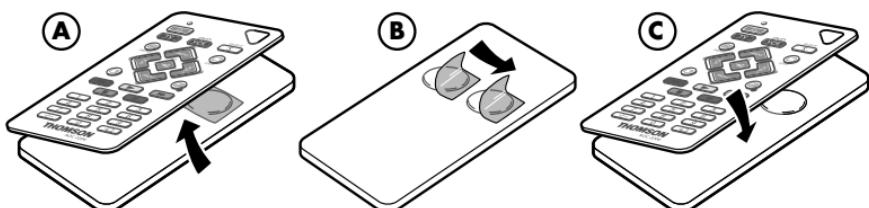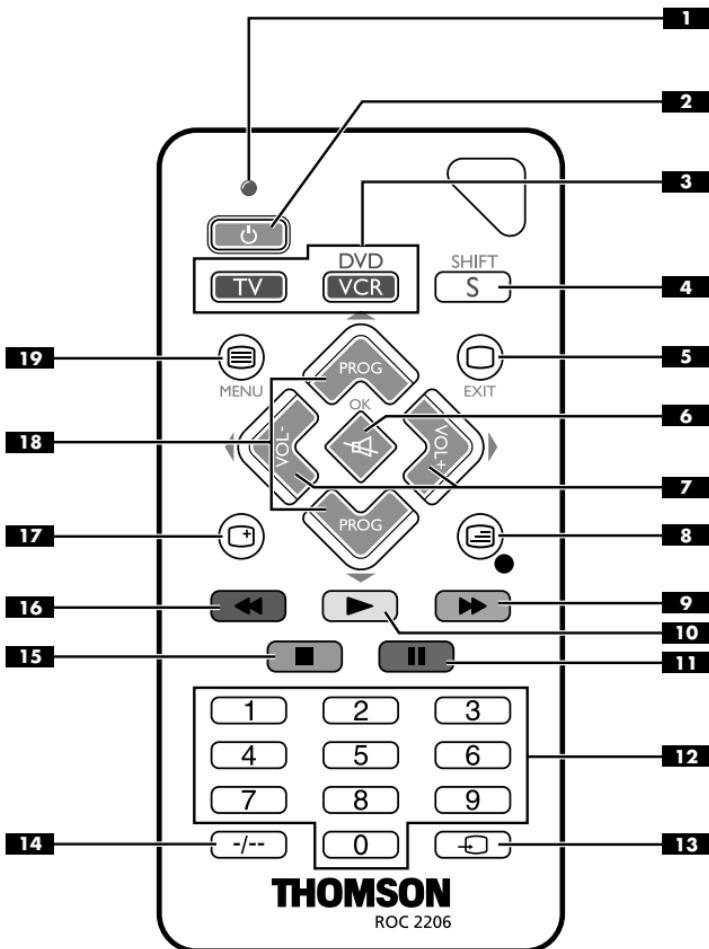

Respect the environment and the law!
Respectez l'environnement et la loi !
Schützen Sie die Umwelt und halten Sie die geltenden Entsorgungsbestimmungen ein!
Rispettate l'ambiente e le leggi!
¡Respete el medio ambiente y la ley!

The ROC 2206 is a universal remote control (2 in 1). It can replace 2 remote controls thanks to its 2 mode keys TV, VCR/DVD... It is compatible with the majority of television sets, video cassette recorders, DVD players, satellite and cable receivers as well as terrestrial digital television (DVBT), amplifiers and other audio equipment provided they are controlled by infra red signals.
This remote control has been factory programmed to allow you to use it immediately with the majority of Thomson Group devices. We therefore advise you to try it before beginning to program it. If programming is necessary, follow one of the methods A, B, C, D or E that are given in this manual. But before anything else, fit the two batteries into the remote control handset and peel off the tab as shown on the diagram on the inside of the cover.
Keep these instructions and the separate list of codes in a safe place so that you can later reprogram your remote control.

I - Description of keys

- 1 Indicator lamp: the indicator lamp lights up when any key is pressed.
- 2 : On / Standby.
- 3 Remote control mode
Selects device to control TV, DVD,VCR,...
- 4 S: programmes the remote control.
SHIFT: activates the secondary key features (indications in blue).
- 5 (EXIT): teletext Off in TV mode.
SHIFT and **EXIT**: turns off the menu of the selected product.
- 6 : switches the TV sound off.
SHIFT and **OK**: confirms a selection.
- 7 VOL-/VOL+ increases (+) or decreases (-) the volume of the TV set.
SHIFT and **VOL-/VOL+** also allows you to navigate the menus horizontally.
- 8 (RECORD): to record (VCR/DVD).
- 9 (FF): fast forward *.
- 10 (Play): play*.
- 11 (Pause): stops on an image*.
- 12 Number keys 0 to 9: these keys have the same functions as those of your original remote and are also used to enter the codes for different products.
- 13 AV: for selecting an external source (SCART).
- 14 Press this key first before you type in the 2-digit channel number (except for Thomson group products).
- 15 (STOP): stop playback*.
- 16 (REW): goes backward or advances forward*.
- 17 "Info" key.
Videotext inlay on TV picture.
- 18 PROG+,PROG-: programmes zapping button (received by the television set or the satellite receiver); use to scroll vertically through menus
SHIFT and **PROG+/PROG-** also allow you to navigate the menus vertically.
- 19 (MENU): teletext On/Off in TV mode.
SHIFT and **MENU**: turns on the menu of the selected products.

* The coloured buttons can be used to select categories when teletext is activated, and specific functions depending on the make.

2 - Testing the remote control before programming

1. Turn on the device that you wish to control.
2. Press the key corresponding (3) to the type of device to control:
TV: television set,
VCR/DVD: video cassette recorder, DVD player.
3. Point the remote control at the device you wish to control and try to turn it off using the (2) key.
If the device does not turn off, you must program the remote control using one of the methods **A**, **B**, **C** or **D** as described below.

3 - Programming the remote control

Method A – Fast programming with 1-digit subcode

Before you start programming, you must find the **subcode** of the set to be controlled.

Refer to the list provided with these instructions, page I of the **codes**.

1. Switch on the set you want to control.
2. Hold down the **S** (4) key until the **indicator lamp** (**1**) remains lit (the indicator light remains on for a few seconds to give you the time to proceed with the following steps. The indicator lamp flashes when this time is almost up, and then goes off).
3. Press the key (3) that corresponds to the type of equipment you want to control:
TV: television set,
VCR/DVD: video cassette recorder, DVD player.
4. While the indicator is lit, type in the subcode (example: 1 for Thomson).
5. Direct the remote control towards the set and try to switch it off by pressing the (2) key.
6. If the set you want to control switches off, press (6) to memorise the subcode.
7. If the product doesn't turn off, press the (2) key repeatedly until the set switches off. Wait approximately one second between key presses to give the **indicator lamp** (**1**) enough time to go off and light up again. This will allow you to see whether the product responds or not.
8. Immediately upon the switching-off of the set to be controlled, press (6) to store the subcode.

Note:

If you want to assign another type of product than those mentioned on the remote control (with the exception of the **TV** button which can only be used to control a television set), begin by entering the code that corresponds to the product you want to programme (a 3-digit code that you will find in the code booklet – see method **B**).

Example: if you want to control a satellite receiver with the **VCR/DVD** key, begin by entering a satellite code (any satellite, for example: 603 for a Thomson satellite receiver) then begin the procedure.

Check of the programming:

In principle, your set is ready for receiving the remote control commands. Check your remote control for proper functioning by performing the test described on page 3.

Method B – 3-digit codes Programming

Before you start programming, you must find the code of the set to be controlled.

Refer to the list provided with these instructions, page II of the codes.

1. Switch on the set you want to control.
2. Hold down the **S (4)** until the **indicator lamp (1)** remains lit (the indicator light remains on for a few seconds to give you the time to proceed with the following steps. The indicator lamp flashes when this time is almost up, and then goes off).
3. Press the key **(3)** that corresponds to the type of equipment you want to control:

TV: television set,

VCR/DVD: video cassette recorder, DVD player.

4. While the indicator is lit, enter the first digit of the 3-digit code proposed for the set to be controlled (example: **036** for Thomson). The red indicator then goes off if the code is correct or flashes, if the code is not on the list.
5. Direct the remote control towards the set and try to switch it off by pressing the **Ø (2)** key.
6. Should the set not switch off, repeat step 2. Then type in the next 3-digit code. Try to switch off the set by pressing **Ø (2)** key once. Repeat this procedure by trying out each of the 3-digit codes.

Check of the programming:

In principle, your set is ready for receiving the remote control commands. Check your remote control for proper functioning by performing the test described on page 3.

Method C – Programming by means of code retriever

Should none of the codes work, you still have the possibility of retrieving the appropriate code without having to perform any input.

1. Switch on the set you want to control.
 2. Hold down the **S (4)** until the **indicator lamp (1)** remains lit (the indicator light remains on for a few seconds to give you the time to proceed with the following steps. The indicator lamp flashes when this time is almost up, and then goes off).
 3. Press the key **(3)** that corresponds to the type of equipment you want to control:
- TV:** television set,
- VCR/DVD:** video cassette recorder, DVD player.
4. Direct the remote control towards the set and try to switch it off by pressing the **Ø (2)** key.
 5. If the set you want to control switches off, press **¶ (6)** to memorise the subcode.
 6. Should the set not switch off, press **Ø (2)** key, as many times as required (up to 200 times), until the set switches off. Wait approximately one second between key presses to give the **indicator lamp (1)** enough time to go off and light up again. Proceeding this way will enable you to see whether the set responds or not.
 7. Immediately upon the switching-off of the set to be controlled, press **¶ (6)** to store the subcode.

Note:

If you want to assign another type of product than those mentioned on the remote control, begin by entering a code that corresponds to the product you want to programme (a 3-digit code that you will find in the code booklet – see method B).

Example: if you want to control a satellite receiver with the **VCR/DVD** key, begin by entering a satellite code (any satellite, for example: 603 for a Thomson satellite receiver) then begin the procedure.

Check of the programming:

In principle, your set is ready for receiving the remote control commands. Check your remote control for proper functioning by performing the test described on page 3.

Method D – Automatic code search

With this method, the remote control scrolls through the full code list by sending an IR signal to the set to be controlled remotely. Proceed as follows:

1. Check that your equipment is on. If not, switch it on manually.
2. Hold down the **S (4)** until the **indicator lamp (1)** remains lit (the indicator light remains on for a few seconds to give you the time to proceed with the following steps. The indicator lamp flashes when this time is almost up, and then goes off).
3. Release the **S (4)** key.
4. Press the key corresponding to the type of equipment (for example TV).
5. Press the **PROG+ (18)** key once. After a few seconds the remote control begins to list all the codes included in the library (around 1 code per second). Press **PROG+ (18)** a second time to reduce the speed of the test (1 code every 3 seconds). As soon as the device changes channel you must immediately press **¶ (6)** to record the code and stop the listing. If you have gone past the code, you can go back to the previous code by pressing **PROG- (18)** as many times as necessary (you can go forward by pressing **Ø (2)** or **PROG+ (18)**. As soon as the device reacts again, press **¶ (6)** to record the code.

Note:

If you want to assign another type of product than those mentioned on the remote control, begin by entering a code that corresponds to the product you want to programme (a 3-digit code that you will find in the code booklet – see method B).

Example: if you want to control a satellite receiver with the **VCR/DVD** key, begin by entering a satellite code (any satellite, for example: 603 for a Thomson satellite receiver) then begin the procedure.

Method E – Programming for control of a COMBO (combined TV-VCR, TV/DVD, VCR/DVD, ... set)

Depending on the COMBO group (TV/VCR, VCR/DVD, etc.) and the make, you will be required to enter a single code for both devices in the COMBO, or to enter two codes, one code per device. Consult the separate list to discover this. Before you start programming, you must find the **subcode** or **code** of the subset to be controlled (television or video recorder).

Refer to the list supplied with this user manual (see page **subcodes or codes**).

- Switch on the COMBO you want to control.
- Hold down the **S (4)** until the **indicator lamp (1)** remains lit (the indicator light remains on for a few seconds to give you the time to proceed with the following steps. The indicator lamp flashes when this time is almost up, and then goes off).
- Press the **TV (3)** key, then follow one of the programming methods (A, B, C or D) described earlier.
- If a second code programming is required, then repeat steps 2 and 3 above.

4 - How to retrieve a programmed code

It may be useful to retrieve the code programmed in the remote control.

- Hold down the **S (4)** key until the **indicator lamp (1)** remains lit (the indicator light remains on for a few seconds to give you the time to proceed with the following steps. The indicator lamp flashes when this time is almost up, and then goes off).
- Press the key **(3)** that corresponds to the type of equipment you want to control:
TV: television set,
VCR/DVD: video cassette recorder, DVD player.
- Press **S (4)** again briefly. The **indicator lamp (1)** flashes once.
- Press the number keys (**0** to **9**) in ascending order until the **indicator lamp (1)** flashes once.
- The digit which made the **indicator lamp (1)** flash, is the first number of the 3-digit code. Please make note of it.
- Repeat step 4 to find out the two other numbers of the code.
- When the third number is found, the red indicator lamp **(1)** goes off.

5 - Check of the programming

- For a television or a satellite receiver: switch on and, for example, press **(18)** to change channels.

- DVD player: load a DVD and then press **PLAY (10)**.

Try other remote control keys to find out the range of functions you can control. If you think that not all of the keys are active, try the programming **Method B** or **C**.

When you have retrieved the code of your set, jot it down so that you can use it whenever needed.

After battery replacement, you may have to programme the remote control again.



6 - Other functions

Adjustment of ALL volume controls under a specific mode.

You can allocate the volume control to one of the modes of the remote control on condition that the volume control exists on the corresponding device (e.g. control of TV sound in VCR/TV mode).

- Hold down the **S (4)** key until the **indicator lamp (1)** remains lit.
- Release the **S (4)** key.
- Press the **OK (6)** key. The **indicator lamp (1)** flashes once.
- Press once on the mode key (**TV, VCR/DVD...**) corresponding to the device whose volume will always be controlled by the **VOL (7)** and **OK (6)** keys.
- Press the **OK (6)** key once.

Adjustment of the volume controls for EACH mode.

You can decide that the volume control is functional for each mode selected on condition that the volume control exists on the corresponding device (e.g. control of the television set sound in TV mode, the control of the sound of the SAT receiver in SAT mode, ...).

- Hold down the **S (4)** key until the **indicator lamp (1)** remains lit.
- Release the **S (4)** key.
- Press the **OK (6)** key. The **indicator lamp (1)** flashes once.
- Press once on the mode key (**TV, VCR/DVD...**) corresponding to the device whose volume will always be controlled by the **VOL (7)** and **OK (6)** keys.
- Press the **VOL - (7)** key once.
- Press the **OK (6)** key once.

7 - The NAVILIGHT system

The THOMSON NAVILIGHT navigation system allows you easy access to the settings of your television set (TV) or your video recorder (VCR) fitted with the THOMSON NAVILIGHT system provided that you have allocated the **VCR/DVD** key to the video recorder.

- Switch on the set you want to control.
- Press the key corresponding to the type of set you want to use (**TV** or **VCR/DVD**). In the **VCR/DVD** position, make sure that the AV mode is activated for the TV set (the SCART socket must be selected).
- Press the **S (4)** key once and then press the **OK (19)** key.
- Navigate through the setting menus with the play keys **▲, ▼, ◀ and ▶ (18 and 7)**.
- Validate with **OK (6)**.
- To leave the menus, press key **EXIT (5)** once.

*Note: The **S (4)** key remains on as long as light **I** is lit. If this light goes out, you have to press the **S (4)** key again before using the navigation keys. To exit this mode, press **S (4)** a second time.*

THOMSON HELPLINE

You can contact THOMSON by dialling:

0871 712 1312

(For Great-Britain, all calls will be charged £0.10/min)
www.thomson-europe.com



ENGLISH - Do not mix different types of batteries or new and old batteries. Do not use rechargeable batteries. In order to avoid any risk of explosion, observe polarities indicated inside the battery compartment. Replace only with the type of batteries specified above. Do not throw them into fire, do not recharge them. If you are not using the remote control for a long period of time, remove the batteries. Please respect the environment and prevailing regulations. Before you dispose of batteries or accumulators, ask your dealer whether they are subject to special recycling and if they will accept them for disposal.

FRANÇAIS - Ne mélangez pas différents types de piles ou des piles neuves et usagées. N'utilisez pas de piles rechargeables. Afin d'éviter tout risque d'explosion, respectez les polarités indiquées au fond du compartiment à piles. Utilisez uniquement des piles du type spécifié. Ne les jetez pas au feu, ne les rechargez pas. Si vous n'utilisez pas la télécommande pendant une période prolongée, retirez les piles. Respectez l'environnement et la loi ! Avant de jeter des piles (ou des accumulateurs), informez-vous auprès de votre distributeur pour savoir si elles (ou ils) font l'objet d'un recyclage spécial, et s'il peut se charger de les récupérer.

DEUTSCH - Verwenden Sie nie Batterien unterschiedlicher Marken bzw. verbrauchte und neue Batterien. Keine wiederaufladbaren Batterien einsetzen. Achten Sie stets beim Einlegen der Batterien auf die Angabe der Polarisierungrichtung. Batterien dürfen nicht in offenes Feuer geworfen werden. Wenn Sie Ihre Fernbedienung über längere Zeit nicht benutzen, nehmen Sie bitte die Batterien heraus. Batterien gehören nicht in den Haushalt! Als Verbraucher sind Sie gesetzlich verpflichtet, gebrauchte Batterien zurückzugeben. Sie können Ihre alten Batterien bei den öffentlichen Sammellestellen in ihrer Gemeinde oder überall dort abgeben, wo Batterien der betreffenden Art verkauft werden.

ITALIANO - Non mescolate diversi tipi di batterie e non utilizzate batterie vecchie e nuove allo stesso tempo. Non utilizzate batterie ricaricabili. Al fine di evitare qualsiasi rischio di esplosione, rispettate le polarità indicate all'interno del vano batterie. Sostituite solo con il tipo di batterie sopra specificato. Non gettatele nel fuoco, non ricaricatele. Se non utilizzate il telecomando per un lungo periodo, togliete le batterie. Rispettate l'ambiente e la legge! Prima di gettar via le pile (o gli accumulatori) informatovi presso il vostro distributore per sapere se sono o no oggetto di riciclaggio speciale e se può incaricarsi di recuperarli.

ESPAÑOL - No mezcle diferentes tipos de pilas, nuevas y antiguas. No utilice pilas recargables. Para evitar riesgos de explosión, respete las polaridades indicadas en el compartimento de las pilas. Sustituya las pilas por otras iguales a las especificadas anteriormente. No las queme y no las recarge. Si no tiene que utilizar el mando a distancia durante un período prolongado de tiempo, retire las pilas. Respete el medio ambiente y la ley! Antes de tirar las pilas o acumuladores, pregunte a su distribuidor si éstos son objeto de algún reciclaje especial y si él puede encargarse de su recuperación.

NEDERLANDS - Mix geen verschillende batterijen of oude en nieuwe batterijen. Gebruik geen oplaadbare batterijen. Respecteer de polariteit zoals aangegeven in het batterijcompartiment om de kans op een eventuele explosie te voorkomen. Alleen vervangen met het batterijtype zoals hierboven aangegeven. Gooi batterjen nooit in het vuur, niet herladen. Indien in de afstandsbediening langere tijd niet gebruikt, verwijder dan de batterijen. Erbijdelig de natuur en de wetgeving! Alvorens de batterijen (of die accumulators) weg te werpen, vraag aan uw dealer of deze heel voorver uitmaken van een bijzondere recycling en of hij belast is met de ophaling ervan.

PORTUGUÉS - Não misture diferentes tipos de pilhas ou pilhas novas e antigas. Não utilize pilhas recarregáveis. Para evitar qualquer risco de explosão, respeite as polaridades indicadas no compartimento das pilhas. Substitua as pilhas por outras iguais às especificadas anteriormente. Não as queime nem as recarregue. Respeite o ambiente e a lei! Antes de deixar para as pilhas (ou os acumuladores) informe-se junto do seu distribuidor para saber se elas (ou eles) estão sujeitas (ou a um) a reciclagem especial e se ele pode encarregar-se de as(s) recuperar.

ΕΛΛΗΝΙΚΑ - Μην χρησιμοποιείτε μαζί καινούργιες και παλιές μπαταρίες. Μην χρησιμοποιείτε επαναφορτιζόμενες μπαταρίες για να απορύνετε τον κινδυνό έκρηξης. Σεβασθείτε την πολιτική στην τοποθέτηση των μπαταριών. Επανατοποιείτε μόνο με τον ίδιο τύπο μπαταριών που αναγράφονται παραπάνω. Μην πετάτε την μπαταρίες στην φωτιά. Μην τις επαναφορτίζετε. Αν δεν χρησιμοποιείτε το τηλεχειριστήριο πολύ καρό βγάλτε τις μπαταρίες. Προστατεύετε το περιβάλλον και τηρείτε το νόμο! Πριν πετάξετε μπαταρίες μιας χρήσης (ή επαναφορτιζόμενες), επικοινωνείτε με το διανομέα σας και ρυθμίστε τον αν οι μπαταρίες υπότανε σεισκή ανακύκλωση και αν ο ίδιος αναλαμβάνει να τις πάρει πιού.

РУССКИЙ - Не устанавливайте вместе новые и старые батарейки, не используйте батарейки различных типов и подзаряжаемые батарейки. Во избежание взрыва соблюдайте полярность, указанную внутри отсека для батарей. Заменяйте батарейки только батарейками указанного выше типа. Не выбрасывайте их в огонь, не заряжайте их. Если вы не намерены пользоваться пультом дистанционного управления в течение длительного времени, выньте батарейки из отсека для батарей. Бережно относитесь к окружающей среде и соблюдайте временные нормы. Перед тем, как избавиться от старых батареек (или аккумуляторов) свяжитесь с торговой организацией, чтобы узнать, не принимают ли они их для переработки и утилизации.

POLSKI - Nie mieszaj różnych typów baterii ani nie używaj starej baterii razem ze starymi. Nie używaj akumulatorów. Aby uniknąć ryzyka wybuchu, wkładaj baterie zgodnie ze znakami biegunów wewnątrz kieszeni na baterię. Wymieniaj jedynie na baterię podanego wyżej typu. Nie wrzucaj baterii do ognia, ani nie laduj ich ponownie. Jeżeli przez długi okres nie używasz pilota, wymij baterie. Szanuj środowisko naturalne i przestrzegaj prawa! Zanim wyrzucisz zużytą ogniwą (lub akumulator), powiedz się do dystrybutora, czy podlegają one recyklingowi i czy może je od Ciebie w tym celu odebrać.

ČEŠTINA - Nepoužívejte baterie různých typů, nemicujte staré baterie s novými. Nepoužívejte dobíjecí baterie. Při vkládání baterií dbejte na správnou polariaci, vyznačenou uvnitř bateriového pouzdra, při nedodržení polarity hrozí nebezpečí exploze. Baterie nahrazujte pouze výše specifikovaným typem. Baterie nevhazujte do ohně ani neobjedujte je. Pokud nebudete dálkovým ovládáním používat, baterie vyměňte. Chtáte životní prostředí a dodržujte zákon! Než vydřete článek (nebo akumulátor) když ho vydrali z obalu, slyšte se u dodavatele, zda není organizován sběr použitých baterií a jejich speciální recyklace v souladu s právní úpravou na ochranu životního prostředí.

MAGYAR - Ne keverje a különböző típusú illetve a régi és az új elemeket. Ne használjon újratölthető elemeket sem. A tartóban jelölt polaritás szerint helyezze be a megfelelő elemeket. A kimerült elemeket tilos tűzbe dobnia és újratölteni. Ha hosszabb ideig nem használja a távirányítót vegye ki belőle az elemeket. Tartsa tisztelten a környezetét és a törvényt! Az elemek (vagy az akkumulátorok) személybe történő kidobása előtt kérdezze meg eladójától, hogy azok részét vesznek-e egy akkumulátorozási programban, illetve foglalkozik-e a kimerült elemek (akkumulátorok) összegyűjtésével.

SVENSKA - Blanda inte olika sorters batterier eller nya med gamla batterier. Använd inte uppladdningsbara batterier. Det är viktigt att batterierna sätts i på rätt sätt och att den rekommenderade typhen av batterier används. Utsätt aldrig batterierna förild. Om fjärrkontrollen inte används under lång tid rekommenderar vi att batterierna tas ur. Tänk på miljön! Förbrukade batterier (eller uppladdningsbara batterier) läggs i de speciella uppsamlingslådor som finns uppsatta i din kommun, eller återlämnas till en återförsäljare av batterier för återvinning.

NORSK - Bland ikke ulike typer batterier eller nye og gamle batterier. Bruk ikke oppladbare batterier. Det er viktig at batteriene settes i på riktig måte og at den anbefalte typen batterier benyttes. Utsätt aldri batteriene forild. Om fjernkontrollen ikke benyttes over lang tid anbefaler vi at batteriene tas ut. Tenk på miljøet! Forbrukede batterier (eller oppladningsbara batterier) läggs i spesielle oppsamlingsplasser som blant annet finnes hos de fleste forhandlere av batterier for återvinning.

DANSK - Forskellige typer af batterier bar ikke blandes såsom gamle og nye batterier. Benyt ikke genopladelige batterier. For at undgå en eksplosion skal batteriene sættes på korrekt måde og den anbefalte typen batterier benyttes. Utsæt aldri batteriene forild. Om fjernkontrollen ikke benyttes over lang tid anbefaler vi at batteriene tas ud. Tenk på miljøet. Oppbrukte batterier (eller oppladningsbara batterier) legges i spesielle oppsamlingsplasser som blant annet finnes hos de fleste forhandlere af batterier for återvinning.

SUOMI - Älä käytä sekaasiin erilaisia paristoja, esim. uusia ja vanhoja. Räjähdysvaaran välttämiseksi laita paristot oikein pää-paristokotelon. Objetti löydetä paristokotelon poljista. Käytä vain yllä mainittu tyypiparisto. Älä heitä vanhaja paristoja tuleen läikkää latosta niitä uudeleen. Mikäli ja käytä kaukosäädintä pitkään aikaan, poista paristot kaukosäätimestä. Noudata lakiä ja kunnioita luontoa! Ennen kuin heität kulumene paristot (tai akku) jätteisiin, nähkys jälleenmyyjätä kuvatukko ne mahdollisesti erikoiskierrätyksen ja kerääkä hän ne talteen.

Model and serial number

ROC2206

THOMSON Sales Europe
46, quai A. Le Gallo
92648 Boulogne Cedex
FRANCE
322 019 464 RCS NANTERRE
<http://www.thomson-europe.com>

 36114510 © Copyright THOMSON 2006

Dealer's address

GB	Subcodes	RU	Подкоды
F	Sous-codes	PL	Kody pomocnicze
D	Untercodes	CZ	Podkódy
I	Sotto-codici	H	Alkódok
E	Subcódigos	S	Underkoder
NL	Subcodes	N	Underkoder
P	Sub-códigos	DK	Underkoder
GR	Υποκωδικοί	SF	Alakoodit

 TV							
THOMSON BRANDT	TELEFUNKEN SABA NORDMENDE BAIRD FERGUSON	GRUNDIG BLAUPUNKT	NOKIA FINLUX ITT LUXOR DANTAX, BEKO PROSONIC	FOR FUTURE USE	FOR FUTURE USE	PHILIPS ERRES PYE PHILCO RADIOLA	SONY, AKAI PANASONIC JVC, SHARP TOSHIBA DAEWOO
1	2	3	4	5	6	7	8

 DVD  VCR							
THOMSON BRANDT	TELEFUNKEN SABA NORDMENDE BAIRD FERGUSON	GRUNDIG BLAUPUNKT	NOKIA FINLUX ITT LUXOR DANTAX, BEKO PROSONIC	FOR FUTURE USE	FOR FUTURE USE	PHILIPS PYE PHILCO RADIOLA	SONY, AKAI PANASONIC JVC, SHARP TOSHIBA DAEWOO
1	2	3	4	5	6	7	8

 SAT							
THOMSON BRANDT	TELEFUNKEN SABA NORDMENDE FERGUSON	GRUNDIG	NOKIA FINLUX ITT LUXOR	FOR FUTURE USE	FOR FUTURE USE	PHILIPS PHILCO	PACE ECHOSTAR
1	2	3	4	5	6	7	8

TV codes



ACNE	005
ADA	002
ADC	012, 005
ADMIRAL	019, 108, 002, 001, 047, 000
ADYSON	003
AGAZI	002
AGR	123
AKO	003, 009, 004
AIWA	184, 248, 291
AKAI	011, 086, 009, 068, 004, 004, 008, 051, 061, 088, 169, 200, 133, 141, 069
AKIBA	011
AKURA	169, 074, 002, 009, 011, 071
ALBA	028, 027, 009, 011, 003, 048, 083, 169, 047, 245, 248, 162, 062
ALBRAL	037
ALKOS	164
ALLORGAN	157, 026
ALLSTAR	051
AMPLIVISION	003
AMSTRA	011, 009, 068, 074, 002, 108, 071, 069, 030, 123, 013
ANAM	009, 045, 109
ANGLO	009
ANITECH	009, 002, 043, 109
ANSICONIC	009, 014
ARCAM	003
ARC EN CIEL	126, 045, 139
ARISTONA	169, 051
ARTHUR MARTIN	158
ASA	017, 110, 016, 018, 000, 021
ASBERG	051, 043
ASTRA	009
ASUKA	011, 002, 003
ATLANTIC	169, 003, 051, 157
ATORI	009
AUDIONIC	009, 003, 169, 011, 051, 139, 157, 090
AUDITION	003
AUSNO	043
AUTOVOK	003, 002, 101, 157, 000, 125, 043
BABO	111, 139, 245
BANG & OLUFSEN	199, 000
BARCO	112
BASIC LINE	009, 011, 051, 245
BASTONE	003
BAUL	169, 118, 076, 141, 132
BEKO	042, 083, 034, 007
BEON	169, 051
BEST	113
BESTAR	051, 245
BINATONE	003
BLACK DIAMOND	171
BLACK PANTHER LINE	245
BLACK STAR	129
BLAUPUNKT	117, 202, 135, 008, 022, 100
BLUE SKY	011
BLUE STAR	120
BONUSTEC	129
BOOTS	003
BPL	120
BRANDT	127, 045, 022, 036, 126, 139, 046
BROWN VEGA	051, 169, 000
BRITANNIA	003
BRODSKIANIC	920
BRUNN	000, 007
BSR	131, 026
BTU	011
BUSH	028, 027, 032, 009, 011, 019, 205, 039, 051, 048, 169, 107, 115, 131, 139, 167, 245, 248, 024, 132, 120, 062
CAPSONIC	002
CARREFOUR	027
CASCADE	009
CATHAY	051, 169
CENTRUM	168, 205
CENTURION	051, 169
CENTURY	000
CGE	129, 047, 131, 043
CINELINE	009, 028
CITY	009
CLARIVOX	169, 037
CLATRONIC	009, 011, 051, 002, 083, 003, 129, 030, 043
COMBITECH	248
CONCORDE	009
CONDOR	198, 051, 083, 003, 245
CONTEC	003, 009, 027, 030, 029
CONTINENTAL EDISON	022, 111, 036, 045, 126, 139, 046
COSMEL	009
CROSLEY	129, 131, 000, 043
CROWN	009, 169, 083, 047, 051, 245, 121, 043
CS ELECTRONICS	011, 129, 003
CTC	129
CTC CLARTRONIC	014
CYBERCOM	177, 038, 171, 002, 009, 206, 205, 207, 208, 210, 169, 042, 044, 127, 047, 041, 043, 047, 048, 048, 103, 107, 115, 148, 185, 228, 209, 343, 924, 933, 248, 291
CYBERMAXX	177, 038, 171, 002, 009, 206, 205, 207, 208, 210, 211, 169, 015, 042, 044, 047, 048, 049, 061, 043, 067, 048, 087, 103, 107, 115, 127, 154, 155, 168, 170, 185, 228, 229, 209, 343, 924, 933, 248, 291
CYTRON	177, 038, 171, 002, 009, 206, 200, 205, 207, 208, 210, 211, 169, 015, 042, 044, 047, 048, 049, 061, 043, 067, 048, 087, 103, 107, 115, 127, 154, 155, 168, 170, 185, 228, 229, 209, 343, 924, 933, 248, 291
CYBERTRON	011
DAEWOO	004, 009, 19, 003, 051, 115, 245
DAINHEI	011
DANSAI	002, 149, 051
DANTEX	171, 161, 169, 088, 034, 113
DATIFURA	121
DATYON	009
DATYRON	245
DE GRAAF	019, 006, 033
DECNA	003, 169, 004, 051, 123, 030
DELL	026
DESMET	051, 169
DIGITOR	227, 228
DISNEY	148
DXR	009, 169, 051
DTS	009
DUAL	177, 038, 171, 002, 009, 206, 207, 208, 169, 042, 044, 127, 047, 041, 061, 063, 047, 068, 003, 103, 107, 115, 126, 131, 139, 154, 160, 168, 228, 343, 924, 933, 248, 291, 125, 089
DUMA-TEC	009, 131, 003
DUMONT	003, 014, 017, 018, 000
DUK	169
DYNATRON	051, 169
ELEK	108, 157, 037
ELECTI	000
ELECTRO TECH	009
ELESTA	120
ELIN	051, 003, 169, 016, 018
ELITE	011, 051
ELMAN	014, 131
EDA	009
EMERSON	141, 127, 000
ERRES	169, 051
ESC	245
ETRON	009
EURO-HEEL	009
EUROLINE	149, 169, 088
EUROMANN	002, 051, 003
EUROPHON	003, 014, 051, 131, 123
EXPERT	157
FENNER	009, 115
FERGUSON	127, 166, 035, 169, 036, 050, 052, 111, 163, 037
FIDELITY	003, 019, 068, 074, 096
FINLANDIA	019, 006, 110, 126
FINLUX	061, 087, 063, 003, 004, 016, 167, 110, 131, 157, 169, 051, 017, 018, 014, 000, 123, 043
FIRSTLINE	003, 129, 009, 051, 042, 026
FISHER	003, 003, 018, 083, 131, 000, 027, 029, 040
FINT	051, 113
FORMENTI	001, 169, 003, 131, 133, 000, 043, 125
FORTESS	001, 000
FRONTECH	019, 002, 009, 068, 118, 129, 120, 021
FUJITSU	116, 004, 157
FUNAI	002, 026
GALAXY	047, 083
GBC	009, 027, 131
GEC	169, 003, 004, 041, 051, 141, 123, 132
GELOSO	019, 009, 131
GENEVA TECHNIC	009, 248
GENEXXA	011, 051, 021
GOLDSTAR	084, 129, 003, 009, 019, 051, 131, 169, 171, 261, 012, 093
GOODMANS	009, 111, 002, 004, 027, 169, 028, 051, 068, 115, 127, 171, 245, 283, 093
GORENJE	083
GPM	011
GRATEZ	141, 142, 021
GRANADA	127, 019, 003, 006, 149, 027, 031, 051, 054, 004, 133, 138, 128, 040, 043, 123
GRANDON	009, 169, 011, 245, 120
GRUNDIG	117, 091, 114, 101, 135, 008, 017, 136, 043
H & B	343, 228
HAZ	228
HALIFAX	002, 003
HAMPTON	003
HANSATEC	009, 003, 027, 169, 051, 083, 118, 131, 141, 007, 026
HANTAREX	009, 123
HARWOOD	171
HCM	002, 003, 009, 074, 120
HITVOK	139
HINAI	171, 009, 011, 027, 051, 006, 169, 248, 043, 137
HISAWA	011, 113, 120
HISENSE	156
HITACHI	027, 019, 085, 134, 153, 213, 140, 144, 003, 118, 004, 016, 023, 041, 045, 047, 131, 133, 138, 139, 141, 021, 046, 033, 123, 142
HOSHIAI	011
HORNYPHON	051
HUANYU	003, 115
HYGASHI	003
HYPER	003, 009, 129, 131
HYPSON	002, 003, 051, 169, 120
IEC	009, 002, 003, 011, 051, 068
IMPERIAL	047, 051, 083, 129, 131, 021, 043
INDEST	024, 101
INDIANA	051, 169
INGELEN	021
INGERSOL	009
INNO HT	009, 011, 003, 004, 051, 169, 245, 093, 123
INNOVATION	171, 111, 002, 009, 169, 061, 067, 103, 107, 115, 154, 168, 177, 248, 091
INTERBUY	009, 129, 109
INTERFUNK	051, 129, 169, 139, 141, 000, 021
INTERTRONIC	894
INTERVISION	002, 003, 014, 109
IRRADIO	009, 011, 051, 169, 048
ISUWAN	011
ITC	005, 131
ITS	011, 051, 068, 120
ITT	041, 009, 143, 031, 133, 141, 021, 142, 132
ITV/NOMIA	133, 142, 021
ITV	149, 171, 009, 088, 245
JEC	164
JVC	051, 053, 027, 048
KAI-SU	009, 011, 003, 120
KAMOSONIC	003
KAMP	003
KAPSCH	157, 021
KARCHER	169, 003, 009, 014, 037
KENDO	019, 014, 028, 108, 245
KENNEDY	131, 157
KINGSLEY	003
KNEESSEL	174
KOLSTER	051
KONKA	047, 048, 229, 011
KOPPEI	051, 169
KORTING	000
KOTYODA	009
KTV	003
KUBRO	121
KYOTO	037
LENCO	009, 245
LENIOR	003, 009
LESA	129
LEYCO	149, 002, 004, 051, 026
LG	084, 119, 129, 149, 019, 003, 051, 068, 131, 169, 171, 009, 261, 093
LESEM	149
LIFE	002, 009, 001, 067, 048, 043, 107, 111, 115, 154, 168, 169, 171, 177, 291
LIFETEC	177, 038, 171, 002, 009, 204, 205, 207, 208, 210, 211, 169, 015, 042, 044, 047, 048, 049, 061, 043, 067, 048, 087, 103, 107, 115, 127, 154, 156, 168, 170, 185, 229, 209, 894, 943, 924, 933, 248, 291
LOWE	007, 098, 051, 169, 000
LOGIK	009
LUMA	019, 169, 141, 157
LUMATRON	002, 171, 019, 088, 051, 074, 169, 107, 141, 157, 245
LUX M	051
LUXOR	141, 019, 047, 003, 077, 138, 093, 132
M-ELECTRONIC	009, 016, 169, 018, 003, 036, 051, 068, 110, 115, 139, 021, 109
M-P	129
MAGNAVIN	014, 129, 131, 169, 000, 123
MAGNAFON	003, 014, 043, 123
MAGNUM	002, 111, 009, 169, 171, 041, 067, 068, 103, 107, 115, 154, 168, 177, 200, 291
MANDOR	002
MANEATH	002, 169, 003, 028, 051
MARANTZ	051, 169
MARELU	000
MARK	051, 169

IHATSUI	173, 099, 091, 027, 180, 028, 147, 003, 004, 009, 019, 051, 068, 101, 164, 248, 113, 123, 013, 062, 024, 030	SAREM	.014, 131, 000, 123
IHATSUHTA	065	SICATEL	.037
IMONMICHAEL	041	SIEMENS	.008, 022, 200, 135, 029
IMEDION	051, 169	SIERRA	.051
IMEDION	177, 038, 171, 002, 009, 206, 200, 205, 207, 208, 210, 211, 169, 015, 042, 044, 047, 048, 049, 041, 063, 067, 068, 087, 101, 107, 115, 127, 148, 154, 155, 168, 170, 185, 228, 229, 209, 894, 343, 924, 933, 248, 291	Siesta	.160
IMEMOREC	009, 920	SILVER	.027
IMPHIS	004, 009	SINGER	.014, 131, 129, 228, 000
IMETZ	201, 135, 151, 152, 000, 075	SINUDINE	.014, 131, 169, 028, 000, 075, 013, 026
IMROMAXX	177, 038, 171, 002, 009, 206, 200, 205, 207, 208, 210, 211, 169, 015, 042, 044, 047, 048, 049, 061, 063, 067, 068, 087, 103, 107, 115, 127, 154, 155, 168, 170, 185, 228, 229, 209, 894, 343, 924, 933, 248, 291	SIANTIC	.138, 021
IMROSTAR	177, 038, 171, 002, 009, 206, 200, 205, 207, 208, 210, 211, 169, 015, 042, 044, 047, 048, 049, 061, 063, 067, 068, 087, 103, 107, 115, 127, 154, 155, 168, 170, 185, 228, 229, 209, 894, 343, 924, 933, 248, 291	SKYWMASTER	.016
MINERVA	017, 101, 135	SKYWORD	.228
MINKOKA	051	SOLAVOX	.092, 021
MITSUBISHI	000, 027, 030, 051, 054, 057, 060, 098, 101, 135, 205	SONTION	.006, 031
MIVAR	055, 083, 03, 093, 123, 043	SONOJO	.009, 002, 169, 003, 051, 245
MOTION	043	SONOUR	.008, 021
MTIC	132	SONTIEC	.051, 169, 160
MT LOGIC	090	SONY	.165, 130, 183, 104, 076, 027, 127, 009, 004, 182, 029, 030
MUDIT SYSTEM	169	SOUND & VISION	.011, 014
MUDITECH	003, 009, 014, 019, 169, 027, 045, 129, 131, 043	SOUNDWAVE	.051, 169
MURPHY	003, 133, 018	SUNDARD	.006, 009, 011, 051, 245
NAD	141	SUNLIGHT	.169
NAKRO	099	STEREOWAY	.120
NANOS	019, 108	STERN	.019, 157, 021
NATIONAL	064, 101	SUNWAI	.009, 026, 062
NEC	185, 027, 056	SUNWOOD	.009, 051
NECKERMAN	003, 169, 008, 019, 022, 051, 083, 118, 132, 000	SUPERCLA	.003
NFI	051, 048, 169, 113	SUPERTECH	.118
NESCO	129	SUPRA	.009
NEWTECH	009, 051	SUSUWU	.011
NEW WORLD	011	SUTRON	.009
NICAMAGIC	003	SYDNEY	.003
NIKKAI	002, 003, 164, 004, 011, 051, 169	SYSLINE	.169
NORIUKO	003, 014, 043	TANDBERG	.157, 026
NOGAMATIC	139	TANDY	.001, 003, 004, 011, 133, 021
NORDA	061, 143, 063, 141, 077, 133, 031, 021, 132, 142	TASHIRO	.003, 019, 027, 041, 056, 128
NORMENDE	111, 127, 034, 045, 051, 126, 139, 046, 000, 021, 024	TATUNG	.051, 003, 004, 149, 123
NORDVISION	169	TCL	.177, 038, 171, 002, 009, 206, 205, 207, 208, 210, 169, 042, 044, 047, 048, 049, 041, 063, 047, 068, 103, 107, 115, 127, 154, 168, 185, 228, 209, 343, 924, 933, 248, 291
OCEANIC	141, 142, 021	TEC	.003, 009, 129, 131, 153
OKANO	083	TECHNICS	.045
ONCEAS	003	TECHNISAT	.154
ONWA	069	TELEFUNKEN	.022, 036, 045, 111, 126, 139
ORBIT	051	TELEFUNKEN	.146, 111, 127, 190, 022, 035, 143, 101, 102, 036, 050, 051, 052, 078, 108, 126, 139, 079
ORION	099, 147, 159, 009, 212, 028, 051, 154, 169, 171, 920, 248, 283, 123, 142, 030, 013, 062, 075, 026	TELETECH	.149, 009, 088, 129, 113
ORION	205	TELETON	.003, 157, 118, 122
OSMI	011, 002, 003, 004, 074	TEHON	.177, 038, 171, 002, 009, 206, 205, 207, 208, 210, 211, 169, 015, 042, 044, 047, 048, 049, 041, 063, 047, 068, 103, 107, 115, 127, 154, 155, 168, 170, 185, 228, 229, 209, 894, 343, 924, 933, 248, 291
OSI	011	TEHNIS	.051
OSUME	004, 029	TESMET	.051
OTTO VERSAND	083, 149, 008, 001, 027, 051, 076, 111, 118, 131, 139, 141, 120, 121, 132	TEXET	.003
PACIFIC BELL	204, 203	THOMSON	.146, 127, 111, 002, 022, 036, 045, 176, 101, 102, 050, 051, 052, 126, 139, 143, 185, 245, 046
PACT	003	THORN	.004, 018, 169, 035, 054, 111, 127, 141, 164, 057
PALLADIUM	003, 083, 012	TOKAI	.004, 051
PANAMA	002, 003, 009	TOKYO	.003
PANASONIC	065, 047, 064, 197, 072, 186, 101, 141, 021, 151, 142, 124, 152, PATHÉ CINEMA, 003, 083, 113, 037	TOMASHI	.120
PATRICE MARCONI	022, 045, 126, 139, 037, 046	TOSHIBA	.117, 164, 189, 027, 146, 017, 920, 082
PAUSA	009	TOWADA	.131, 021
PERDIO	004	TRIUMPH	.013, 123, 082
PHILO	047, 129, 131, 000, 043	UHER	.051, 057, 021, 043
PHILOMATIC	003	ULTRAVOX	.008, 014, 129, 131, 133, 000
PHILIPS	200, 088, 217, 202, 020, 169, 003, 041, 181, 339, 051, 083, 111, 115, 131, 141, 154, 000, 043, 089	UNITED	.088, 169
PHOCUS	042, 095	UNITED QUICK STAR	.245
PHOENIX	051, 169, 000	UNIVERSUM	.102, 002, 016, 018, 051, 061, 169, 083, 110, 122, 129, 131, 143
PHONOLA	051, 169, 000	UVNIK	.037
PIONEER	010, 145, 034, 051, 139, 169, 021	VESTEL	.019, 051, 149, 171, 083, 092, 103, 107, 118, 129, 131, 138, 168, 195, 205, 021
PLATRON	002, 051	VERA	.169, 009
POPPY	009	VICTOR	.027, 051, 045
PORTLAND	245	VIBEOLOGIQUE	.011, 003
PRANDONI-PRINCE	019, 141, 123	VIBRON	.248
PRECISION	003	VIDEOSAT	.129
PRIMA	009, 021	VIDEO SYSTEM	.051
PRINZ	047	VISUAL	.003
PRO2	177, 038, 171, 002, 009, 206, 200, 205, 207, 208, 210, 211, 169, 015, 042, 044, 047, 048, 049, 041, 063, 067, 068, 087, 103, 107, 115, 127, 154, 155, 168, 170, 185, 228, 229, 209, 343, 924, 933, 248, 291	VISION	.051
PROFEK	009, 141, 043	VISOREX	.09
PROFILO	171	VISTAR	.133
PROFI-TRONIK	051	VORTEX	.051, 169
PROLINE	004, 051, 062	VOXSON	.019, 051, 108, 021, 043, 000
PROSONIC	161, 169, 003, 015, 042, 088, 107, 200, 068, 245	WATHNAM	.003, 133, 138, 037
PROTECH	002, 003, 009, 169, 014, 051, 129, 131, 132, 113	WATSON	.051, 169
PROVISION	169, 171	WATT RADIO	.003, 014, 131, 037
PYRE	169, 051, 068	WEIGA	.000, 027
PYTHI	009	WEBBICK	.051, 169
QUASAR	129	WESTON	.131
QUELLE	169, 205, 002, 003, 014, 022, 051, 129, 131, 135, 141, 017, 018, 024, 030	WHARFDALE	.099
QUESTA	027	WHITE WESTINGHOUSE	.169, 003, 014, 043
RADIOOLA	051, 169	YOKO	.009, 011, 051, 169, 002, 003
RADIOTONE	051, 007	YORK	.011
RADIOWARELU	129, 000, 123	ZANUSSI	.019, 157, 108
RADIOTONETTE	016, 018		
RANK	017, 027		
RBN	017		
RCA	031		
REFEFUSION	141		
REVOX	051, 149		
REX	019, 002, 108, 107, 051, 169		
RFT	000, 007		
RJINE	051, 149		
ROADSTAR	002, 009, 011, 245		
ROBOTRON	000		
RFT	000		
SABA	127, 111, 126, 036, 045, 139, 141, 245, 142, 046, 000, 123, 021	DVB/T/TNT/DTT/TDT codes	
SACCS	037	DVB/T : Digital Video Broadcast Terrestriel (GB)	
SAYHO	028, 002, 003, 009, 249, 030, 123, 013	TNT : Télévision Numérique Terrestre (F)	
SALORA	019, 031, 047, 061, 107, 168, 118, 131, 138, 141, 093, 121, 128, 132, 021	DTT : Télévision Digitale Terrestre (I)	
SAMBERS	014, 149, 043, 123	TDT : TV Digital Terrestre (E)	
SAMSUNG	090, 104, 009, 051, 172, 083, 002, 160, 003, 004, 312, 030, 105, 093		
SANDRA	003, 009		
SANSU	031, 920		
SANTO	004, 004, 031, 003, 027, 016, 018, 083, 127, 160, 131, 029, 030, 040, 043		
SANTE	249		
SBP	149		
SCHEID LORENZ	141, 021, 142		
SCHEIDER	177, 003, 169, 011, 051, 068, 131, 139, 160, 245, 264, 071, 125		
SEG	171, 002, 205, 003, 169, 009, 014, 027, 088, 129, 131, 043		
SD-SINUFINE	014, 013, 021, 026, 075, 123, 000		
SELECO	019, 027, 131, 108, 157, 021		
SENCTURA	009		
SENTRA	164		
SHARP	001, 059, 005, 027, 187, 188, 029		
SHIBRAI	026		

Premiere..... 600, 519
PROZ..... 645, 650
REBOK..... 476
SAEM..... 648
SCHWÄGER..... 630
SHARP..... 059
SONY..... 447
TEVION..... 645, 650
THOMSON..... 532
TOP-UP-TV..... 527, 531, 657



DVD codes

ACOUSTIC SOLUTIONS..... 383
AEG..... 894, 333
AFREYEE..... 386
AIWA..... 377, 383
AKAI..... 369, 333, 382
AKASHI..... 346
ALBA..... 384, 350, 381, 357
ALL-TEL..... 333
AMES..... 383
AMSTRAO..... 350
ANABA..... 961
ANSWERC..... 356
APEX..... 921, 384, 357, 911, 390, 913, 949
ARENA..... 923
ASPIRE..... 952
A-TREND..... 347
AXION..... 942
AUDIOSONIC..... 382
AUDIOVOX..... 942
BAIER..... 349
B & K..... 978
BLACK DIAMOND..... 350
BLAUPUNKT..... 384
BLUE SKY..... 373, 357, 350
BUSH..... 384, 382, 350, 381, 356
BRANDT..... 373, 340
BRODSOUND..... 920, 967
CAMBRIDGE..... 374
CENTREY..... 357
CENTROS..... 932, 951, 954, 955
CENTRON..... 923
CENTRUM..... 346, 926, 928, 927, 350
CINETEC..... 375
CINERVISION..... 377, 894
CLARITRONIC..... 377, 894
CLASSIC..... 377
CM..... 923
COPY..... 332, 916, 946, 947, 948, 357, 221
COTTERON..... 344
CROWN..... 373, 382
E-TECH..... 341
CURTIS..... 950, 948
CYBERCOM..... 354, 930, 932, 930, 335, 339, 340, 341, 342, 345, 352, 358, 371, 923, 343, 924, 932, 338, 334, 344, 664, 666, 672, 373
CYBERHOME..... 347, 912, 985
CYBERLINK..... 220
CYBERMAXX..... 354, 930, 373, 932, 330, 335, 339, 340, 341, 342, 345, 352, 358, 371, 895, 896, 897, 898, 899, 900, 901, 902, 903, 904, 923, 905, 343, 914, 932, 375, 906, 358, 372, 334, 344, 664, 894
CYTRON..... 354, 930, 373, 932, 330, 335, 339, 340, 341, 342, 345, 352, 358, 371, 895, 896, 897, 898, 899, 900, 901, 902, 903, 904, 923, 905, 343, 914, 932, 375, 906, 358, 372, 334, 344, 664, 894
DAEWOO..... 353, 354, 965, 355, 971, 347, 925
DANSAI..... 351
DATTRON..... 925
DCE..... 354
DENZEL..... 392
DENON..... 364, 389
DENVER..... 381
DESAY..... 958
DIAMOND..... 373, 341
DIGIFRAME..... 930
DIGIX..... 962
DIGITREK..... 357
DIGITRON..... 386
DISNEY..... 339, 902
DK DIGITAL..... 356
DKK..... 356
DVIX..... 375, 932
DTMTECH..... 351, 333
DRAGON SYSTEMS..... 356
DUAL..... 350, 356, 984, 383, 956, 373, 330, 335, 337, 340, 392, 341, 342, 345, 352, 358, 371, 923, 343, 338, 372, 334, 344, 664, 666
DURABRAND..... 333, 375
DVD 1024..... 929
ELTA..... 365, 382, 894, 333
EMERSON..... 339, 375
ENCORE..... 386
ENZTR..... 392
EUROLINE..... 894
EUROSAT..... 350
FSA..... 956
FARENFHIRT..... 960
FERGUSON..... 373
FINLUX..... 375, 357
FORSTUNE..... 373
FISHER..... 378
FUNAI..... 339
GE..... 384
GOLDEN SPHERE..... 341
GOODMANS..... 373, 382, 350, 333
GOLDSAR..... 375, 907, 972
GO VIDEO..... 383, 338, 367, 971
GPV..... 910
GRADIENTE..... 373
GRAETZ..... 972
GRUNDIG..... 385, 370, 380
H & B..... 343, 350
HARMON/KARDON..... 375
HAAS..... 341, 342
HANSARDT..... 375, 351
HEM..... 894
HE..... 383
HISENSE..... 154
HITACHI..... 367, 348, 387, 392
HITKER..... 357
HOMER..... 356
HOME ELECTRONICS..... 383
HONDA..... 934, 935, 936, 937, 938
HOYO..... 392

HYUNDAI..... 351
ILO..... 959
INTERTRONIC..... 893, 933, 894
INITIAL..... 384
INTEGRA..... 374
JATON..... 392
JBL..... 395
JOB..... 383
JVC..... 341, 400, 946, 662
KARCHER..... 351
KAWASAKI..... 333
KENDO..... 354, 923, 350
KENWOOD..... 393, 364
KOSS..... 392
KLH..... 384
KOMA..... 908, 909
KOSS..... 358, 373
LAWSON..... 341
LASONIC..... 341
LEESON..... 376
LENCO..... 373, 350, 354
LENNOX..... 931, 346, 382
LG..... 375, 107, 972
LIFE..... 372, 373
LIFETEC..... 356, 930, 373, 932, 330, 335, 339, 340, 341, 342, 345, 352, 358, 371, 895, 896, 897, 898, 899, 899, 900, 901, 902, 903, 904, 923, 905, 343, 924, 932, 375, 906, 338, 377, 334, 344, 664, 894
LIMIT..... 341
LINN..... 336
LITEON..... 982
LOEWE..... 370, 375
LOGIX..... 351
LUMATRON..... 332, 342
MAGNUMVOK..... 362, 379, 979, 980, 981, 370, 914
MANHATTAN..... 350
MARANTZ..... 370, 379, 981, 375, 362
MARK..... 350
MASTERC..... 335
MATSU..... 373, 357, 350
MBO..... 394, 383, 382
MAXON..... 331, 350
MEDION..... 356, 930, 373, 932, 330, 335, 339, 340, 341, 342, 345, 352, 358, 371, 895, 896, 897, 898, 899, 900, 901, 902, 903, 904, 923, 905, 343, 924, 932, 375, 906, 338, 377, 334, 344, 664, 894
MEMOREX..... 356, 339, 920
MICROMAXX..... 354, 893, 930, 373, 932, 330, 335, 339, 340, 341, 342, 345, 352, 358, 371, 895, 896, 897, 898, 899, 900, 901, 902, 903, 904, 923, 905, 343, 924, 932, 375, 906, 338, 377, 334, 344, 664, 894
MINATO..... 341
MINTEX..... 384
MIRROR..... 349
MITSUBISHI..... 350, 366
MONYKA..... 392
MOSTEK..... 383
MONICA..... 373
NAD..... 375, 394
NARANJUCHI..... 398
NEOTEK..... 386
NEUFUNK..... 392
NEVR..... 356
NEXTECH..... 932, 954, 955, 956
NOKENT..... 332, 982, 944, 945, 948
NORMEND..... 356
NOKIO..... 349
OKANO..... 349
ONNI..... 382, 386
ONIX..... 346
ONYKO..... 374, 975
OPTIMUS..... 368
ORION..... 920, 335
ORITRON..... 373
PACIFIC..... 354, 350, 333
PACKARD BELL..... 939, 940, 274, 220
PALSONIC..... 357
PANASONIC..... 401, 364, 403, 970, 974
PHILIPS..... 370, 379, 979, 980, 981, 969, 339, 362
PHONO-TREND..... 916
PIONEER..... 368, 977, 922, 946, 976
POLAROID..... 957, 949
PORTLAND..... 382
PRINZ..... 356
PRISM..... 335
PROZ..... 356, 930, 373, 932, 330, 335, 339, 340, 341, 342, 345, 352, 358, 371, 895, 896, 897, 898, 899, 900, 901, 902, 903, 904, 923, 905, 343, 924, 932, 375, 906, 338, 377, 334, 344, 664, 894
PROCASTER..... 905
PROLINE..... 373, 357, 333
PROSCAN..... 399
PROSONIC..... 332, 341, 349
PROVISION..... 381
RADIONETTE..... 375
RAITE..... 392
RCA..... 399, 384
REFSBUR..... 894
RELISYS..... 923, 895
RFDC..... 341
REX..... 346
ROADSTAR..... 350, 383, 382
ROTEL..... 341
ROWA..... 384
RTI..... 923
SABA..... 373, 915, 340
SAIVOD..... 356
SALORA..... 375
SAMPO..... 341, 386, 923, 895
SAMSUNG..... 347, 338, 943, 919
SANLUX..... 920, 341
SANVIO..... 378
SCHAUD LORENZ..... 894
SCIENTIFIC LABS..... 341
SCHNEIDER..... 350, 352, 356, 373, 351, 894, 333
SCHWINGER..... 349
SCOTT..... 373, 357
SEI..... 359, 341, 392
SHARP..... 371, 394
SHERWOOD..... 391
SHINCO..... 384
SHINSUNG..... 384
SILVA SCHNEIDER..... 356
SINGER..... 341, 382
SKYWMASTER..... 382, 383
SMART..... 350
SIR ELECTRONIC..... 382, 383

SONY	363, 987, 402, 988, 986, 989	CYTRON	233, 311, 262, 269, 319, 256, 248, 249, 291, 338, 905, 906
SONNAMASTER	341	DAEWOO	274, 250, 245, 319, 245, 971
SONNAMAX	341	DANSK	275
SONNASTORM	339	DANTAX	233
STANDARD	373	DAYTRON	245
SUNGATE	953	DE GRAF	264, 257
SUPERVISION	382, 383	DECCA	257, 231, 293
SYNN	341	DUAL	233, 257, 311, 262, 319, 293, 248, 291, 338, 905, 906
SYNTANA	339	DUMONT	244, 257, 231, 258
TANGERBERG	350	EDTA	275
TOA	354, 930, 373, 932, 330, 335, 339, 340, 333, 341, 342, 345, 352, 358, 371, 923, 943, 924, 933, 338, 372, 334, 344, 664, 894	EMERSON	301, 339
TEAC	368, 333, 341, 384	ESC	245
TECHNICS	364, 399	ETCUDIO	275
TECHNIA	356	FERGUSON	294, 259, 271, 278, 293, 281, 305
TECHWOOD	394, 350	FIDELITY	311, 231
TECO	923, 895	FINLANDIA	264, 257, 258
TELEDEX	382	FINLUX	264, 298, 257, 231, 258, 293, 237
TELEFUNKEN	894, 333	FIRSTLINE	264, 275, 233, 265, 298, 256
TELETech	350	FISHER	258, 279
TENSAI	373, 382	FINT	233
TERAPIN	943	FORMENT-PHEONIX	257
TEVION	354, 930, 373, 932, 330, 335, 337, 339, 340, 341, 342, 345, 352, 358, 371, 891, 892, 895, 896, 897, 898, 899, 900, 901, 902, 903, 904, 923, 966, 890, 905, 943, 924, 933, 375, 906, 338, 917, 918, 372, 334, 344, 664, 894	FRONTIUCH	250
THETA DIGITAL	368	FUJITSU	231
THOMSON	360, 359, 399	FUNAI	231, 339
TOKAI	894, 392, 384	GALAXY	231
TOSHIBA	362, 973, 983, 920	GBC	275, 250
TRANS-CONTENTS	356	GEC	257
TREDEX	941	GELOSO	275
UNITED	333, 348	GENEARL	250
UNIVERSUM	350	GENEARL TECHNIC	262, 233, 311, 248
UMAX	382	GOLDHORN	275
VENTURER	333	GOLDSTAR	231, 254
VESTEL	350	GOODMANS	275, 250, 259, 256, 231, 245, 283, 282
VOXSON	383, 354, 382	GOVIDEO	338, 367, 971
WALLVISION	384	GRETZ	258, 293
WEIKAN	354	GRANADA	257, 266, 240, 258, 271
WHARFEDALE	374, 349, 341, 386	GRANADA	275, 250, 254, 231, 245
WILSON	354	GRUNDIG	273, 270, 243, 235, 243, 257, 260, 272, 275, 286, 287, 290, 315, 371, 371, 388
X-BOX	399	HAAZ	233
XLOGIC	341	HANSADIEC	257, 254
XENUS	373, 358	HCM	275, 288
XHS	894	HIMARI	275, 233, 248, 268, 301
YAMAHA	364, 388, 979, 980	HISAWA	233
YAMAKAWA	397, 372	HITACHI	244, 257, 268, 231, 293, 387
YUKA	383	HYPICON	232, 275
ZENITH	375, 907	IMPACT	250

DVD-R

DVD Recorders (DVD-R, DVD-RW, etc)		IMPERAL	231
APEX	911	INNOVATION	233, 311, 242, 248, 291
ARENA	923	INNO HIT	250, 257, 275, 245
ASPIRE	952	INTERBUY	261
CENTROS	951	INTERFANK	257, 258
CMI	923	INTERVISION	231
COTY	221	IRADIO	275, 256
CYBERCOM.	923	ITI	237, 293, 258, 292
CYBERHOME	912	ITV	256, 245
CYBERMAXX	895, 905, 906, 923	JVC	294, 295, 293, 400
CYTRON	895, 905, 906, 923	KASU	275
DUAL	923	KARCHER	257
GO-VIDEO	383	KENDO	233, 250, 245, 300, 245, 236, 237
HITACHI	387	KEWOOD	293
ILO	959	KUPPEL	275
KENDO	923	LENCO	245
LIFETEC	895, 905, 906, 923	LEYCO	275
LG	907	LIFE	291
MANAVOX	979, 980	LIFETEC	233, 311, 262, 269, 319, 256, 248, 291, 338, 905, 906
MEDION	895, 905, 906, 923	LG	231, 256, 261, 907
MICROMAXX	895, 905, 906, 923	LOEWE	247, 295, 262, 257, 256, 271
MICROSTAR	895, 905, 906, 923	LOGIK	275
MUSTEK	383	LUNATRON	274, 245
PACKARD BELL	940, 276	LUXOR	294, 258, 237, 281
PANASONIC	403	MAGNISONIC	258
PHILIPS	979, 980	MAGNUWOX	914
PIONEER	977	MAGNUM	291
PRO2	895, 905, 906, 923	MANESEH	275, 265
RTL	923	MARANTZ	257, 271, 281, 299
SONY	987, 988, 989	MATSU	233, 256, 248, 301
TOA	923	MELETRONIC	231
TEVION	890, 891, 895, 905, 906, 923	MEDATOR	257
THOMSON	360, 359	MEDION	233, 311, 262, 269, 319, 256, 248, 291, 338, 905, 906
TOSHIBA	973, 983	MEMOREX	240, 256, 231, 258, 279
YAMAHA	979, 980	MEMPHIS	275
ZENITH	907	METZ	262, 263, 267, 273, 325, 271



VCR codes

AIVA	230, 233, 256, 293, 231, 248, 291	PALLAUDUM	275, 300, 254, 271, 293
AKAI	300, 329, 307, 237, 236, 238, 239, 293	PANASONIC	242, 267, 240, 314, 321, 325, 970
AKBA	275	PARIE CINEMA	301
AKURA	275, 244, 293	PARIE MARCONI	293
ALBA	275, 233, 250, 245, 248, 246, 247	RENTON	246
ALLORGAN	311	PERIOD	231
AMBASSADOR	250	PHILCO	299
AMSTRAD	253, 231, 254	PHILIPS	235, 257, 290, 315, 327, 286, 285, 242, 271, 293, 969
ANITECH	275	PIONEER	294, 257
APEX	949	POLAROID	948
ASA	257, 256	PORTLAND	250, 245
ASUKA	275, 257, 231, 256	PRINCE	231
BABD	259, 231, 258, 245, 237, 293	PROFI	275
BASIC LINE	275, 233, 250, 245	PROLINE	231, 288
BAUL	263, 257	PROSONIC	233, 245
BESTAR	250, 245	PTE	257
BLACK PANTHER LINE	245	QUARTZ	258
BLAUPUNKT	263, 257, 262, 240, 309, 325, 271	QUELLE	257, 263, 258, 231, 271, 301
BONOSTIC	250		
BRANDT	303, 305		
BRYSONIC	277, 967		
BUSH	275, 233, 245, 248, 246, 247, 288		
CATRON	250		
CIE	231, 293		
CINEONE	275, 233		
CLUTRONIC	250		
COMBITECH	248		
CONDOR	250, 245		
CROWN	275, 250, 245		
CYBERCOM.	233, 311, 262, 269, 319, 256, 248, 291, 338, 905, 906		
CYBERMAXX	233, 311, 262, 269, 319, 256, 248, 291, 338, 905, 906		

RADIODATA 257
REX 293
RFT 250, 257
ROADSTAR 275, 256, 245
SABA 324, 245, 281, 293, 303, 305
SAIPIO 275, 233, 248, 301
SALUDA 298, 258, 237, 292
SAMSUNG 311, 312, 338, 963
SAMURAI 250
SANSU 294, 244, 293, 920
SANYO 284, 258, 279
SAVILLE 248
SBR 257
SCHAUB LORENZ 258, 237, 231, 293
SCHEIDER 275, 233, 265, 250, 257, 256, 231, 264, 245
SEG 275
SEI-SNUDYZINE 257
SELECO 293
SENTRA 250
SENTRON 275
SHARP 240, 241, 328, 281
SHIRATOM 275, 258
SHINKO 256
SIEMENS 263, 256, 258, 271
SILVA 256
SNUDYZINE 257
SOLAVOK 250
SONOKO 245
SONOLOR 240
SONTEC 256
SONY 232, 308, 309, 310, 313, 249, 251, 255, 402
STANDARD 245
STRONG 244
SUNKAI 233
SUNSTAR 231
SUNTRONIC 231
SUNWOOD 275
SYLVANIA 339
TAISHO 233
TANDBERG 263
TASHIKO 240, 231
TATUNG 257, 231, 293
TOM 233, 311, 262, 269, 319, 248, 291, 338, 905, 906
TEC 259
TECHNICS 262, 260
TELEFUNKEN 293
TELEFUNKEN 304, 294, 324, 295, 323, 280, 293, 303, 305
TELEOS 273
TELESAI 275, 231, 256
TELEVIO 233, 311, 262, 269, 319, 256, 248, 291, 338, 905, 906
THOMSON 294, 324, 295, 323, 326, 245, 242, 293, 305
THORN 258, 293, 301
THVO 242
TOKAI 275, 256
TONSAI 275
TOSHIBA 320, 257, 265, 298, 319, 293
TOWADA 275
TOWHKA 275
TRIUMPH 301
TVL 250
UEK 256
UNITED QUICK STAR 245
UNIVERSUM 290, 235, 263, 257, 315, 256, 231, 237, 239, 253, 271
VICTOR 294, 295
VIDEO 233, 262, 311, 248
WEETBUCK 256
WANISHI 275
YANAKI 275
YOKO 275, 250, 256

CYBERWALK 412, 413, 423, 428, 442, 466, 478, 484, 493, 504, 511, 514, 535, 546, 566, 583, 586, 587, 618, 619, 644, 650, 652, 653, 222

CYTRON 412, 413, 423, 428, 442, 466, 478, 484, 493, 504, 511, 514, 535, 546, 566, 583, 586, 587, 618, 619, 644, 650, 652, 653, 222
DAERYUNG 438
DANSAT 410
D-BOX 544, 604
DECCA 460
DEW 456
DIAMOND 461
DIGITALITY 640
DISKOPRESS 424, 454
DISTRITAO 462
DNT 438, 552
DONG WOO 501
DRAKE 557, 463
DREAMBOX 658
DUAL 412, 413, 423, 428, 493, 504, 511, 564, 583, 586, 587, 618
DSV 602
ECHOSTAR 640, 581, 586, 425, 481, 578, 579, 580, 657, 659, 464, 465, 467
EINHELL 408, 417, 405, 419
ELEKTRA 409
EITA 478, 462, 405, 552
EMANION 405
EWWE ESSE 428, 508, 491
EP SAT 508, 491
EUROPHON 640
EURSAT 419
EURSKY 428, 640, 419
EUSPACEM 468
EUSTAR 438, 419
EXATOR 405, 407
FERGUSON 508, 472, 403, 410, 473
FIDELITY 415, 417
FINLANDIA 509
FINLUX 508, 429, 408, 475, 480, 487
FINNSAT 403, 454
FORCE 577, 553, 535
FORTEC STAR 470
FOXTROT 402, 443, 584
FRACABRO 542
FRANCE SATELLITE-TV 477
FREECOM 405, 489
FTE 422, 494
FUBA 548, 439, 428, 438, 405, 424, 431, 477, 480, 552
GALAXIS 428, 408, 462, 478, 484, 535, 582, 583, 602, 619, 432, 456
GALAXY 424
GAN 419
GOLDSTAR 489
GOZOONING 483
GOZOONAMS 508
GRANADA 429
GROTHENSEN 405, 489
GRUNDIG 439, 436, 483, 495, 508, 544, 469, 602, 584, 407, 550
HANSEATIC 504
HANTOR 444, 405, 501
HANURE 409
HELIOCOW 427
HIRSCHMANN 439, 522, 547, 548, 487, 488, 491, 558
HSAWA 444
HITALHI 508, 537
HOUSTON 462
HUTH 408, 411, 444, 462, 419, 491
HUMAN 485, 517, 582
HYUNDAI 486
IMPERIAL 562
INNOVATION 428, 493, 504, 511, 583, 586, 587, 618
INTERTRONIC 419
INTERVISION 462
IRETO 602
ITV/NORDIA 429, 508, 548, 454, 487, 537
JOHANSSON 444
JSR 462
JVC 483
KATHREIN 549, 617, 631, 607, 635, 439, 459, 494, 498, 499, 507, 552
KOSMOS 489, 491, 496
KR 407
KREISELMAYER 439
KYOSIAR 405
LASAT 428, 565, 566, 567, 409, 500, 501, 502
LENCO 405, 489, 503
LENG 444
LENNIX 462
LENSON 479
LIFE 583
LIFEST 412, 413, 423, 428, 442, 493, 504, 511, 514, 546, 566, 583, 586, 587, 618, 619
LIFETEC 412, 413, 423, 428, 442, 466, 478, 484, 493, 504, 511, 514, 535, 546, 566, 583, 586, 587, 618, 619, 644, 650, 652, 653, 222
LION 468
LG 489
LORRAINE 489
LUPUS 428
LUXOR 417, 429, 548, 537
MACAR 603
MANHATTAN 462, 508, 557, 633, 421, 409
MARANTZ 552
MARINETEK OCTOPUS 655
MASCON 409
MASPRO 483, 508, 507, 558
MATSUMI 483, 574
MB 504
MBOX 442
MEDEBROW 549
MEDEMAURT 419
MEDIASAT 419, 432
MEION 412, 413, 423, 428, 442, 466, 478, 484, 493, 504, 511, 514, 535, 546, 566, 583, 586, 587, 618, 619, 644, 650, 652, 653, 222
MEGA 552
METRONIC 408, 575, 612, 613, 614, 615, 632, 409, 424, 405, 407
METZ 459
MICROMAXX 410, 412, 423, 428, 442, 466, 478, 484, 493, 504, 511, 514, 535, 546, 566, 583, 586, 587, 618, 619, 644, 650, 652, 653, 222
MICROSTAR 412, 413, 423, 428, 442, 466, 478, 484, 493, 504, 511, 514, 535, 546, 566, 583, 586, 587, 618, 619, 644, 650, 652, 653, 222
MICRO TECHNOLOGY 464
MINERVA 483, 439
MITSUBISHI 508, 439, 574
MITSUMI 501
MORETV 644, 222, 423
MORGANS 611, 419, 502, 552
MORGAN STIDNEY 611
MULTICHoice 601
MULTISTAR 496, 501

SAT codes



AIAI	552
ALBA	508, 562, 405, 407
ALDES	406, 409
ALLSAT	462, 410, 552
ALLSONIC	406, 428
AMPERE	422
AMSTRA	584, 555, 541, 415, 416, 417, 419
ANKARO	408, 428, 424
ANTRON	405, 407
APOLLO	405
ARCON	415, 422, 424, 463
ARMSTRONG	419
ASAT	552
AST	435
ASTON	594, 406
ASTRA	429, 419, 431, 432, 502
ASTRO	428, 439, 569, 407, 409
AUDITION	462, 407
AURORA	602
AUSTAR	602, 643, 642
AXIS	428, 415, 432, 456
BARCOM	424
BEST	428, 424
BLAUPUNKT	439
BOCA	419, 502
BRANDT	545, 546, 547, 574
BRAIN WAVE	444, 223
BSKYB	584, 555
BT SATELLITE	574
BUSH	508, 542, 410
CANAL+	569, 599
CANAL SATELLITE	569, 599
CHIPIPARA	507
CHESS	547, 586
CITYCOM	508, 640, 459
CLATRONIC	441
CLEMENS KAMPHUS	491
CNT	409
COLUMBUS	477
COMAG	471
COMMWARE	408
CONTech	454
CONDOR	428, 640
CONNECTIONS	438, 454
CONRAD	640
CONFEC	454, 459
COSAT	462
CROWN	419
CYBERCOM	412, 413, 423, 428, 442, 493, 504, 511, 514, 546, 566, 583, 586, 587, 618, 619

MULTITEC 586, 587
 MURATTO 437, 489
 NAVEX 444
 NEC 509, 510
 NEUHAUS 462, 479, 482
 NEXTINNE 414, 585
 NIKKO 419
 NORIA 530, 564, 425, 429, 508, 548, 563, 531, 454, 487
 NOHEX 622
NORMENDE 549, 472, 508, 403, 405, 409
 NOVIS 444
 OAK 424
 OCEANIC 461, 468
 OCTAGON 405, 407, 456
 OIANO 419, 491, 496
 OPTEX 462, 459, 456
 OPTUS 602
 ORBIT 435
 ORBITECH 405
 ORIGO 468
 OSAT 407
 OTTO VERSAND 439
 PACE 584, 555, 439, 559, 527, 508, 410, 617
 PACIFIC 461
 PALCOM 479, 431, 477
 PALLADIUM 483, 419
 PALTEC 431
 PANASONIC 584, 508, 542
 PANDA 508, 410
 PANSAT 490
 PHILIPS 552, 436, 483, 493, 495, 508, 543, 434, 549, 574, 605, 618, 455, 561, 550, 456, 515
 PHENIX 456
 PHONOTREND 408, 462, 491
 PINNACLE 454
 PIONEER 569
 POLSAT 603
 POLYTRON 459
 PREDI 444
 PREMIERE 564, 462, 569, 542, 442, 604
 PREMIER 569
 PREMIUM X 224
 PRIESNER 445, 419
 PRO2 412, 413, 423, 428, 442, 446, 478, 484, 493, 504, 511, 514, 535, 546, 566, 583, 586, 587, 618, 619, 644,
 650, 652, 653, 222
 PROFI 503
 PROMAX 508
 PROSAT 408, 562
 PROTÉK 461
 PROVISION 409
 QUADRA 408, 428
 QUELLE 439, 417
 QUIERO 603
 RADIODA 552
 RADIX 630, 438, 632
 RAINBOW 407
 REDEFINITION 510
 REDPOINT 432
 REESTAR 428
 RFT 408, 552
 RUEFACH 503
SABA 472, 508, 543, 556, 562, 565, 571, 572, 573, 574, 575, 409, 468
 SABRE 508
 SAZEM 570, 604, 599, 603
 SAKURA 456
 SALOMA 429, 527, 509, 520
 SAMSUNG 426, 405
 SAT 415, 435, 437
 SATCOM 640, 504, 523
 SATEC 508
 SATPARTNER 444, 405, 407, 409, 489, 491
 SCHNEIDER 428, 455, 511, 583, 586, 587, 618
 SCHWAGNER 411, 412, 413, 427, 430, 433, 440, 504, 508, 516, 566, 573, 575, 576, 577, 582, 514, 583, 585, 587, 598,
 616, 630, 631, 633, 635, 459, 498
 SEEAMANN 438, 419, 432
 SEG 428, 444, 504, 541, 631, 634, 405
 SELCO 462
 SIEMENS 439
 SILVA 489
 SKARDA 432
 SKY 584
 SKY+ 555
 SKY DIGITAL 584, 555
 SKYMASTER 408, 504, 546, 547, 586, 587, 588, 589, 590, 591, 592, 621
 SKYMAX 552
 SKYVISION 462
 SHI ELECTRONIC 408, 504, 546, 547, 586, 587, 588, 589, 591, 592, 621
 SONY 584, 569, 418
 SR 472, 419, 502
 STARLAND 586
 STARRING 444
 STAR TRAK 405
 STRONG 562, 428, 402, 545, 454, 489, 405, 407
 SUNUDA 419
 SUNSTAR 527, 419, 502
 TANDBERG 603
 TANDY 407
 TANTEC 508, 479, 477
 TATING 460
 TCM 409
 TECO 419, 502
 TECHNIMALL 416
 TECHNIMATE 441
 TECHNISAT 438, 479, 569, 623, 528, 529
 TELESAT 640
TELEFUNKEN 560, 508, 545, 566, 567, 574, 405
 TELIBA 438, 640, 407, 419
 TELEMASTER 409
 TELEMAX 500
 TELESAT 504
 TELESTAR 479, 569
 TELEVES 508, 610, 611
 TELEWIRE 462
 TEVION 412, 413, 423, 428, 442, 446, 478, 484, 493, 504, 511, 514, 535, 546, 566, 583, 586, 587, 618, 619, 644,
 650, 652, 653, 222
THOMSON 472, 601, 510, 574, 492, 508, 560, 568, 569, 603
 THORENS 461
 THORN 508, 410, 473
 THRO 459
 TONNA 508, 462
 TOPFIELD 497, 505, 506
 TPS 570
 TRAD 435, 437, 533, 489
 TRSAT 480

TRIAX 439, 479, 545, 609, 619
 TWINER 610, 611
 UNDEN 534
 UNISAT 419, 456
 UNITOR 444, 424
 UNIVERSUM 439, 483, 475, 487
 VAROSTAT 439
 VECTOR 468
 VENTANA 552
 VIA DIGITAL 568
 VIA SAT 568
 VISOSAT 594, 444, 462, 586, 593, 595, 516, 597
 VITACO 536, 424
 VORTEX 405
 V-TECH 437, 435, 515, 537
 WEWA 500
 WEWSAT 500
 WINESAT 444
 WIS 435, 437, 438, 439, 508, 533, 538, 539, 540, 597, 625, 624, 627, 628, 629
 WITTENBERG 415
 WOORAY 409
 ZEHNWER 428, 437, 435, 541, 631, 632, 409, 424, 496, 498
 ZODIAC 407



CBL codes

AUSTAR 494
 BAB 636
 BT 554
 CABECRYPT 474
 CABINETTE 448, 449, 450
 CABLE AND WIRELESS 606
 CANAL PLUS 474
 CONCRYPT 474
 CYLODE CARAVELLE 452
 CRYPTOVISION 458
 EURODEC 603
 FILINET 474
 FILINET/CABLECRYPT 474
 FILINET/CONCRYPT 474
 FOXTEL 402
 GEE 452
 GL 494, 554
 IMPULSE 554
 JERUSA 554, 494
 KABELVISION 554
 CYONNAISE 603
 MARVITEK 636
 MELITA 554
 MNET 602, 474
 MOTOROLA 494
 MOVE TIME 551
 MULTICHoice 474, 602
 NTL 606
 OPTUS 494
 PACE 606
 PHILIPS 487
 PIONEER 518, 521
 PIV 554
 SCIENTIFIC ATLANTA 524, 525
 STS 551
 TELE+ 474
 TELEPU 474
 TELEWEST 606, 554
 UNITED 554
 VISOSAT 487

COMBO codes

DVD/DVD Combos DVD & TV
 BROWNSON 920
 CYBERCOM 343 & 228, 924 & 210, 933 & 228
 CYBERMAXX 894, 343 & 228, 924 & 210, 933 & 228
 CYTRON 894, 343 & 228, 924 & 210, 933 & 228
 DUAL 343 & 228, 924 & 210, 933 & 228
 H & B 343 & 228
 INTERTRONIC 894
 LIFETEC 894, 343 & 228, 924 & 210, 933 & 228
 MEDION 894, 343 & 228, 924 & 210, 933 & 228
 MEMOREX 920
 MICROMAXX 894, 343 & 228, 924 & 210, 933 & 228
 MICROSTAR 894, 343 & 228, 924 & 210, 933 & 228
 ORION 920
 PHILIPS 339 & 181
 PRO2 894, 343 & 228, 924 & 210, 933 & 228
 SANSHU 920
 TCM 343 & 228, 924 & 210, 933 & 228
 TEVION 894, 343 & 228, 924 & 210, 933 & 228
 TOSHIBA 920

TV/VCR Combos

ALBA 245, 248
 ANWA 248, 291
 BAIRD 245
 BASIC LINE 245
 BESTAR 245
 BLACK PANTHER LINE 245
 BUSH 245, 248
 COMBITECH 248
 CONDOR 245
 CROWN 245
 CYBERCOM 248, 291
 CYBERMAXX 248, 291
 CYTRON 248, 291
 DAEWOO 245
 DAYTON 245
 DUAL 248, 291
 EFC 245
 GENERAL TECHNIC 248
 GOLDSTAR 241
 GOODMAN 245, 283
 GRANOV 245
 HINARI 248
 INNO HIT 245
 INNOVATION 248, 291
 ITV 245
 KENDO 245
 LENCO 245
 LG 261
 LIFE 291

LIFETEC	248, 291	PRO2	843, 664, 668, 674, 675, 694, 730, 742, 743, 744, 745, 746, 747, 801, 802, 803, 807, 809, 818
LIQUATION	245	PROTON	732
MAGNUM	291	QUAD	732
MATSUI	248	REALISTIC	848, 859, 875
MEIRON	248, 291	ROADSTAR	706, 708
MICROMAXX	248, 291	ROTEL	732
MICROSTAR	248, 291	SABA	848
ORION	248, 283	SAE	732
PORTLAND	245	SAMSUNG	768
PRO2	248, 291	SANSUI	847, 709, 710, 711, 732
PROSONIC	245	SCHNEIDER	840, 732
ROADSTAR	245	SCOTT	859
SABA	245	SHARP	672, 712, 713, 714
SAIKO	248	SHERWOOD	782
SAMSUNG	312	SINGER	803
SAVILLE	248	SKYMASTER	778
SCHNEIDER	245, 264	SONY	671, 716, 717, 718, 741, 748, 749, 750
SONOKO	245	TANDBERG	732
STANDARD	245	TCM	843, 664, 668, 674, 675, 694, 730, 742, 743, 744, 745, 746, 747, 801, 802, 803, 807, 809
TOA	248, 291	TEAC	795
TEVION	248, 291	TECHNICS	705, 721, 743, 787
THOMSON	245	TELEFUNKEN	848
UNITED QUICK STAR	245	TEVION	843, 664, 668, 674, 675, 694, 730, 742, 743, 744, 745, 746, 747, 801, 802, 803, 807, 809, 813, 814, 816, 818
VIDEO	248	THEORE & ANWENDUNG	804

DVD/VCR Combos DVD & VCR

APEX	949
BRODSKIN	920, 967
CINEVISION	375 & 256
CYBERCOM	338, 375 & 256
CYBERMAXX	338, 894, 904, 375 & 256
CYTRON	338, 894, 904, 375 & 256
DAEWOO	971
DUAL	338, 375 & 256
EMERSON	339 & 231, 375 & 256
FUNAI	339 & 231
GO VIDEO	338, 347, 971
GOLDSTAR	375 & 256
HITACHI	387 & 231
JVC	400
LG	907, 375 & 256
LIFETEC	338, 894, 904, 375 & 256
MAGNAVOX	914 & 265
MEIRON	338, 894, 904, 375 & 256
MICROMAXX	338, 894, 904, 375 & 256
MICROSTAR	338, 894, 904, 375 & 256
PANASONIC	970
PHIIPS	969 & 205
POLAROID	949
PRO2	338, 894, 904, 375 & 256
SAMSUNG	339 & 963
SANSU	920
SANTO	378 & 238
SONY	402
STERIANA	339 & 231
TOA	338, 375 & 256
TEVION	338, 894, 904, 375 & 256
ZENITH	375 & 256



AUDIO codes

Laser Disc Players

DENON	252, 318
GRUNDIG	318
MITSUBISHI	318
NAO	318
PIONEER	318
TELEFUNKEN	318
THORN	322

CD Players

ADCOM	848
AWA	849, 850, 851, 751
AWA	853, 854, 855
ALBA	856
ARCAM	732
BESTAR	859
BSR	860
BUSH	661
CARRERA	663
CLASSIC	807
CONDOR	860
CYBERCOM	843, 664, 668, 674, 675, 694, 730, 742, 743, 744, 745, 746, 747, 801, 802, 803, 807, 809, 818
CYBERMAXX	843, 664, 668, 674, 675, 694, 730, 742, 743, 744, 745, 746, 747, 801, 802, 803, 807, 809, 818
CYTRON	843, 664, 668, 674, 675, 694, 730, 742, 743, 744, 745, 746, 747, 801, 802, 803, 807, 809, 818
DENON	665, 666
DUAL	843, 848, 844, 668, 675, 694, 730, 742, 743, 744, 745, 746, 747, 798, 801, 802, 803
EMERSON	848, 859
ELTA	667, 668, 693, 694, 745
FISHER	669
GENEXIA	859, 671, 672, 673, 675, 676, 677
GOLDSTAR	663
GOODMANS	678, 679
GRUNDIG	680, 697, 698, 732
HARMON/KARDON	683
HITACHI	848, 685, 686
INNOVATION	730, 742, 743, 744, 745, 746, 747
JVC	662, 487
KENWOOD	669, 688, 689, 690, 742
LIFETEC	843, 664, 668, 674, 675, 694, 730, 742, 743, 744, 745, 746, 747, 801, 802, 803, 807, 809, 818
LINN	723
LG	663
LEXMAN	691
MAGNUM	730, 742, 743, 744, 745, 746, 747
MARANTZ	695, 732
MATSUI	696, 732
MEIRON	843, 664, 668, 674, 675, 694, 730, 742, 743, 744, 745, 746, 747, 801, 802, 803, 807, 809, 818
MEMOREX	848, 659, 677
HERDSON	732
MICROMEGA	732
MICROMAXX	843, 664, 668, 674, 675, 694, 730, 742, 743, 744, 745, 746, 747, 801, 802, 803, 807, 809, 818
MICROSTAR	843, 664, 668, 674, 675, 694, 730, 742, 743, 744, 745, 746, 747, 801, 802, 803, 807, 809, 818
MISSION	722
NAD	671, 733, 735, 736, 737, 800
NAUM	732
NAKAMICHI	699, 700
ONYKO	840, 701, 702, 703, 785, 792
PANASONIC	661, 705
PHIIPS	847, 706, 732
PHIIPS CDH	840
PIONEER	673, 677, 753

PRO2	843, 664, 668, 674, 675, 694, 730, 742, 743, 744, 745, 746, 747, 801, 802, 803, 807, 809, 818
PROTON	732
QUAD	732
REALISTIC	848, 859, 875
ROADSTAR	706, 708
ROTEL	732
SABA	848
SAE	732
SAMSUNG	768
SANSU	847, 709, 710, 711, 732
SCHNEIDER	840, 732
SCOTT	859
SHARP	672, 712, 713, 714
SHERWOOD	782
SINGER	803
SKYMASTER	778
SONY	671, 716, 717, 718, 741, 748, 749, 750
TANDBERG	732
TCM	843, 664, 668, 674, 675, 694, 730, 742, 743, 744, 745, 746, 747, 801, 802, 803, 807, 809
TEAC	795
TECHNICS	705, 721, 743, 787
TELEFUNKEN	848
TEVION	843, 664, 668, 674, 675, 694, 730, 742, 743, 744, 745, 746, 747, 801, 802, 803, 807, 809, 813, 814, 816, 818
THEORE & ANWENDUNG	804
THOMSON	842, 848
TOSHIBA	722, 723
UNIVERSUN	731
VELTOS RESEARCH	663
VICTOR	687
WEILI TECH	675, 694, 744
YAMAHA	712, 720, 725, 771
YORK	708

Audio Amplifiers/Tuners/Receivers

CENTRUM	692
CYBERCOM	841, 715, 776
CYBERMAXX	841, 715, 776
CYTRON	841, 715, 776
DENON	779, 781
DUAL	841, 715, 797
ELTA	667, 688
GRUNDIG	697, 698, 727
HARMON KARDON	682
KEWWOOD	761
LIFETEC	841, 715, 776
LINN	857
MARANTZ	727
MEDION	841, 715, 776
MICROSTAR	841, 715, 776
MICROMAXX	841, 715, 776
NAO	735, 736, 737, 738, 799, 800
ONYKO	785, 792, 793
PHILIPS	846, 727
PRO2	841, 715, 776
SANSU	727
SCHNEIDER	791
SHERWOOD	782
SONY	739, 740, 755, 757, 758, 759, 780
TCM	841, 715, 776, 806
TEAC	794, 796
TECHNICS	764, 777, 788
TEVION	775, 776, 815, 817, 841
THEORE & ANWENDUNG	804
THOMSON	842, 766
YAMAHA	724, 752, 770, 771, 772

Audio Tape Players

ANNA	790
DENON	790
GRUNDIG	729, 698
HARMON KARDON	681
KEWWOOD	761
MAGNAVOX	729
MARANTZ	729
NAO	799
ONYKO	784
PHILIPS	729
SANSU	729
SHERWOOD	783
SONY	754, 755, 756
TEAC	794
TECHNICS	764, 777, 786
THOMSON	842
YAMAHA	724, 772

MINI Systems

ANNA	773, 774
CYBERCOM	852, 856, 704, 745, 808, 810, 811, 812
CYBERMAXX	852, 858, 704, 745, 808, 810, 811, 812
CYTRON	852, 858, 704, 745, 808, 810, 811, 812
DUAL	852, 858, 704, 745, 797
ELTA	693, 745
GRUNDIG	707
INTERTRONIC	811
LIFETEC	852, 858, 704, 745, 808, 810, 811, 812
MEDION	852, 858, 704, 745, 808, 810, 811, 812
MICROSTAR	852, 858, 704, 745, 808, 810, 811, 812
MICROMAXX	852, 858, 704, 745, 808, 810, 811, 812
PIONEER	753
PRO2	852, 858, 704, 745, 808, 810, 811, 812
SAMSUNG	768
SHARP	789
SONY	741
TCM	852, 858, 704, 745, 808, 810, 811, 812
TEVION	852, 858, 704, 745, 808, 810, 811, 812
WEILI TECH	852, 810

Misc.

Video CD	840
Audio Combi	844
DVS	845
CDR	847, 875
Switch Box	684


Home Automation

HOME AUTOMATION	998
X-10 (NEC)	999



CODE 570
(Logo registered by TPS)

ROC 2206

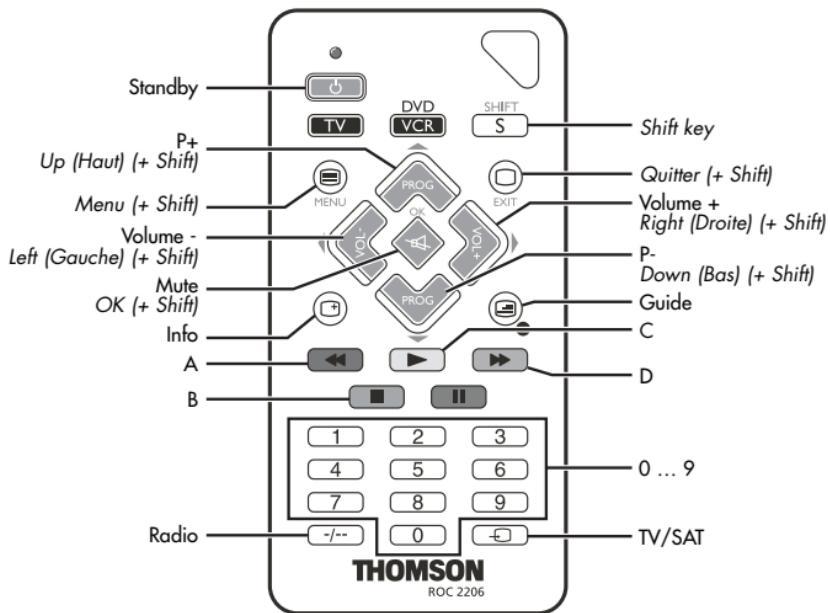

CANAL SATELLITE

TELE +


PREMIERE

CODE 569

(Logo registered by CANAL SAT)

(Logo registered by PREMIERE)


ROC 2206

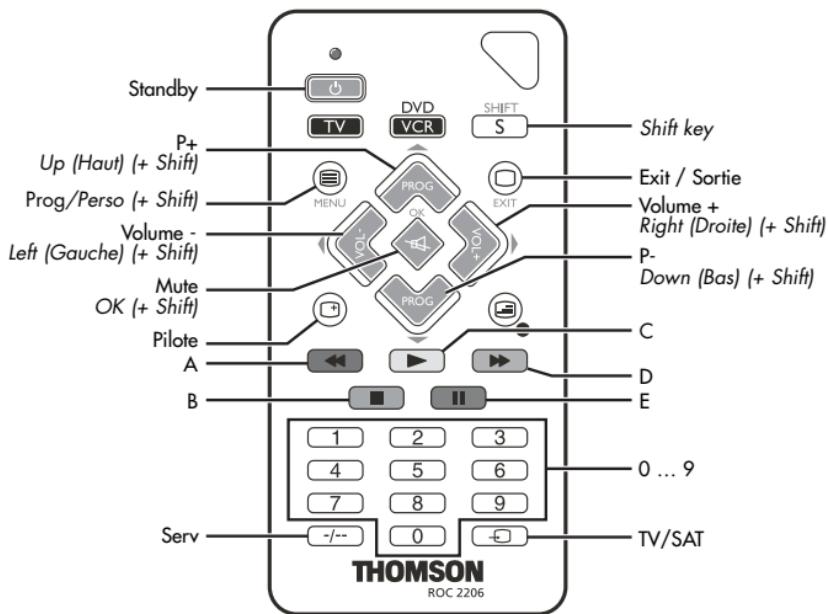

VIA

CODE 568
(Logo registered by VIA DIGITAL)


ROC 2206

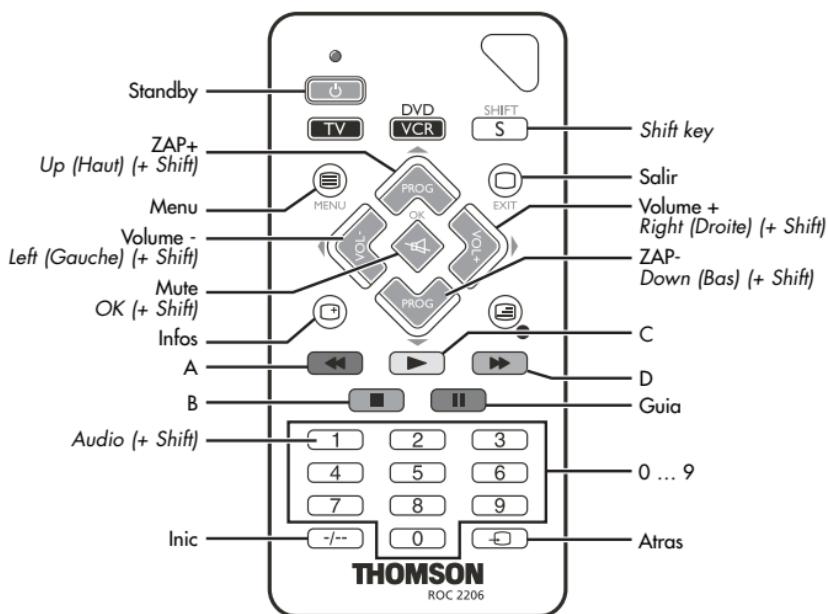

SKY

CODE 584
(Logo registered by SKY DIGITAL)

ROC 2206

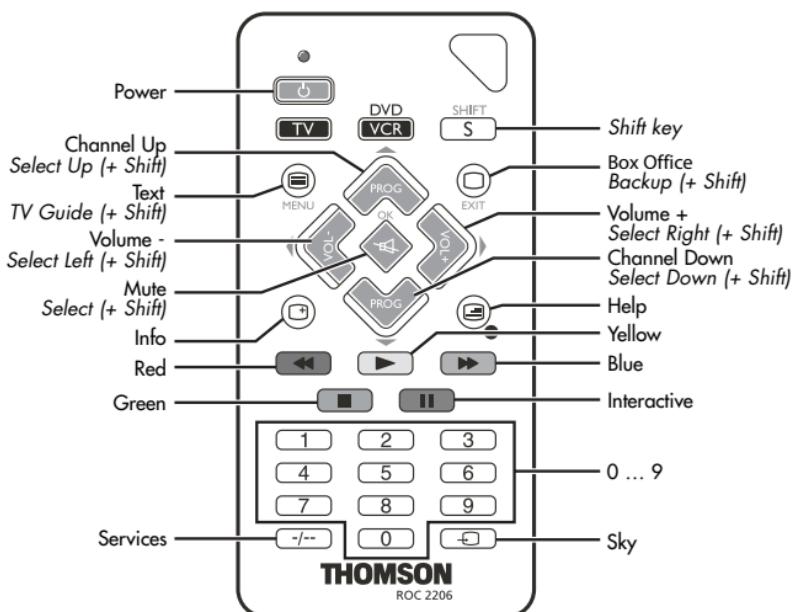

TÉLÉTEXTE / VIDEOTEXT / FASTTEXT / TOP TEXT / FLOF TEXT

(GB)


- Access the contents
- Back to TV programme
- Info key
- Videotext inlay on TV picture

(F)

- Télétexte Oui/Non
- Retour au programme TV
- Touche info
- Superposition du télétexthe sur l'image du téléviseur

(D)

- Zugriff auf den Inhalt
- Zurück zum Fernsehprogramm
- Info-Taste
- Überlagerung des Teletextes über das Fernsehbild

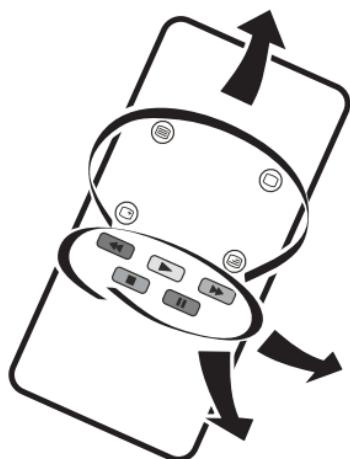

FASTTEXT

- | | | | | |
|--------------------------------------|--------------------------------|-------------------------------------|----------------------------------|----------------------------------|
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| (GB) Access to headings | (F) Accès aux rubriques | (D) Zugriff auf die Rubriken | (I) Accesso alle rubriche | (E) Acceso a las rúbricas |
| (NL) Toegang tot de rubrieken | | | | |
| (P) Acesso às rubricas | | | | |

(I)

- Accesso al sommario
- Ritorno al programma TV
- Tasto info
- Sovrapposizione del televideo all'immagine del televisore

(E)

- Acceso al índice
- Regreso al programa de TV
- Tecla de información
- Intercalación de teletexto en la imagen del televisor

(NL)

- Toegang tot de inhoudsopgave
- Terug naar het TV-programma
- Toets info
- Teletext over het beeld van het televisietoestel zetten

(P)

- Acesso ao índice
- Retorno ao programa TV
- Tecla informação
- Superposição do teletexto à imagem do televisor

TOPTEXT



(GB) Blue: Access to headings
Yellow: Access to articles

(F) Bleue : Accès aux rubriques
Jaune : Accès aux articles

(D) Blau: Zugriff auf die Rubriken
Gelb: Zugriff auf die Artikel

(I) Blu : Accesso alle rubriche
Giallo : Accesso agli articoli

(E) Azul: Acceso a las rúbricas
Amarillo: Acceso a los artículos

(NL) Blauw: Toegang tot de rubrieken
Geel: Toegang tot de artikelen

(P) Azul: Acesso às rubricas
Amarela: Acesso aos artigos