


# VIPER

## Installation & Operation Manual

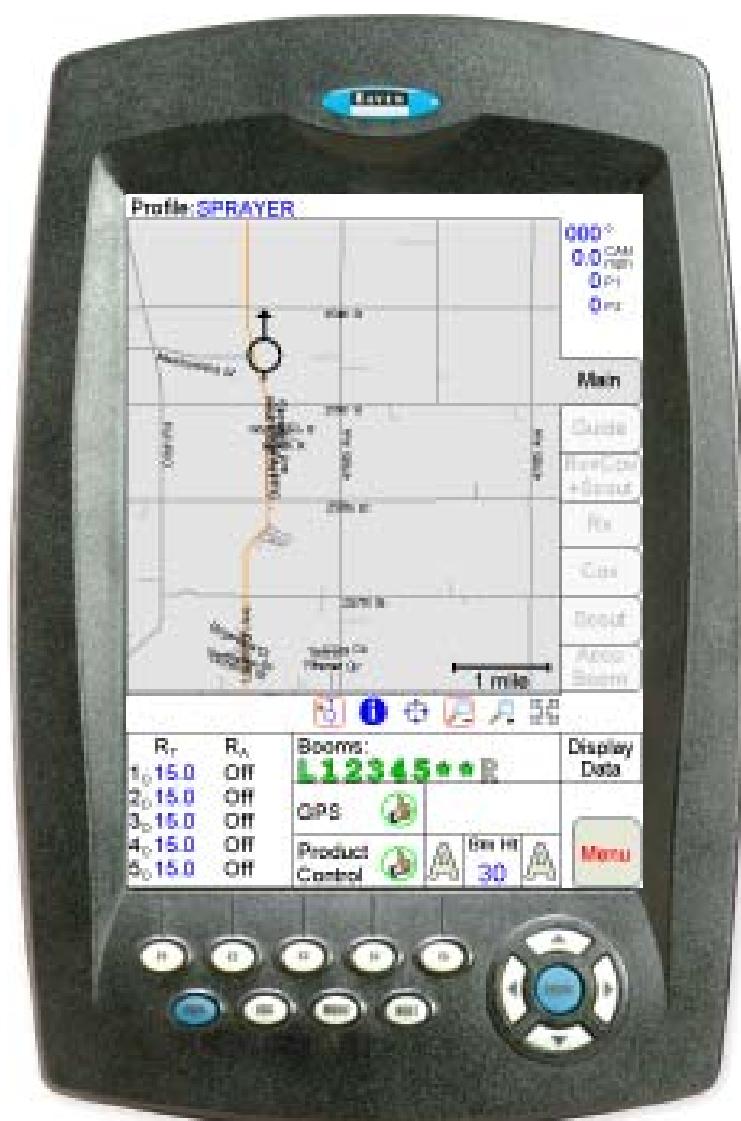

**VIPER 2.08**



## Table of Contents

<b>Chapter 1 - Getting Started with the Viper System .....</b>	<b>1</b>
The Viper Interface .....	2
Active Matrix Transflective Touchscreen .....	2
Keypad .....	3
Adjusting the Backlight .....	3
Connectors .....	4
Flashdisk Storage Card .....	4
Installing the Flashdisk .....	5
Hardware Installation .....	6
Viper Single Product (Liquid) CAN Control System .....	7
Viper Dual Product (Liquid/Granular) CAN Control System .....	8
Viper Power Connection .....	9
Viper Console Connection .....	10
DGPS Receiver Connection .....	11
Viper Guidance System .....	12
Viper/Invicta 115/RGL 600 Universal/Smartrax Package .....	13
Programs Menu .....	13
Selecting a Program .....	14
Screen Calibration .....	14
Registering Your Viper System .....	16
Viper Care and Use .....	21
<b>Chapter 2 - Setting Up the Controller Area Network (CAN).....</b>	<b>23</b>
CAN System Connections .....	23
CAN Terminators .....	24
Wiring Power to a CAN System .....	24
CAN Node Wiring .....	25
Adding Nodes to the CAN System .....	26
Detecting the CAN Bus Nodes .....	27
CAN Initialization Results .....	27
Selecting a New Controller .....	27
Re-Addressing Product Nodes .....	28
Programming the Nodes on the CAN System .....	29
Boom Cals .....	30
Miscellaneous .....	31
Units .....	32
Speed Sensor .....	32
Speed Cal .....	32
AccuBoom Node .....	35
Audible Alarms .....	35
Fan/Pump RPM .....	36
Speed .....	36
Node Version Information .....	37
Data Box 1 .....	38
Dual Flow % .....	39
Off Rate % .....	39
Low Tank .....	39

Low Limit .....	39
Flow/Shft Alarm .....	40
Vacuum/Bin Alarm .....	40
Decimal Shift .....	40
Zero ShutOff .....	41
Display Smoothing .....	41
Agitator .....	41
Ratio Rate .....	41
Data Box 2 .....	42
Tank Volume .....	43
Area/Hour .....	43
Vol/Min .....	43
Rate Cal .....	43
Rate +/- .....	43
Meter Cal/Density .....	43
Spreader .....	43
Valve Cal .....	48
Valve Cal 2 .....	48
Fan/Pump Cal .....	48
Min PW .....	49
Pre Set PW .....	53
PW Freq .....	53
Ratio Rate .....	53
Valve Delay .....	53
PWM .....	53
Pressure Area .....	54
Dual Pressure .....	54
Calibrating the Pressure Transducer Using an Analog Gauge .....	55
Entering a Setting with no Analog Gauge .....	55
Application Area .....	56
Tally Registers .....	58
Resetting the Tally Registers .....	59
Setting or Resetting Distance and Individual Nodes .....	59
Alarms .....	61
<b>Chapter 3 - Navigating the Viper Interface.....</b>	<b>63</b>
Main Screen Features .....	63
Profile .....	64
Current Heading .....	66
Speed .....	67
Map Area .....	68
Application Rates .....	69
Booms .....	70
Tabs .....	71
GPS Status Indicator.....	72
Product Control Status .....	74
Autoboom Status Indicator .....	75
Display Data .....	77
Tabs .....	78
Main Tab .....	79
Field Boundaries .....	80

Guide Tab .....	81
Rx+Cov+Scout Tab .....	82
Rx Tab .....	83
Cov Tab .....	85
Accessing Coverage Map Information .....	86
Scout Tab .....	87
Marking a Field Boundary .....	87
Importing a Field Boundary .....	89
AccuBoom Tab .....	92
Screen Tool Icons .....	93
System Status Icons .....	94
Menus .....	95
Exit Button .....	95
About Button .....	96
Setup Button .....	97
Activation Key and Feature Activation .....	98
Entering the Activation Key .....	98
Viper Features .....	100
Guidance .....	100
Single Product VRA .....	100
Multi-Product VRA .....	100
Maps .....	101
Street Maps .....	102
Downloading Street Maps .....	102
Loading the Street Maps to the Viper Console .....	103
Deleting Street Maps .....	104
Scout Maps .....	104
External Waypoint Switchbox .....	106
About Offsets .....	107
Coverage Maps .....	108
Setting the Coverage Map Percentages and Colors .....	108
Zero Rate Tolerance .....	109
Prescription (Rx) Maps .....	110
Accessing the Rx Map Menu .....	111
Rx Look-Ahead .....	112
Rx Map Colors .....	113
Editing a Rx Color Template .....	117
Deleting a Rx Color Template .....	118
Local Settings .....	119
Accessing the Local Setting Menu .....	119
Language .....	120
Choosing a Language .....	120
Profile Configuration .....	121
Saving Profile Information .....	121
Loading a Saved Profile .....	122
Units Configuration .....	123
Setting the Unit of Measurement .....	123
Time Zone Configuration .....	124
Setting the Correct Operating Time Zone .....	124
Serial Communication Port Setup .....	125
GPS Comm Port Setup .....	126

Generic (Non-Raven) GPS Setup .....	127
Setting up the GPS Comm Port to a Non-Raven DGPS Receiver .....	127
Raven GPS Setup .....	128
Auto-Configuring a Raven DGPS Receiver.....	128
Raven GPS + Lightbar Setup .....	129
Configuring a Raven DGPS Receiver + Lightbar .....	129
Tilt Sensor .....	130
Configuring the Tilt Sensor .....	132
Tilt Status .....	133
Tilt .....	134
Temp .....	134
Dir .....	134
Antenna Height .....	134
GPS Delay .....	134
Reverse Polarity .....	134
Tilt Filter .....	134
Zeroing the Tilt Sensor .....	135
Console Comm Port Setup .....	136
Auxiliary Comm Port Setup .....	136
Configuring Viper for Lightbar Guidance .....	137
Configuring the On-Screen Lightbar.....	137
External Lightbar .....	139
Boom Settings and Mapping .....	140
Boom Setup .....	140
Setting up Booms .....	141
Boom Mapping .....	145
Mapping the Booms .....	146
Advanced Settings .....	148
<b>Chapter 4 - Using the Viper System .....</b>	<b>151</b>
Jobs .....	151
New Jobs .....	151
Product Application .....	152
Guidance .....	153
AccuBoom Control .....	154
Product Chaining .....	154
Starting a New Job .....	155
Pausing a Job .....	162
Restarting a Paused Job .....	162
Existing Jobs .....	162
Viewing an Existing Job .....	163
Adding to an Existing Job .....	163
Deleting Jobs .....	164
Deleting Jobs by Selection .....	165
Application Reports .....	166
Customer Information .....	167
Field Information .....	168
Field Conditions .....	169
Weather Information .....	170
Applicator Information .....	170
Vehicle Information .....	171

Product Information .....	172
Ingredient Information .....	173
Report Notes Information .....	174
Creating an Application Report .....	175
<b>Chapter 5 - Product Chaining .....</b>	<b>177</b>
Enabling Product Chaining .....	177
Using Product Chaining .....	181
Display Data .....	183
Miscellaneous Messages .....	184
<b>Chapter 6 - Using AccuBoom .....</b>	<b>185</b>
Viper CAM AccuBoom Installation .....	186
Viper CAN AccuBoom with Serial Console Installation .....	187
AccuBoom Control Setup .....	188
Look-Ahead .....	188
Turn-Off % Coverage .....	188
AccuBoom Override .....	189
Zero Rate Shut Off .....	189
Configuring the AccuBoom Control .....	189
AccuBoom Boom Disable .....	190
Disabling Booms .....	190
Zero Rate Shutoff .....	191
Enabling Zero Rate Zone Shut Off .....	191
AccuBoom Override .....	191
Enabling AccuBoom Override .....	191
AccuBoom Spray/No-Spray Zones .....	193
Standard AccuBoom Method .....	194
Create AccuBoom No-Spray Map Method .....	194
Load AccuBoom No-Spray Map Method .....	195
Create Map From Field Boundary Method .....	196
Changing Spray/No-Spray Default Colors .....	197
AccuBoom Spray/No-Spray Maps .....	198
<b>Chapter 7 - Using AutoBoom .....</b>	<b>203</b>
UltraGlide Autoboom .....	204
PowerGlide Plus Autoboom .....	205
Calibrating Autoboom .....	206
Calibrating UltraGlide Autoboom .....	207
Calibrating UltraGlide in PowerGlide Plus Mode .....	211
Calibrating PowerGlide Plus Autoboom .....	215
Autoboom Operation .....	217
Enabling Autoboom .....	219
Autoboom Status Display .....	220
Adjusting Autoboom Operation .....	220
UltraGlide System Adjustment .....	221
To Adjust Sensor Height .....	221
To Adjust Sensitivity .....	221
To Adjust Speed .....	222
PowerGlide Plus System Adjustment .....	222
To Adjust High and Low Limits of the Pressure Alarm Setting .....	222

To Adjust the Pressure Alarm Point .....	223
To Adjust Heaviest Setting .....	223
To Adjust Lightest Setting.....	223
Resetting Defaults .....	224
Resetting UltraGlide Defaults .....	224
Resetting PowerGlide Plus Defaults .....	226
<b>Chapter 8 - Viper Guidance.....</b>	<b>229</b>
Swathing Patterns .....	232
Patterns .....	232
Straight AB .....	233
Contour Fixed .....	233
Contour 1 Button .....	235
Contour 2 Button .....	236
C Clamp .....	237
Headlands Separate .....	238
Hedlands Combined .....	239
Headlands 2 Separate .....	240
Headlands 2 Combined .....	241
Spiral .....	242
One Step .....	243
Seed .....	244
Headlands with Contour .....	245
Headlands 2 with Contour .....	246
Using the Guide Tab .....	248
Lightbar Display.....	249
Off-Swath Distance .....	249
Swath Number.....	249
Swathing Pattern .....	249
LB Bright Button .....	249
LB Dim Button .....	249
Reset A-B Button .....	249
Recal A-B Button .....	250
Set A/Set B Button .....	250
Load A-B/Save A-B Button .....	250
Set Flag\Goto Flag\Clear Flag Button .....	251
Zoom Level .....	251
Course Direction Indicator (CDI) Needle .....	251
Nav Needle Stationary .....	251
Nav Needle Moving .....	252
Guidance AB Lines .....	252
Saving an AB Line .....	252
Loading an AB Line .....	254
<b>Chapter 9 - Understanding Flashdisk Files .....</b>	<b>255</b>
Flashdisk File Structure .....	255
AccuBoom Folder .....	255
Autoboom Alarms .....	256
CovMaps Folder .....	256
Guidance Archive Folder .....	256
Jobs Folder .....	256

Rbin Folder .....	256
RxMaps Folder .....	257
RxMaps\colors Sub-Folder.....	257
Scout Folder .....	257
Setting Folder .....	257
Streetmaps Folder .....	257
Vnav Folder .....	258
Zulu.ini File .....	258
Maintaining the Flashdisk .....	258
<b>Chapter 10 - External Serial Rate Control .....</b>	<b>259</b>
Setting up the Auxiliary Port for External Serial Rate Control .....	259
Connecting the GreenSeeker® RT200 to Viper .....	260
Starting a Job with External Rate Control .....	260
<b>Chapter 11 - Rbin Viewer .....</b>	<b>263</b>
Downloading RBin Viewer .....	263
Dowloading RBin Software .....	263
Installing the RBin Viewer .....	265
To Install the RBin Viewer .....	266
Viewing Rbin Files .....	270
To Open an Rbin Report .....	270
Exporting Shapefiles .....	272
Toolbar Options .....	273
To Select the Coverage Display Options .....	274
To Change Coverage Map Colors .....	275
Rbin Options .....	276
To Change the Units of Measure .....	276
To Change the Layout .....	277
To Change the Language .....	279
Enabling Manual Console Display .....	280
Export Settings .....	281
Editing an Rbin Report .....	282
Reset History .....	285
<b>Chapter 12 - Troubleshooting the Viper System .....</b>	<b>287</b>
Viper Troubleshooting Information .....	287
General Issues .....	288
Setup Issues .....	290
Job Issues .....	291
Rx Map Issues .....	292
Coverage Map Issues .....	292
Error Messages .....	293
General Error Messages .....	293
Setup Error Messages .....	293
Job Error Messages .....	294
Variable Rate Control (VRC) Error Messages .....	296
GPS Error Messages .....	297
CAN Troubleshooting .....	298

## Appendices

Appendix A - Flashdisk Maintenance .....	299
Appendix B - Calculating the Boom Width (Calibration) for Liquid Applications .....	303
Appendix C - Calculating and Verification of Spreader Constant .....	305
Appendix D - Calculating Speed Calibration .....	307
Appendix E - Calculating Calibrations for Liquid and Granular Applications .....	309
Appendix F - Testing the Speed Sensor Extension Cable .....	313
Appendix G - Testing the Flow Meter Cables .....	317
Appendix H - Using the Invicta Front Panel Program with the Viper System .....	321
Appendix I - Controlling Spinner RPM .....	323

# Index

## A

About Button	96
About Offsets	107
AccuBoom Tab	92
Accessing Coverage Map Information	86
Accessing the Local Setting Menu	119
Accessing the Rx Map Menu	111
AccuBoom Boom Disable	190
AccuBoom Control	154
AccuBoom Control Setup	188
AccuBoom Folder	255
AccuBoom Node	35
AccuBoom Override	189
AccuBoom Override	191
AccuBoom Spray/No-Spray Maps	198
AccuBoom Spray/No-Spray Zones	193
Activation Key and Feature Activation	98
Active Matrix Transflective Touchscreen	2
Adding Nodes to the CAN System	26
Adding to an Existing Job	163
Adjust the Pressure Alarm Point	223
Adjusting Autoboom Operation	220
Adjusting the Backlight	3
Advanced Settings	148
Agitator	41
Alarms	61
Antenna Height	134
Appendix A - Flashdisk Maintenance	299
Appendix B - Calculating the Boom Width	303
Appendix C - Calculating and Verification	305
Appendix D - Calculating Speed Calibratic	307
Appendix E - Calculating Calibrations for l	309
Appendix F - Testing the Speed Sensor Ex	313
Appendix G - Testing the Flow Meter Cab	317
Appendix H - Using the Invicta Front Pan	321
Appendix I - Controlling Spinner RPM	323
Application Area	56
Application Rates	69
Application Reports	166
Applicator Information	170
Area/Hour	43
Audible Alarms	35
Autoboom Alarms	256

Autoboom Operation	217
Autoboom Status Display	220
Autoboom Status Indicator	75
Auto-Configuring a Raven DGPS Receive	128
Auxiliary Comm Port Setup	136

## B

Boom Cals	30
Boom Mapping	145
Boom Settings and Mapping	140
Boom Setup	140
Booms	70

## C

C Clamp	237
Calibrating Autoboom	206
Calibrating PowerGlide Plus Autoboom	215
Calibrating the Pressure Transducer Using	55
Calibrating UltraGlide Autoboom	207
Calibrating UltraGlide in PowerGlide Plus	211
CAN Initialization Results	27
CAN Node Wiring	25
CAN System Connections	23
CAN Terminators	24
CAN Troubleshooting	298
Change Coverage Map Colors	275
Change the Language	279
Change the Layout	277
Change the Units of Measure	276
Changing Spray/No-Spray Default Colors	197
Choosing a Language	120
Configuring a Raven DGPS Receiver + Li	129
Configuring the AccuBoom Control	189
Configuring the On-Screen Lightbar	137
Configuring the Tilt Sensor	132
Configuring Viper for Lightbar Guidance	137
Connecting the GreenSeeker® RT200 to V	260
Connectors	4
Console Comm Port Setup	136
Contour 1 Button	235
Contour 2 Button	236
Contour Fixed	233

Course Direction Indicator (CDI) Needle	251	Error Messages	293
Cov Tab	85	Existing Jobs	162
Coverage Map Issues	292	Exit Button	95
Coverage Maps	108	Export Settings	281
CovMaps Folder	256	Exporting Shapefiles	272
Create AccuBoom No-Spray Map Method	194	External Lightbar	139
Create Map From Field Boundary Method	196	External Serial Rate Control	259
Creating an Application Report	175	External Waypoint Switchbox	106
Current Heading	66		
Customer Information	167		
<b>D</b>			
Data Box 1	38	Fan/Pump Cal	48
Data Box 2	42	Fan/Pump RPM	36
Decimal Shift	40	Field Boundaries	80
Deleting a Rx Color Template	118	Field Conditions	169
Deleting Jobs	164	Field Information	168
Deleting Jobs by Selection	165	Flashdisk File Structure	255
Deleting Street Maps	104	Flashdisk Storage Card	4
Detecting the CAN Bus Nodes	27	Flow/Shhaft Alarm	40
DGPS Receiver Connection	11		
Dir	134	<b>G</b>	
Disabling Booms	190	General Error Messages	293
Display Data	77	General Issues	288
Display Data	183	Generic (Non-Raven) GPS Setup	127
Display Smoothing	41	Getting Started with the Viper System	1
Downloading RBin Software	263	GPS Comm Port Setup	126
Downloading RBin Viewer	263	GPS Delay	134
Downloading Street Maps	102	GPS Error Messages	297
Dual Flow %	39	GPS Status Indicator	72
Dual Pressure	54	Guidance	100
		Guidance	153
		Guidance AB Lines	252
		Guidance Archive Folder	256
		Guide Tab	81
<b>E</b>			
Editing a Rx Color Template	117		
Editing an Rbin Report	282	<b>H</b>	
Enabling AccuBoom Override	191	Hardware Installation	6
Enabling Autoboom	219	Headlands 2 Combined	241
Enabling Manual Console Display	280	Headlands 2 Separate	240
Enabling Product Chaining	177	Headlands 2 with Contour	246
Enabling Zero Rate Zone Shut Off	191	Headlands Separate	238
Entering a Setting with no Analog Gauge	55	Headlands with Contour	245
Entering the Activation Key	98		

Hedlands Combined	239	Maps	101
<b>I</b>			
Importing a Field Boundary	89	Marking a Field Boundary	87
Ingredient Information	173	Menus	95
Install the RBin Viewer	266	Meter Cal/Density	43
Installing the Flashdisk	5	Min PW	49
Installing the RBin Viewer	265	Miscellaneous	31
		Miscellaneous Messages	184
		Multi-Product VRA	100
<b>J</b>			
Job Error Messages	294	Nav Needle Moving	252
Job Issues	291	Nav Needle Stationary	251
Jobs	151	Navigating the Viper Interface	63
Jobs Folder	256	New Jobs	151
		Node Version Information	37
<b>K</b>			
Keypad	3	Off Rate %	39
<b>L</b>			
Language	120	Off-Swath Distance	249
LB Bright Button	249	One Step	243
LB Dim Button	249	Open an Rbin Report	270
Lightbar Display	249	<b>P</b>	
Load A-B/Save A-B Button	250	Patterns	232
Load AccuBoom No-Spray Map Method	195	Pausing a Job	162
Loading a Saved Profile	122	PowerGlide Plus Autoboom	205
Loading an AB Line	254	PowerGlide Plus System Adjustment	222
Loading the Street Maps to the Viper Con	103	Pre Set PW	53
Local Settings	119	Prescription (Rx) Maps	110
Look-Ahead	188	Pressure Area	54
Low Limit	39	Product Application	152
Low Tank	39	Product Chaining	154
<b>M</b>			
Main Screen Features	63	Product Chaining	177
Main Tab	79	Product Control Status	74
Maintaining the Flashdisk	258	Product Information	172
Map Area	68	Profile	64
Mapping the Booms	146	Profile Configuration	121
		Programming the Nodes on the CAN Syst	29
		Programs Menu	13
		PW Freq	53
		PWM	53

<b>R</b>			
Rate +/-	43	Serial Communication Port Setup	125
Rate Cal	43	Set A/Set B Button	250
Ratio Rate	41	Set Flag\Goto Flag\Clear Flag Button	251
Ratio Rate	53	Setting Folder	257
Raven GPS + Lightbar Setup	129	Setting or Resetting Distance and Individual Points	59
Raven GPS Setup	128	Setting the Correct Operating Time Zone	124
Rbin Folder	256	Setting the Coverage Map Percentages and Areas	108
Rbin Options	276	Setting the Unit of Measurement	123
Rbin Viewer	263	Setting up Booms	141
Re-Addressing Product Nodes	28	Setting up the Auxiliary Port for External Sensors	259
Recal A-B Button	250	Setting Up the Controller Area Network (CAN)	23
Registering Your Viper System	16	Setting up the GPS Comm Port to a Non-Integrated Receiver	127
Report Notes Information	174	Setup Button	97
Reset A-B Button	249	Setup Error Messages	293
Reset History	285	Setup Issues	290
Resetting Defaults	224	Single Product VRA	100
Resetting PowerGlide Plus Defaults	226	Speed	36
Resetting the Tally Registers	59	Speed	67
Resetting UltraGlide Defaults	224	Speed Cal	32
Restarting a Paused Job	162	Speed Sensor	32
Reverse Polarity	134	Spiral	242
Rx Look-Ahead	112	Spreader	43
Rx Map Colors	113	Standard AccuBoom Method	194
Rx Map Issues	292	Starting a Job with External Rate Control	260
Rx Tab	83	Starting a New Job	155
Rx+Cov+Scout Tab	82	Straight AB	233
RxMaps Folder	257	Street Maps	102
RxMaps\colors Sub-Folder	257	Streetmaps Folder	257
<b>S</b>		Swath Number	249
Saving an AB Line	252	Swathing Pattern	249
Saving Profile Information	121	Swathing Patterns	232
Scout Folder	257	System Status Icons	94
Scout Maps	104		
Scout Tab	87	<b>T</b>	
Screen Calibration	14	Tabs	71
Screen Tool Icons	93	Tabs	78
Seed	244	Tally Registers	58
Select the Coverage Display Options	274	Tank Volume	43
Selecting a New Controller	27	Temp	134
Selecting a Program	14	The Viper Interface	2
		Tilt	134
		Tilt Filter	134
		Tilt Sensor	130

Tilt Status	133	Viper Single Product (Liquid) CAN Control	7
Time Zone Configuration	124	Viper Troubleshooting Information	287
To Adjust Heaviest Setting	223	Viper/Invicta 115/RGL 600 Universal/Smart	13
To Adjust High and Low Limits of the Pre	222	Vnav Folder	258
To Adjust Lightest Setting	223	Vol/Min	43
To Adjust Sensitivity	221		
To Adjust Sensor Height	221		
To Adjust Speed	222		
Toolbar Options	273	<b>W</b>	
Troubleshooting the Viper System	287	Weather Information	170
Turn-Off % Coverage	188	Wiring Power to a CAN System	24

**U**

UltraGlide Autoboom	204
UltraGlide System Adjustment	221
Understanding Flashdisk Files	255
Units	32
Units Configuration	123
Using AccuBoom	185
Using AutoBoom	203
Using Product Chaining	181
Using the Guide Tab	248
Using the Viper System	151


**V**

Vacuum/Bin Alarm	40
Valve Cal	48
Valve Cal 2	48
Valve Delay	53
Variable Rate Control (VRC) Error Message	296
Vehicle Information	171
Viewing an Existing Job	163
Viewing Rbin Files	270
Viper CAM AccuBoom Installation	186
Viper CAN AccuBoom with Serial Console	187
Viper Care and Use	21
Viper Console Connection	10
Viper Dual Product (Liquid/Granular) Control	8
Viper Features	100
Viper Guidance	229
Viper Guidance System	12
Viper Power Connection	9

Zero Rate Shut Off	189
Zero Rate Shutoff	191
Zero Rate Tolerance	109
Zero ShutOff	41
Zeroing the Tilt Sensor	135
Zoom Level	251
Zulu.ini File	258

**Z**



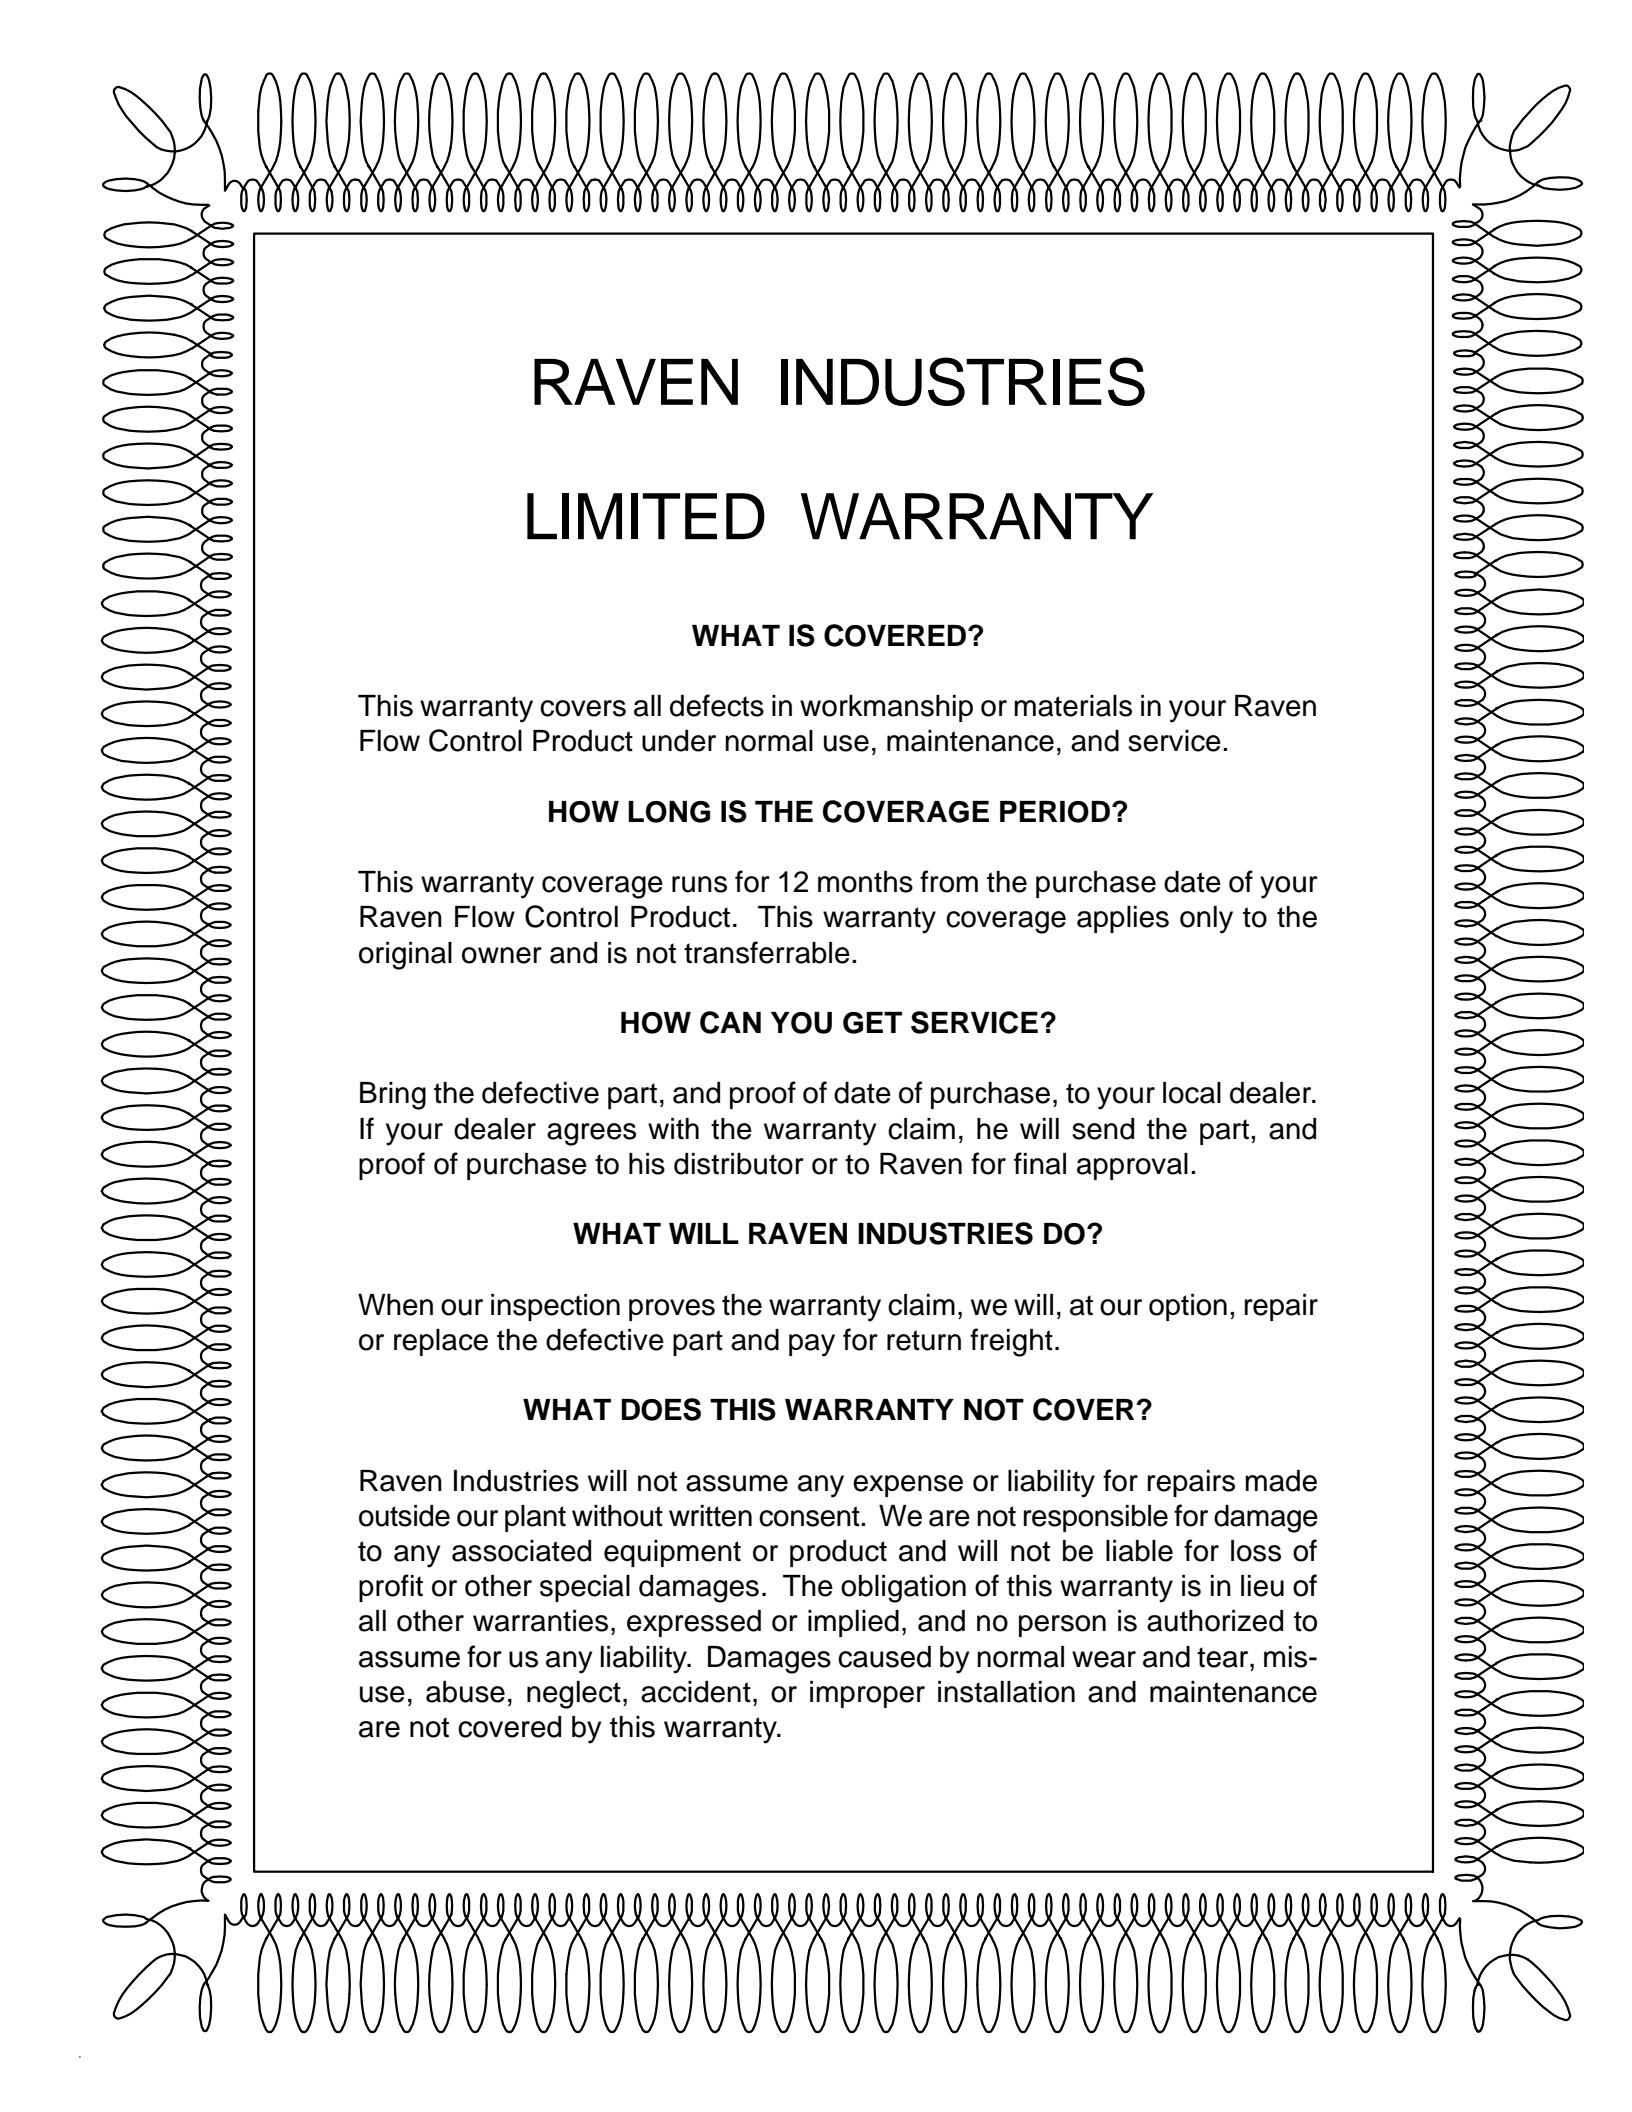

# RAVEN INDUSTRIES

## LIMITED WARRANTY

### **WHAT IS COVERED?**

This warranty covers all defects in workmanship or materials in your Raven Flow Control Product under normal use, maintenance, and service.

### **HOW LONG IS THE COVERAGE PERIOD?**

This warranty coverage runs for 12 months from the purchase date of your Raven Flow Control Product. This warranty coverage applies only to the original owner and is not transferrable.

### **HOW CAN YOU GET SERVICE?**

Bring the defective part, and proof of date of purchase, to your local dealer. If your dealer agrees with the warranty claim, he will send the part, and proof of purchase to his distributor or to Raven for final approval.

### **WHAT WILL RAVEN INDUSTRIES DO?**

When our inspection proves the warranty claim, we will, at our option, repair or replace the defective part and pay for return freight.

### **WHAT DOES THIS WARRANTY NOT COVER?**

Raven Industries will not assume any expense or liability for repairs made outside our plant without written consent. We are not responsible for damage to any associated equipment or product and will not be liable for loss of profit or other special damages. The obligation of this warranty is in lieu of all other warranties, expressed or implied, and no person is authorized to assume for us any liability. Damages caused by normal wear and tear, misuse, abuse, neglect, accident, or improper installation and maintenance are not covered by this warranty.

**RAVEN**



Raven Industries  
Flow Controls Division  
P.O. Box 5107  
Sioux Falls, SD 57117-5107

Toll Free 800-243-5435  
Fax 605-331-0426  
[www.ravenprecision.com](http://www.ravenprecision.com)  
[fcdinfo@ravenind.com](mailto:fcdinfo@ravenind.com)