 
 
 


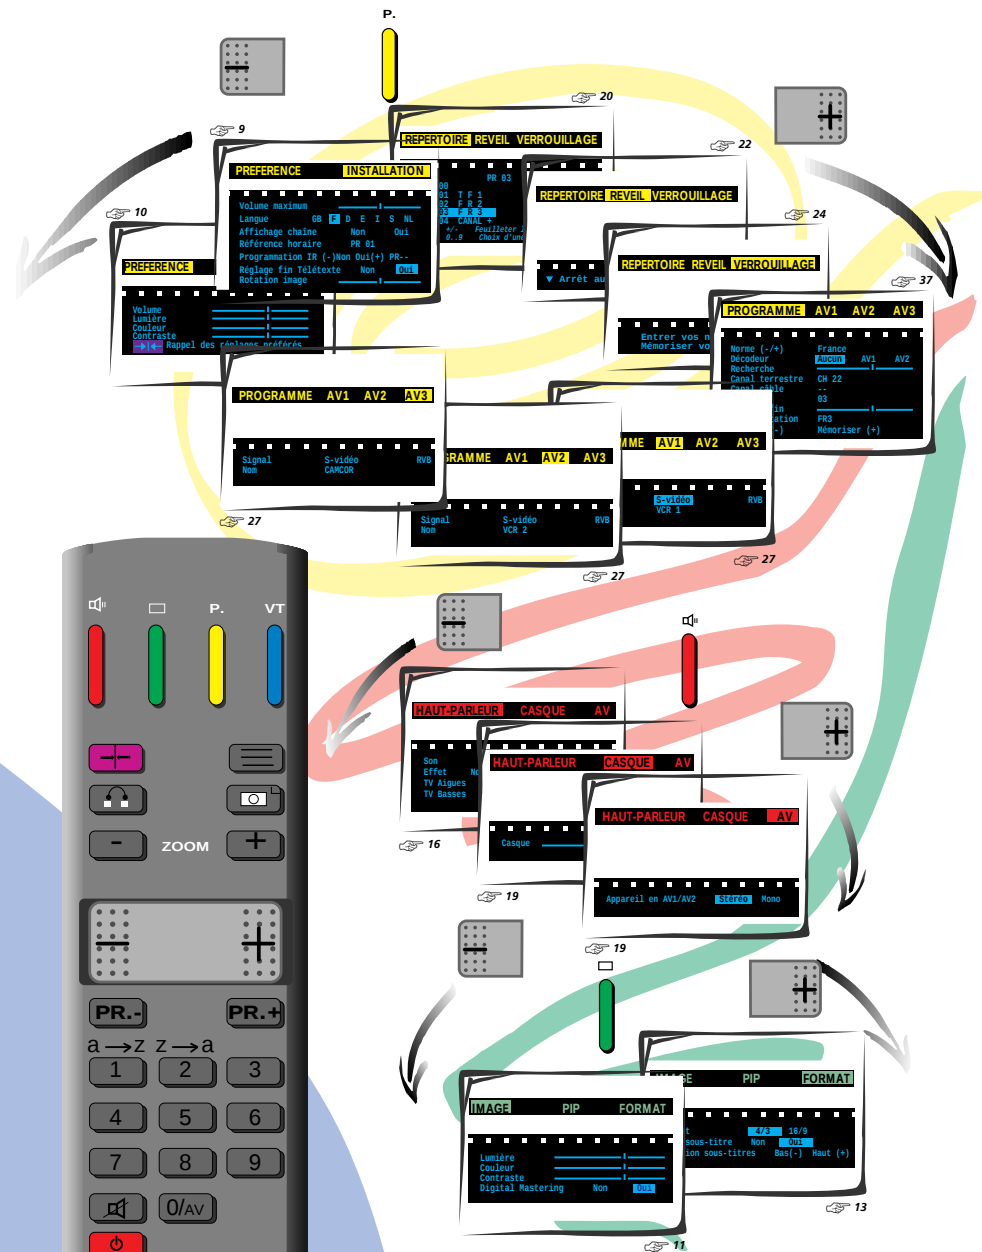

M a n u e l
d ' u t i l i s a t i o n
B e d i e n u n g s -
a n l e i t u n g
M a n u a l e d i
u t i l i z z a z i o n e
M a n u a l d e
u t i l i z a c i ó n
U s e r
m a n u a l
G e b r u i k s
a a n w i j z i n g
B r u k s a n -
v i s n i n g
B e t j e n i n g -
s v e j l e d n i n g

2 8 V T 6 8 N D
3 2 V T 6 8 N D

THOMSON

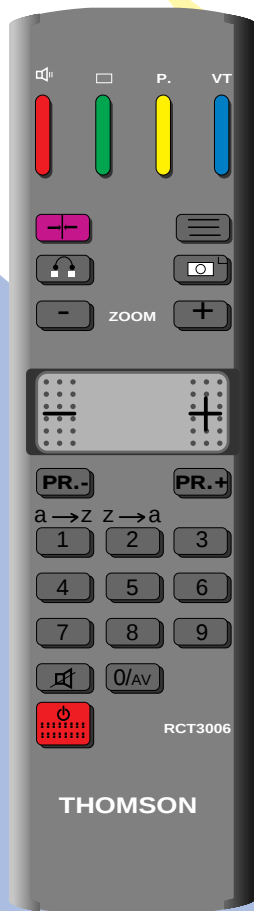 


television set safety precautions




SAFE USE OF THE EQUIPMENT


1. TO TURN ON

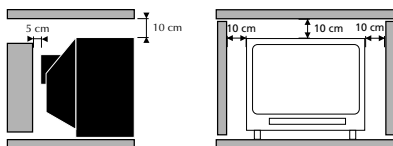

LEAVE ROOM FOR VENTILATION

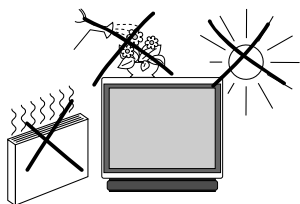

AVOID HEAT, WATER, DIRECT SUNLIGHT.

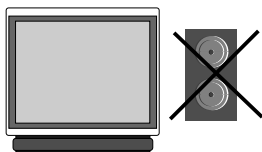

Do not place audio loudspeakers near to television. The magnets in the speakers could cause patches of colour to appear on the screen.

To ensure your personal safety and the efficient operation of your equipment, please follow the advice given below :

Télévision sets need ventilation to avoid overheating which can cause damage to the components. The ventilation slots at the back of the set should not be covered up by curtains, small covers, newspapers, etc... There must be enough room in built-in cabinets to allow for the cooling air to circulate. The set should not be placed directly next to heating.

This appliance is designed for use in dry areas. If occasionally you should wish to operate it outdoors (for example, on the balcony or veranda), you must insure that it is protected against all forms of moisture (dew, rain, splashed water).

A cold set may be switched on in a warm room only after any condensation which may happen to be on the screen has evaporated. Never remove the cabinet back. Have your aerial installed by an authorised dealer or service technician.

In the evenings, after the TV programmes, or in case of a prolonged absence, it is recommended that the appliance be switched off using the main power switch. Even if the ON/OFF switch is in OFF position the television set is not completely separated from the mains. In order to separate it completely from the mains, it has to be disconnected by unplugging the mains plug. Remove the power plug from the wall outlet under the following conditions :

1. During a thunderstorm. It is also recommended that you disconnect the aerial plug.
2. If you find a burning smell or smoke emerging from the set.

Additional information :

Your TV set is adequately shielded to prevent emission of X-rays. The acceleration voltage does not exceed the maximum value of 33 kV.

Work by non-qualified technicians, modification of the high voltage setting or the replacement of the tube with a model that does not comply with the manufacturer's specifications may lead to a considerable increase in X-ray radiation.

A set changed in any of the above ways no longer satisfies the initial specifications and should not be put back into service.

2. CARE OF THE EQUIPMENT

The screen should be cleaned with liquid glass cleaner.

- Never use abrasive cleaners.
- To clean the front and the cabinet of your equipment use a soft cloth dipped in mild detergent. The use of strong solvents such as white spirits or alcohol based products could damage your equipment.
- Clean the vents on the rear panel of your set regularly.

3. DEMAGNETISATION

The earth's magnetic field may have an effect on your television by causing patches of colour to appear on the screen. If this happens :

- Switch off the television with the on-off button ;
- Wait a few minutes and then press again to switch on.

This allows the screen to be demagnetised automatically. If patches of colour are still visible repeat the procedure.



The pages of this publication are printed on recycled paper.

remote control functions

PROGRAMME

Set-up - Preferences -
Browse - Clock - Lock -
Tuning - AV1 - AV2 - AV3.

SOUND

Audio configuration - Balance - Loudspeakers -
Headphone - AV (Audiovisual).

PICTURE

Picture - PIP - Format.

TELETEXT/TOPTXT/FASTEXT

PERSONAL ADJUSTMENTS

and scrolling back through the menus.

TO REMOVE THE MENU DISPLAY

or to display programme information, the type of sound
transmission (MONO, STEREO or DUAL),
the programme name and number, the time.

PICTURE FREEZE

ZOOM FUNCTION

TO CALL UP PREVIOUSLY VIEWED PROGRAMME

TO SCROLL THROUGH THE PROGRAMMES

VOLUME

- Horizontal movement in the menus
- +/- adjustments of other functions.

Keys 1 to 0 are used to :

- Select the programmes (from 1 to 99)
- Enter the channels numbers
- The 0 key is used to call AV inputs 1, 2 and 3.

MUTE

STAND-BY

BATTERIES : Refer to page 30 for the fitting of the batteries.

remote control using

When a red, green or yellow button is pressed for the first time, the **contents** of the menu are displayed at the top of the screen and the menu of the function selected is displayed at the bottom of the screen.



Moving horizontally along in the menus
selects the required function on the
contents line if it has not been already
selected.

- **The selected function** is displayed in the same colour as
the button pressed (red, green, yellow).

Press the coloured button repeatedly to move down
through the menus selecting different lines.

- **The line selected** in the menus is displayed in the same
colour as the button pressed (red, green, yellow).



Make any adjustments.

Changes are saved when you quit the menus, except in
the PROGRAMME menu.

contents

CONNECTIONS AND COMMANDS 5/6

AUTO-PROGRAMMING 7/9

Switching on - Automatic station search
Programme organiser - New region

INSTALLATION 9/10

Volume limitation - Menu language -
Programme number display - Time reference -
Preferred settings

PICTURE ADJUSTMENTS 11/14

PIP - Format

SOUND ADJUSTMENTS 14/19

Pro Logic - Loudspeakers - Headphone - AV

DAY TO DAY OPERATION 20/21

Switching on/Selecting programmes - Browse

OTHER FUNCTIONS - EXTRAS 22/25

Clock - Child lock - Lock

CONNECTIONS 26/30

Units connected - Calling up audiovisual programmes -

TELETEXT 31/33

Calling up Teletext - Options - Alarm - How to select -
Subtitles - New flash

MANUAL PROGRAMMING 34/35

 
 
Norm - Decoder - Channel/Cable - Programme - Fine
Tuning - Station name - Store/Erase - Access to the
organiser.

television set

connections and commands

For further details,
see page 26.

ON THE FRONT SIDE

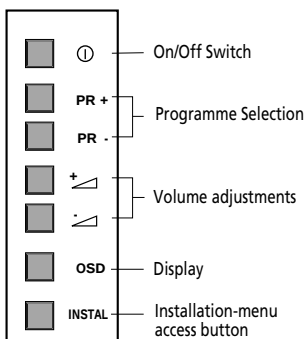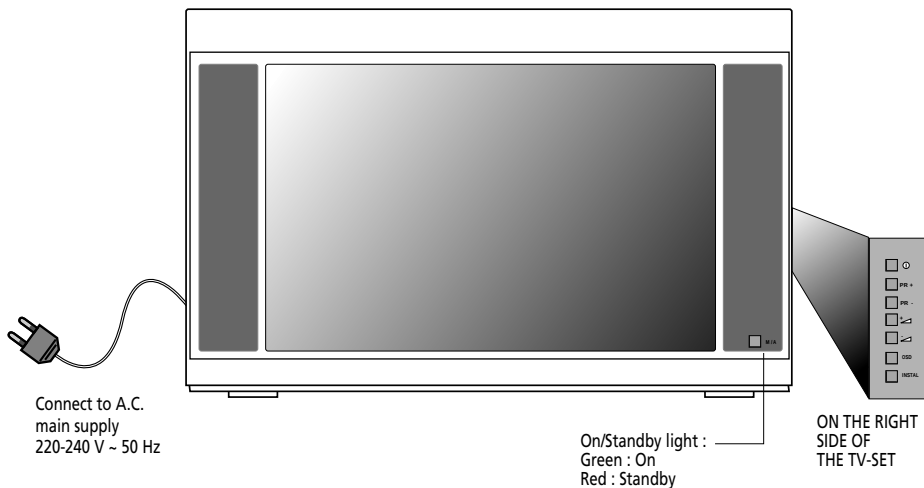


television set

connections and commands





 AT THE BACK

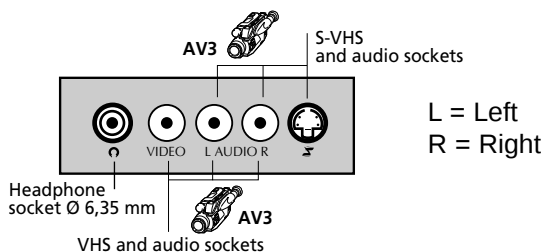

Connect respectively the red and black terminals of the supplied speakers to the television's red and black terminals.

  Ideal setting

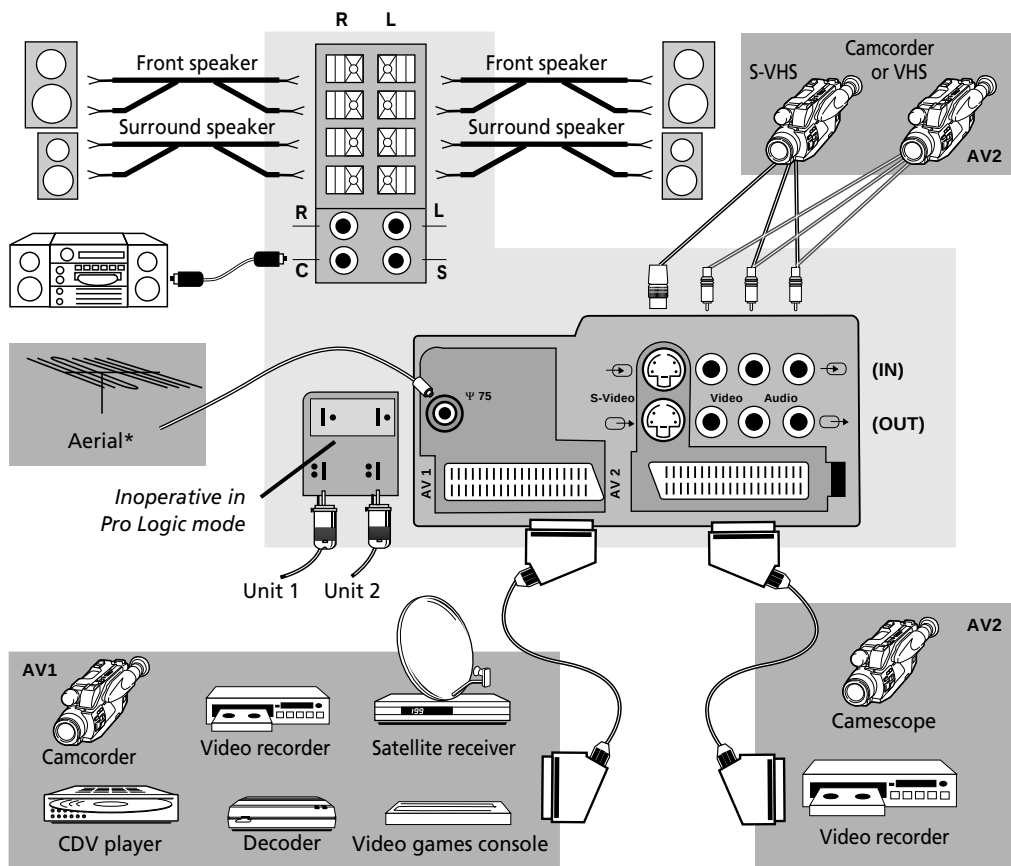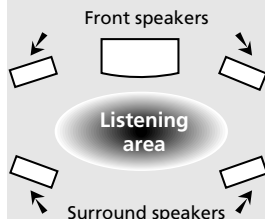

! * We recommend that you use an aerial cable with double isolation.

television set auto-programming

This set is equipped with an automatic station search system which is used for :

- Searching for all the stations received in your region and storing them in memory
- Automatically searching for the name of the station
- Automatically allocating a programme number.

WELCOME

Turn on the television set main power.

The **WELCOME** menu is displayed.

If it is not,

Press the **INSTAL** button on the television set control panel.

Briefly press the remote control button corresponding to the number of the language you require for the menus.

A list of countries appears (on two pages).

To go to the next or previous page, press

Briefly press the remote-control button corresponding to the country in which you are located, for example: for England

The menu which then appears permits the user to:

- start an automatic search,
- search for new channels,
- access channel organisation.

! You can leave the menus at any time by pressing the  button.

AUTO - PROGRAMMING

For the first time or after a change of region :

start automatic channel search by pressing the button

Searching for stations and storing them in the memory depends on the language chosen from the **WELCOME** menu.

The previously memorised stations are erased.

! **AUTO-PROGRAMMING** is completed when the cursor is at the extreme right.

To interrupt the search, press briefly on the  key, this displays the channel management menu.

WELCOME
BIENVENUE
WILLKOMMEN
BIENVENIDO
BENVENUTO
VALKOMMEN
WELKOM

ENGLISH	Press	key number	[1]
FRANÇAIS	Appuyer	sur la touche	[2]
DEUTSCH	Drücken	Sie die Taste	[3]
ESPAÑOL	Pulse	tecla numero	[4]
ITALIANO	Premere	il tasto	[5]
SVENSKA	Tryck	knapp nummer	[6]
NEDERLANDS	Druk op	knop nummer	[7]

CHOOSE YOUR COUNTRY :

UK :	[1]
FRANCE :	[2]
GERMANY :	[3]
ITALY :	[4]
SPAIN :	[5]
PORTUGAL :	[6]
SWISS :	[7]
AUSTRIA :	[8]
Next page :	[9]

NETHERLANDS :	[1]
BELGIUM :	[2]
LUXEMBURG :	[3]
SWEDEN :	[4]
DANMARK :	[5]
FINLAND :	[6]
NORWAY :	[7]
OTHERS :	[8]
Previous page :	[9]

AERIAL INSTALLATION

Make sure that the aerial cable
and decoder (if any)
are connected to this TV set.

- [1] Launch terrestrial installation
- [2] Update the terrest. installation
- [3] Access to the organiser

To help you, follow the instructions
at the bottom of the menu (grey background).

AUTO - PROGRAMMING

Searching for stations

10 stations found

television set auto-programming

Programme Organiser

When the automatic search is completed, the Programme Organiser menu appears.

Scan through to check that the stations found are correctly numbered and named as you want them:

• IF YES → press briefly

the menu disappears and is replaced by the picture of the programme selected.

• IF NO → you make changes as follows

- The programme number

Select the programme number to be changed.

Bring the cursor to the new programme number.

! You may also use the number buttons 0 to 9.

Confirm the change (green button).

- The station name

Press the blue button briefly.

A list of station names per country appears

United Kingdom	Nederlands
France	Belgique
Deutschland	Luxembourg
Italia	Sverige
España	Danmark
Portugal	Finland
Schweiz	Norge
Österreich	

Select the country you require.

If the name appears in the list displayed,

select the name

Confirm the selection (green button).

If the name does not appear in the list displayed,

select the "- - - - -" line




! You have 6 characters to enter a station name

To enter a station name,
Press the green button briefly and
the first character flashes.

Select the first character of the new name.

Enter the next character
and repeat the process up to the last character.
Confirm your choice (green button). The new name is
stored in the memory and the list disappears.

- This menu is used to :
- change the programme number,
 - change the station number,
 - delete a programme.

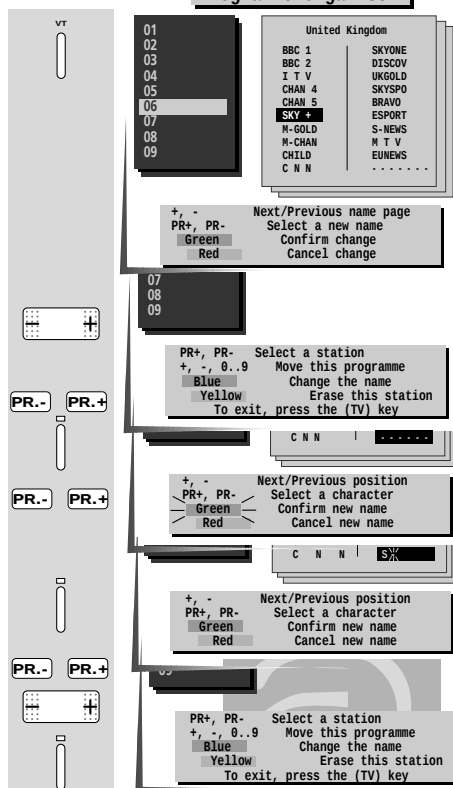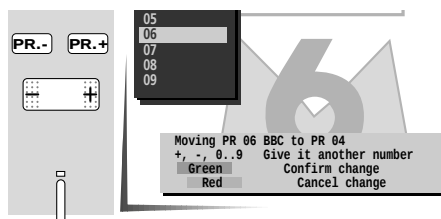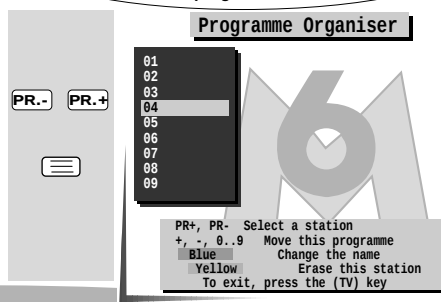

television set auto-programming

To delete a programme


Select the programme to be deleted.

Press the yellow button.

Confirm your choice (green button).

The programme is deleted
the following programme is selected.

! You may cancel any unconfirmed command (change of programme number or channel name, programme erasure) by pressing the red button.

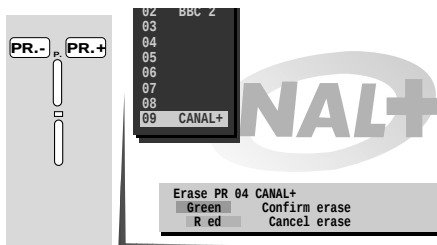

New channels

Turn on the television set by pressing one of the buttons from 1 to 9.

To search only for new channels.


Press the television set INSTAL button.

Select the country and press the button

When search is finished, the Programme Organiser menu appears.
Reorganise the programmes.

To do this, follow the instructions given on the previous page.

! To make the menu disappear, press

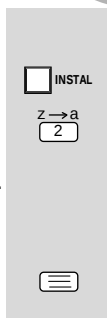

installation

With this menu you may:

- Limit the maximum volume.
- Change the menu language (German, Spanish, French, English, Italian, Swedish, Dutch),
- Permanently display the number of the programme being watched,
- Store the time reference programme number,
- Compensate for variations due to the earth's magnetic field.

SET-UP

PREFERENCES

SET-UP

Press the yellow button then the (-) button.

The SET-UP menu is displayed




Maximum Volume Limitation

Select the Max. Volume line (yellow button).

Set the maximum volume with the cursor.

! The volume cannot be set to zero when using this function.

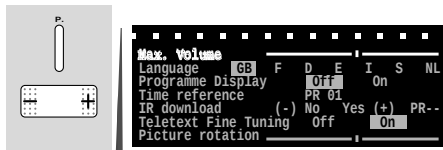

television set installation




Menu language

Select the **Language** line (yellow key).

Select


GB : English	I : Italian
F : French	S : Swedish
D : German	NL : Dutch
E : Spanish	

All the menus will be displayed in the language selected.

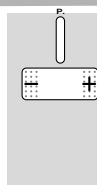

PREFERENCES

SET-UP


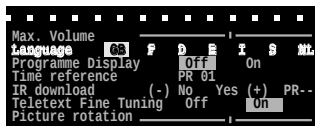


Programme number display

Select the **Programme Display** line (yellow key).

Select :


- Off** no permanent display.
- On** the programme number is permanently displayed

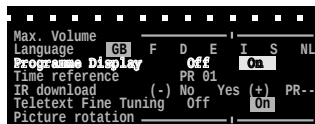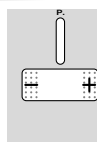

Time reference

Select the **Time reference** (yellow key).

The television set internal clock must be set.
This synchronises automatically when the television set is turned on to a programme broadcasting Teletext, you can opt to select any one of the 4 channels - BBC1, BBC2, ITV, CH4.
Select the corresponding programme number.

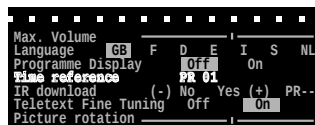

The IR download line has no effect on your TV set.

Teletext Fine Tuning

This adjustment allows writing errors (missing letters) on the teletext pages of French networks (L Standard) to be reduced.
To do this,

On must be selected in the **Teletext Fine Tuning** line.

This adjustment is not active for B, G, D, K, K' and I standards.




Magnetic field correction

This adjustment compensates for disturbances due to the Earth's magnetic field.

Select the **Picture rotation** line.

Adjust  so that the selected menu is horizontal if it was not before.

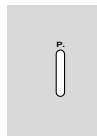

PREFERENCES

This menu enables you to save your preferred settings.
Press the yellow or pink key repeatedly to return to the Menu contents line.


Press to display the **PREFERENCES** menu.

Select the line required with the yellow key.

Set with the key.

Erase the menu.

To return to your preferred settings at any time, press the pink key.

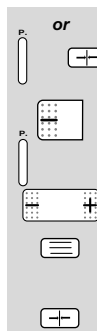

PREFERENCES

SET-UP



television set

picture adjustments



PICTURE

You may adjust the picture settings at any times.

Press the green key.

The **PICTURE** menu is displayed :
PICTURE is selected.

! If this is not the case, select the **Contents** line using the green key and **Picture** with the  key.

Select the **Brightness** line (green key).

Adjust the brightness.

Repeat the same procedure to select and adjust the **Colour**, and **Contrast**.

! The **TINT** line only appears if the source is **NTSC** from an **AV1**, **AV2** or **AV3** audio-visual programme.

Digital Mastering

Select the **Digital Mastering** line (green key).

Select the option required.

! When changing channels, **Digital Mastering** automatically returns to **On**.



The process suppresses flicker from the TV image. In addition, **Digital Mastering** improves image quality with a further reduction of the trembling effect. The images are more stable, sharper and less straining to the eyes. Finally, image noise is reduced automatically according to reception quality (**INR** system : **Intelligent Noise Reduction**).

PIP (Picture in picture)

Gives you several possibilities for programmes inlays.

You use this function to :

- inlay in one of the corners of the screen (**P I P**) :
 - images from the input connectors (**AV1**, **AV2**, **AV3** or **RGB**), while viewing a channel ;
 - or one of the channels, while viewing a programme from one of the audiovisual input connectors (**AV**).
- inlay on the screen in groups of 12, all the channels in memory (**Channel guide**).

Press the green button once or several times to select the **Contents** line.

Select **P I P**.

The **PIP** menu appears.

PICTURE PIP FORMAT

Brightness _____
Colour _____
Contrast _____
Digital Mastering Off On

Brightness _____
Colour _____
Contrast _____
Digital Mastering Off On

Brightness _____
Colour _____
Contrast _____
Digital Mastering Off On
Tint _____

PICTURE PIP FORMAT

Brightness _____
Colour _____
Contrast _____
Digital Mastering Off On

GB

PICTURE PIP FORMAT

PIP Off On
Source (-) 03 (+)
Channel Guide (+)
Change Corner 1 2 3 4

television set

picture adjustments



Image inlay (PIP)



Use the green button to select the **PIP** line.

Press briefly to select : **Off** : no picture in picture
On : picture in picture

Use the green button to select the **Source** line.

As required select :
the AV1, AV2, AV3 or RGB picture, or a channel in memory.


! *Picture in picture is in 4/3 or 16/9 format depending on the format of the AV image.*

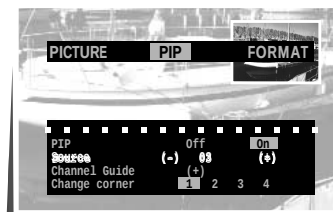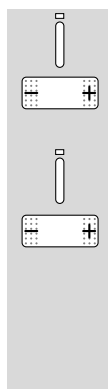


Inlaid image position

Use the green button to select the **Change Corner** line.

Select position 1, 2, 3 or 4.

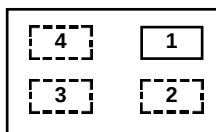

Press to erase the menu.

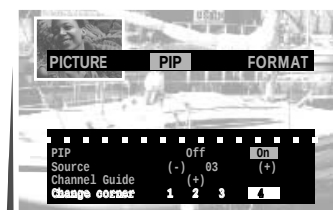

Picture swap

Press the  button,

to swap the image being viewed and the PIP image.




Scanning all inlaid image programmes

Select an AV image on the screen.

Repeatedly press the PR +/- button on the remote control to scroll through PIP displays of all stored programmes and the other AV programmes.

Press a long time to remove the PIP.

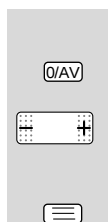

television set picture adjustments



Mosaic

You can display on the screen, in group of 12, all the channels stored in memory.

Press the green button once or several times to select the Contents line.

Select **PIP**.

Press the green button repeatedly to select **Channel Guide**.

Press the key.
The screen goes grey and the channels become inlaid
With the corresponding programmes numbers superimposed.

The Channel Guide programmes change every 3 seconds.

When the Channel Guide appears,
the sound goes off.

To display the programme you want on screen,
press the  button when the image of that
programme is animated

! *Activating the Channel Guide feature cancels any inlays.*

To clear the Channel Guide, press the TV button.





FORMAT

Press the green button once or several times to select the Contents line.

Select **FORMAT**.

The following menu is displayed.

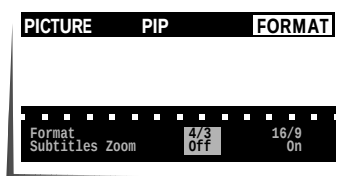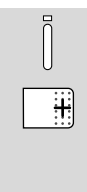

Format


Select the **Format** line (green key).

Select **4/3** or **16/9** depending on the picture format.

The Subtitles Zoom line only appears when 4/3 is selected. Some transmitters can transmit a format command W.S.S. (Wide Screen Signaling). Your television set adapts automatically to the format being transmitted (e.g. Cinemascope, subtitles, 16/9). In the absence of this command, the image returns to the last format selected with the Zoom button.

The format can also be selected automatically when the source is one of the two Euro-AV sockets AV1 or AV2. In this case, select AUTO which is only displayed for sources AV1 and AV2.

The format is stored in memory for AV1, AV2 and AV3.

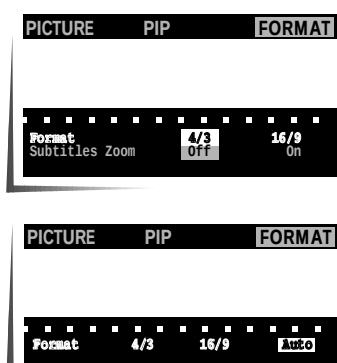

television set

picture adjustments



Subtitles Zoom

Select the **Subtitles Zoom** line (green key).

You may select **Off** : programme without subtitles.
On : subtitled programmes.


In this case, an additional line (**Subtitles position**) appears

You may choose between a higher or lower framing, for example, for sub-titled programmes.

Select **Subtitles position** (green key),

then set your picture lift.

Remove the menu from the screen.

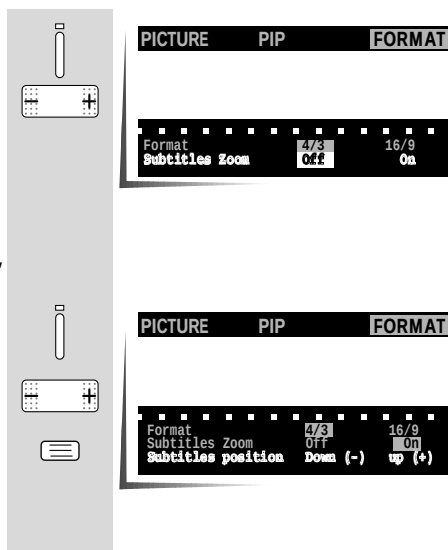

television set

sound adjustments

Dolby* Surround Pro Logic

Derived from the DOLBY STEREO system used in cinemas, Dolby Surround Pro Logic enables you to re-create the acoustic environment of the cinema in your own home (with a Dolby Surround signal), or to obtain enhanced sound effects (with a mono or stereo signal).

You have three options :

- Connect two sets of speakers (Pro Logic),
- Connect one set of speakers (Dolby Surround or Dolby 3 Stereo),
- Use the television sound system only (Pro Logic mode off).

Make sure that the following steps are carried out in the order shown.

- **Turn off the television at the main power switch.**
- Connect the speakers to the appropriate sockets and make sure that the black speaker terminals on the speakers are connected to the black terminals on the television, and likewise for the red terminals.
- Configure the television for the speakers that are connected or for the acoustic effect you wish to obtain.
- Balance the acoustic environment.

When these steps have been completed, you can carry out the other sound settings.

* " DOLBY " and the double D symbol are registered trade-marks belonging to the Dolby Laboratories Licencing Corporation.

television set


sound adjustments



CONNECTING THE SPEAKERS

To benefit from the Dolby Surround Pro Logic system, you must connect to your television set 4 loudspeakers :

- 2 front speakers
 - 2 surround speakers
- } Speakers, ref. DPL 4 K delivered

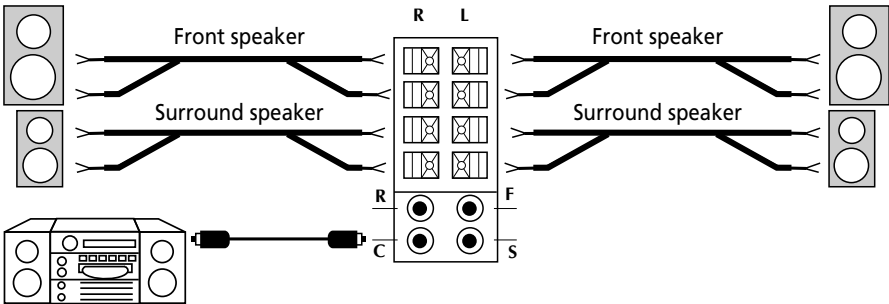



To select the speakers you have connected, you must configure your television set :

SPEAKER CONFIGURATION

The following menu is displayed:

Select the **Configuration** line.

Depending on the speakers connected, or the audio effect preferred, choose one of the configurations offered.

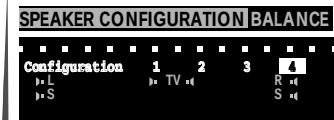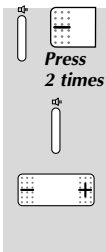

CONFIGURATION		ACOUSTIC EFFECT	
		Mono signal	Stereo signal
1	TV speakers only	Stereo effect	Wide stereo
2	TV speakers + Front speakers	Stereo effect	Wide stereo or Dolby 3 Stereo
3	TV speakers + Surround speakers	Matrix*	Dolby Surround or Hall
4	TV speakers + Front speakers + Surround speakers	Matrix*	Pro Logic or Hall

*Matrix : sound delay in the rear speakers.

Press briefly to remove the menu.



television set

sound adjustments



LOUDSPEAKERS

Press the red button
The following menu is displayed: **LOUDSPEAKERS** is selected.

! *If this is not the case, select the Contents line with the red key and **LOUDSPEAKERS** with .*

Select the **SOUND** line.

This varies depending on the sound type received:

SOUND MONO/STEREO or NICAM Stereo*

SOUND DUAL (2 languages)

 
 
SOUND NICAM 3*

SOUND AV

Select the required sound for the loud speakers.

! *For normal operation, **AUTO/STEREO** position is recommended. **STEREO** or **MONO** will be selected automatically depending on the signal received.*

*NICAM is a digital sound transmission system, it enables you to receive broadcasts in high quality STEREO or DUAL SOUND. Analogue MONO sound is transmitted simultaneously, (MONO in NICAM STEREO or SOUND 3 in NICAM 3).



Effect

Select the **LOUDSPEAKERS** line

! *The number and type of selections available varies according to the configuration selected (see p. 15).*


Depending on the selected configuration, you will be able to choose between 2 or 3 of the following options :
Normal, Wide, Hall, Dolby.

Select the type of sound required.

According to which selection and configuration is chosen (see page 15), you will obtain one of the sound effects shown on the table below.

When the type of sound received changes (mono to stereo or vice versa), the sound effect automatically becomes that selected for the type of sound received.

Press briefly to remove the menu.

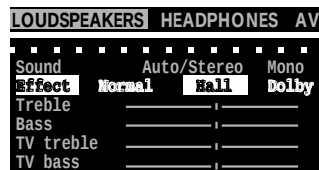

television set

sound adjustments



CONFIG. AUDIO	SOUND	EFFECT SELECTION			
		Normal	Wide	Hall	Dolby
1	Mono	Mono	Pseudo-Stereo		
	Stereo	Stereo	Wide stereo		
2	Mono	Mono		Pseudo-Stereo	
	Stereo	Stereo	Wide stereo		Dolby 3 Stereo
3	Mono	Mono		Matrix	
	Stereo	Stereo		Hall	Dolby Surround
4	Mono	Mono		Matrix	
	Stereo	Stereo		Hall	Pro Logic

BALANCE

Press the SOUND button then the (-) button.
The following menu is displayed :

The menu varies depending on which configuration is selected.

• Configuration 1

Select the **Left/Right** line.

Balance the sound between the two audio channels.

• Configuration 2

Adjust the balance on the front speakers, and the sound level on the central loudspeakers as shown in the chapter **BALANCING THE ACOUSTIC ENVIRONMENT**.

 
 
• Configuration 3

Adjust the balance on the front speakers and the sound level on the surround speakers, as shown in the chapter **BALANCING THE ACOUSTIC ENVIRONMENT**.

• Configuration 4

Adjust the balance on the front speakers and the sound level on the surround speakers, as well as the sound level on the central loudspeakers as shown in the chapter **BALANCING THE ACOUSTIC ENVIRONMENT**.

Press briefly to remove the menu.



SPEAKER CONFIGURATION BALANCE

Left/Right|.....

SPEAKER CONFIGURATION BALANCE

Test Signal Off On
Left/Right _____ | _____
Centre _____ | _____
Volume _____ | _____

SPEAKER CONFIGURATION BALANCE

Test Signal Off On
Left/Right _____ | _____
Surround _____ | _____
Volume _____ | _____

SPEAKER CONFIGURATION BALANCE

Test Signal Off On
Left/Right _____ | _____
Surround _____ | _____
Centre _____ | _____
Volume _____ | _____

GB

television set sound adjustments



BALANCE THE ACOUSTIC ENVIRONMENT

When you have selected the configuration you require, you can then balance the acoustic environment (except for selection 1 : TV only).

The instructions given below explain how to set up the configuration (selection 4).

With the **BALANCE** menu displayed
Select the **Test Signal** line.

Press the + or - button to highlight **On** in red letters.

The sound from the programme being watched is replaced by a "white noise" sound which is transmitted to each of the channels in turn (Left, Center, Right and Surround).

The adjustment consists of balancing the sound level of the four channels so that the noise has the same sound level on each of them.

Select the **Left/Right** line

Balance the sound level for the speakers on the right and on the left.

Select the **Surround** line.

Using the + or - buttons, increase or reduce the sound level for the rear speakers (Surround).

Select the **Centre** line.

Increase or reduce the sound level on the television speakers.

The above settings are correct when the sound level for the noise is identical on each of the channels.

Press repeatedly to select the **Test Signal** line.

Briefly press the + or - buttons to highlight **Off**.

SPEAKER CONFIGURATION BALANCE

Test Signal	Off	On
Left/Right	_____	_____
Surround	_____	_____
Centre	_____	_____
Volume	_____	

Test Signal	Off	On
Left/Right	_____	_____
Surround	_____	_____
Centre	_____	_____
Volume	_____	

SPEAKER CONFIGURATION BALANCE

Test Signal	Off	On
Left/Right	_____	_____
Surround	_____	_____
Centre	_____	_____
Volume	_____	

Test Signal	Off	On
Left/Right	_____	_____
Surround	_____	_____
Centre	_____	_____
Volume	_____	

Test Signal	Off	On
Left/Right	_____	_____
Surround	_____	_____
Centre	_____	_____
Volume	_____	

Test Signal	Off	On
Left/Right	_____	_____
Surround	_____	_____
Centre	_____	_____
Volume	_____	

TONE ADJUSTMENT

The following menu is displayed :
LOUDSPEAKERS is selected.

Select the **Treble** and **Bass** lines in turn, and

increase or reduce the treble or bass frequency level on the speakers, and the level on the front speakers if they are connected.

Press briefly to remove the menu.

LOUDSPEAKERS HEADPHONES AV

Sound Effect	Auto/Stereo	Mono
Treble	Normal	Hall
Bass	_____	_____
TV Treble	_____	_____
TV Bass	_____	_____

television set sound adjustments



HEADPHONES

Press briefly

The following menu is displayed :
HEADPHONES is selected.

! If this is not the case, select the Contents line with the red button and HEADPHONES with  .

Select the Headphone line (red key).

You can then adjust the volume for the headphone.

! Note : When the transmission is multilingual (DUAL) or an AV programme, the following menu appears. It is possible to select Sound 1 or Sound 2 in the headset.

Select the Source line:

then select

Sound 1

or

Sound 2

LOUDSPEAKERS HEADPHONES AV

Headphones

Headphones

Source Sound 1 Sound 2
Headphones

AV

The sound output on sockets AV1 and AV2 must be adjusted according to the type of headset connected.

Press briefly.

The following menu is displayed :
AV is selected.

! If this is not the case, select the Contents line with the red key and AV with  .

Select the AV Device line (red key).

Then select **Stereo** = stereo VCR
Mono = mono VCR

! Selecting stereo permits simultaneous recording of both languages of a bilingual programme on a stereo video recorder : Sound 1 on the left track and Sound 2 on the right track.
The sound available at the AV1 and AV2 outputs must be adjusted according to the type of device connected.

Press to remove the menu from the screen.

LOUDSPEAKERS HEADPHONES AV

AV Device Stereo Mono

LOUDSPEAKERS HEADPHONES AV

AV Device Stereo Mono

GB

television set

day to day operation

SWITCHING ON / SELECTING PROGRAMMES

Switch on the television set with the mains switch if the standby light is off.

If the standby light is on, select the programme required by the remote control or the PR-/+ buttons on the front of the set.

For the programmes 1 to 9 :

Press the corresponding number briefly.

For programmes 10 to 99 :

Hold on to display the tens.

Press briefly to display the units.

BROWSE

This comprises 10 pages of 10 programmes each, giving for each programme number : the station name (if it has been programmed).

The **BROWSE** menu is displayed.

To select the directory page displayed.

To select the other pages, press repeatedly.

Example : Page 6 (programmes 50 to 59)

To select a programme from the page displayed, press only the unit digits of the programme selected (example for 53: press 3).

Programme PR 00 corresponds to the last audiovisual programme (AV1, AV2 or AV3).

Press briefly to select **BROWSE** again.

Press briefly to remove the directory from the screen.

Volume

 
 
Set the volume as desired.

When the headphones are plugged in, you can adjust the volume of the headphones or loudspeakers :

Select the line you wish to adjust.

Sound mute

Pressing once turns the sound off. The sound returns if the button is pressed once more.

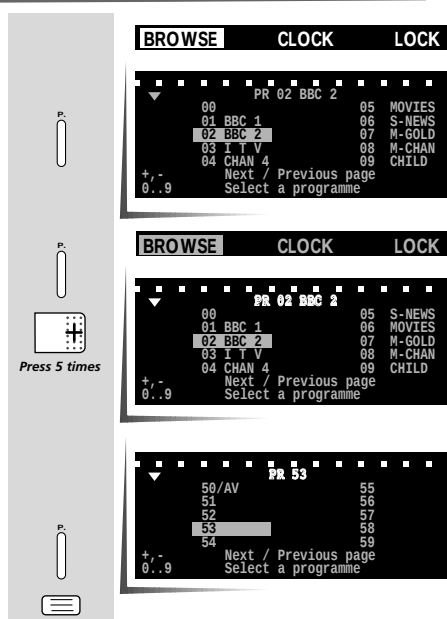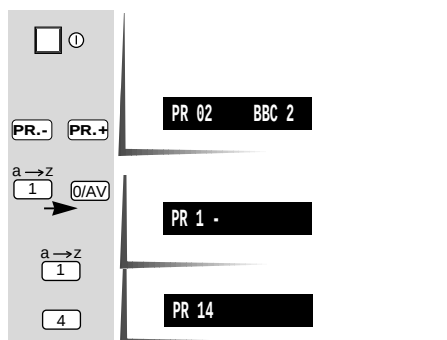

Mute

television set

day to day operation



RETURN TO PREFERRED SETTINGS

Press briefly to return to personal adjustments
(PREFERENCES menu)



DISPLAY / ZAPPING

Displays details of the station being watched (programme name and number, time).



Zoom 1 11 : 35

Press repeatedly to scroll through the programmes.

PR.- PR.+

PR 06 MOVIES

PICTURE FREEZE

Press key,
The picture freezes instantly



The transmission continues

! The still picture cannot be recorded.

Press briefly to return to the programme being viewed.



LAST PROGRAMME VIEWED

This function is used to switch rapidly between 2 programmes.

Press the key.
The previously viewed programme is selected.



ZOOM

Press to enlarge or reduce the picture.

Zoom 0 ➔ Zoom 1 ➔ Zoom 2 ➔ Zoom 3 ➔ Zoom 4
(4/3) (full screen picture) (Subtitle) (Wide picture) (16/9)

Zoom 0 ← Zoom 1 ← Zoom 2 ← Zoom 3 ← Zoom 4

Zoom 2 : image enlarged and moved up for easier reading of subtitles.

- ZOOM +

 
ZOOM +

- ZOOM

Last programme viewed

Zoom

Display
Picture freeze

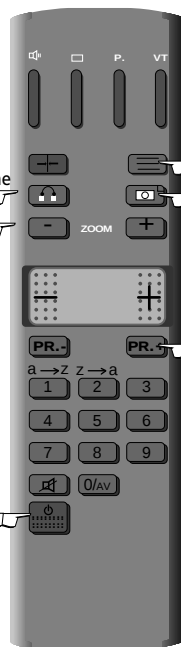

STAND-BY

Press briefly, the Stand-By light turns red to indicate that the set is now in standby.



AUTOMATIC STOP

The set is automatically switched to standby a few minutes after the station being watched stops broadcasting.

Stand-By

Zapping

television set

other functions - extras



CLOCK

Select **CLOCK**



BROWSE **CLOCK** **LOCK**

The **Sleep-timer** line is displayed.

▼ Sleep-timer (-/+) - : - -

Sleep-timer

Select the **Sleep-timer** line (yellow key).

Set the time in steps of 15 minutes (up to 4 hours).

Remove the menu from the screen.
The set will switch to standby at the end of the timer interval.

You can display the time left before the stop time.
Press the TV key briefly

One minute before sleep timer time, the screen displays that sleep timer is imminent.

! *The standby lamp flashes to indicate the CHILD LOCK state.
The television set can only be turned on with the remote control.*

You may cancel sleep timer command.

Select the **Sleep-timer** line.

Press repeatedly to return to : - : -

Remove the menu from the screen.

Putting the television set on standby when a sleep timer command is programmed, also cancels this function.



▼ Sleep-timer (-/+) - : - -

▼ Sleep-timer (-/+) 2 : 1 5

▼ Sleep-timer (-/+) 0 : 0 1



▼ Sleep-timer (-/+) 1 : 4 5

▼ Sleep-timer (-/+) - : - -

Clock (automatic on)



You can programme your television set to switch on automatically to the programme of your choice.
The internal TV clock must be set to the correct time.

Press briefly on the key.

Select the **CLOCK** menu.

Select the **Wake-up time** line (yellow key).

The first figure flashes.



BROWSE **CLOCK** **LOCK**

▼ Sleep-timer (-/+) - : - -

▲ Wake-up time 00:00
Mode Off Once Daily
Programme 01
Current time 00:11

television set

other functions - extra



To set the clock to the right time.

Enter the **Wake-up time** using 24 hour format.

Select the **Mode** line (yellow key).

Select

Off
Once
Daily

 = the alarm is off
 = the alarm will only go off once
 = the alarm will go off everyday

! *If a new alarm is programmed, Once is selected automatically.*

Select the **Programme**, line (yellow key).

Select the programme for the alarm.


Remove the menu from the screen.

Turn the television set on to standby.
 It will turn on automatically at the time programmed
 and turn off one hour after.



If the set is switched on before the alarm function is activated, it will not switch to the programme selected for the alarm at the programmed time.

It is possible to programme both the automatic switching off (STANDBY) and switching on (ALARM) of the set. In this case the automatic switching on time must be programmed to take place after the switching off time.

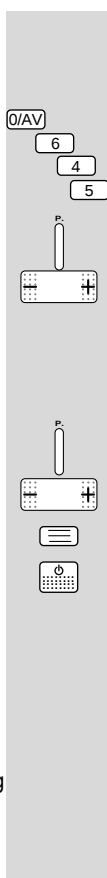

BROWSE CLOCK LOCK

▲ Wake-up time 06:45

▲ Wake-up time 06:45
 Mode Off Once Daily
 Programme 01
 Current time 00:11

▲ Wake-up time 06:45
 Mode Off Once Daily
 Programme 01
 Current time 00:11

GB

CHILD LOCK

You can prohibit the use of your television set using the keypad.

Use of the TV set is prohibited :

- after the sleep timer function ;
- when the set is switched to standby and a sleep timer command is programmed ;
- when the set is turn off at the mains and a sleep timer command is programmed ;
- when a wake-up command is programmed.
- after switching off the TV set by holding down the standby button on the remote control for more than 3 seconds.

The **CHILD LOCK** function is indicated by the flashing of the indicator lamp.

! *The set can only be switched back on using the remote control.*



television set

other functions - extra

This function enables you, for example, to prevent your children from watching certain programmes by "locking" it so that the set cannot be switched on. The set can be "unlocked" with a PIN number

LOCK

Press the yellow key to select the menu **Contents** line,

then the volume (+) key to select **LOCK**. The following menu is displayed.

Enter your PIN number

Press the yellow key briefly to select the line **Enter your PIN number**.

Then enter your PIN number figures (example : 1111).

The menu displays :

Press the yellow button briefly to select the line **Store your PIN number**.

Press the volume (+) key briefly. The code is stored in the memory and the menu displays :

Change your PIN number

If your previous code has been divulged.

Enter the your new code numbers (example : 1234).

The previous menu then returns.

Press the yellow button briefly to select the line **Store your PIN number**.

Press the volume (+) key briefly. The new code is stored in the memory and the menu displays :

To cancel a lock, perform the above steps by entering "0000" at the "Change your PIN number" line.

When you enter a code for the first time, the figures replace the dashes ; where not, the dashes are replaced by an asterisk.

Access the programme list

Press the yellow key briefly to select the line **Access the programme list (+)**.

Press the volume (+) key briefly. A page of the directory appears depending on the programme being watched (example : page 1, programme 6 : M6).

Select the programme you wish to **Lock** or **Unlock** :

BROWSE CLOCK LOCK

Enter your PIN number

Enter your PIN number

Enter your PIN number

Store your PIN number (+)

Enter your PIN number

Store your PIN number (+)

Change your PIN number

Access the programme list (+)

Change your PIN number

Access the programme list (+)

Change your PIN number

Store your PIN number (+)

Change your PIN number

Access the programme list (+)

Change your PIN number

Access the programme list (+)

BROWSE CLOCK LOCK

Change your PIN number

Access the programme list (+)

PR- PR+

television set

other functions - extra



To **Lock**, briefly press the zoom (+) key
the programme locked turns to red,

or

To **Unlock**, briefly press the zoom (-) key
the programme unlocked turns to blue.

To lock or unlock other programmes :

 
- Select the directory range with the keys
- Select the programme, including the audiovisual programmes AV1, AV2 or AV3 with keys
- **Lock** the programme with the key
- **Unlock** the programme with the key

After locking or unlocking all of the required programmes, erase
the menu with the key

The locked programmes cannot be obtained using
the Pr +/- keys on the remote control and the keypad.
If they are selected using the remote control number buttons, the
following message is displayed on the screen :

- If you do not enter the right code, the message **Incorrect PIN number** will appear above the first one.
The programme does not change and after a few seconds, both
messages disappear.
- If you enter the right code, the programme selected appears
immediately.

! *When the code is entered once to unlock a programme, all
of the programmes which were locked are also unlocked.
The lock will be re-activated after the set is turned off.*

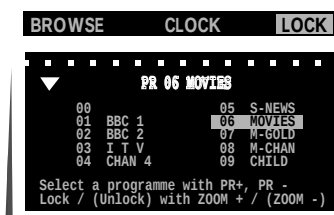

GB

ACCESS TO THE STATION TUNING MENUS

When there is at least one programme locked, access to the
station tuning menus **Auto-Programming** and **Manual
Programming** is also locked.

If you call up one of these menus, the following message appears
on the screen.

Briefly press the yellow key to select the line
Enter your PIN number if it is not already selected.

Enter your code number and the menu appears immediately
If the code is not correct, the message **Incorrect PIN number**
appears for a few seconds.

! *If you forget your personal code,
see last page of instructions booklet .*





television set connections

VIDEO RECORDER CONNECTIONS

VIA THE AERIAL SOCKET

To tune your TV into your VCR you should refer to Manual Programming (page 34).
The channel number (usually 36 or 60) is given in the manual of your VCR. The programme selected for your VCR must be 9, 19 or 29.
Whenever you wish to use your VCR, you must select the programme assigned to it.

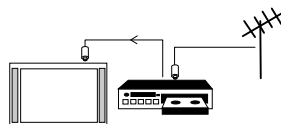
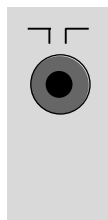


Refer to your VCR manual

VIA THE EURO-AV SOCKET 1 (AV1)

This is used to connect :

 
- Satellite receiver or decoder
- a VHS or 8mm video recorder or camcorder (VIDEO) or a S-VHS or Hi-8mm video recorder or camcorder (S-VIDEO)
- a PC or video games console (RGB).

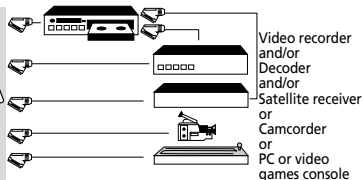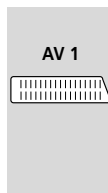

VIA THE EURO-AV SOCKET 2 (AV2)

This is used to connect :

- a VHS or 8mm (VIDEO), S-VHS or Hi-8mm (S-VIDEO) video recorder.

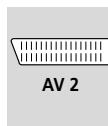

If you have two VCRs connected, the decoder must be connected to the VCR connected to the Euro-AV1 socket.

If you have a satellite receiver, refer to the operating manual in order to find out the type of signal delivered then select VIDEO, S-VIDEO or RGB.


You can also connect it to the decoder socket of the second VCR if the latter is fitted with one.

VIA THE AUDIO/VIDEO/S-VIDEO SOCKETS (AV2)

This is used to connect :

- an S-VHS or Hi-8mm video recorder (S-VIDEO)(S and AUDIO sockets).


In order to maintain the optimum sound and picture quality of your set, it is recommended not to connect 2 units to the Euro- AV1 socket and the AUDIO/VIDEO/S sockets simultaneously.

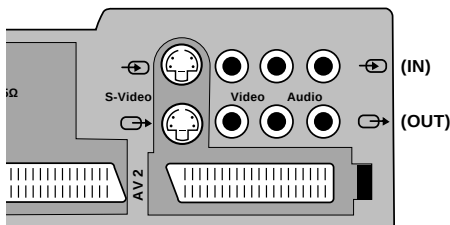

VIA THE AUDIO/VIDEO/S-VIDEO SOCKETS (AV3)

This is used to connect :


- to a camcorder VHS or 8 mm (VIDEO)(VIDEO and AUDIO sockets) S-VHS or Hi 8 mm (S-VIDEO)(S and AUDIO sockets).

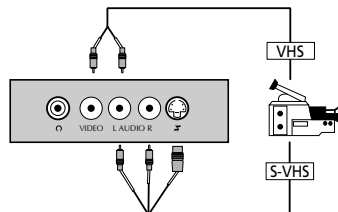

television set connections



Your television set selects and automatically displays in the menu the type of signal (Video or S-Video) for the equipment connected.

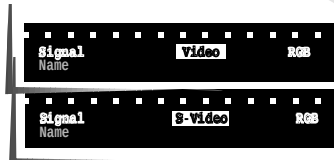

UNITS CONNECTED

	EURO AV 1	EURO AV 2	AUDIO/VIDEO/ S-VIDEO AV 2 SOCKETS	AUDIO/VIDEO/ S-VIDEO AV 3 SOCKETS
PAY-TV decoder	VIDEO Automatic selection	VIDEO Automatic selection		
Satellite receiver	VIDEO Automatic selection	VIDEO Automatic selection		
Video recorder VHS/S-VHS	VIDEO/S-VIDEO Automatic selection	VIDEO/S-VIDEO Automatic selection		
Camcorder			VIDEO/S-VIDEO Call AV 2 0/AV	VIDEO/S-VIDEO Call AV 3 0/AV
PC / Games console	Select RGB Call AV 1 0/AV			

Name

You may give each piece of equipment connected a name.
Call up the **AV 1**, **AV 2** or **AV 3** menu.

Select the **Signal** line (yellow key).



Check the type of signal or select as necessary.

Select the **Name** line.
The first dash flashes.

You may enter the name of the channel using 6 characters.
Continue to press, the signs, figures and letters are displayed in alphabetical order.

Continue to press **:** the letters are shown in reverse order.
When the required character appears, go to next character.

! To leave a space look for the blank character (between **?** and **A**) or press briefly

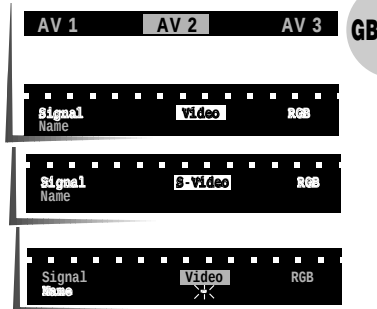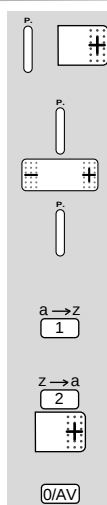

CALLING UP AUDIOVISUAL PROGRAMMES

Press **AV** to call AV1, AV2 or AV3 programmes in sequence.
In most cases, the television set changes automatically to AV1 or AV2, when the VCR connected is in play back mode.
When the VCR is stopped, the TV set returns to the station previously watched.

! The TV set changes automatically to 16/9 format if the unit connected supplies the control voltage and if you have selected **AUTO** from the **FORMAT** menu.

0/AV



COPYING VIDEO TAPES

It is necessary to have 2 VCRs with the same specifications : 2 VHS/8 mm or 2 S-VHS/Hi-8 mm.

Connect the playback VCR to the Euro-AV1 socket in playback mode.

Connect the recording VCR to the Euro-AV2 socket in recording mode.



During the copying of the tape, you can watch the station you are copying.


	PLAY		CALL UP PROGRAMME	RECORD	
	EQUIPMENT	SOCKET		EQUIPMENT	SOCKET
VHS or S-VHS	Video recorder	Euro-AV 1	AV 1	Video recorder or Camcorder	Euro-AV 2 Audio/S-Video AV 2
	Camcorder	Audio/Video/S-Video (at the back)	AV 3	Video recorder or Camcorder	Euro-AV 2 Audio/S-Video AV 2

SPEAKERS CONNECTIONS (OTHER OPTIONS)

CENTRAL SPEAKER

• Direct connection

 If preferred, one or two speakers can be connected to replace the loudspeakers on your television set, as shown below :

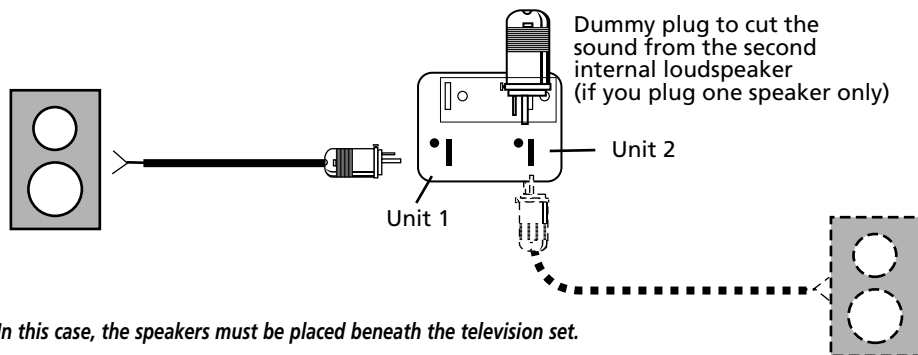

In this case, the speakers must be placed beneath the television set.

CONNECTION TO A HI-FI SYSTEM

To boost the audio power, you may connect a Hi-Fi system, if you have one.

You must however avoid connecting your Hi-Fi and speakers to similar outputs (e.g. Hi-Fi on the CINCH surround socket and speakers on the surround clips).


In this case, the configuration of the television set will match that described on page 15.



For a full appreciation of Dolby Surround Pro Logic sound, your television set should be placed in a spacious room.



• Dolby Surround Pro Logic

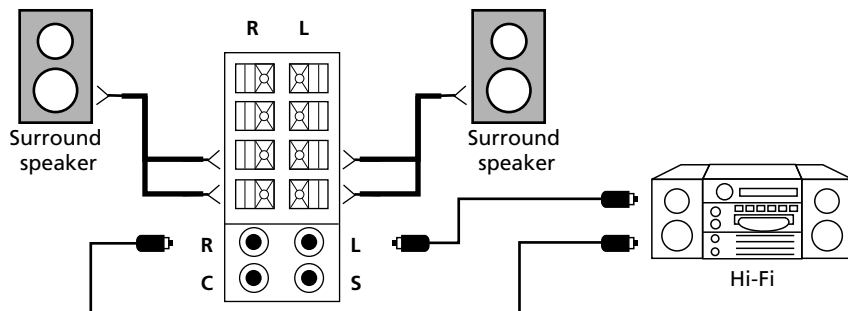


After making the connection, choose configuration 4 from the **SPEAKER CONFIGURATION** menu, and **Dolby** from the **LOUDSPEAKERS** menu.

Then proceed to the adjustment of the audio environment.


To do so, call up the **BALANCE** menu (page 17) and proceed as shown.

! You should also adjust the volume of your Hi-Fi.

If you have an amplifier or another Hi-Fi :

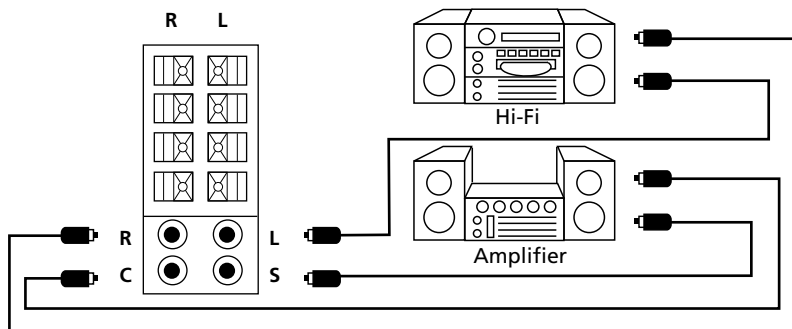

Dummy plug :
Cut the sound
from the internal
loudspeaker

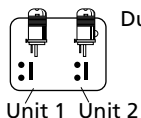

Dummy plug :
Cut the sound
from the internal
loudspeaker

After making the connection, choose :

- **configuration 4** from the **SPEAKER CONFIGURATION** menu

- **and Dolby** from the **LOUDSPEAKERS** menu.


Then proceed to the adjustment of the audio environment.

To do so, call up the **BALANCE** menu (page 17) and proceed as shown.

! You should also adjust the volume of your Hi-Fi.



- WIDE STEREO/Dolby 3 Stereo

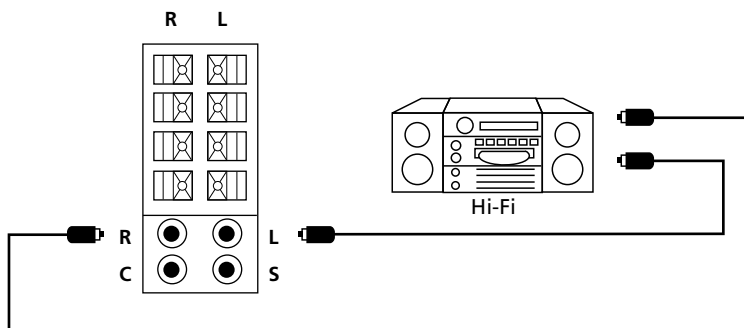

After making the connection, choose :

- **configuration 2** from the **SPEAKER CONFIGURATION** menu
- and from the **LOUDSPEAKERS** menu to obtain wide stereo
- or **Dolby** to obtain Dolby 3 Stereo sound.

Then proceed to the adjustment of the audio environment.


To do so, call up the **BALANCE** menu (page 17) and proceed as shown.



You should also adjust the volume of your Hi-Fi.

FITTING BATTERIES

Remove the cover at the back of the remote control and insert 2 LR03 (AAA) 1.5 V type batteries.

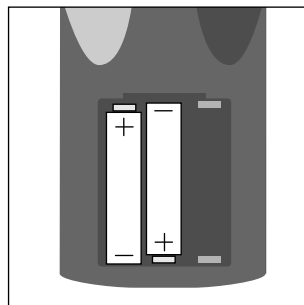

For a cleaner environment, please dispose of used batteries in the containers provided for this purpose.



Your television set is equipped to receive teletext. There are 3 types of teletext :

- Teletexte (France-Europe),
- Fastext (UK, Spain),
- Toptext (Germany)

! If you notice writing errors (missing letters) on the teletext pages of French networks (L Standards), check :

- That you have good reception
- That **On** is selected in the Teletext Fine Tuning line of the SET-UP menu (see page 10).

CALLING UP TELETEXT

Select a station on which there is Teletext (for France, TF 1, FR2).

Press once or twice the blue key, the contents page (Page 100) appears.

You may enter the page number required (3 figures).

Example: page 170, enter 1, 7, 0 (the number is displayed at the top left of the screen).

When the page is found, it appears on the screen.

You can move through the pages to select them.

! While the teletext is displayed, you may adjust or turn off the volume.

To quit Teletext, press .



OPTIONS

See next page.

The two menu lines, under the Teletext page, are different, depending on the type of Teletext received (Teletext, Fastext, Toptext) and your selection (see page 33).

 

You may select different options using the top line of this menu. These are shown in colour.

Briefly press the corresponding colour key (red, green, yellow, blue).

The menu bottom line is then activated.

To select options from the bottom line, press the equivalent colour button.

! To return to the first line of the menu, press the pink key.

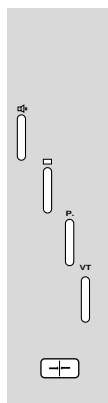

ALARM



















If the teletext transmits an alarm page, you can make it come up at a set time.

While entering the number of the alarm page (E. G. TVE : 697, ORF : 784). Then enter the digits to choose the time (e.g., for 20.45, type 2, 0, 4, 5) and hold down the last digit until the teletext is removed.

At the chosen time, the alarm page will appear on the screen.

To erase the alarm page, first press the blue key then the key .

When the red and green rectangles are displayed in these menus, pressing the red key displays the previous page, pressing the green key displays the next page.

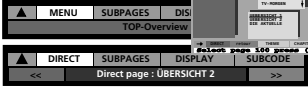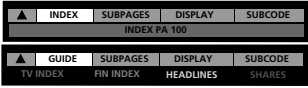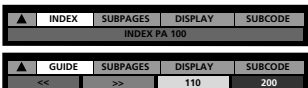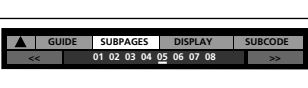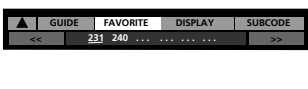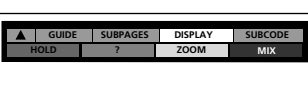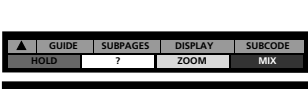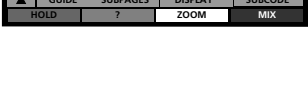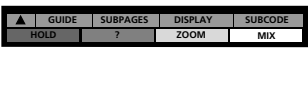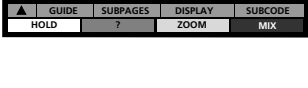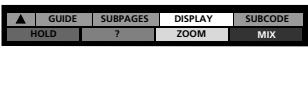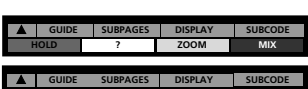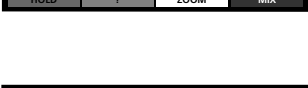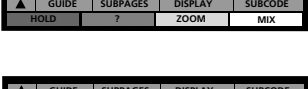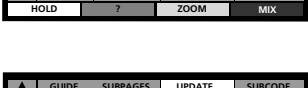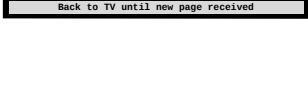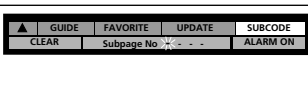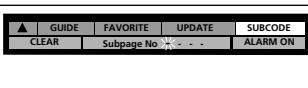Key	Type	Name	Functions	Menus
Red 	TOPTXT	MENU	Displays Top text menu (red key).	
		DIRECT	Directly displays the priority pages determined by the station (red and green keys).	
		PREVIEW	Displays TV programme page (red and green keys)	
		GUIDE	Displays subject (yellow key) or field (blue key)	
	FASTXT	INDEX	Calls up Contents page (red key).	
		GUIDE	Selects different heading (red, green, yellow, blue keys)	
Green 	TOPTXT	INDEX	Displays Contents page (red key).	
		GUIDE	You may call : • The previous page (red key) • The next page • The first page of the next ten after the page displayed (yellow key) • The first page of the next hundred after the page displayed (blue key). Eg : page displayed : 135 -> page called up : 140 or 200	
	FASTXT	SUBPAGES	Used to display subpages if any. The number of the subpage displayed is underlined. Select subpages with red or green keys.	
		FAVORITE	Allows you to store up to 6 of your favourite teletext pages. To store your favourite pages, select one of the 6 locations by using either the red or green keys (the selected location will have its 3-digit number underlined). Then enter the number of the required page. Repeat the process for each favourite page. (There are 6 favourite page locations for each PR number).	
	TELETEXT	TELETEXT		
		TELETEXT		
Yellow 	TOPTXT	DISPLAY	! The colour of the buttons depends on the option required. Option selection. For games : Briefly press the green key to see a hidden answer. To enlarge the text : yellow key Press once : top half of screen doubled in height. Press twice : bottom half of screen doubled in height. Press three times : return to normal Teletext. Mix mode : Briefly press the blue key to overlay the Teletext page on the TV picture. If you wish to stop page scrolling (eg : 4/7) Briefly press the red key, the page number replaces «HOLD». Press the red key again to continue scrolling. Automatic renewal of the page displayed. Press the yellow key, you can watch your TV programme while waiting for page search to complete. When the page is found, the message «PAGE XXX RECEIVED» appears on the screen. Press the blue button to display the page.	     
		UPDATE		
	FASTXT	UPDATE		
		UPDATE		
	TELETEXT	UPDATE		
		UPDATE		
Blue 	TOPTXT	SUBCODE	Enter the subpage number (eg : 0009). Press the green key.	
	TELETEXT	SUBCODE	The TV picture is displayed and as soon as the subpage is found, it is displayed.	



HOW TO SELECT

Repeatedly press the pink key
to select the possible options under the required colour.

Red key : MENU, DIRECT, PREVIEW, GUIDE (Toptext)
INDEX, GUIDE (Teletext or Fastext)



Green key : FAVORITE, SUBPAGE

Yellow key : DISPLAY, UPDATE

Blue key : SUBCODE.

Briefly press the same colour key (red, green, yellow or blue) to select.

To save your choice,
briefly press the (+) button.

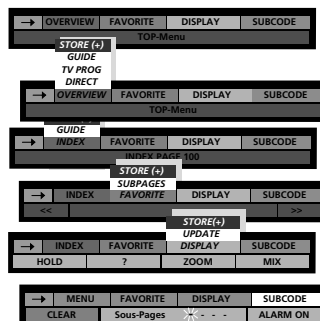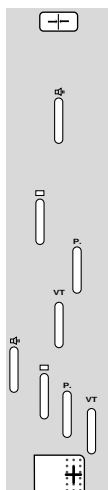

SUBTITLES

Some programmes are transmitted with subtitles for the hard of hearing. These subtitles are received via Teletext on a special page number. They can be superimposed on the screen by selecting that page in Teletext mode. Find the appropriate page number from the Teletext Index page. Enter the number and once the page has been found, you will see the normal TV programme with the subtitles superimposed on it.

To erase the subtitles, press twice the key .

NEWS FLASH

The latest news can be superimposed on the television picture. Look up the teletext index to find the page number and enter it. Once the page has been found, you can watch the normal television programme. When the latest news page is updated it will be superimposed on the picture.

The remote control can be used for sound and picture settings again. If you switch to another station, the «Latest news» function is disabled.

If after having seen these news you wish to remove the display from the screen, press the blue key .

followed by the key .

television set manual programming

You may use this channel adjustment menu if you do not wish to restart auto programming (where there are only few channels in your area or if a new channel is transmitting).

PROGRAMME

The following menu is displayed :
TUNING is selected

If this is not the case, select the contents line using the yellow key  and TUNING with the key .

*If the menu is not in English, refer to the **INSTALLATION** chapter, page 10.*

TUNING AV1 AV2 AV3

Norm (-/+)	PAL I (UK)	AV1	AV2
Decoder	None		
Search			
Channel	CH 22		
Cable	CC --		
Programme	02		
Fine Tuning			
Station name	BBC 2		
Erase (-)	Store (+)		
Access to the organiser (+)			

Norm

Select the **Norm (-/+)** line (yellow key).

Select the broadcasting standard :

PAL/SECAM BG (Euro) : Western Europe (BG)

FRANCE LL' : France and Luxembourg (LL')

PAL BG+ : Special standards (Switzerland)

SECAM DKK' : Eastern Europe, Middle East (DKK')

PAL I (UK) : United Kingdom, Ireland (I)

TUNING AV1 AV2 AV3

Norm (-/+)	PAL I (UK)	AV1	AV2
Decoder	None		
Search			
Channel	CH 22		
Cable	CC --		
Programme	02		
Fine Tuning			
Station name	BBC 2		
Erase (-)	Store (+)		
Access to the organiser (+)			

Decoder

This function allows you to access programmes using the PR +/- keys (zapping).

Select **Decoder** line (yellow key).

Select one of the options :

None = no decoder

AV1 = Decoder connected to Euro-AV1 socket.

AV2 = Decoder connected to Euro-AV2 socket.

TUNING AV1 AV2 AV3

Norm (-/+)	PAL I (UK)	AV1	AV2
Decoder	None		
Search			
Channel	CH 22		
Cable	CC --		
Programme	02		
Fine Tuning			
Station name	BBC 2		
Erase (-)	Store (+)		
Access to the organiser (+)			

Channel/Cable

If you do not know the channel numbers.

Select the **Search** line (yellow key).

Start the search by pressing :

+ : for forward channel search

- : for backward channel search.

The cursor indicates the part of the range in which it is performing the search.

The channel numbers are displayed on

- **Channel** line when received via an aerial or
- **Cable** line for cable networks.

Once a station has been received, the picture appears on the screen. If the picture, corresponds to the station required, go to the **Programme** line, otherwise continue the search, with (+).

If you already know the channel numbers.

Select the line

- **Channel** for TV channels (aerial) or
- **Cable** for cable networks.

Enter the channel number (it must have 2 digits)

e.g. : for channel 6, enter 0 and then 6.

TUNING AV1 AV2 AV3

Norm (-/+)	PAL I (UK)	AV1	AV2
Decoder	None		
Search			
Channel	CH 22		
Cable	CC --		
Programme	02		
Fine Tuning			
Station name	BBC 2		
Erase (-)	Store (+)		
Access to the organiser (+)			

TUNING AV1 AV2 AV3

Norm (-/+)	PAL I (UK)	AV1	AV2
Decoder	None		
Search			
Channel	CH 22		
Cable	CC --		
Programme	02		
Fine Tuning			
Station name	BBC 2		
Erase (-)	Store (+)		
Access to the organiser (+)			

television set manual programming

Programme

Select the **Programme** line (yellow key).

Enter the station number.


Programme 1 to 9 :

Press the corresponding digit briefly (eg: 03, press 3).

Programme 10 to 99 (eg : 52) :

Briefly press 5 to display the tens : **5 -**

Briefly press 2 to display the units : **52**

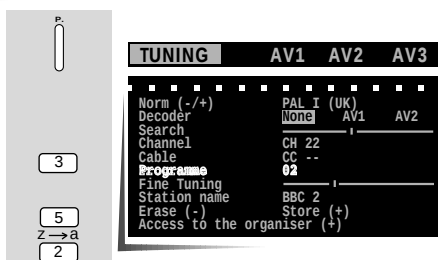

Optional :


To be used if the picture is not clear or for searching for a specific source, for example, a video recorder channel

Fine Tuning

Select **Fine Tuning** line (yellow key).

+ : sharper picture contours or search higher in the range

- : softer picture contours or search lower in the range.

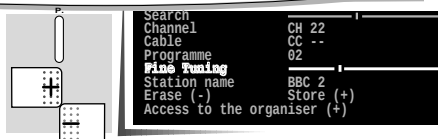

Station name

Select the **Station name** line (yellow key).


The station name can be written in 6 characters.

Hold down the button **z → a** : the characters are displayed in ascending order.

Hold down the button **a → z** : the characters are displayed in the descending order.

When the required character appears, press these buttons to go the next or previous character.

! To leave a space look for the blank character (between ? and A) or press briefly

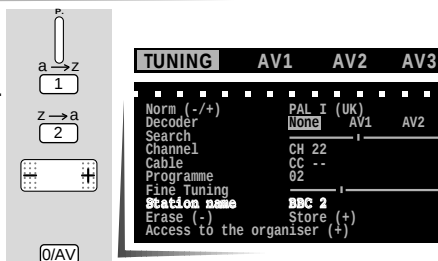


Store / Erase

Press yellow key to select **Erase (-) Store (+)** line.

Briefly press, your channel is stored in the memory.

If you wish to **Erase**, press

- !** Continue the search for a different station.
- !** Search and store all the stations by repeating the above procedure starting from Search, Channel or Cable.
- !** Repeat the process for the next programme/station starting from NORM.

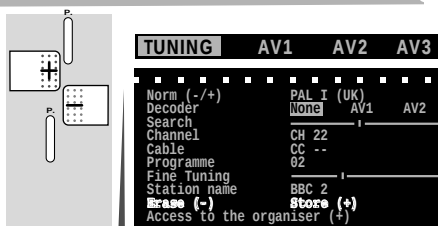

Access to the organiser

When all the channels or the new channel have been retrieved, you can access the channels management menu.

Select the line **Access to the organiser** (yellow key)

The menu **Programme Organiser** appears.


Proceed as explained on page 8 to list the channels in the order required by you and to give them a name if this has not already been done.

To return to the **TUNING** menu

press once on the key

To clear the menus

press twice on the key

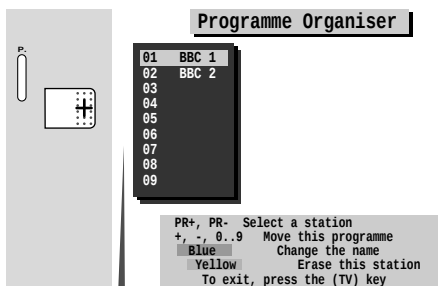

! Nous vous recommandons de découper cette vignette pour qu'un enfant ne puisse pas en prendre connaissance.


SI VOUS NE VOUS SOUVENEZ PLUS DE VOTRE CODE PERSONNEL

Appuyez sur la touche jaune pour sélectionner la ligne **Sommaire** du menu, puis sur la touche (+) pour sélectionner **VERROUILLAGE**.

Appuyez sur la touche jaune pour sélectionner la ligne **Entrer votre numéro de code**. Appuyez simultanément sur les touches $\square_{PR+}$ et $\square_{\swarrow}$ du téléviseur.

L'ancien code se trouve alors effacé et vous pouvez en entrer un nouveau.

Après le changement de code, il n'est pas nécessaire de reverrouiller les programmes qui étaient verrouillés.

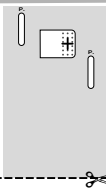

! Wir empfehlen Ihnen, diesen Abschnitt auszuschneiden, damit er nicht von Kindern gelesen werden kann.


WENN SIE SICH NICHT MEHR AN IHRE PIN-NR ERINNERN

Kurzes Drücken der gelben Taste, die Titelzeile des Menüs wird aufgerufen, anschließend mit der Taste (+) **SPERRUNG** wählen.

Drücken Sie die gelbe Taste, die Zeile **Geben Sie Ihre PIN-Nr** ein wird aufgerufen. Drücken Sie gleichzeitig die entsprechende Taste $\square_{PR+}$ und $\square_{\swarrow}$ am Fernsehgerät.

Die frühere PIN-Nr ist nun gelöscht und Sie können einen neuen Code eingeben.

Nach dem Ändern der PIN-Nummer brauchen die vorher gesperrten Programme nicht nochmals gesperrt werden.

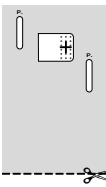

! Vi consigliamo di staccare questo tagliando per evitare che i bambini ne prendano conoscenza.

SE NON RICORDATE PIÙ IL CODICE SEGRETO


Premere il tasto giallo per selezionare la riga **Sommario** del menu, poi il tasto (+) per selezionare **BLOCCO PROG.**

Premere il tasto giallo per selezionare la riga **Inserire il codice segreto**.

Premere simultaneamente i tasti $\square_{PR+}$ e $\square_{\swarrow}$ del televisore.

Il codice precedente viene cancellato e potete quindi inserire un nuovo codice segreto.

Dopo aver cambiato il codice, non è necessario di ribloccare i programmi che erano bloccati.

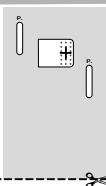

! Recomendamos cortar este cupón para que los niños no tengan acceso al mismo.

SI SE OLVIDO EL CÓDIGO PERSONAL


Pulse la tecla amarilla para seleccionar la línea **Índice** del menú, luego la tecla (+) para seleccionar **BLOQUEO**.

Pulse la tecla amarilla para seleccionar la línea **Introducir el número del código**.

Pulsar simultáneamente las teclas $\square_{PR+}$ y $\square_{\swarrow}$ del televisor.

El código antiguo se borra, pudiéndose introducir otro nuevo.

Después de un cambio de código, no es necesario volver a proteger los programas que ya estaban protegidos.

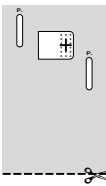

! We recommend you cut out this sticker to keep it hidden from the children.

IF YOU NO LONGER REMEMBER YOUR PERSONAL CODE

Press the yellow button to select the menu **Contents** line, then the (+) button to select **LOCK**.

Press the yellow button to select the line **Enter your PIN number**.

Press simultaneously the $\square_{PR+}$ and $\square_{\swarrow}$ buttons on the TV.

The old code is then erased and you may enter a new one.

After changing code, it is not necessary to relock the programs which were already locked.

