

# **ADAM-4570/ADAM-4571/EDG-4504**

**1/2/4 Port Ethernet to  
RS-232/422/485 Data Gateway  
User's Manual**

## **Copyright Notice**

This document is copyrighted, 2001, by Advantech Co., Ltd. All rights are reserved. Advantech Co., Ltd., reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written permission of Advantech Co., Ltd. Information provided in this manual is intended to be accurate and reliable. However, Advantech Co., Ltd. assumes no responsibility for its use, nor for any infringements upon the rights of third parties which may result from its use.

## **CE Notification**

The ADAM-4570/ADAM-4571/EDG-4504 has passed the CE test for environmental specifications. Test conditions for passing included the equipment being operated within an industrial enclosure. In order to protect the ADAM-4570/ADAM-4571/EDG-4504 system from being damaged by ESD (Electrostatic Discharge) and EMI leakage, we strongly recommend the use of CE-compliant industrial enclosure products.

## **Advantech Customer Services**

Each and every Advantech product is built to the most exacting specifications to ensure reliable performance in the unusual and demanding conditions typical of industrial environments. Whether your new Advantech equipment is destined for the laboratory or the factory floor, you can be assured that your product will provide the reliability and ease of operation for which the name Advantech has come to be known.

Your satisfaction is our number one concern. Here is a guide to Advantech's customer services. To ensure you get the full benefit of our services, please follow the instructions below carefully.

## **Technical Support**

We want you to get the maximum performance from your products. So if you run into technical difficulties, we are here to help. For most frequently asked questions you can easily find answers in your product documentation. These answers are normally a lot more detailed than the ones we can give over the phone.

Please consult this manual first. If you still cannot find the answer, gather all the information or questions that apply to your problem and, with the product close at hand, call your dealer. Our dealers are well trained and ready to give you the support you need to get the most from your Advantech products. In fact, most problems reported are minor and are able to be easily solved over the phone.

In addition, free technical support is available from Advantech engineers every business day. We are always ready to give advice on application requirements or specific information on the installation and operation of any of our products.

## **Product Warranty**

Advantech warrants to you, the original purchaser, that each of its products will be free from defects in materials and workmanship for two years from the date of purchase.

This warranty does not apply to any products which have been repaired or altered by other than repair personnel authorized by Advantech, or which have been subject to misuse, abuse, accident or improper installation. Advantech assumes no liability as a consequence of such events under the terms of this Warranty.

Because of Advantech's high quality-control standards and rigorous testing, most of our customers never need to use our repair service. If an Advantech product ever does prove defective, it will be repaired or replaced at no charge during the warranty period. For out-of-warranty repairs, you will be billed according to the cost of replacement materials, service time and freight. Please consult your dealer for more details.

If you think you have a defective product, follow these steps:

1. Collect all the information about the problem encountered (e.g. type of PC, CPU speed, Advantech products used, other hardware and software used etc.). Note anything abnormal and list any on-screen messages you get when the problem occurs.
2. Call your dealer and describe the problem. Please have your manual, product, and any helpful information readily available.
3. If your product is diagnosed as defective, you have to request an RMA number. When requesting an RMA (Return Material Authorization) number, please access ADVANTECH's RMA website: <http://www.advantech.com.tw/rma>. If the web sever is shut down, please contact our office directly. You should fill in the "Problem Repair Form", describing in detail the application environment, configuration, and problems encountered. Note that error descriptions such as "does not work" and "failure" are so general that we are then required to apply our internal standard repair process.
4. Carefully pack the defective product, a completely filled-out Repair and Replacement Order Card and a photocopy of dated proof of purchase (such as your sales receipt) in a shippable container. A

product returned without dated proof of purchase is not eligible for warranty service.

5. Write the RMA number visibly on the outside of the package and ship it prepaid to your dealer.

# Contents

<b>Chapter 1: Overview .....</b>	<b>1</b>
1.1 Introduction .....	2
1.2 Features .....	5
1.3 Specifications .....	6
1.4 Package Checklist .....	7
<b>Chapter 2: Getting Started .....</b>	<b>9</b>
2.1 Understanding the ADAM-4570/ADAM-4571/EDG-4504 .	11
2.1.1 Network Architecture .....	11
2.1.2 Top / Front / Rear View .....	13
2.1.2.1 ADAM-4570 .....	13
2.1.2.2 ADAM-4571 .....	15
2.1.2.3 EDG-4504 .....	17
2.1.3 Stickers .....	19
2.2 Connecting the Hardware .....	20
2.2.1 Choosing a Location .....	20
2.2.1.1 ADAM-4570/4571 .....	20
2.2.1.2 EDG-4504 .....	24
2.2.2 Network Connection .....	25
2.2.3 Power Connection .....	26
2.2.4 Serial Connection .....	27
2.2.4.1 ADAM-4570/4571 .....	27
2.2.4.2 EDG-4504 .....	29
<b>Chapter 3: Installation and Configuration ..</b>	<b>31</b>
3.1 Driver and Utility Installation .....	32

<b>3.2</b>	<b>Configuring the ADAM-4570/ADAM-4571/EDG-4504 — The Configuration Utility .....</b>	<b>33</b>
3.2.1	Search for Specific ADAM-4570/ADAM-4571/EDG-4504	34
3.2.2	System Configuration .....	36
3.2.3	Network Configuration .....	38
3.2.4	Port Configuration .....	39
	3.2.4.1 Host/Device Idle Protection (ADAM-4570 only) .....	41
3.2.5	Security Configuration .....	47
<b>3.3</b>	<b>Status Messages .....</b>	<b>48</b>
3.3.1	Connection Diagnostic .....	48
<b>3.4</b>	<b>Port Mapping Utility .....</b>	<b>50</b>
3.4.1	Self Test Function .....	52
3.4.2	Upgrading ADAM-4570/ADAM-4571/EDG-4504's Firmware Download .....	54
3.4.3	Save The Configuration .....	57
3.4.4	Auto-reconnect function .....	58
<b>Chapter 4:</b>	<b>Troubleshooting .....</b>	<b>57</b>

# Figures

Figure 2-1	Installation Flow Chart .....	10
Figure 2-2	Network Architecture(1) .....	12
Figure 2-3	Network Architecture(2) .....	12
Figure 2-4	ADAM-4570—Top Panel .....	14
Figure 2-5	ADAM-4570—Front Panel .....	14
Figure 2-6	ADAM-4570—Back Panel .....	14
Figure 2-7	ADAM-4571—Top Panel .....	16
Figure 2-8	ADAM-4571—Front Panel .....	16
Figure 2-9	ADAM-4571—Back Panel .....	16
Figure 2-12	EDG-4504—Front Panel .....	18
Figure 2-10	EDG-4504—Top Panel .....	18
Figure 2-11	EDG-4504—Front Panel .....	18
Figure 2-13	Panel Mounting .....	21
Figure 2-14	Din Rail Mounting .....	22
Figure 2-15	Piggyback Stack .....	23
Figure 2-17	Panel Mounting .....	24
Figure 2-16	Din Rail Mounting .....	24
Figure 2-18	Connecting ADAM-4570/ADAM-4571/EDG-4504 series to the hub .....	25
Figure 2-20	Power Connection for EDG-4504 .....	26
Figure 2-19	Power Connection for ADAM-4570/4571 .....	26
Figure 2-21	Serial Connection for ADAM-4570/4571 .....	27
Figure 2-22	Serial Connection for EDG-4504 .....	29
Figure 3-1	Configuration Utility .....	33
Figure 3-2	Locate all ADAM-4570/ADAM-4571/EDG-4504 .....	34
Figure 3-4	Locate specific ADAM-4570s .....	35
Figure 3-3	Locate the desired group of ADAM-4570s .....	35
Figure 3-5	System Setting Window .....	36
Figure 3-6	Network Configuration Window .....	38
Figure 3-7	Port Configuration Window .....	39

<b>Figure 3-8</b>	<b>Architecture—Host idle switch mode .....</b>	<b>42</b>
<b>Figure 3-9</b>	<b>Security configuration .....</b>	<b>47</b>
<b>Figure 3-10</b>	<b>Status messages .....</b>	<b>48</b>
<b>Figure 3-11</b>	<b>Unused ports .....</b>	<b>50</b>
<b>Figure 3-12</b>	<b>Assign COM port to ADAM-4570/ADAM-4571/EDG-4504 .....</b>	<b>51</b>
<b>Figure 3-13</b>	<b>Warning window .....</b>	<b>51</b>
<b>Figure 3-14</b>	<b>Test window .....</b>	<b>53</b>
<b>Figure 3-15</b>	<b>Loopback test .....</b>	<b>54</b>
<b>Figure 3-16</b>	<b>Update firmware window .....</b>	<b>55</b>
<b>Figure 3-17</b>	<b>Select the file .....</b>	<b>55</b>
<b>Figure 3-18</b>	<b>Download firmware .....</b>	<b>56</b>

# Tables

<b>Table 2-1</b>	<b>ADAM-4570 LED Definition .....</b>	<b>13</b>
<b>Table 2-2</b>	<b>ADAM-4571 LED Definition .....</b>	<b>15</b>
<b>Table 2-3</b>	<b>EDG-4504 LED Definition .....</b>	<b>17</b>

# Chapter 1

## Overview

## 1.1 Introduction

The ADAM-4570/ADAM-4571/EDG-4504 is a lightning fast and cost effective data gateway between RS-232/422/485 and Ethernet interfaces. This unit immediately upgrades your existing device(s) to the Ethernet world. Functionally transparent and efficient, the ADAM-4570/ADAM-4571/EDG-4504 is specially designed for remotely controlling and monitoring devices via the Internet.

The ADAM-4570/ADAM-4571/EDG-4504 provides one, two or four RS-232/485/422 serial ports that can each be easily configured for your needs. For increasing the reliability of systems, the ADAM-4570 also provides three significant functions: Host idle, Device idle and Auto-reconnect. The ADAM-4570/ADAM-4571/EDG-4504 also supports transmission speeds up to 230 Kbps, meeting the demand for today's high-speed exchange. Users can use a Windows utility to configure the ADAM-4570/ADAM-4571/EDG-4504 without need for further programming. The ADAM-4570/ADAM-4571/EDG-4504 not only protects your current hardware investment but also ensures future network expandability. Since the protocol conversion is transparent, all existing devices can be seamlessly integrated into the Ethernet network. Therefore, the ADAM-4570/ADAM-4571/EDG-4504 can be used in security systems, factory automation, SCADA, transportation and more.

The ADAM-4570/ADAM-4571/EDG-4504 integrates both your existing human-machine interface software (HMI) and RS-232/422/485 system architecture with an Ethernet network. The result helps save cabling

space and software development cost. The ADAM-4570/ADAM-4571/EDG-4504 also provides a high-performance RISC CPU and real time operating system to reduce CPU load. These components make the ADAM-4570/ADAM-4571/EDG-4504 more stable and reliable. Another benefit is the ADAM-4570/ADAM-4571/EDG-4504 allows users to remotely download programs to a designated device via Ethernet. This reduces the need for on-site maintenance and diagnosis. In addition, the ADAM-4570/ADAM-4571/EDG-4504 comes with a Windows configuration and port-mapping utility. This configuration tool can auto-detect all Ethernet Data Gateway products on a local network. It also lets users easily adjust all settings. The port mapping utility helps to set up COM ports for one Windows 95/98/NT/2000/XP platform. This helps users manage all ports to meet their needs.

### **Host/Device Idle Protection empowers the reliability of system (ADAM-4570)**

For improving the stability of systems, users usually have to spend lots of effort to build up “Redundant” functionality. Now, the ADAM-4570 provides new powerful functions that help users build up redundant systems fast and easily: The new functions are Host idle & Device idle.

The purpose of the “Host idle switch” function is to prevent system hang-up from occurring due to application program failure. If the application program fails, the ADAM-4570 will cut off the connection between the host PC and the ADAM-4570. Another PC can then start to access the same ADAM-4570. Also, if

the serial device or communication between the device and the ADAM-4570 fails, the “Device Idle” function will switch the communication port from one port to another port to keep communicating with another device automatically. Thus, another device can send data to the ADAM-4570.

### **Auto-reconnect after networking breaks**

Sometimes, the system crashes because the ADAM-4570/ADAM-4571/EDG-4504 is interrupted or powered-off by accident. The ADAM-4570/ADAM-4571/EDG-4504 provides an “Auto-reconnect” function to solve this problem. When the ADAM-4570/ADAM-4571/EDG-4504 is powered-off accidentally, the driver will keep trying to reconnect the ADAM-4570/ADAM-4571/EDG-4504 automatically. When the ADAM-4570/ADAM-4571/EDG-4504 recovers or is powered-on, due to this auto-reconnect function, the host PC can send commands to the ADAM-4570/ADAM-4571/EDG-4504 again. This function enhances the reliability of the system.

### **Auto-detect Ethernet Data Gateway products**

The configuration utility can search all the Ethernet Data Gateway devices on the network automatically and configure them according to the current network status, saving your effort to acquire the status information yourself.

### **Easy to diagnose the communication situation**

If this test item is selected, an internal test will be done on the RS-232 serial port, and the result (successful or failed) will be displayed when the test is completed. If this test item is selected, an external test will also be done to check that the connection signals for each port are working properly. For the external test, you will need to connect each port to a loopback tester. The test

is divided into two parts: Signal test and Communication Parameters test. If the results are OK, users can be sure the communication quality between host PC and ADAM-4570/ 4571 is OK.

### **Easy to maintain by downloading firmware remotely**

Advantech continually upgrades ADAM-4570/ADAM-4571/EDG-4504's firmware to keep pace with the ever-expanding world of computing. You can use the Download function located on the Port Mapping utility to carry out the upgrade procedure. Please access Advantech's Web site to download the required computer file and then follow the instructions.

## **1.2 Features**

- Supports 10/100 Mbps Base-T standard
- Provides a communication redundant function to enhance the reliability of system.
- Supports high transmission speeds up to 230 Kbps
- Supports an advanced security mechanism to avoid unauthorized access
- Auto-reconnect or return error when Network breaks
- Remote download firmware: Easy to maintain
- Auto-detecting Configuration Utility
- Easy managing Port Mapping Utility
- Supports Windows 95/98/NT/2000/XP driver
- Surge protection for RS-485 line and power supply
- Automatic RS-485 data flow control

### 1.3 Specifications

- Protocol: TCP/IP
- Network Port: IEEE 802.3, IEEE 802.3u
- Interface:
  - Network: 10/100 BASE-T standard
  - Serial: RS-232, RS-422, RS-485
- Port: 1/2/4 independent RS-232/422/485 ports
- Connector:
  - Network: RJ-45
  - Serial: RJ-48 (RJ-48 to DB-9 cable provided)
- Transmission speed: 300 bps to 230 Kbps
- Parity bit: odd, even, none, space, mark
- Data bit: 5, 6, 7, 8
- Stop bit: 1, 1.5, 2
- Signals: Full Modem control signals (Doesn't support RAS service)
- Diagnostic LEDs:
  - Network: TX/RX, Link, Speed (10/100 Mbps ), Power
  - Serial: TX/RX, Status
- Utility Software:
  - Auto-detecting configuration utility
  - Easy-to-manage port mapping utility
- Driver Supported:
  - Windows 95/98/ME/NT/2000/XP
- Power Requirements: unregulated 10 to 30 Vdc with surge protection

- Power Consumption:  
3.5 Watt (ADAM-4571)  
4 Watt (ADAM-4570)  
4.5 Watt (EDG-4504)
- Placement:  
DIN-rail, panel mounting, piggyback stack  
(ADAM-4570/4571)  
DIN-rail, panel mounting (EDG-4504)
- Operating Temperature: 0 ~ 60° C
- Storage Temperature: -20 ~ 80° C
- Operating Humidity: 20 ~ 95% (non-condensing)
- Storage Humidity: 0 ~ 95% (non-condensing)

#### **1.4 Package Checklist**

- ADAM-4570 or ADAM-4571 or EDG-4504
- CD-ROM for utility & manual
- 1/2/4 RJ-48 to DB-9 serial cables
- One loopback DB-9 tester
- Five stickers
- NYLON DIN-rail Mounting Adapter
- SECC Panel Mounting Bracket



**Chapter 2**  
**Getting Started**

In this chapter, you will be given an overview of the ADAM-4570/ADAM-4571/EDG-4504 hardware installation procedures. As mentioned in the previous chapter, the ADAM-4570/ADAM-4571/EDG-4504 comes ready for all network connections, including Ethernet, and RS-232/422/485 port connections.

We begin this chapter with a brief showing the installation procedure. You can take flow chart for reference.

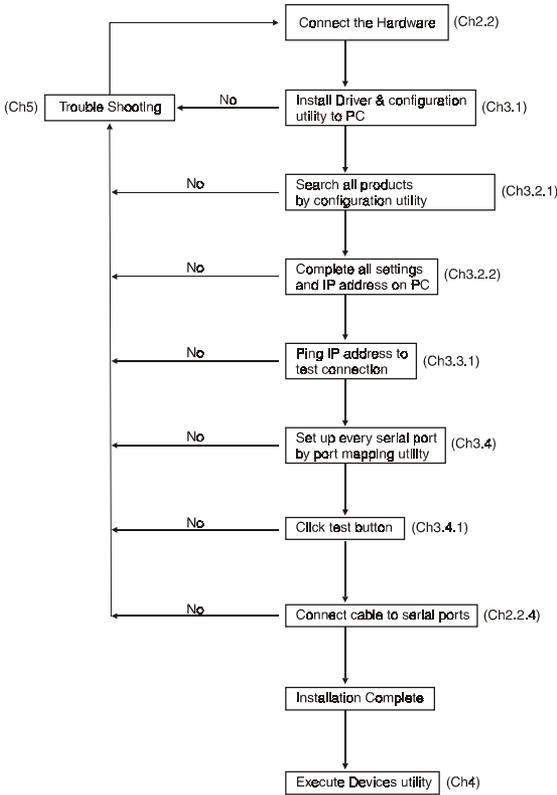


Figure2-1 Installation Flow Chart

## **2.1 Understanding the ADAM-4570/ADAM-4571/EDG-4504**

The ADAM-4570/ADAM-4571/EDG-4504 is an advanced data gateway unit. It extends traditional COM ports of a PC with access over a TCP/IP network. Through networking, you can control and monitor remote serial devices either over a LAN or over the WAN.

Since the ADAM-4570/ADAM-4571/EDG-4504 is connected through a TCPIP network, you will need to know some basic facts about networking in order to get the server hooked up correctly.

### **2.1.1 Network Architecture**

Traditional serial port communication uses a COM port board that slides into one of the slots at the back of your PC. In this case, only the computer containing the board can access the serial port. With the ADAM-4570/ADAM-4571/EDG-4504, you are now able to access the COM port from a distance through local area network. The ADAM-4570/ADAM-4571/EDG-4504 can be integrated within the network architecture of any protocol. Note, all serial devices which are connected to the port must have the same protocol running and the same transmission speed. Connect devices running different protocols to different ports of the ADAM-4570/ADAM-4571/EDG-4504.

The following illustration shows the network architecture as below:

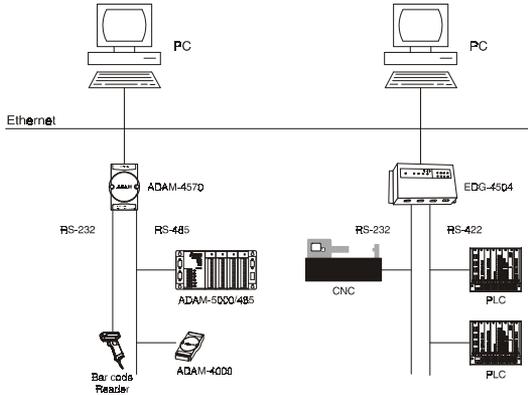


Figure 2-2 Network Architecture(1)

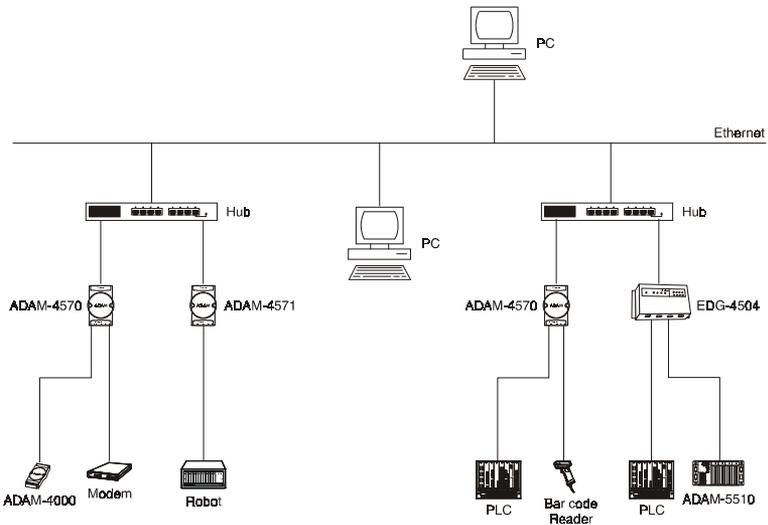


Figure 2-3 Network Architecture(2)

## 2.1.2 Top / Front / Rear View

### 2.1.2.1 ADAM-4570

There are five network status LEDs located on the top panel of ADAM-4570, each with its own specific function.

LED	Color	Status	Description
Status/Power	Red	ON	Heartbeat (1 time/sec)
		OFF	Not working
	Green	ON	Power ON
		OFF	Power OFF
Speed/Link	Red	ON	100 Mbps speed
		OFF	10 Mbps speed
	Green	ON	Valid network link
		OFF	Invalid network link
Tx/Rx (Ethernet)	Red	ON	Ethernet data being transmitted
		OFF	No data being transmitted
	Green	ON	Data being received
		OFF	No Data being received
Tx/Rx (port1)	Red	ON	Serial port data being transmitted
		OFF	No data being received
	Green	ON	Data being received
		OFF	No data being received
Tx/Rx (port2)	Red	ON	Data being transmitted
		OFF	No data being transmitted
	Green	ON	Data being received
		OFF	No data being received

*Table 2-1 ADAM-4570 LED Definition*

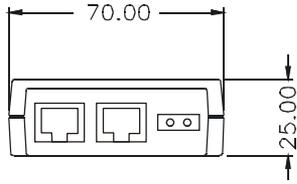


Figure 2-4 ADAM-4570—Top Panel

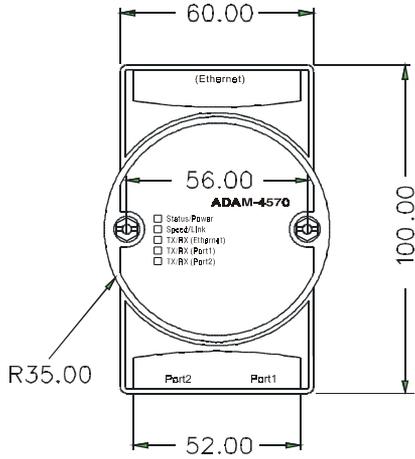


Figure 2-5 ADAM-4570—Front Panel

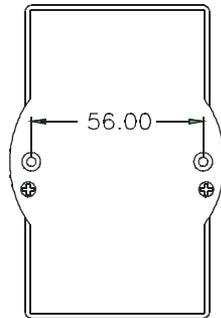


Figure 2-6 ADAM-4570—Back Panel

### 2.1.2.2 ADAM-4571

There are four LEDs located on the top panel of ADAM-4571, each with its own specific function.

LED	Color	Status	Description
Status/Power	Red	ON	Heartbeat (1 time/sec)
		OFF	Not working
	Green	ON	Power ON
		OFF	Power OFF
Speed/Link	Red	ON	100 Mbps speed
		OFF	10 Mbps speed
	Green	ON	Valid network link
		OFF	Invalid network link
Tx/Rx (Ethernet)	Red	ON	Ethernet data being transmitted
		OFF	No data being transmitted
	Green	ON	Data being received
		OFF	No Data being received
Tx/Rx (port1)	Red	ON	Data being transmitted
		OFF	No data being transmitted
	Green	ON	Data being received
		OFF	No data being received

*Table 2-2 ADAM-4571 LED Definition*

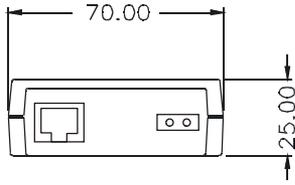


Figure 2-7 ADAM-4571—Top Panel

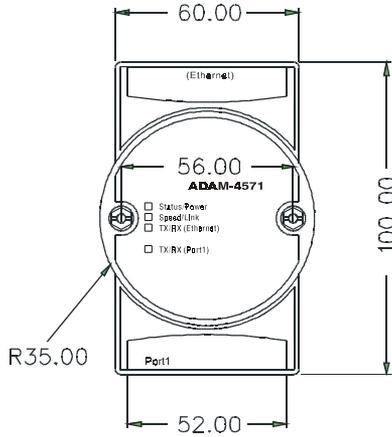


Figure 2-8 ADAM-4571—Front Panel

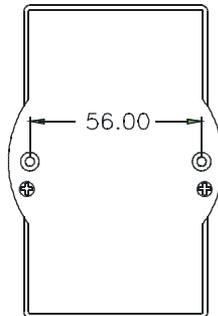


Figure 2-9 ADAM-4571—Back Panel

### 2.1.2.3 EDG-4504

There are 13 LEDs located on the top panel of EDG-4504, each with its own specific function.

LED	Status	Description
Status	ON	Heart beat (1 time/sec)
	OFF	Not working
10M	ON	10 Mbps speed
	OFF	Invalid 10 Mbps Network link
100M	ON	100 Mbps speed
	OFF	Invalid 100 Mbps Network link
TX (Ethernet)	ON	Ethernet data being received
	OFF	No data being transmitted
RX (Ethernet)	ON	Ethernet data being received
	OFF	No data being received
TX (port N) N=1~4	ON	Serial port data being transmitted
	OFF	No data being received
RX (port N) N=1~4	ON	Serial port data being transmitted
	OFF	No data being received

*Table 2-3 EDG-4504 LED Definition*

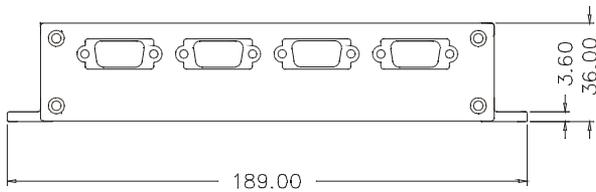


Figure 2-10 EDG-4504—Top Panel

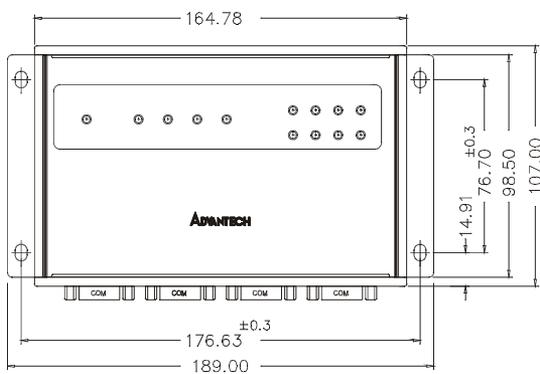


Figure 2-11 EDG-4504—Front Panel




Figure 2-12 EDG-4504—Front Panel

### 2.1.3 Stickers

 If you forgot the IP addresses of specific ADAM-4570/ADAM-4571/EDG-4504s or where the host PC is mapped to the ADAM-4570 port, we have provided five stickers for you to note the IP addresses and place in a secure location. For example,

172.20.20.5: The IP address of specific ADAM-4570

160.59.20.89: The IP address of the specific host PC mapped to this port.



## **2.2 Connecting the Hardware**

Next, we will explain how to find a proper location for your EDG COMPort series, and then explain how to connect to the network, hook up the power cable, and connect to the ADAM-4570/ADAM-4571/EDG-4504's serial port.

Note: Before you install ADAM-4570/ADAM-4571/EDG-4504, you can install other communication cards first.

### **2.2.1 Choosing a Location**


#### **2.2.1.1 ADAM-4570/4571**

Due to its versatility and innovative design, the ADAM-4570/ADAM-4571 can be:

- fixed to a panel mount
- fixed to a DIN Rail.
- Piggyback Stack

## Panel Mounting

The ADAM-4570/ADAM-4571 can be attached to a wall using the included metal brackets. Each bracket comes with four screws; first attach the brackets to the bottom of the ADAM-4570/ADAM-4571. Next, screw each bracket to a wall.

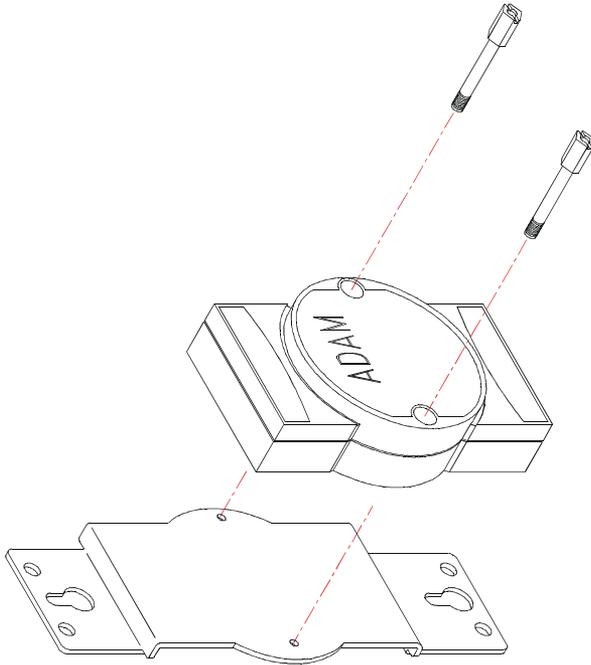


*Figure 2-13 Panel Mounting*

## DIN Rail Mounting

You can mount the ADAM-4570/ADAM-4571 on a standard DIN Rail. First, using two screws, attach the metal plate to the DIN Rail bracket. Because the screw heads are beveled, the tops of the screws will be flush with the metal plate. Din Rail Mounting Brackets—Orientation of Metal Plates


You can now screw the metal plate with the DIN rail bracket assembly to the bottom of the server in a more convenient way. Next, use the remaining screws to put the metal plate on the bottom of the ADAM-4570/ADAM-4571.

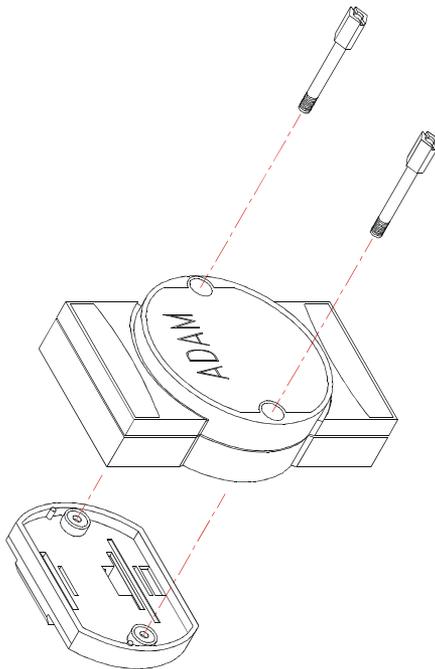

*Figure 2-14 Din Rail Mounting*

## **Piggyback Stack**

ADAM-4570/ADAM-4571 can be stacked as seen in the figure below.

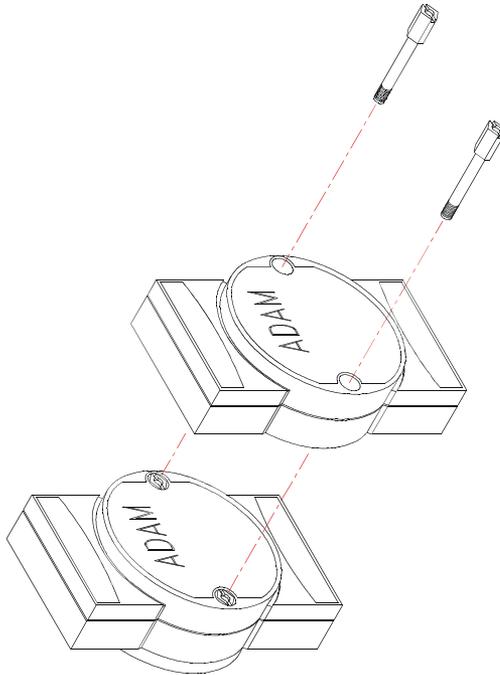

*Figure2-15 Piggyback Stack*

### 2.2.1.2 EDG-4504

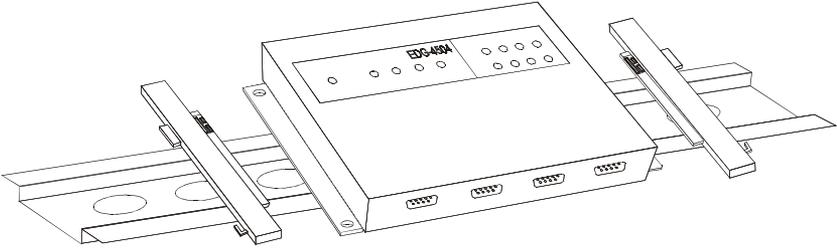


Figure 2-16 Din Rail Mounting

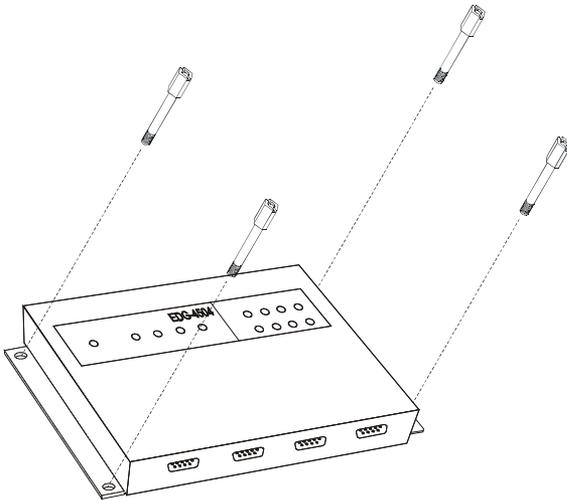


Figure 2-17 Panel Mounting

### 2.2.2 Network Connection

There are two ways to use the 10/100Base-T Ethernet connector located on the ADAM-4570/ADAM-4571/EDG-4504 :

1. For Local Area Network (LAN) applications using the ADAM-4570/ADAM-4571/EDG-4504, you will simply plug one end of your Ethernet cable into the 10/100Base-T connector, and the other end into the hub connected to your network.
2. When installing and configuring, you will find it convenient to hook the ADAM-4570/ADAM-4571/EDG-4504 directly to your computer's Ethernet card. To do this you will need to use a "crossed-cable", such as the one supplied with your server.

#### Cabling requirements for the Ethernet side

Use an RJ-45 connector to connect the Ethernet port of the ADAM-4570/ADAM-4571/EDG-4504 to the network hub. The cable for connection should be Category 3 (for 10Mbps data rate) or Category 5 (for 100 Mbps data rate) UTP/STP cable, which is compliant with EIA/TIA 586 specifications. Maximum length between the hub and any ADAM-4570/ADAM-4571/EDG-4504 is up to 100 meters (ca. 300 ft).

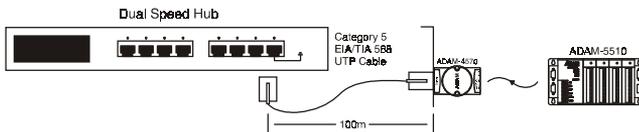


Figure 2-18 Connecting ADAM-4570/ADAM-4571/EDG-4504 series to the hub

### 2.2.3 Power Connection

You should take the following steps to connect ADAM-4570/ADAM-4571/EDG-4504 power.

1. Connect the power cable to 2-pin connector
2. Connect power cable to power adapter

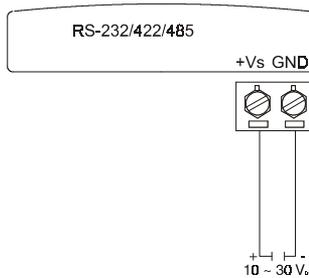


Figure 2-19 Power Connection for ADAM-4570/4571



Figure 2-20 Power Connection for EDG-4504


If the ADAM-4570/ADAM-4571/EDG-4504 is working properly, the green power LED will light up, indicating that the ADAM-4570/ADAM-4571/EDG-4504 is receiving power. Furthermore, the ADAM-4570/ADAM-4571/EDG-4504 provides surge protection to protect it from being damaged by over-voltage, a 34V surge protection is added to the power end and an 18V surge protection is for the RS-422/485 end.

## 2.2.4 Serial Connection

### 2.2.4.1 ADAM-4570/4571

The model of the ADAM-4570/4571 that you purchased has RJ-48 serial ports on the bottom of module. Depending on your serial device and serial interfaces, there are two options:

1. For an RS-232/422/485 port you may use a RJ-48 to DB-9 cable which we supply to connect your serial device to the ADAM-4570/4571. Simply plug one end of the cable into the jack, and plug the other end into the serial port jack on your serial device.
2. Refer to the following table for details on serial cable RJ-48 to DB-9 pinouts.

 


*Figure 2-21 Serial Connection for ADAM-4570/4571*


## RJ-48

PIN Name	DCD	RX	TX	DTR	GND	DSR	RTS	CTS	RI
RJ-48	1	2	3	4	5	6	7	8	9


## DB-9

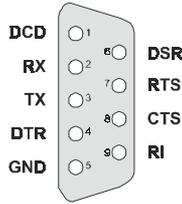

**RS-232**

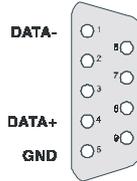

**RS-485**

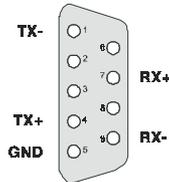


**RS-422**

### 2.2.4.2 EDG-4504

The model of the EDG-4504 that you purchased has DB-9 serial ports on the bottom of module. Depending on your serial device and serial interfaces, there are two options:

1. For an RS-232/422/485 port you may use a DB-9 cable to connect your serial device to the EDG-4504. Simply plug one end of the cable into the jack, and plug the other end into the serial port jack on your serial device.
2. The DB-9 pinouts is the same as ADAM-4570/4571

 

*Figure 2-22 Serial Connection for EDG-4504*



# Chapter 3

## Installation and Configuration

### 3.1 Driver and Utility Installation

In order to use a PC via an Ethernet network to control serial devices connected to the ADAM-4570/ADAM-4571/EDG-4504, you must first have a host running Windows 95/98/ME/NT/2000/XP. This type of application also requires the host to have an Ethernet card and TCP/IP protocol installed. Following are the installation instructions to set up the ADAM-4570/ADAM-4571/EDG-4504.

1. Insert the Advantech industrial communication CD-ROM into the drive (e.g. D:) on the host PC. Change the host computer's default drive from C: to D:
2. Use your Windows Explorer or the Windows Run command to execute the Setup program (the path for the Setup program on the CD-ROM should be D:\ADAM4570\utility&driver\portmaputility1.01\setup.exe, if your default floppy drive is D:).
3. The Setup program will specify a default installation path, *C:\Program Files\Advantech\EDG COMport\1, 2 and 4 ports Mapping utility*. If a new destination path is necessary, just click the *Browse* button to change to another path. After you have specified the installation path, click the *Next* button.
4. Use your Windows Explorer or the Windows Run command to execute the Setup program. the path for the Setup program on the CD-ROM should be D:\ADAM-4570\utility&driver\configutility1.01\setup.exe, if your default floppy drive is D:). Use the same way to execute the Setup program. The default path is *C:\Program Files\Advantech\EDG COMport\1, 2 and 4 Configuration utility*.
5. After setup has copied all program files to your computer, click the *Finish* button to finish the installation.

6. The configuration utility will search for the ADAM-4570/ADAM-4571/EDG-4504 devices on your local network.

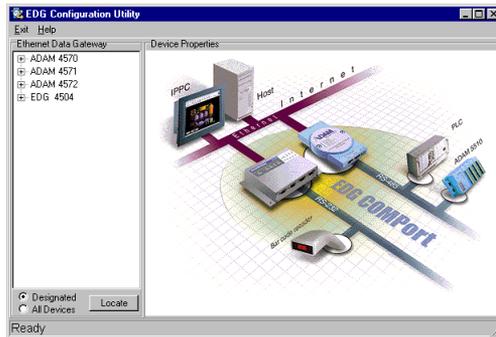


Figure 3-1 Configuration Utility

### 3.2 Configuring the ADAM-4570/ADAM-4571/EDG-4504 — The Configuration Utility

The ADAM-4570/ADAM-4571/EDG-4504 provides easy Windows configuration through Ethernet connection. This Windows utility searches all the ADAM-4570/ADAM-4571/EDG-4504 and devices on the network automatically and you can configure various parameters for TCP/IP configuration easily. For secure administration, it can also restrict the access rights for configuration to only one host PC to enhance network security. With this secure function enabled, other PCs will not have permission for configuration. The Windows utility consists of four functional categories: System, Network, Port, and Security which are presented on the toolbar of the configuration utility.

Note: When you have finished the configuration of these settings for each category, please follow the steps described below to make these settings effective on the ADAM-4570/ADAM-4571/EDG-4504.



### 3.2.1 Search for Specific ADAM-4570/ADAM-4571/EDG-4504

If you want to locate specific ADAM-4570/ADAM-4571/EDG-4504s, the configuration utility provides a “Locate” function to assist you. You can select all the ADAM-4570/ADAM-4571/EDG-4504 devices (see Figure 3-2) or select a group of ADAM-4570s (see Figure 3-3) or just select one ADAM-4570 (see Figure 3-4). When you select a specific device, the LED that stands for “Status” will glow for 8 minutes. When you select another device, the original “Status” LED will turn off. Please follow these steps:

1. Select “All Devices” and click “Locate”
2. The “Status” LED of all devices will turn on

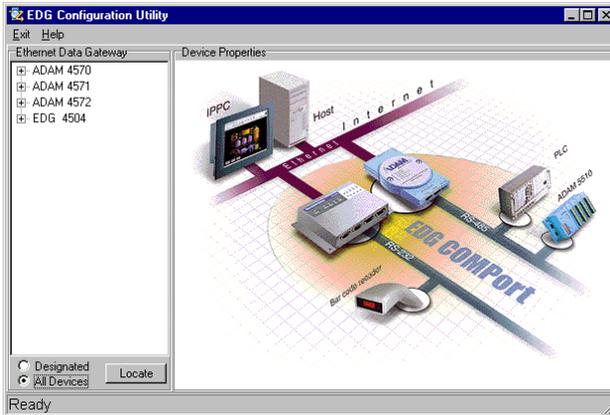


Figure 3-2 Locate all ADAM-4570/ADAM-4571/EDG-4504

1. Select “Designated” and select “ADAM-4570”
2. Click “Locate”

3. The “Status” LED of all ADAM-4570s on the LAN will turn on
4. It’s the same way to locate one device.

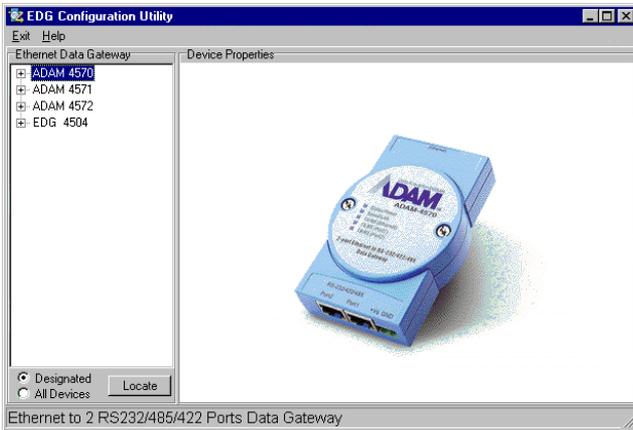


Figure 3-3 Locate the desired group of ADAM-4570s

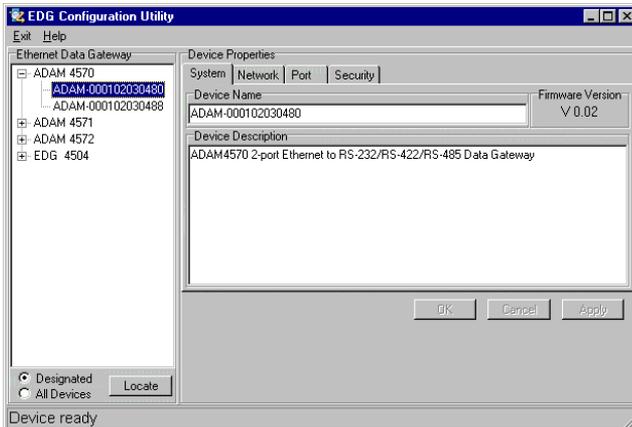


Figure 3-4 Locate specific ADAM-4570s

## 3.2.2 System Configuration

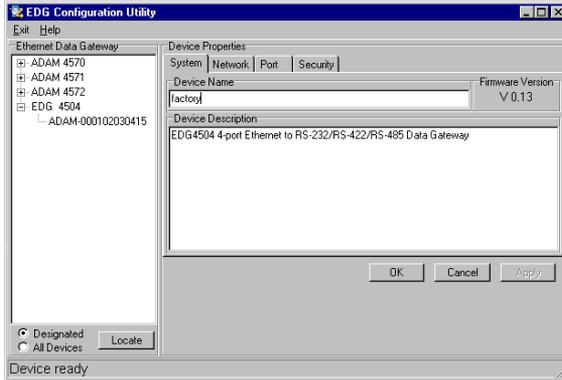


Figure 3-5 System Setting Window

Configuration utility can only search the ADAM-4570/ADAM-4571/EDG-4504 devices on the local network segment and *cannot search beyond a router or gateway*. Make sure that all the ADAM-4570/ADAM-4571/EDG-4504 devices that you want to monitor must reside on the same local network segment with the host PC.

### Ethernet Data Gateway

In this column, you will see all the found ADAM-4570/ADAM-4571/EDG-4504 devices are listed when you use the configuration utility to auto-search ADAM-4570/ADAM-4571/EDG-4504 devices. The specific number following each ADAM-4570/ADAM-4571/EDG-4504 device is its MAC Address. The MAC Address is what helps the local system to identify and locate each Ethernet data gateway device. This MAC Address is already set before delivery from factory, hence no need for further configuration.

## **Device Name**

Configuration utility provides a default name for device to distinguish a specific ADAM-4570/ADAM-4571/EDG-4504 from other ADAM-4570/ADAM-4571/EDG-4504. You can update the default device name based on your application. Names longer than 128 characters cannot be used. It is best to choose a name you can remember.

## **Device Description**

This field is to record the function, application and other information for each ADAM-4570/ADAM-4571/EDG-4504 device in more detail for easy management and maintenance. You are allowed to describe in your own words.

## **Firmware version**

In this field, the configuration utility represents the firmware version of the ADAM-4570/ADAM-4571/EDG-4504. You might need to refer to the firmware version to determine functions available on the ADAM-4570/ADAM-4571/EDG-4504 device. In case of problems that might concern the firmware version, please provide the firmware version number to our Customer Service.

## **Type**

Each ADAM-4570/ADAM-4571/EDG-4504 offers three serial interfaces, RS-232, RS-485 and RS-422. You can use any one of these serial interfaces according to your requirements.

### 3.2.3 Network Configuration

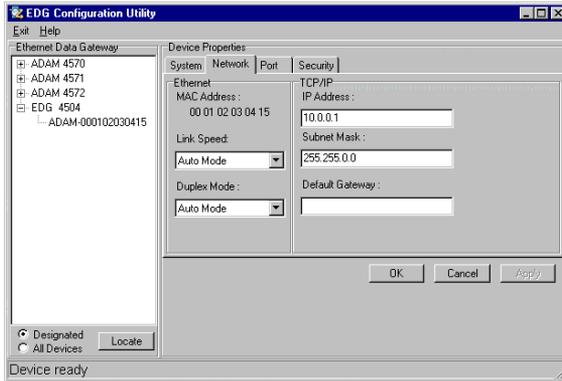


Figure 3-6 Network Configuration Window

#### MAC Address

This does not need configuration.

#### Link Speed

This function will show the current linking speed to be either 10Mbps or 100Mbps. However, the utility will auto-detect the current transmission speed on the network segment and set the transmission speed for the device accordingly without your further efforts.

#### Duplex Mode

The utility will detect the current transmission mode (half-duplex or full-duplex) on the network segment, and set the transmission mode for the device accordingly without your further efforts.

## IP address, Subnet Mask, Default Gateway

The IP address identifies your ADAM-4570/ADAM-4571/EDG-4504 device on the global network. Each ADAM-4570/ADAM-4571/EDG-4504 has same default IP address 10.0.0.1. Obtain a specific IP address from your network administrator and then configure each ADAM-4570/ADAM-4571/EDG-4504 with the individual IP address.

Note: The ADAM-4570/ADAM-4571/EDG-4504 does not support auto IP address configured by DHCP server.

### 3.2.4 Port Configuration

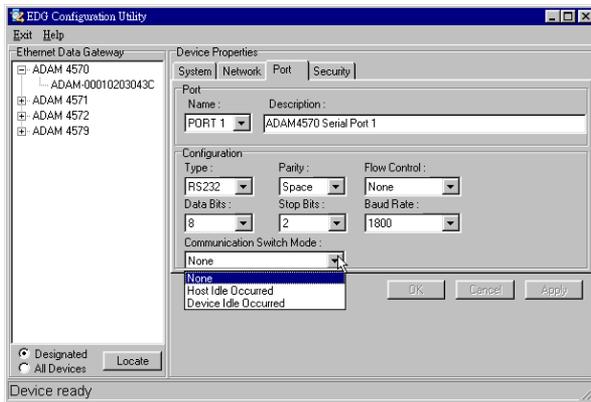


Figure 3-7 Port Configuration Window

**Name**

To specify which port on the ADAM-4570/ADAM-4571/EDG-4504 is to be connected to the serial device.

**Description**

You can give more detailed description of the function of the port for easy management and maintenance. Descriptions longer than 128 characters cannot be used.

**Type**

Each ADAM-4570/ADAM-4571/EDG-4504 offers three kinds of serial interfaces, RS-232, RS-485 and RS-422. You can use any of the three serial interfaces according to your requirements.

**Parity**

The ADAM-4570/ADAM-4571/EDG-4504 provides five options: Even, Odd, None, Space, Mark.

**Flow Control**

The ADAM-4570/ADAM-4571/EDG-4504 provides four options: None, Xon/Xoff, RTS/CTS, DTR/DSR.

**Data Bits**

The ADAM-4570/ADAM-4571/EDG-4504 provides four options: 5, 6, 7 or 8.

**Stop Bits**


The ADAM-4570/ADAM-4571/EDG-4504 provides three options: 1, 1.5 or 2.

**Baud Rate**

The ADAM-4570/ADAM-4571/EDG-4504 supports baud rates from 300 to 230,000 bps.

### 3.2.4.1 Host/Device Idle Protection (ADAM-4570 only)


When building up a system, users sometimes face the following problems. The system crashes because the serial/Host device breaks down; the application program fails or the cable between the host device and the ADAM-4570 breaks etc. For keeping the stability of system, the users usually have to spend lots of efforts to build up “Redundant” function. Now the ADAM-4570 provides new powerful functions to help users to build up it fast and easily. Focusing on Host PC, serial device, ADAM-4570, the new functions are: Host idle switch, device idle switch and auto-reconnect (refer to Chapter 3.4.4).

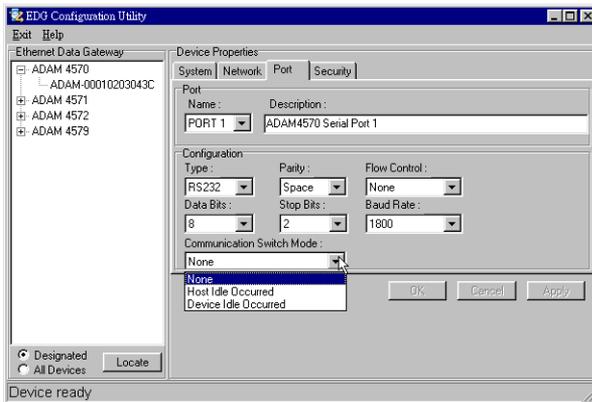

### Host Idle Switch Mode

When the application program which is running in host PC fails, the ADAM-4570 and the serial device always “Hang up”. The data can not be sent to other PC. The purpose of the “Host idle switch” mode is to prevent this system hang-up from occurring due to the above problems. If the application program fails, the ADAM-4570 will cut off the connection between the host PC and the ADAM-4570. Another PC can then start to access the same ADAM-4570. Below illustrates the behavior of the ADAM-4570.


1. Users set up the time period that the ADAM-4570 waits for the host PC to send commands.
2. If the time is over the set time, the ADAM-4570 will cut the connection between host A and the ADAM-4570.
3. Host B then starts to set up a connection between host B and the ADAM-4570.
4. If host B is in the authority list, it can access the ADAM-4570.

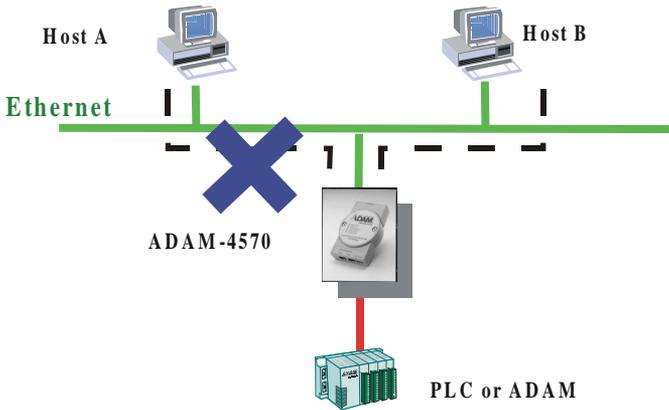

*Figure 3-8: Architecture—Host idle switch mode*


## Configuration Steps

1. Select “Host Idle” mode.

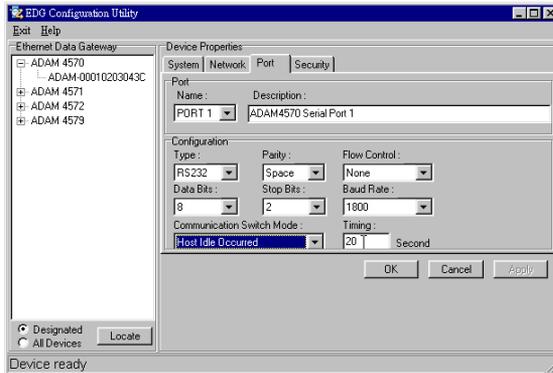


2. Key-in the Timing.

The “Timing” is the time that the ADAM-4570 will wait to receive commands from the host PC. If the ADAM-4570 does not receive any commands from the host PC over this user set period of time, the ADAM-4570 will automatically cut off the connection. The time limitation (seconds) ranges from 1 ~ 4095

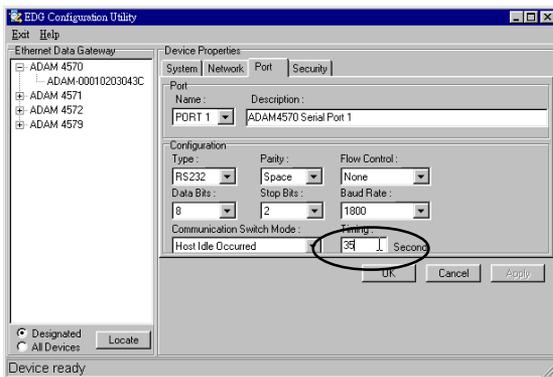

### 3. Make sure that Host B is in the authority list.

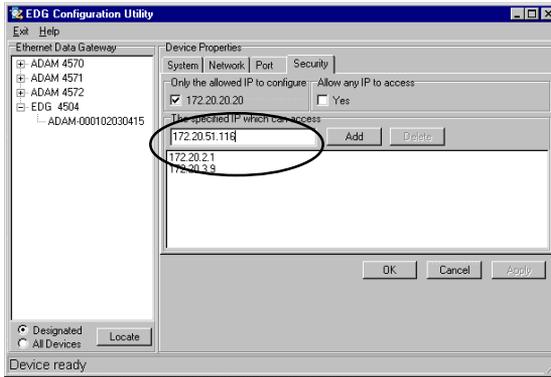


## Device Idle Switch Mode

When the serial device or communication between the device and the ADAM-4570 fails, the data can not be sent to the host PC in the set time period. The purpose of the “Device idle switch” mode is to provide another communication link to the serial device. If the serial device or communication between the device and the ADAM-4570 fails, the ADAM-4570 will switch the communication port from port 1 to port 2 to keep communicating with device B automatically. Thus, device B can send data to ADAM-4570’s port 2. An illustration of this configuration follows.

1. User sets up COM 25 in host PC to receive the data.
2. User sets up the period of time the ADAM-4570 waits for device A to send data.
3. If the time is more than the set time, the ADAM-4570 will switch the communication port from port 1 to port 2.
4. Device B can send data to the ADAM-4570 via port2.


5. The ADAM-4570 will transmit data to the same COM 25 of the host PC.

The COM 25 of host PC  
receives the data

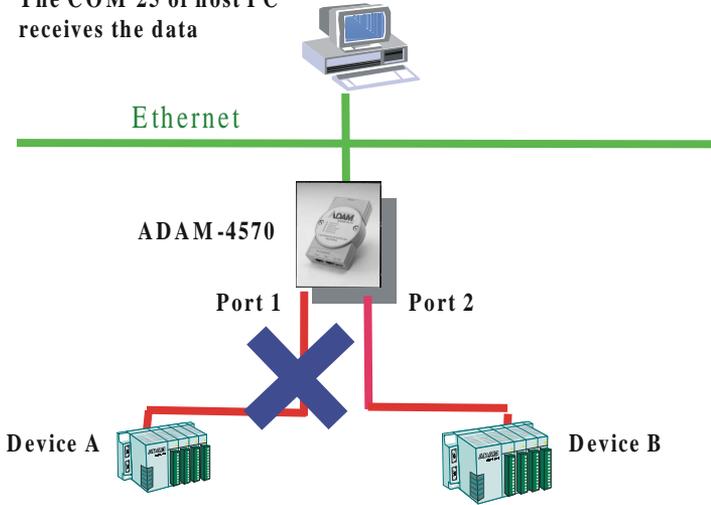


## Configuration Steps

### 1. Select “Device Idle” mode.

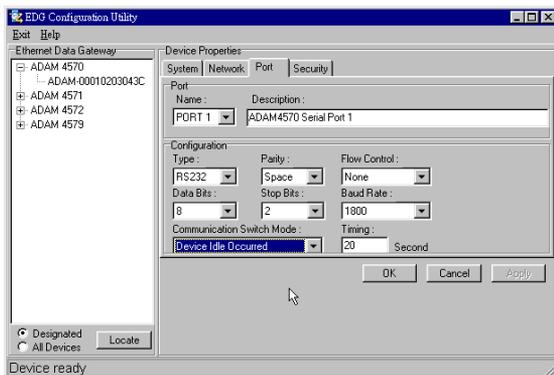

### 2. Key-in the Timing.

The “Timing” is the period of time that the ADAM-4570 will wait to receive data from the serial device. If the ADAM-4570 does not receive any data from the device over the period of time the user sets up, the ADAM-4570 will switch the communication port to another one. The time limitation (seconds) is from 1 ~ 4095

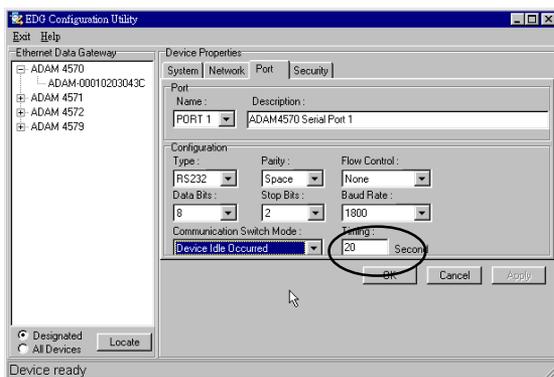

## 3.2.5 Security Configuration

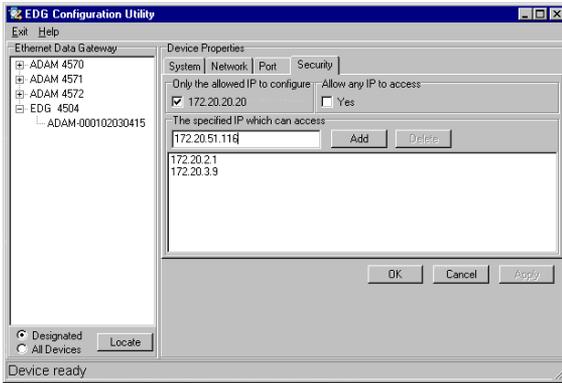


Figure 3-9 Security configuration

### **Only configure the authorized IP**

This option is enabled in order to protect all configuration settings from being changed inadvertently.

### **Allow any IP to access**

If this option is enabled, any PC can access data from this ADAM-4570/ADAM-4571/EDG-4504.

### **The specified IP which can access**

If you do not want many PCs to have the access right, you can limit at most 32 PCs to access data from this ADAM-4570/ADAM-4571/EDG-4504.

### 3.3 Status Messages

The status message shown at the bottom of the utility window reflects the current status of ADAM-4570/ADAM-4571/EDG-4504.

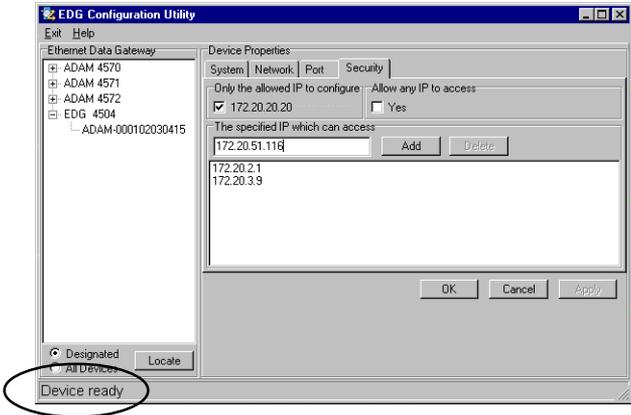


Figure 3-10 Status messages

#### ***“Read”***

The configuration utility has found the ADAM-4570/ADAM-4571/EDG-4504 and it is ready for use.

#### ***“Searching EDG COMport”***

The configuration utility is searching the ADAM-4570/ADAM-4571/EDG-4504

#### ***“Querying DATA from EDG COMport”***

The configuration utility is getting data from the ADAM-4570/ADAM-4571/EDG-4504.

### ***“Device Ready”***

The ADAM-4570/ADAM-4571/EDG-4504 is ready to be configured and is now waiting for acknowledgement from the device.

### ***“Lost Connection from the Device”***

Due to device shut down or network failure, the configuration utility has lost connection after 5 seconds.

### ***“Fail to apply this setting to the device”***

Specific settings are not accepted by ADAM-4570/ADAM-4571/EDG-4504.

### ***“The device fails to respond”***

The connected device does not respond.

### ***“Fail to reset the device”***

Fail to reset the ADAM-4570/ADAM-4571/EDG-4504.

## **3.3.1 Connection Diagnostic**

When you complete the configuration of your ADAM-4570/ADAM-4571/EDG-4504s, you can follow the steps to check if the ADAM-4570/ADAM-4571/EDG-4504 connects to network or not.

1. Execute the Microsoft DOS program.
2. Execute **“PING”** command and type your IP address of ADAM-4570/ADAM-4571/EDG-4504. If ADAM-4570/ADAM-4571/EDG-4504 connects to your network, it will display in the screen. If the ADAM-4570/ADAM-4571/EDG-4504 cannot be pinged, you will need to ask someone

at the remote site to check and see if the power is on, and make sure that the connection is okay.

### 3.4 Port Mapping Utility

The purpose of the port mapping utility is to help you manage all ports which are in one Windows NT or Windows 2000 platform. The utility displays three types of ports: *Used ports*, *Unused ports* and *ADAM-4570/ADAM-4571/EDG-4504 ports*. Please follow the steps.

1. Click the UNUSED PORTS item and select the port which you want to configure.

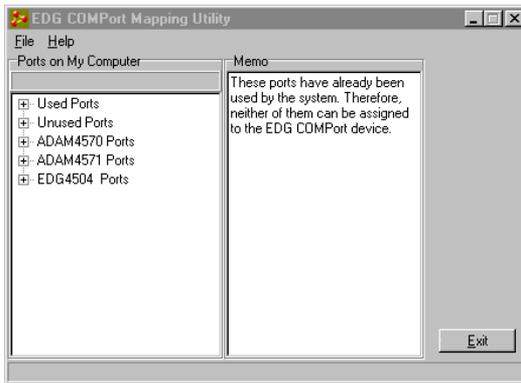


Figure 3-11 Unused ports

2. Click **ADD** button to assign the COMport to the specific ADAM-4570/ADAM-4571/EDG-4504.
3. Type IP address of the ADAM-4570/ADAM-4571/EDG-4504 and select ports.

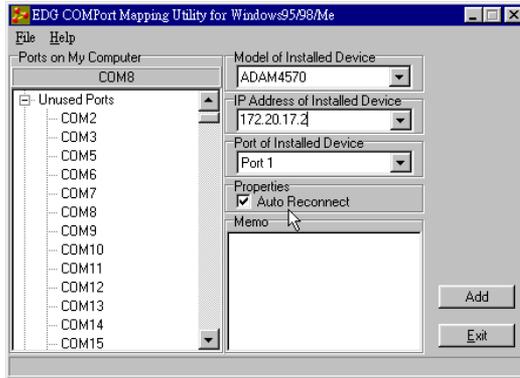



Figure 3-12 Assign COM port to ADAM-4570/ADAM-4571/EDG-4504

Note: If you assigned different COMport to the same ADAM-4570's port. The dialog box will appear to remind you.



Figure 3-13 Warning window

4. The port has been added into ADAM-4570/ADAM-4571/EDG-4504
5. If you want to remove the COMport, click **DELETE** to remove this.

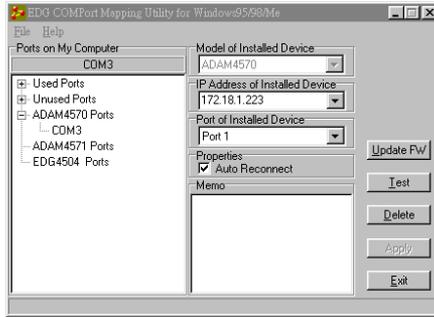

6. After you complete the configuration, click "Apply".

### 3.4.1 Self Test Function

The purpose of this test is to make sure the communication from host PC to ADAM -4570 is OK. If there is still an error, you can check the communication from the ADAM-4570/ADAM-4571/EDG-4504 to the serial devices.

If the test is selected, an external test will be done to check that the connection signals for each port are working properly. For the test, you will need to connect each port to a loopback tester (provided in the package). Refer to the following chart for the specifications of this loopback tester. The loopback test only applies to RS-232 mode. The test is divided into two parts: Signal test and Communication Parameters test.

1. Click the Test button in the Port Mapping utility.

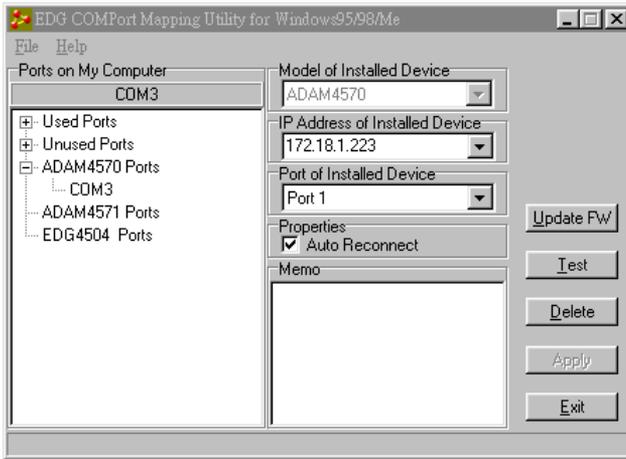


Figure 3-14 Test window

## Signal Test

- **RTS → CTS:** Check the RTS and CTS signals between two ports.
- **DTR → RI:** Check the DTR and RI signal between two ports.
- **DTR → DSR:** Check the DTR and DSR signal between two ports.
- **DTR → DCD:** Check the DTR and DCD signal between two ports.

## Communication Parameters Test

- Baud rate: From 50 bps to 230 Kbps
- Data bit: 5, 6, 7, 8
- Stop bit: 1, 1.5, 2
- Parity: odd, even, none, space, mark

2. Click **OK** button to return to the port mapping window. All the ports in the ADAM-4570/ADAM-4571/EDG-4504 are tested ok.


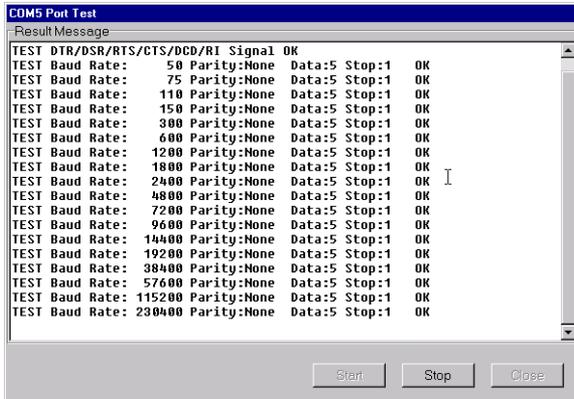


Figure 3-15 Loopback test

### 3.4.2 Upgrading ADAM-4570/ADAM-4571/EDG-4504's Firmware Download

Advantech continually upgrades its firmware to keep pace with the ever-expanding world of computing. You can use the Download function located on Port Mapping utility to carry out the upgrade procedure. Please access Advantech's Web site at <http://www.advantech.com> to download the required computer file and then follow these instructions.

1. Click on the toolbar **Update FW** icon.

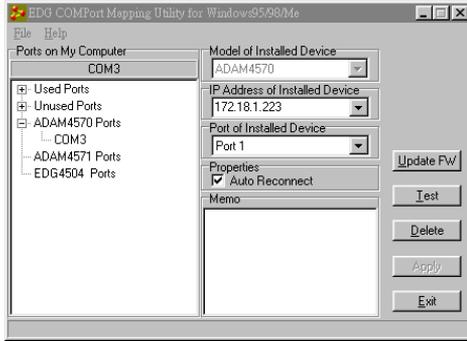

*Figure 3-16 Update firmware window*

2. Locate and then select the filename of the firmware that you downloaded.



*Figure 3-17 Select the file*

3. After downloading firmware completely, click on the **Reboot** button. The ADAM-4570/ADAM-4571/EDG-4504 will re-start automatically.




*Figure 3-18 Download firmware*

Note: After clicking **Reboot** button, configuration utility will not reboot ADAM-4570/ADAM-4571/EDG-4504 until no application program access this ADAM-4570/ADAM-4571/EDG-4504.


### 3.4.3 Save The Configuration

If you want to save or recover the configuration, you can select the “Import/Export” items.

1. a. Select “File”
- b. Select “Import” or “Export”

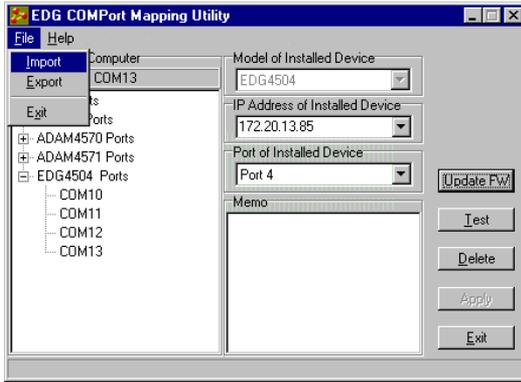


2. Save or open the configurations

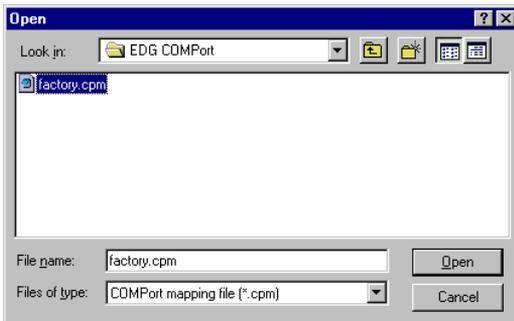

### 3.4.4 Auto-reconnect function

Sometimes, the system crashes because the ADAM-4570 is interrupted or is powered-off by accident. Users want the host PC to re-connect to the ADAM-4570 automatically after such an occurrence. The ADAM-4570 provides an “Auto-reconnect” function to solve this problem. When the ADAM-4570 is powered-off accidentally, the driver will keep trying to reconnect the ADAM-4570 automatically. When the ADAM-4570 recovers or is powered-on, due to this auto-reconnect function, the host PC’s commands will be received by the ADAM-4570 again. This function enhances the reliability of the system.

Warning: If you want to enable the “Auto-reconnect” function, please note that you can NOT enable the “Host idle” function at the same time. The same also applies in reverse, e.g. if you want to enable the “Host idle” function, you also can NOT enable the “Auto-reconnect” function at the same time.

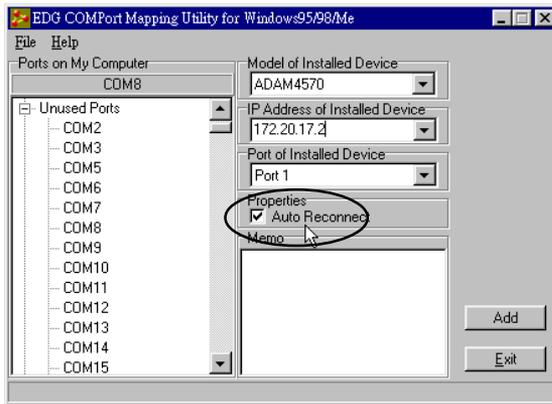

# Chapter 4

## Troubleshooting

This chapter explains how to solve some of the most common problems you could encounter while using ADAM-4570/ADAM-4571/EDG-4504. If you are still having problems after reading this chapter, contact your dealer, or e-mail Advantech for help.

***“Configuration Utility can not find ADAM-4570/ADAM-4571/EDG-4504”***

1. Check POWER LED. If it is off, you have to check :
  - Make sure the ADAM-4570/ADAM-4571/EDG-4504 power cable is plugged in, and the server is receiving power.
  - Check that the server’s network connector is plugged in properly.
  - Make sure your computer is properly connected to the network.
  - The input voltage is between +10V and +30V
2. Check LINK LED. If it is off, you have to check:
  - Network Connection is OK
  - Make sure your network is 10/100 Mbps
3. If the above are completed, it means the ADAM-4570/ADAM-4571/EDG-4504 is okay. Next, check to see if the ADAM-4570/ADAM-4571/EDG-4504 and the host are on the same local area network.

***“Configuration utility can find ADAM-4570/ADAM-4571/EDG-4504 but cannot access ADAM-4570/ADAM-4571/EDG-4504”***

For security reasons, and to simplify operations, users can give the access right to specific PC. Only these PCs can get data from ADAM-4570/ADAM-4571/EDG-4504. Thus, if while using the ADAM-4570/ADAM-4571/EDG-4504, it is advised that you check to see if your PC is on the access right list.

***“Cannot change the IP address or other server properties”***

The network administrator is the only one allowed to modify the ADAM-4570/ADAM-4571/EDG-4504’s configuration. Keep in mind, even when multiple hosts share the same network, administrative access is still protected. If you need to change any configuration settings, ask your network administrator for assistance.

***“The host PC can access the ADAM-4570/ADAM-4571/EDG-4504 at this local site but later moves the ADAM-4570/ADAM-4571/EDG-4504 to a remote site that PC cannot access.”***

Due differing network interface connections, your IP address might have changed, and as a result, you are no longer on the ADAM-4570/ADAM-4571/EDG-4504’s Access Control list.

To resolve this issue:

1. Confirm your IP address with the ADAM-4570/ADAM-4571/EDG-4504.
2. As the network administrator to set up the server configuration so that you are on the ADAM-4570/ADAM-4571/EDG-4504’s Access Control list.

