

LAVATHERM 75470AH

TUMBLE DRYER

USER MANUAL

# CONTENTS

4	SAFETY INFORMATION
6	ENVIRONMENT CONCERNS
7	PRODUCT DESCRIPTION
8	ACCESSORIES
10	CONTROL PANEL
11	BEFORE FIRST USE
11	PROGRAMMES
13	USING THE APPLIANCE
17	HINTS AND TIPS
19	CARE AND CLEANING
26	TROUBLE SHOOTER AND SERVICE
28	TECHNICAL INFORMATION
29	INSTALLATION

## SERVICE

When contacting Service, ensure that you have the following data available. The information can be found on the rating plate.

Model \_\_\_\_\_

PNC \_\_\_\_\_

Serial Number \_\_\_\_\_

The following symbols are used in this user manual:



Warning - Important Safety information.



General information and tips



Environmental information

Subject to change without notice

## FOR PERFECT RESULTS

Thank you for choosing this AEG product. We have created it to give you impeccable performance for many years, with innovative technologies that help make life simpler – features you might not find on ordinary appliances. Please spend a few minutes reading to get the very best from it.

## ACCESSORIES AND CONSUMABLES

In the AEG webshop, you'll find everything you need to keep all your AEG appliances looking spotless and working perfectly. Along with a wide range of accessories designed and built to the high quality standards you would expect, from specialist cookware to cutlery baskets, from bottle holders to delicate laundry bags...



Visit the webshop at:  
[www.aeg.com/shop](http://www.aeg.com/shop)

## VISIT OUR WEBSITE FOR:

- Products
- Brochures
- User manuals
- Trouble shooter
- Service information

[www.aeg.com](http://www.aeg.com)



## SAFETY INFORMATION

**In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety.**



- Read the instruction manual before the appliance use.

### GENERAL SAFETY

- It is dangerous to alter the specifications or attempt to modify this product in any way.
- This appliance is not intended for use by persons (including children) with reduced physical and sensory conditions or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Make sure that small children and pets do not climb inside the drum. To avoid this, please check into the drum before using.
- Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles (if there is no special drying programme), rubber backed articles and clothes or pillows fitted with foam rubber pads must not be dried in the tumble dryer.
- Make sure that there is access to the mains plug after the installation.
- Always unplug the appliance after use, cleaning and maintenance.
- Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts.
- Items that have been soiled with substances such as cooking oil acetone, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- **Danger of explosion:** Never tumble dry items that have been in contact with inflammable solvents (petrol, methylated spirits, dry cleaning fluid and the like). As these substances are volatile, they could cause an explosion. Only tumble dry items washed with water.
- **Risk of fire:** items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in the tumble dryer.
- If you have washed your laundry with stain remover you must execute an extra rinse cycle before loading your tumble dryer.
- Please make sure that no gas lighters or matches have accidentally been left in pockets of garments incase they are loaded into appliance
- The condensed water is not applicable to drink or to prepare food. It can cause health problems to people and pets.
- Do not seat or lean on the load door. The appliance can tilt.

**WARNING!**

- **Risk of fire! To prevent from the risk of self combustion do not stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.**
- **Lint must not be allowed to accumulate around the tumble dryer.**
- **Risk of electric shock!** Do not spray down the appliance with jets of water.
- The final part of a tumble dryer cycle occurs without heat ( cool down cycle ) to ensure that the items are left at a temperature that ensures that items will not be damaged.
- The tumble dryer is not to be used if industrial chemicals have been used for cleaning.
- Ensure you have good ventilation in the installation room to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.

**INSTALLATION**

- This appliance is heavy. Be careful when you move the appliance.
- When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre.
- All packaging must be removed before use. Dangerous damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual.
- Each electrical work necessary to install this appliance must be done by a qualified electrician or competent person.
- The rear surface of the appliance must be put against the wall
- If the appliance is installed on the carpet or equivalent, adjust the feet.

Air must flow freely below the appliance.

- After the appliance installation, check that it is not squeeze or stay on the electrical supply cable.
- If the tumble dryer is put on top of a washing machine, it is mandatory to use the stacking kit (optional accessory - see chapter: "ACCESSORIES").

**USE**

- This appliance is for domestic use only. It must not be used for other functions .
- Only dry fabrics which are applicable to dry in the tumble dryer. Follow the instructions on each piece of clothing label.
- Do not dry not washed items in the tumble dryer.
- Do not put more load than recommended. Obey the maximum load volume. See the related chapter in the user manual.
- Clothes which are dripping wet must not be put in the tumble dryer.
- Garments which have been in contact with volatile petroleum products should not be machine dried. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the appliance.
- Do not use the tumble dryer if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the tumble dryer is accessible.
- Fabric softener or equivalent products must be used as specified by the fabric softener manufacturer.
- Risk of fire! Do not dry the damaged items which contain padding or fillings (pillows, jackets, duvets, etc.). The padding or fillings can get out and cause the fire.

## CHILD SAFETY

- This machine is not intended for use by young children or infirm persons without supervision.
- Children often do not recognise the hazards associated with electrical appliances. Children should be supervised to ensure that they do not play with the appliance.



### WARNING!

- Danger of suffocation! The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - Keep them out of children's reach.



## ENVIRONMENT CONCERNS

### PACKAGING MATERIALS

Recycle the materials with the symbol . Put the packaging in applicable containers to recycle it.

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic


- Keep all detergents in a safe place out of children's reach.
- Make sure that children or pets do not climb inside the drum.

### DISCARD THE APPLIANCE

- Disconnect the mains plug from the mains socket.
- Cut off the mains cable and discard it.
- Discard the door catch. This prevents children or pets to be closed in the appliance. There is a risk of suffocation.

equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.


# PRODUCT DESCRIPTION

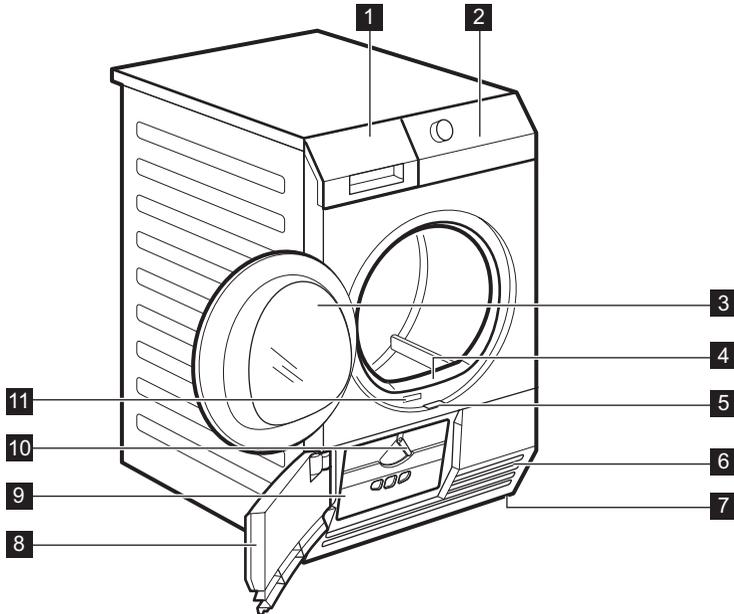

- |   |                                       |
|---|---------------------------------------|
| <b>1</b> Water container                                | <b>7</b> Adjustable feet              |
| <b>2</b> Control panel                                  | <b>8</b> Heat exchanger door          |
| <b>3</b> Load door (reversible)                         | <b>9</b> Heat exchanger filters cover |
| <b>4</b> Primary filter                                 | <b>10</b> Lock knob                   |
| <b>5</b> Sliding button to open the heat exchanger door | <b>11</b> Rating plate                |
| <b>6</b> Airflow slots                                  |                                       |


## ACCESSORIES

### STACKING KIT

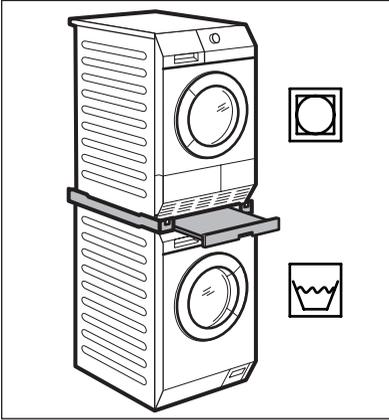

Product name: SKP11  
Available from your authorized dealer. Stacking kit can be used only with the washing machines specified in the leaflet. See leaflet attached. Read carefully the instructions supplied with the kit.


### DRAINING KIT

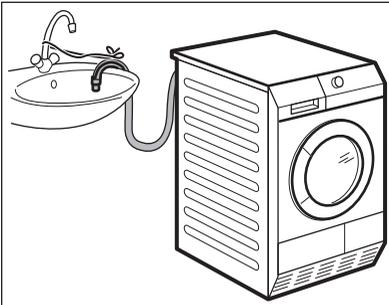

Product name: DK11.  
Available from your authorized dealer (can be attached to some types of the tumble dryers)  
Installation kit for through draining of the condensed water into a basin, siphon, gully, etc. After installation the water container is drained automatically. The water container must stay in the appliance.  
Installed hose must be on the height from minimum of 50 cm to maximum of


1 m from floor level. The hose cannot be in loop. If possible decrease the length of the hose.  
Read carefully the instructions supplied with the kit.

### PEDESTAL WITH THE DRAWER

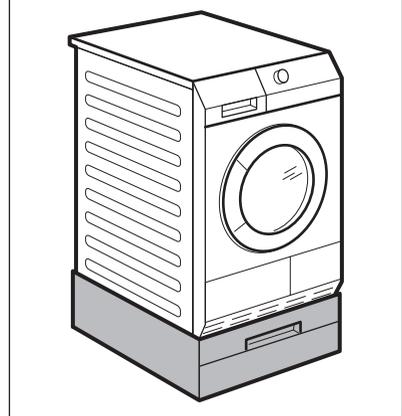

Product name: PDSTP10.  
Available from your authorized dealer. To put the appliance higher at the level which helps to easy load and remove the laundry .  
The drawer can be use for laundry storage e.g. : towels, cleaning products and more.  
Read carefully the instructions supplied with the accessory.

### DRYING RACK

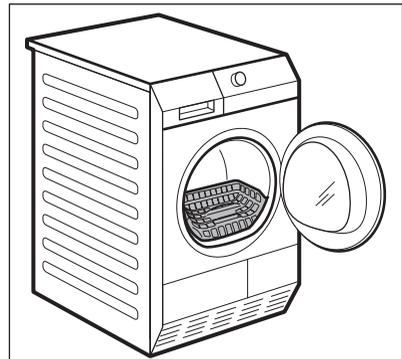

Available from your authorized dealer  
(can be attached to some types of the  
tumble dryers)


Drying rack accessory let to dry safely in  
the tumble dryer:

- sport shoes

- wool
- soft toys
- lingerie

Read carefully the instructions supplied  
with the kit.

# CONTROL PANEL

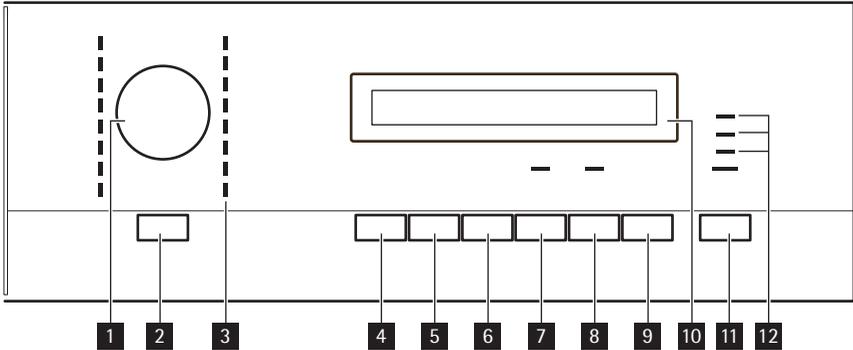

- 1** Programme dial
- 2** Push button On/Off
- 3** Programme indicators
- 4** Push button Dry Plus
- 5** Push button Reverse Plus
- 6** Push button Anticrease
- 7** Push button Buzzer
- 8** Push button Time Drying
- 9** Push button Delay Start
- 10** Display
- 11** Push button Start/Pause
- 12** Indication lamps: drain the water container, clean the primary filter, clean the heat exchanger filters

## DISPLAY

MAX | | 90' 30" | 2.00

Symbol	Description
MIN	default dryness level
MED	moderate extra dryness

Symbol	Description
MAX	maximum extra dryness
	reverse plus
30 m / 90 m	anti-crease time
	drying cycle phase indicator
	cooling cycle phase indicator
	crease guard cycle phase indicator
	child lock activated
	delay start
2.00	cycle time indication
10' - 2.00	time programme selection (10 min. - 2h.)
30' - 20h	delay start selection (30 min. - 20h.)

## BEFORE FIRST USE

Clean the tumble dryer drum with a moist cloth or set a short programme (e.g. 30 minutes time programme) with the load of moist cloths.



### CAUTION!

The compressor and its system in the tumble dryer is filled with the special agent which is free from fluoro-chloro-

hydrocarbons. This system must stay tight. The damage of the system can cause the leakage and damage of the appliance.

At the beginning of drying cycle (3-5 min.) there could be a slightly higher sound level. It is because of start of the compressor that is normal for compressor powered appliances such: refrigerators, freezers .

## PROGRAMMES

Programmes	Load 1)	Properties	Available functions	Fabric mark
Cottons				
Extra Dry	7 kg	To dry cotton pieces of clothing. Drying level: extra dry.	all except  Reverse Plus and  Time Drying	
Cupboard Dry <sup>2)</sup>	7 kg	To dry cotton pieces of clothing. Drying level: cupboard dry.	all except  Reverse Plus and  Time Drying	
Iron Dry <sup>2)</sup>	7 kg	To dry cotton pieces of clothing. Drying level: applicable to iron.	all except  Reverse Plus and  Time Drying	
Jeans	7 kg	To dry leisure clothing such as jeans, sweat-shirts of different material thicknesses (e.g. at the neck, cuffs and seams).	all except  Reverse Plus and  Time Drying	
Bed Linen	3 kg	To dry bed linen such as: single and double sheet, pillowcase, bedspread.	all except  Reverse Plus and  Time Drying	
Pillows	3 kg	To dry single or double duvet and pillows (with feather, down or synthetic fillings).	all except  Reverse Plus and  Anti-crease and  Time Drying	

Programmes	Load 1)	Properties	Available functions	Fabric mark
 Time	7 kg	To dry laundry with the time set by the user. The time value must be related to the load. To dry one item or small quantities of the laundry we recommend to use short times.	all except  Dry Plus and  Reverse Plus	
 Extra Quick Mixed	3 kg	To dry cotton and synthetic fabrics, uses low temperature.	all except:  Reverse Plus and  Time Drying	
 Synthetics				
 Extra Dry	3,5 kg	To dry thick or multi-layered fabrics, e. g. pullovers, bedding, table linen.	all except  Time Drying	
 Cupboard Dry 2)	3,5 kg	To dry thin fabrics which are not ironed, e.g. easy care shirts, table linen, baby clothes, socks, lingerie with bones or wires.	all except  Time Drying	
 Iron Dry	3,5 kg	To dry thin fabrics which are also to be ironed, e.g. knitwear, shirts.	all except  Time Drying	
 Easy Iron	1 kg (or 5 shirts)	To dry easy care fabrics such shirts and blouses; for minimum ironing effort. The results can be different for to the different types of fabric and its finish. Put fabrics in the tumble dryer straight. After the cycle, immediately remove dried fabrics and put on a cloths hanger.	all except  Reverse Plus and  Time Drying	
 Active Wear	2 kg	To dry outdoor pieces of clothing, technical, sports, pile fabrics, waterproof and breathable jackets, shell jacket teamed with a removable fleece or inner insulation.	all except  Reverse Plus and  Anti-crease and  Time Drying	
 Sports	2 kg	To dry sportswear, thin and light fabrics, microfiber, polyester, which are not ironed.	all except  Reverse Plus and  Time Drying	

Programmes	Load 1)	Properties	Available functions	Fabric mark
 Silk/Lingerie	1 kg	To dry silk/lingerie with warm air and gentle movement.	all except  Reverse Plus and  Time Drying	
 Wool Re-fresh	1 kg	To refresh the cloths made of wool . The cloths become soft and cosy. We recommend to remove the cloths immediately after the programme end.	 Buzzer ,  Time Drying <sup>3)</sup> ,  Delay Start	

1) maximal weight of dry clothes

2) For test institutes only:

To make a performance test use the standard programmes which are specified in the EN 61121 document. If is necessary to correct the remaining moisture level of the laundry, adjust the programme with the  Dry Plus function .

3) Only with the drying rack — see chapter ACCESSORIES

## USING THE APPLIANCE

### PREPARING THE LAUNDRY



Dry only the laundry applicable to dry in the tumble dryer. Make sure if the laundry is applicable to dry in the tumble dryer. Do the check of the fabric mark on the clothes.

Fabric mark	Property
	Applicable to dry in the tumble dryer
	Applicable to dry in the tumble dryer at standard temperature
	Applicable to dry in the tumble dryer at decreased temperature
	Not applicable to dry in the tumble dryer

Correctly prepare the laundry:

- close zips, button up duvet covers and attach loose ties or ribbons (e.g. ribbons of aprons) - laundry can tangle

- make sure the pockets are empty - remove metal items (paper clips, safety pins, etc.).
- turn items with 2 fabric layers inside out (e.g. cotton lined anoraks, the cotton fabric layer must be external).


Dry only:

- cotton and linen with Cottons programmes
- synthetic and mixtures with Synthetic programmes
- separately the strong coloured textiles and the light coloured textiles - colours can bleed
- cotton jersey and knitwear only with the applicable programmes - items can shrink



Do not put more laundry than the maximum load which is **7kg**.

## LOADING THE LAUNDRY

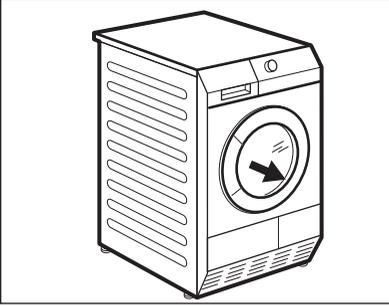

1. Pull the appliance door
2. Load loosely the laundry.
3. Close the appliance door.



### CAUTION!

Do not lock the laundry in between the appliance door and rubber seal.

## SWITCHING ON THE APPLIANCE

Push the On/Off button to activate or to deactivate the appliance. When the appliance is on, some indications come in to the view on the display.

The function push button symbols list	
	On/Off
	Dry Plus
	Reverse Plus
	Anticrease
	Buzzer
	Time Drying
	Delay Start
	Start/Pause


## AUTO STAND-BY FUNCTION

To decrease the energy consumption, the automatic stand-by function deactivates the appliance:

- if the Start/Pause button was not pushed in the time of 5 minutes.
- after 5 minutes from the programme end.

Push the On/Off button to activate the appliance.

## SETTING A PROGRAMME

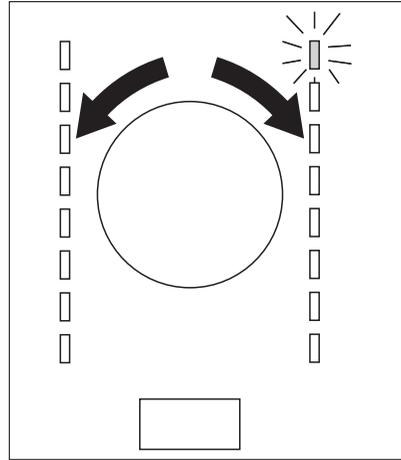

Use the programme dial to set the programme. The possible time to complete the programme come into view on the display.




The drying time you see is related to the load of 5 kg for cotton and jeans programmes. For the other programmes the drying time is related to the recommended loads. The drying time of the cotton and jeans programmes with the load more than 5 kg is longer.

## SPECIAL FUNCTIONS

Together with the programme you can set 1 or more special functions.

To activate or deactivate the function push the applicable push button.

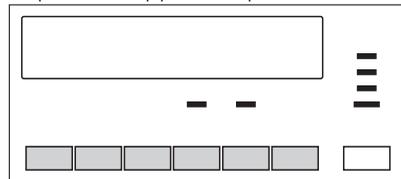

When the function is activated the LED above the push button or symbol on the display comes into view.

## THE DRY PLUS FUNCTION

This function helps to get the laundry more dried. There are 3 possible selections:

**MIN** - the default selection which is related to the programme.

**MED** — the selection to get the laundry lightly dried.

**MAX** — the selection to get the laundry more dried.

## THE REVERSE PLUS FUNCTION

To dry more lightly the sensitive and temperature sensitive textiles (e.g. acrylic, viscose). This function helps also to decrease the creases on the laundry. For fabrics with the symbol  on the fabric label.

## THE ANTICREASE FUNCTION

Extends anticrease phase (30 minutes) at the end of the drying cycle to 90 minutes. This function prevents laundry from creases. Laundry can be removed during the anticrease phase.

## THE BUZZER FUNCTION

When the buzzer function is activated you can hear the buzzer at the:

- cycle end
- anti-crease phase start and end
- cycle interruption

The buzzer function is by default always on. You can use this function to activate or deactivate the sound.

## THE TIME DRYING FUNCTION

Operates only with the Time programme. Lets the user to set special time of drying programme from minimum 10 min. to maximum of 2 hours (in 10 min. steps).

## THE DELAY START FUNCTION

 Let to delay the start of a drying programme from minimum of 30 minutes to maximum of 20 hours.

1. Set the drying programme and functions.
2. Push the Delay start button again and again until the necessary time of the delay come into the view on the display (e.g. **12h** if the programme has to start after 12 hours.)
3. To activate the Delay start function, push the Start/Pause button. The time to start decreases on the display.


## CHILD LOCK FUNCTION

The child lock can be set to prevent the children to play with the appliance. The child lock function locks all push buttons and the programme dial (this function does not lock On/Off button). To activate the child lock function push the Dry Plus and Reverse Plus buttons at the same time until the symbol  come into view on the display. To deactivate push again the above buttons until the symbol go out of view.

You can activate the child lock function:

- before you push the Start/Pause button - the appliance cannot start
- after you push the Start/Pause button - all the push buttons and the programme dial are deactivated

## STARTING A PROGRAMME

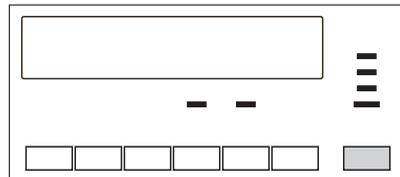

To activate the programme push the Start/Pause button. The LED above the push button changes the colour to red.

## CHANGE A PROGRAMME

To change a programme, push the On/Off button to deactivate appliance. Push the On/Off to activate the appliance and then set the programme again.

## AT THE END OF PROGRAMME

When the drying cycle is completed, the  symbol flashes on the display. If the Buzzer function is on, an acoustic signal sounds intermittently for one minute.

To remove the laundry:

1. Push the On/Off button for 2 seconds to deactivate the appliance.
2. Open the appliance door.
3. Remove the laundry.
4. Close the appliance door.



After each drying cycle:

- clean the filter
- drain the water container  
(See chapter *CARE AND CLEANING*.)

## HINTS AND TIPS

### ECOLOGICAL HINTS

- Do not use fabric softener to wash and then dry. In the tumble dryer laundry becomes soft automatically.
- Use the condensate as distilled water, e.g. for steam ironing. If it is necessary clean the condensate before (e.g. with a coffee filter) to remove possible small pieces of fluff.
- Always keep the airflow slots on the bottom of the appliance clear.
- Use the load volumes which are specified in the programmes chapter.
- Make sure that is good airflow in the appliance installation position.
- Clean the primary filter after each drying cycle.
- Clean the heat exchanger filters when the applicable indicator comes into the view on the control panel.
- Spin good the laundry before drying.

### AVERAGE LAUNDRY WEIGHTS

bathrobe	1200 g
quilt cover	700 g
man's work shirt	600 g
man's pyjamas	500 g
sheet	500 g
tablecloth	250 g
man's shirt	200 g
night dress	200 g
pillow case	200 g
towelling towel	200 g
blouse	100 g
ladies' briefs	100 g
men's underpants	100 g
napkin	100 g
tea cloth	100 g

### WATER HARDNESS AND CONDUCTIVITY

Water hardness can be different for different locations. Water hardness has an effect on the water conductivity and the operation of the conductivity sensor in the appliance. If you know the value of the water conductivity you can adjust the sensor to dry with the better results. To change the sensor conductivity:

1. Turn the programme dial to available programme.
2. Push at the same time the Dry Plus and the Antcrease buttons. Hold down until one of the symbols go into view on the display:
  -  low conductivity <300 µS/cm
  -  moderate conductivity 300-600 µS/cm
  -  high conductivity >600 µS/cm
3. Push the Start Pause button again and again until you set necessary level.
4. To memorise the setting push at the same time the Dry Plus and the Antcrease buttons.

### WATER CONTAINER FULL — INDICATION

By default the indication LED is always on. It comes into the view at the end of the cycle or when the water container is full. When you use an external equipment to drain the container, the LED can be off.

To activate or deactivate the indication:

1. Turn the programme dial to available programme.
2. Push at the same time the Dry Plus and Buzzer buttons and hold down until you see the correct setting:
  - the LED is off and the symbol  goes into the view - The LED is permanently off

- the LED is on and the symbol  $\bar{L}$  goes into the view - The LED is activated

## CARE AND CLEANING


### CLEANING THE PRIMARY FILTER

At the end of each cycle the applicable indicator (*clean the primary filter*) is on to tell you that the primary filter must be cleaned.




The filter collects the fluff. The fluff occurs while the cloths are dried in the tumble dryer.


To clean the primary filter:

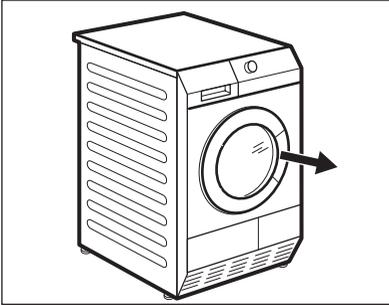



1. Open the door.

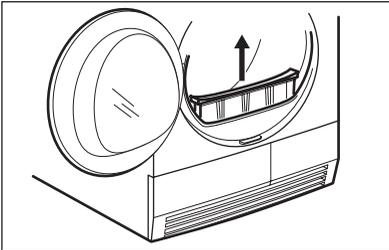

2. Pull the filter.

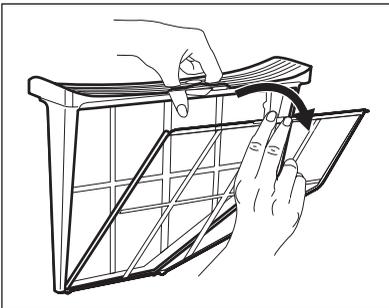

3. Open the filter.

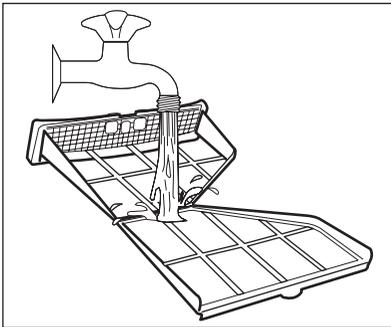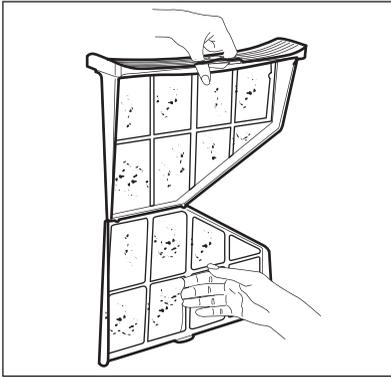

4. Use a moist hand to clean the filter.

5. If necessary clean the filter with warm water using a brush.  
Close the filter.

6. Remove fluff from the filter socket.  
For this a vacuum cleaner can be used.

7. Put the filter inside the filter socket.



**CAUTION!**

Do not operate the tumble dryer without the primary filter or with damaged or blocked filter.



Clean the primary filter after each drying cycle. Clogged filter increases the cycle time and causes higher energy consumption.




To drain the water container automatically you can install draining accessory (see chapter: ACCESSORIES)


## DRAINING THE WATER CONTAINER

Drain the water container after each drying cycle.


To drain the water container:

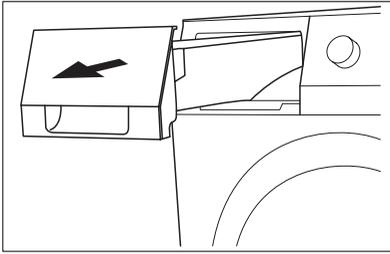

1. Pull the water container.

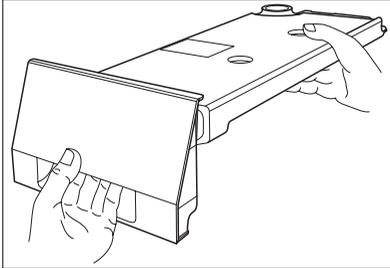

2. Move the water container in horizontal position.

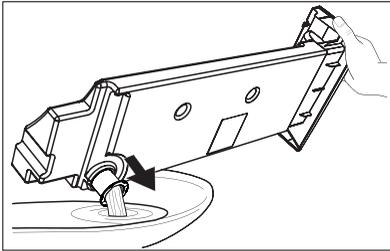

3. Move the plastic connection out and drain the water container into a sink or equivalent receptacle.

4. Move plastic connection in and install water container.



**WARNING!**

Risk of poisoning. The condensed water is not applicable to drink or to prepare food.




The condensed water can be used as distilled water, e.g. for steam ironing. If necessary filter the condensed water (e.g. with a coffee filter) to remove possible residue and small pieces of fluff.


**CLEANING THE HEAT EXCHANGER FILTERS**

If the applicable indicator (*clean the heat exchanger filters*) is on, the filters must be cleaned.


To clean the filters:

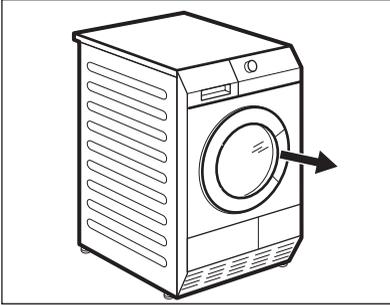


1. Open the loading door.

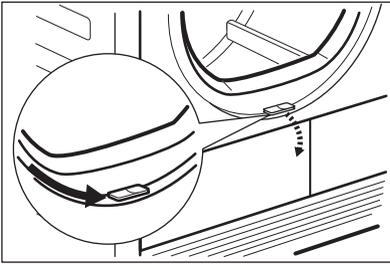


2. Move the release button on the bottom of the door opening and open the heat exchanger door.

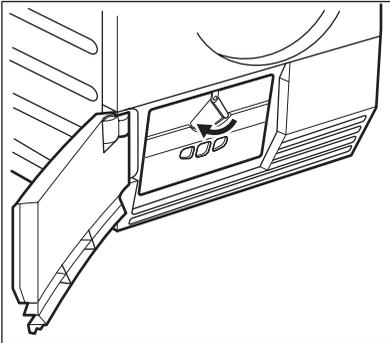


3. Turn the blockage to unlock the heat exchanger cover.

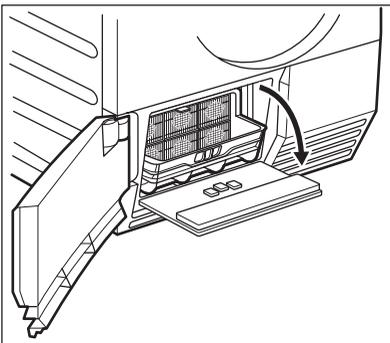


4. Lower the heat exchanger filters cover.

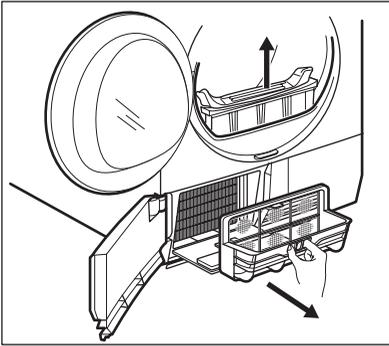



5. Lift the primary filter. Hold the heat exchanger filter and pull it out from the bottom compartment.

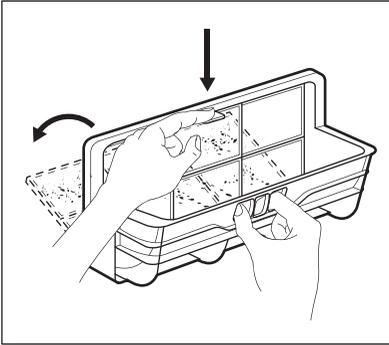

6. Push the hook to open the filter.

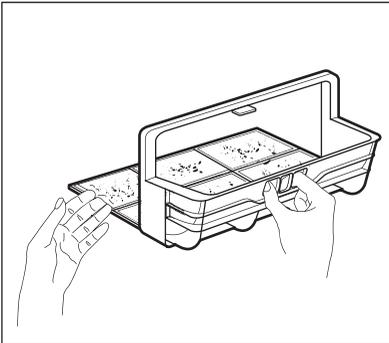

7. Use a moist hand to clean the filter. If necessary clean the filter with warm water using a brush. Close the filter.

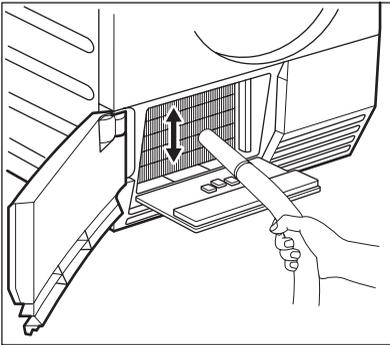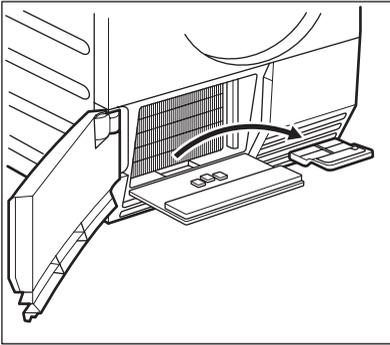

8. Clean the small filter from the base

9. If necessary, one time for each 6 months, remove the fluff from the heat exchanger compartment. You can use a vacuum cleaner.

10. Put the small filter and heat exchanger filter back.

11. Close the heat exchanger cover.

12. Lock the blockage until it snaps.

13. Close the heat exchanger filters cover.

14. Close the heat exchanger door.

15. Put the primary filter.



### CAUTION!

Do not operate the tumble dryer when the heat exchanger filters are blocked with fluff. This could cause the damage to the tumble dryer. This also increases energy consumption.

Do not use sharp objects to clean the heat exchanger compartment.

Do not operate the tumble dryer without the filters.

### CLEANING THE DRUM



#### WARNING!

Disconnect the appliance before you clean it.

Use a standard neutral soap detergent to clean the inner surface of the drum and drum ribs. Dry the cleaned surfaces with a soft cloth.



#### CAUTION!

Do not use abrasive materials or steel wool to clean the drum.

## CLEANING THE CONTROL PANEL AND HOUSING

Use a standard neutral soap detergent to clean the control panel and housing. Use a moist cloth to clean. Dry the cleaned surfaces with a soft cloth.



### **CAUTION!**

Do not use furniture cleaning agents or cleaning agents which can cause corrosion to clean the appliance.

# TROUBLE SHOOTER AND SERVICE

## TROUBLESHOOTING

Problem <sup>1)</sup>	Possible cause	Remedy
The tumble dryer does not operate.	The tumble dryer is not connected to mains supply.	Connect in at mains socket. Check fuse in fuse box (domestic installation).
	The loading door is opened.	Close the loading door.
	The On/Off button was not pushed.	Push the On/Off button.
	The Start/Pause button was not pushed.	Push the Start/Pause button.
	The appliance is in the standby mode.	Push the On/Off button.
Unsatisfactory drying results.	Incorrect programme selection.	Do the selection of the applicable programme. <sup>2)</sup>
	The filter is clogged.	Clean the filter. <sup>3)</sup>
	The Dry Plus function was in minimum mode.	Change the Dry Plus function to the moderate or maximum mode.
	The condenser is clogged.	Clean the condenser. <sup>3)</sup>
	Too high volume of the load.	Obey the maximum load volume.
	The airflow grill is clogged.	Clean the airflow grill in the bottom of the appliance.
	Dirt on the inner surface of the drum.	Clean the inner surface of the drum.
Too high water hardness.	Set applicable water hardness <sup>4)</sup> .	
The door does not close.	The filter not locked in the position.	Put the filter in the correct position.
	The laundry is locked between the door and the seal.	Put the load correctly in the drum.
<b>Err</b> (Error) on the display.	You try to change the programme or the function after the start of the cycle.	Turn the tumble dryer off and on. Make the new selection.
	The function you try to activate is not applicable with the selected programme.	Turn the tumble dryer off and on. Make the new selection.
No drum light <sup>5)</sup>	Defective drum light.	Contact the service centre to replace the drum light.

Problem <sup>1)</sup>	Possible cause	Remedy
Abnormally elapsing time on the display.)	The time to end is calculated on the basis of the volume and dampness of the laundry.	The automatic procedure — this is not the appliance malfunction.
Programme inactive.	The water container is full.	Drain the water container <sup>3)</sup> , push the Start/Pause button.
Drying cycle too short.	Too small laundry volume.	Do the selection of time programme. The time value must be related to the load. To dry one item or small quantities of the laundry we recommend to use short times.
	The laundry is too dry.	Do the selection of time programme or higher drying level (e.g. Extra Dry)
Drying cycle too long <sup>6)</sup>	The filter is clogged.	Clean the filter.
	Too high volume of the load.	Obey the maximum load volume.
	The laundry not spun sufficiently.	Spin correctly the laundry.
	Very high room temperature - this is not the appliance malfunction.	If possible, lower the room temperature.

1) If there is an error message on the display (e.g. **E51**): Turn the tumble dryer off and on. Make a selection of the new programme. Push the Start/Pause button. Does not operate? - contact the service centre and give the error code.

2) follow the programme description — see *PROGRAMMES* chapter

3) see *CARE AND CLEANING* chapter

4) see section *WATER HARDNESS* in *HINTS AND TIPS* chapter

5) Only the tumble dryers with drum light.

6) Note: After maximum 5 hours the drying cycle ends automatically (see *Drying cycle complete* section).

## TECHNICAL INFORMATION



height x width x depth	850 x 600 x 600 mm (maximal 640 mm)
drum volume	118 l
maximum depth with the load door opened	1090 mm
maximum width with the load door opened	950 mm
adjustable height	850 mm (+ 15 mm - feet regulation)
the appliance weight	59 kg
maximum load volume	<b>7</b> kg
voltage	230 V
frequency	50 Hz
necessary fuse	4 A
total power	800 W
energy efficiency class	<b>A</b>
energy consumption kWh/cycle <sup>1)</sup>	<b>1,85</b> kWh
annual energy consumption	121,8 kWh
type of use	Domestic
permitted ambient temperature	+ 5°C to + 35°C

<sup>1)</sup> 7 kg of cotton, centrifuged at 1000 rpm with reference to EN 61121

# INSTALLATION


## APPLIANCE POSITIONING

- The tumble dryer must be installed in a clean position, where dirt does not collect.
- Air must flow freely around the appliance. Make sure that the front airflow slots in the bottom of the appliance are not blocked.
- To keep vibration and noise at the minimum, when the tumble dryer operates, it must be put on a stable and flat surface.
- When the appliance is put in its permanent position, check if it is fully level with the aid of a spirit level. If it is not, adjust the feet until it is.
- Do not remove the feet. Do not decrease the floor clearance through thick carpets, bar of wood or equivalent. This can increase the heat which can cause interference with the operation of the appliance.



- The temperature of the hot air which occurs in the tumble dryer can increase to 60 °C. The appliance must not be installed on the floor which is not resistant to high temperatures.
- When the tumble dryer operates, the room temperature must not be lower than +5 °C and higher than +35 °C. This can cause unwanted effect on the performance of the appliance.
- If it is necessary to move the appliance, it must be moved vertically.
- The appliance must not be installed behind a lockable door, a sliding door, a door with a hinge on the opposite side to that of the appliance in such a way that a full opening of the tumble dryer is restricted.

It is possible to adjust the height of the tumble dryer. To do that adjust the feet (see picture).

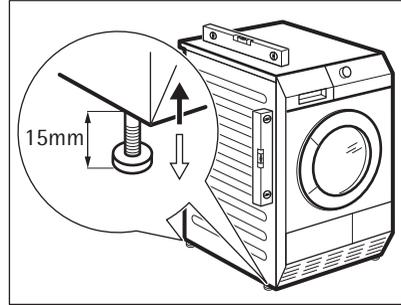


## UNPACKING




### CAUTION!

Before use all parts of the transport packaging must be removed. To remove the polystyrene blockages:

1. Open the load door.

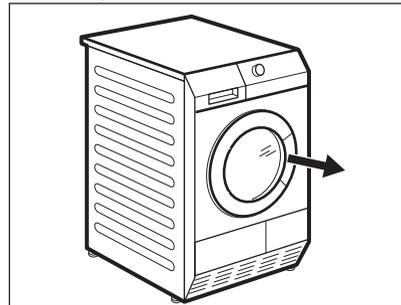


2. Pull 2 plastic hoses with the polystyrene blockages out from the drum.

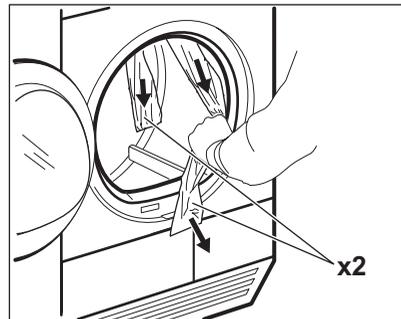

## INSTALLATION UNDER A COUNTER

The appliance can be installed as free-standing or below the kitchen counter with correct space (see picture).

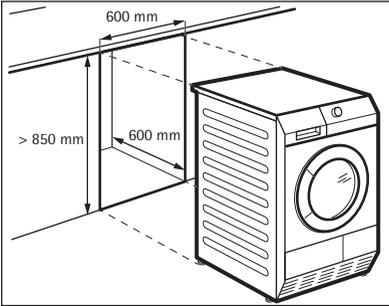

## THE LOAD DOOR REVERSAL

The load door can be installed by the user in the opposite side. It can help to easily put and remove the laundry or if there is a limit to install the appliance. (see separate leaflet).

## ELECTRICAL CONNECTION

- Connect the machine to an earthed socket, in accordance with current wiring regulations.
- Make sure that the electrical data on the rating plate agrees with the power supply.
- Always use a correctly installed shockproof socket.
- Do not use multiple plugs and extension cables. There is a risk of fire.
- Should the appliance power supply cable need to be replaced, this must be carried out by our Service Centre.
- Make sure not to squash or cause damage to the mains plug and cable behind the appliance.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- The plug must be dry.



[www.aeg.com/shop](http://www.aeg.com/shop)

136917040-A-212011

