

ACCUSPLIT® EAGLE 120XL


ACTIVITY PEDOMETER

OPERATING INSTRUCTIONS



BATTERY REPLACEMENT
When the LCDisplay dims, replace the battery with LR-44 or equivalent.
-Use a coin to "pop open" the case.
-Replace battery with "+" up.
-Snap case parts together.


FOR BEST RESULTS
-Clip the pedometer firmly at your waist, above a knee. Or, slide the pedometer toward your hip until the case is nearly straight up and down. If the pedometer is tilted, the step count may be under-recorded, because the pendulum may not function correctly.

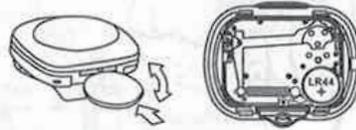

STEP COUNT MODE
-Measures ALL ACTIVITY Steps.

MASTER RESET/POWER OFF
-Press (RESET) button for 3 seconds and release (All LCDisplay segments will be ON and then OFF)
-Press (RESET) button again to turn it ON.

RESET
-Press (RESET) to reset Steps to 0.

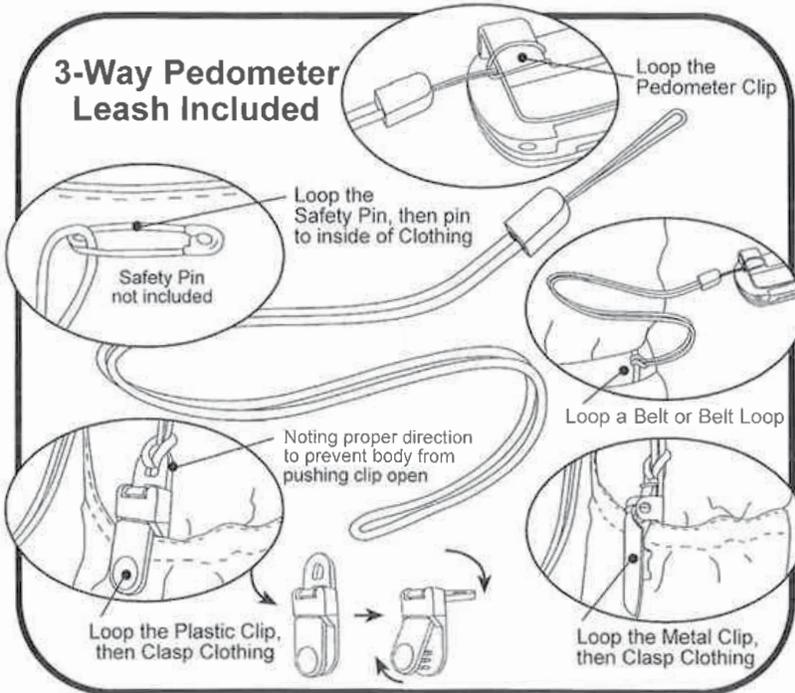

998-299B / © 2002AST, Inc. All rights reserved.

Eat Right! Walk More! Live Well!
The ACCUSPLIT Lifestyle

REGISTER NOW Please return your AE120 Registration to the Repair Center address in the warranty, and we will let you know about future products.

Email (preferred) _____
User _____

NO-PROOF-OF-PURCHASE LIMITED WARRANTY
See label on back of unit for details, or check
<http://support.ACCUSPLIT.com>