

Before you begin

Read all instructions before set up.

- Select a level campsite clear of rocks, branches, and other hard or sharp objects, to install your tent.

⚠ WARNING: Keep clear of overhead power lines.


- Do not set up your tent under trees.
- For best results in windy conditions, position end of tent into the wind.
- Enlist the help of at least one other person to assist you when it is time to assemble the tent.

Parts and Components

Description	Part Number
Main Poles, Black (2)	5010000433
Main Poles, Gray (2)	5010000506
Vestibule Pole, Long, Thin, Black (1)	5010000507
Rainfly Ridge Pole, Thin, Black w/ Metal Tips (1)	5010000434
Rear Awning Pole (1)	5010000508
Rainfly	5010000435



To Set Up Tent

1. Unfold tent and spread out on a clean, level surface with the door facing the desired direction. (Fig. 1)
2. Assemble all poles by interlocking the shock-corded sections together. (See components section above for list of poles.)
3. Insert gray main poles through the sleeves on both sides of tent; then insert black main poles through sleeves, in front and back of tent. Make sure black poles overlap the gray poles. (Fig. 1)
4. Insert end of each black & gray main pole into pins. (Fig. 2 & 2A)
5. Go to opposite end of each pole and gradually apply pressure to each forming arches. Insert the pin into each pole end at the sides and corners of tent. (Fig. 2 & 2A)
6. Attach frame clips along edges of tent to the black & gray main poles. (Fig. 2B)
7. Stretch tent until taut, then secure metal loops located on both sides and corners of tent with stakes. (Fig. 2C)

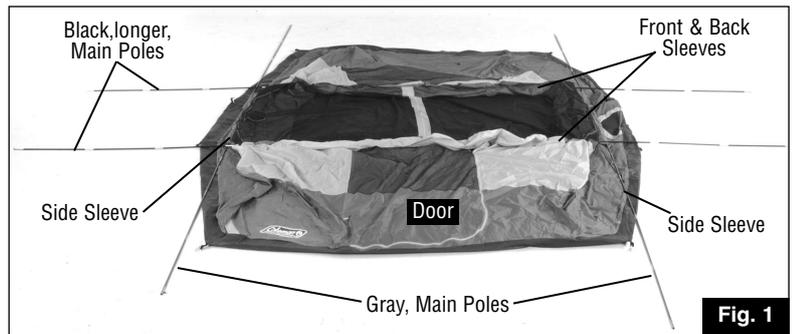

To Attach Rainfly

1. Insert rainfly ridge pole with metal tips through sleeve in underside of rainfly. (Fig. 3)
2. Drape rainfly over tent with rainfly ridge pole centered from above front door to back of tent & the green vestibule flaps located in the front. (Fig. 4).
3. Insert rainfly ridge pole into metal grommet on front of tent, apply pressure until pole forms an arch, then insert other end into back grommet. (Fig. 4 & 4A). **NOTE:** Because of the position of the center grommets, it may be necessary to gently pull to on the front & back arches for easier access.
4. Insert vestibule pole through sleeve in rainfly at front of tent. (Fig. 4)
5. Locate **all** hook & loop fasteners on underside of rainfly and wrap around black and gray poles to secure. (Fig. 5)
6. Stretch elastic straps and hook clip on each to the metal loops at the four corners of the tent. (Fig. 6)

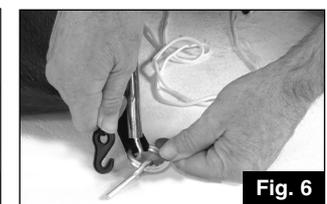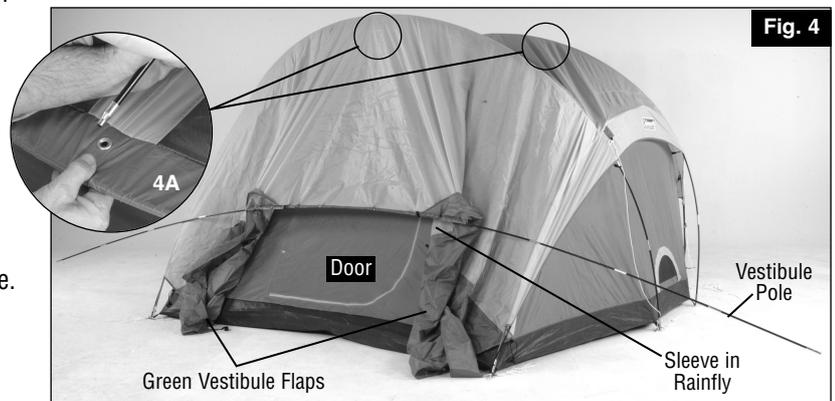


(continued on other side)

To Attach Rainfly continued

- Insert one end of vestibule pole into pin on front corner of tent. (Fig. 7 & 7A)
- Go to opposite end of vestibule pole and gradually apply pressure to form an arch. Insert the pin into end of pole at opposite corner of tent. (Fig. 7 & 7A)



- Clip hooks on elastic cords on front of rainfly to the metal loops at each corner (Fig. 7 & 7B)
- Extend out vestibule flaps and secure with metal stakes through the loops in the web straps (Fig. 7 & 7C)
- Insert the rear awning pole through the sleeve in rainfly above the back window and insert one end into grommet. (Fig. 8 & 8A)
- Apply pressure to the rear awning pole to form an arch then insert opposite end into metal grommet on other side. (Fig. 8 & 8A)
- Tie guylines through loops on web straps on the rainfly. (Fig. 9)
- Stretch guylines until taut, then secure with stakes. (Fig. 10)

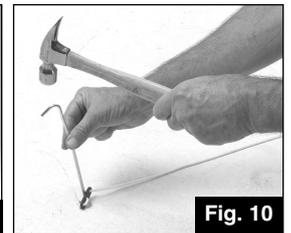


Electrical Cord Access

- Unzip access panel in the lower left front corner of tent and bring in electrical cord. Use only UL approved cords that are rated for outdoor usage. (Fig. 11)



Cooler Access

The smaller zippered opening at the side of the tent is designed for added ventilation and easy access to your beverage cooler. (Fig. 12)

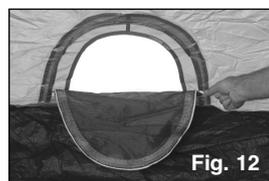

To Store

- All metal poles and stakes must be placed in the storage bag to prevent damage to the fabric items placed in the carry case.
- Make sure tent is clean and dry before placing in carry case.
- Remove rainfly, spread out on floor of tent, then unzip door & vents before taking tent down for storage.
- Neatly fold tent to width of pole storage bag, place on tent, roll tightly, and place in carry case.
- Store in a clean, dry area.

Things You Should Know:

- Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside of your tent. Condensation is caused by water vapor from your breath, perspiration, or any wet clothing inside the tent. It is NOT LEAKAGE through the tent fabric. It can be minimized by removing wet clothing from your tent and by providing good ventilation through the tent.
- Never store tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes or poles inside your tent. Use a separate storage bag.
- STAKES SHOULD BE REMOVED BY PULLING ON THE STAKE ITSELF. NEVER PULL ON THE TENT TO REMOVE STAKE.
- TENT POLES SHOULD NOT BE LEFT TELESCOPED TOGETHER DURING STORAGE.
- Do not leave your tent set-up for weeks at a time. Be aware that exposure to ultraviolet rays from the sun can seriously damage material and/or cause it to become discolored.

⚠ WARNING: Keep all flame and heat sources away from this tent fabric.

This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



The Coleman Company, Inc. • 3600 N. Hydraulic • Wichita, Kansas 67219
1-800-835-3278 • www.coleman.com

MADE IN CHINA • PRINTED IN CHINA

© 2007 The Coleman Company, Inc.

Coleman® and are registered trademarks of The Coleman Company, Inc.