

Care Instructions

Congratulations on your purchase of the Mission Style Ceramic Tile Rim Firepit. It includes a durable, powder coated iron bowl, powder coated steel base, and a decorative tile rim. Be sure to carefully read ALL safety instructions before using your new firepit.

The powder coating on the fire screen will break down over time as the fire pit is burned. We recommend the use of a high heat black spray paint will help to inhibit the process.

You don't need to season your firepit before burning. You may burn wood, synthetic logs or charcoal in your firepit. Pinon wood is ideal because it emits a pleasing aroma that also repels insects. We recommend a mixture of pinon chunks with other woods to achieve a pleasant burning experience.

Some woods tend to crackle and spark more than others. Wind can also blow burning embers around the firepit. In order to safeguard against blowing sparks/embers, make sure you have the screen securely in place while using your firepit.



Mission Style Ceramic Tile Rim Firepit Owner's Manual Item# 60243

ENJOY YOUR NEW FIREPIT, BUT ALWAYS USE IT SAFELY

Distributed By:

Well Traveled Living
716 S 8th Street
Amelia Island, FL
32034



Web: www.wtliving.com
Email: cservice@welltraveled.net

1 YEAR LIMITED WARRANTY - Customers in the Continental US

All components are warranted for a period of 1 year after date of purchase by the original owner against defects in materials and workmanship under normal use. This warranty does NOT cover normal wear and weathering, assembly and/or maintenance OR use in a commercial application. At Well Traveled Living's sole discretion, products under warranty will be repaired and/or replaced at no charge to the customer. Any returns sent back to Well Traveled Living must be sent via prepaid freight and in the original retail packaging.

For warranty service contact Well Traveled Living at the address, phone numbers or internet site and email listed in this owner's manual. Be sure to have your sales receipt, date of purchase and catalogue/model numbers available when calling. All warranty service will be coordinated by the Well Traveled Living's, Amelia Island, Florida service center.

This warranty is extended only to the original purchaser. Proof of purchase will be required before warranty service is rendered. The sales receipt is the only valid proof of purchase. This warranty only covers failures due to defects in materials or workmanship which occur during normal use. Failures and/or damage which result from accident, negligence, misuse, abuse, neglect, mishandling, alteration or modification, failure to maintain, improper assembly or maintenance, service by unauthorized agency or use of unauthorized components or damage that is attributable to acts of God are NOT covered.

*****THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED ABOVE*****

*****PURCHASER ASSUMES ALL RISKS IN THE ASSEMBLY AND OPERATION OF THIS UNIT*****

*****FAILURE TO FOLLOW WARNINGS AND OPERATIONAL INSTRUCTIONS CONTAINED IN THIS MANUAL CAN RESULT IN SEVERE PROPERTY DAMAGE AND/OR PERSONAL INJURY*****

IN NO EVENT WILL WELL TRAVELED LIVING, OR ITS DIRECTORS, OFFICERS OR AGENTS BE LIABLE TO THE PURCHASER OR ANY THIRD PARTY, WHETHER IN CONTRACT, IN TORT, OR ON ANY OTHER BASIS, FOR ANY INDIRECT, SPECIAL, PUNITIVE, EXEMPLARY, CONSEQUENTIAL, OR INCIDENTAL LOSS, COST, OR DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE SALE, MAINTENANCE, USE, OR INABILITY TO USE THE PRODUCT, EVEN IF WELL TRAVELED LIVING OR ITS DIRECTORS, OFFICERS OR AGENTS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH LOSSES, COSTS OR DAMAGES, OR IF SUCH LOSSES, COSTS, OR DAMAGES ARE FORESEEABLE. IN NO EVENT WILL WELL TRAVELED LIVING, OR ITS OFFICERS, DIRECTORS, OR AGENTS BE LIABLE FOR ANY DIRECT LOSSES, COSTS OR DAMAGES THAT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO THE PURCHASER.

This limited warranty gives you specific legal rights and you may also have other rights which vary from jurisdiction to jurisdiction. The provisions of the United Nations Convention on Contracts for the Sales of Goods shall not apply to this limited warranty or the sale of products covered by this limited warranty.

*****IMPORTANT NOTICE*****

-Do NOT return to place of purchase-For customer service and warranty issues

contact our Customer Service Center at:(866)-985-7877 OR

Email: cservice@welltraveled.net

Customer Service Hours: Mon. - Fri. 9:00 a.m. - 6:00

Fire Sense® and Well Traveled Living® are registered trademarks of Well Traveled Imports, Inc.®. All assembly instruction presentations are the property of Well Traveled Imports, Inc.® and are protected by U.S. copyrights and trademarks. All rights reserved.



***** Important Notice *****

Do not return to place of purchase!!

Please contact our Toll Free Hotline:
(866-985-7877)

for customer service & warranty issues

Warning: For OUTDOOR USE only

****** Uncovered Areas ******

**48" clearance from combustible
materials required**



Web: www.wtliving.com
Email: cservice@welltraveled.net

Page 2

Well Traveled Living
716 South 8th Street
Amelia Island, FL 32034

***** Important Notice *****

Do not return to place of purchase!!

Please contact our Toll Free Hotline:
(866) 985-7877
for customer service & warranty issues

Assembly Instructions

Warning: For OUTDOOR USE only



 
***** Important Notice *****

Do not return to place of purchase!!

Please contact our Toll Free Hotline:
(866) 985-7877
for customer service & warranty issues

*Assembly Time:
Approx. 15 minutes*

A. Parts List

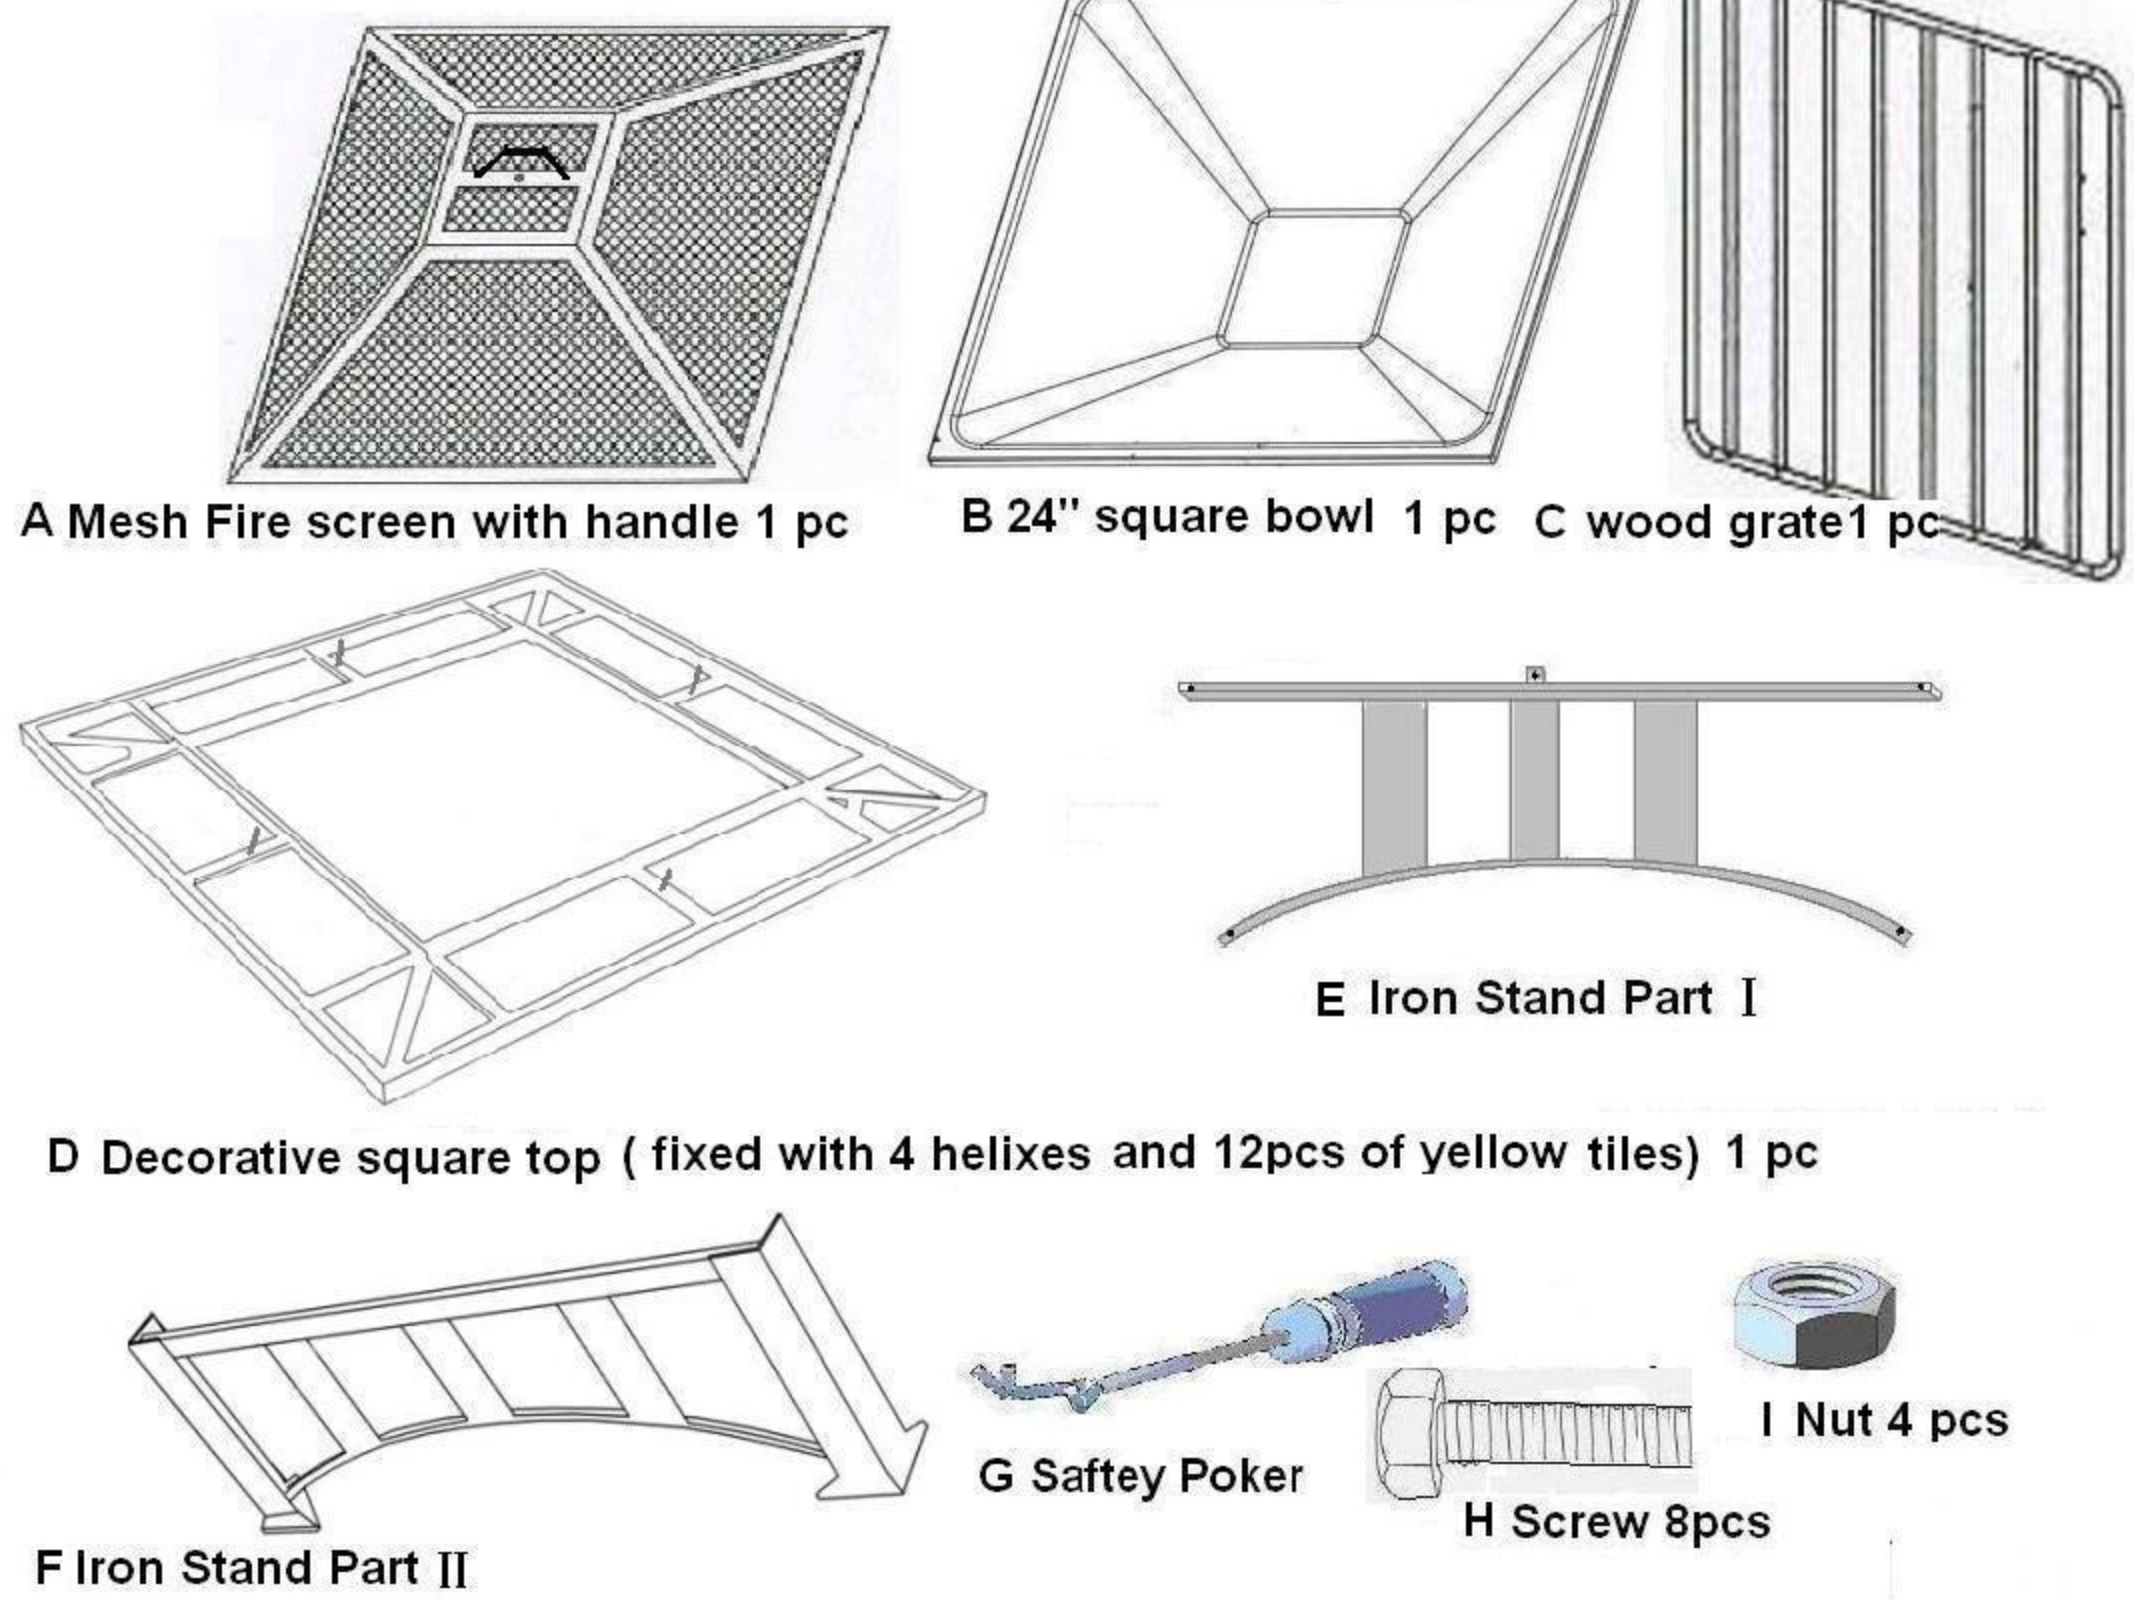


**** Note:** Bag of ordinary SAND required (but not included) to create a 1-2" layer in lower housing body. Tools you'll need: a phillips screwdriver.

B. Assembly Instruction

- STEP 1: Unpack parts carefully and set aside on a flat, non-abrasive surface .
- STEP 2: Choose a level location for set up.
- STEP 3: Connect Iron Stand Part I (E) to Iron Stand Part II (F) using screws (H) as per Fig.1 and Fig.2 .
- STEP 4: Put decorative square top(D) on something soft and flat (cardboard etc.),with yellow side down. Connect stand (E&F) to decorative top(D) by fixing nuts(I) and helixes of the top(D) Fig.3.
- STEP 5 :Turn over the entire assembly and make sure it is level with the floor . Place fire bowl (B) into assembled stand(E&F&D). Place 1-2"thick layer of sand into bottom of the bowl.
- STEP 6: Place wood grate (C) into the bowl (B).Make sure there is at least 1"space between the surface of the sand and the grate.
- STEP 7: Place mesh screen (A) on the top of the bowl (B).

CAUTION: NEVER USE YOUR HANDS TO OPEN OR CLOSE THE MESH SCREEN WHEN HOT, USE THE LIFT TOOL PROVIDED (H).

 Your fire pit is now ready for use.

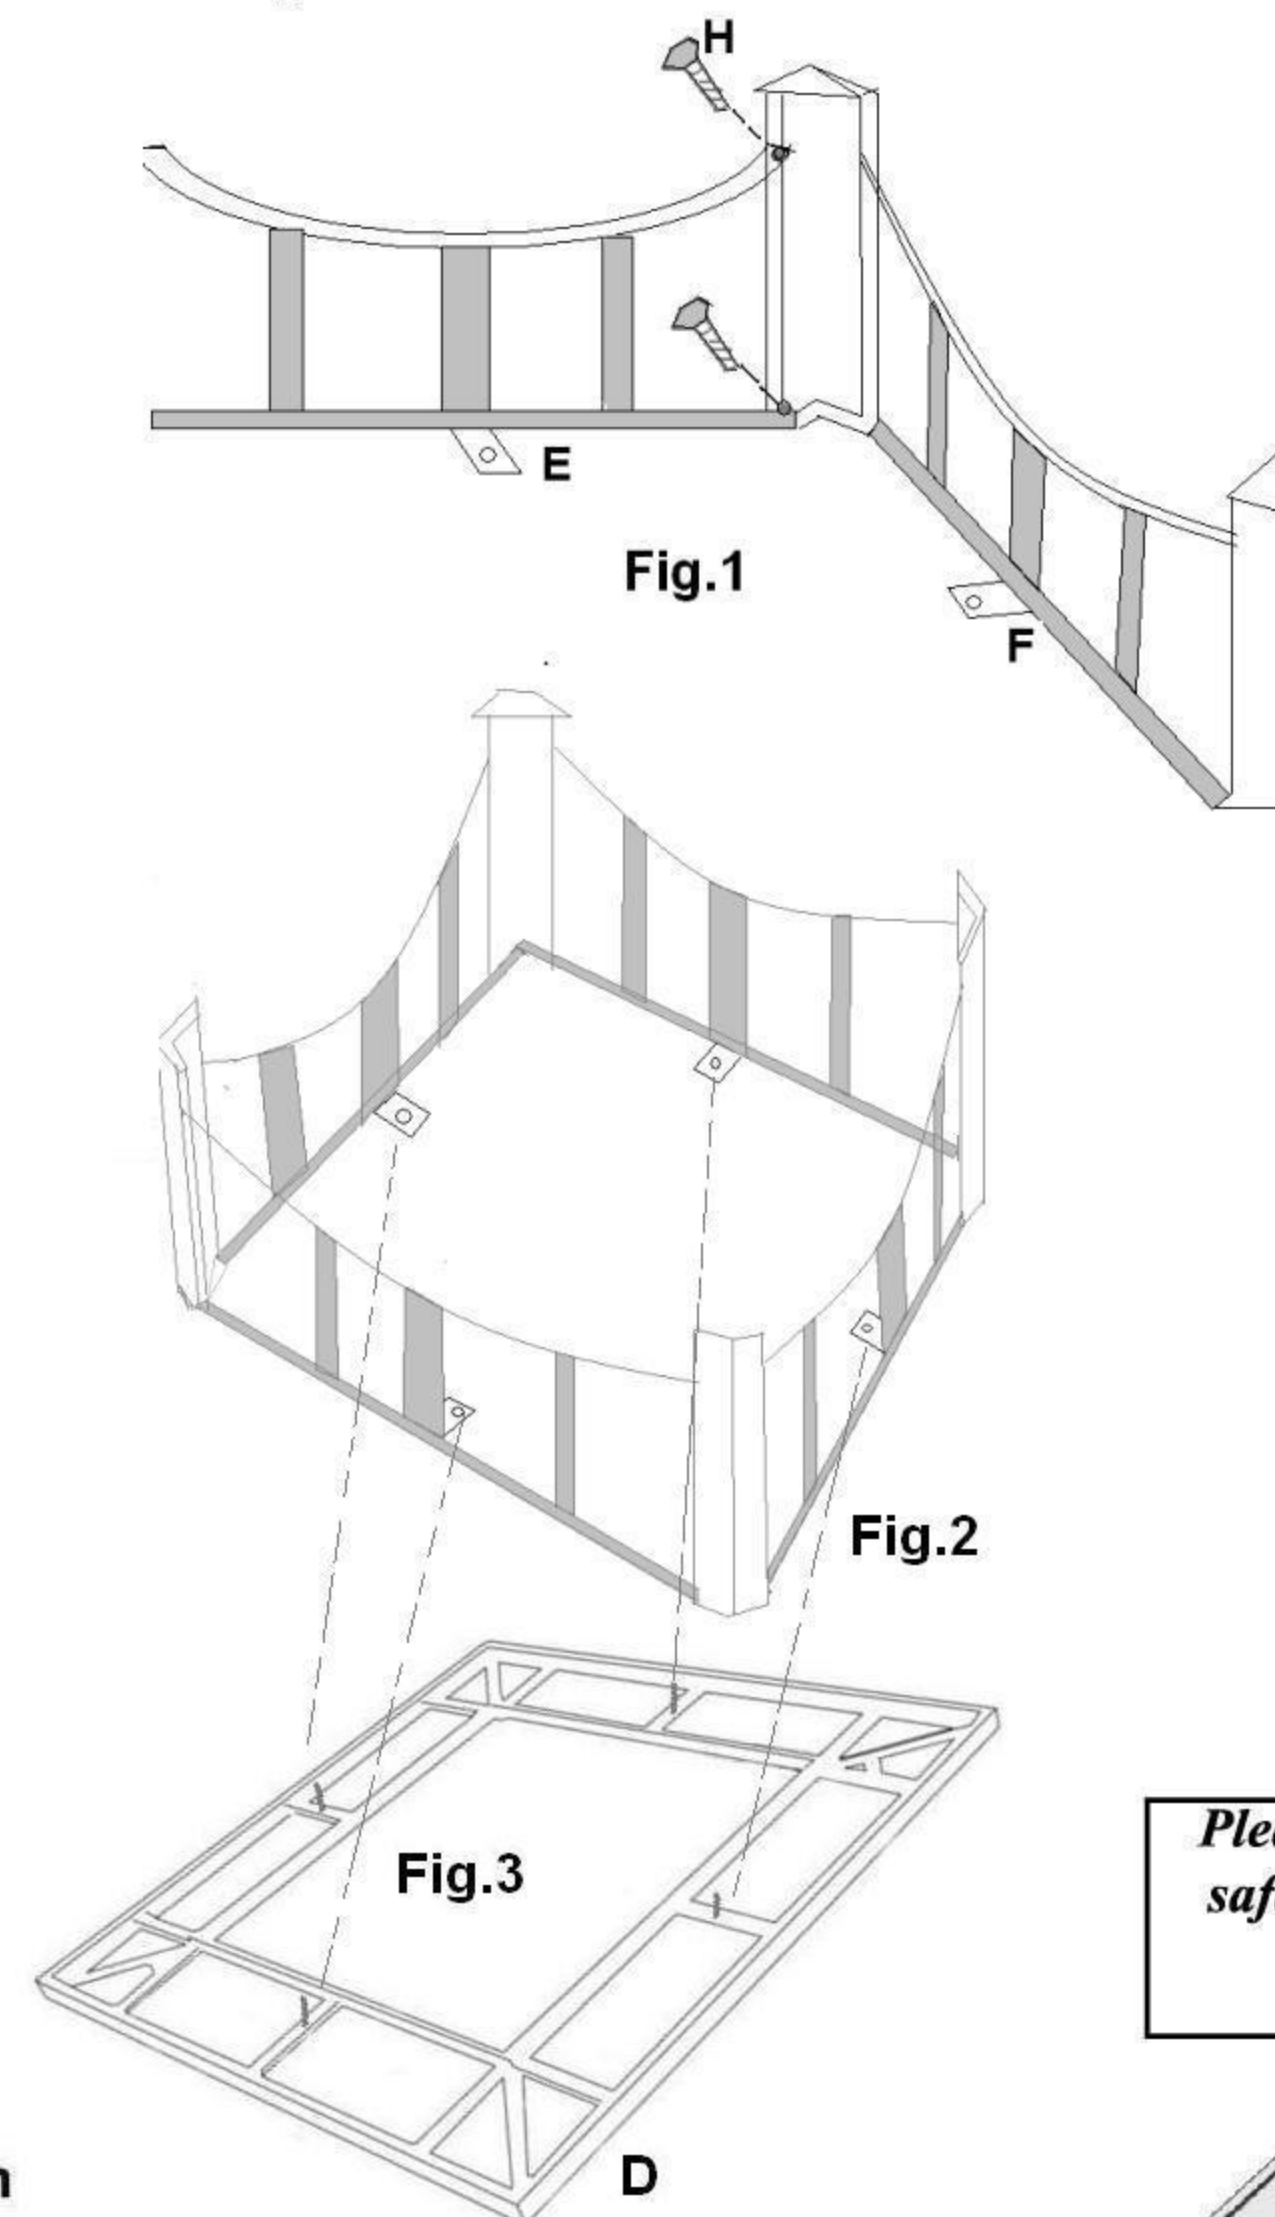

Safety First !!



- * Do NOT leave open flames or embers unattended!
- * Do NOT allow children to be near open flames & fireplace
- * Do NOT burn EXCESSIVELY HOT fires!
- * Do NOT use during windy periods!
- * ALL METAL SURFACES WILL BE VERY HOT WHEN IN USE - DO NOT TOUCH!

Warning: For OUTDOOR USE only

This is an outdoor patio firepit and should be placed in a safe, uncovered location away from combustible materials on all sides of the product.

- * Do NOT use within 4 feet of any combustible materials or walls.
- * Do NOT use in an enclosed, or covered location, or under tree branches
- * The Spark Arrester, fire screen MUST be in place at ALL times during use.
- * Use heat resistant gloves & lift tool when removing fire screen dome
- * Always use the wrought iron stand provided when using the fireplace. NEVER place directly onto a wood floor/deck, near a wood fence or materials.
- * If used over a wood deck, place a non-combustible material such as concrete pavers, stove-mat or hearth board directly beneath the fireplace to catch sparks & embers as well as protect the deck surface.
- * Do not use flammable liquids, large amounts of wood pellets and/or multiple firelogs in the chiminea/fireplace which could produce extremely hot fires.
- * Make sure there is plenty of ventilation completely surrounding the fireplace.
- * **Keep your fires reasonable.** A fire that is too large or too hot can be very dangerous and could damage your fireplace.
- * Although your firepit is considered a closed system , always comply with all local laws, ordinances & statutes restricting the use of outdoor open flames in your community. Consult your local fire department.
- * Always ensure that the fire is completely out before leaving your fireplace unattended. Smother any remaining embers with sand or water.

 
Please use caution and common sense when burning in your firepit. Failure to adhere to the safety guidelines could result in fire damage to your deck, home or yard. Failure to exercise caution could also cause bodily injury or even death - so please be careful!



Use heat resistant gloves & lift tool when removing fire screen dome

Fire screen - spark arrester dome MUST be in place at ALL times during use.

Lighting & Operating

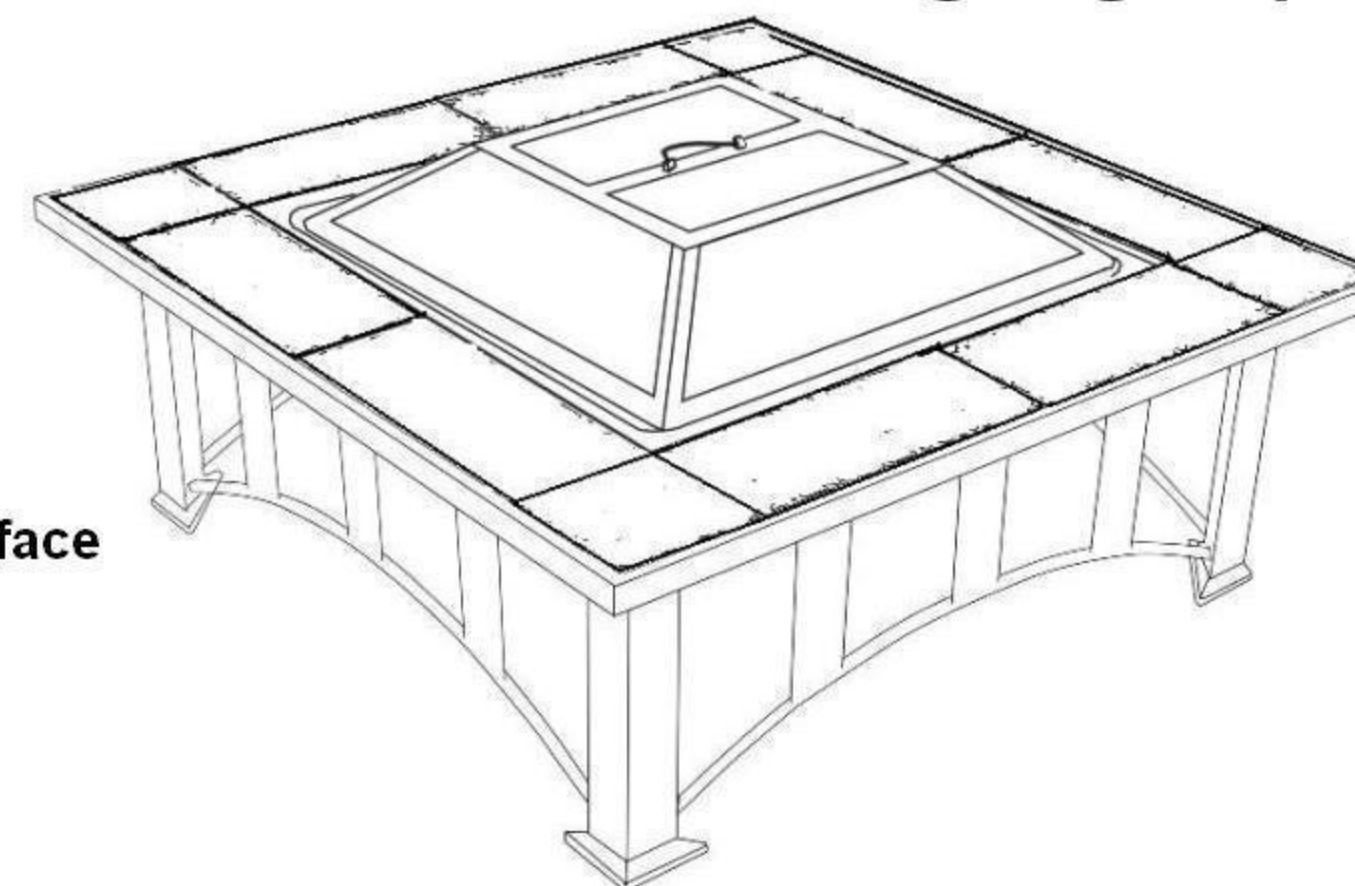

Assembled fire pit

- * **BEFORE you ignite your first fire -** In order to properly dissipate heat generated in the base bowl and surrounding floor area, a 1-2" layer of ordinary sand **MUST BE ADDED** to the bottom of the fire bowl. Make sure there is air space of at least 1" between the surface of the sand and the steel grate.
- * Place wood (no more than 3 large log pieces at a time), or firelog (no more than 1 at a time) in the center of the metal grate allowing for air flow between pieces and fireplace walls.
- * Use matches, butane lighters or electric starters. **Do NOT use gasoline, kerosene, starter fluids or other flammable liquids** that might cause a flash, high heat ignition fire.
- * Check and remove ash build up in the base bowl regularly.

Web: www.wtliving.com
Email: cservice@welltraveled.net