

Sunbeam

X-PRESS™

Euro Foil Shaver

Instruction Booklet
SH3200



Please read these instructions carefully and retain for future reference.

تأكد من تفهّم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich, dass die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώνετε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید کہ احتیاط‌های بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşıldığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

Contents

Sunbeam's Safety Precautions	2
Features of your Euro Foil Shaver	5
Using your Euro Foil Shaver	6
Care & Cleaning	8
Help Line	10

Please read these instructions carefully and retain for future reference.

Sunbeam's Safety Precautions

SAFETY PRECAUTIONS FOR YOUR EURO FOIL SHAVER

- Never touch the power plug with wet hands when unplugging or plugging in
- Only use the cord supplied with this appliance
- Keep the shaver and the power plug out of the reach of children
- Do not expose the shaver to temperatures below -10 degrees C or +40 degrees C for prolonged periods of time
- Do not use the shaver with a broken or damaged foil or cutter block
- If the appliance is used with an extension cord or electrical portable outlet device they should be positioned so that they are not subject to splashing or moisture
- Do not immerse the appliance in water or any other liquid
- Do not clean the shaver with water or any other liquid
- Keep the appliance dry

If you have any concerns regarding the performance and use of your appliance, please visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line.

Ensure the above safety precautions are understood.

 
Sunbeam's Safety Precautions

Sunbeam are very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:

- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug – do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- Close supervision is necessary when your appliance is being used near children or infirm persons.

- Never leave an appliance unattended while in use.
- Young children should be supervised to ensure that they do not play with the appliance.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven. Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- For safety reasons and to avoid maintenance by unskilled persons, some appliances are 'sealed' using tamperproof screws. Such appliances should always be returned to the nearest Sunbeam Appointed Service Centre for adjustment or repair if required.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been dropped or damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.

Features of your Euro Foil Shaver

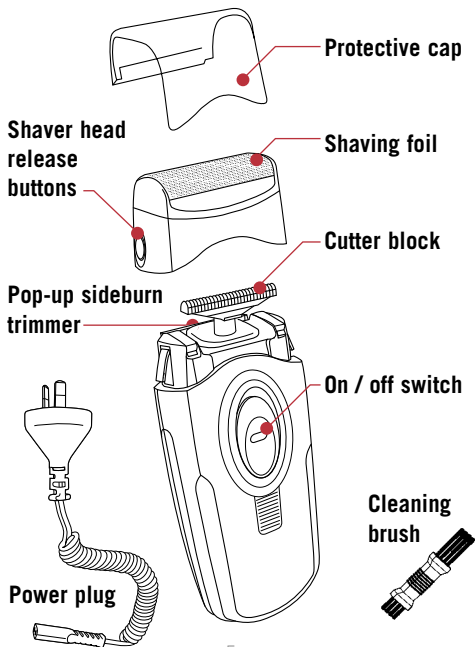

Using your Euro Foil Shaver

- This shaver is a mains only operated appliance.
- For best shaving results, use the shaver on clean, dry skin. However you can also use the shaver with shaving foam or gel if desired.
- Hold the shaver at right angles to your skin and apply light pressure.
- Stretch the skin with your free hand so that the hairs are upright.
- Shave against the direction of growth of hair to achieve best results.
- After shaving put the protective cap back on the shaver head. Avoid excessive pressure as this may damage the foil.

Using your Euro Foil Shaver continued

Pop-up sideburn trimmer

The sideburn trimmer can also be used to shorten longer beard stubble in order to have a more efficient shave.

Extend it by sliding it upwards until it clicks into position. (Figure 1)

Note – if you are using a foil shaver for the first time or for the first time in six months or more, it can take up to three or four weeks

for your skin to get used to this style of shaving.

 
 


Universal voltage

The shaver has an automatic voltage adjustor. The appliance will automatically adjust to voltages around the world.

Care & Cleaning

- Do not immerse the appliance or power cord in water or any other liquid.
- Do not use water to clean the appliance.
- Press the two shaver head release buttons and pull the shaver head from the casing (Figure 2).
- Tap the shaver head on a flat surface or blow the hairs out thoroughly. Never use the brush to clean the foil as this may cause some damage.
- Use the cleaning brush to remove hair from the cutter block (Figure 3).

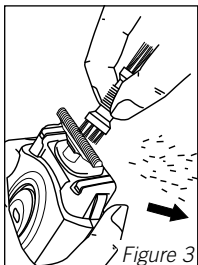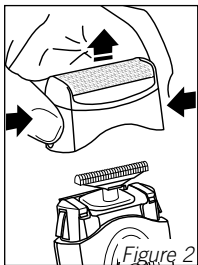


Care & Cleaning continued

Changing the foil and cutter block

Shaving performance depends on the condition of the foil and the cutter block. Both will gradually wear out from use. Therefore we recommend that the foil is changed once a year and the block every two years.

Replacing the foil

 
- Remove the shaver head by pressing the shaver head release buttons.
- Pull the shaving foil out of the shaver head by holding it on the attached straps (Figure 4).
- Place the new shaving foil in the shaver head until it clicks into place.
- Replace the shaver head.

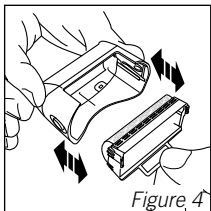

Care & Cleaning continued

Replacing the cutter block

 - Remove the shaver head by pressing the shaver head release buttons.
- Hold the cutter block on both sides and lift it from its support (Figure 5).
- Place the new cutter block in position.
- Replace the shaver head.

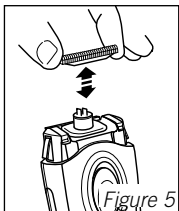

Help Line

If you have any additional questions about using the Euro Foil Shaver, please call the Sunbeam help line in Australia on 1800 025 059.

In New Zealand, please call 0800 786 232.

2 year replacement guarantee.

We are so confident of the quality of our shaver should the appliance develop any malfunction within 2 years of purchase due to faulty materials or manufacture, we will replace it for you absolutely free. Foils and cutter blocks are excluded from this guarantee.

'Sunbeam', is a registered trademark of Sunbeam Corporation.

Due to minor changes in design or otherwise, the product may differ from the one shown in this leaflet. Backed by Sunbeam's 2 Year Replacement Guarantee and National Service Network.

© Copyright. SUNBEAM CORPORATION LIMITED 2006.

(INCORPORATED IN N.S.W.) A.C.N. 000 006 771

Sunbeam Corporation is a division of GUD Holdings Ltd.

For more information or advice on this or any other Sunbeam appliance, visit **www.sunbeam.com.au** or contact the Sunbeam Consumer Service Line.

Australia 1800 025 059

New Zealand 0800 786 232.

Consumer Hotline

Australia

1800 025 059

New Zealand

0800 786 232

www.sunbeam.com.au



is a registered Trademark of Sunbeam Corporation Limited. ACN 000 006 771.

© Sunbeam Corporation Limited 2006.