

SPS3600



EN
It's important to read this instruction prior to using your new product for the first time.

Safety Precautions

- CAUTION**
RISK OF ELECTRIC SHOCK
DO NOT OPEN
DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE
WARNING: SHOCK HAZARD - DO NOT OPEN
AVIS: RISQUE DE CHOC ELECTRIQUE - NE PAS OUVRI
- CAUTION**
INVISIBLE LASER RADIATION IS EMITTED WHEN OPENED AND INTERLOCKS DEFEATED. AVOID EXPOSURE TO BEAM
- CLASS 1 LASER PRODUCT**
APPAREIL A LASER DE CLASSE 1
PRODUIT A LASER DE CLASSE 1
- The symbol for Class II (Double Insulation)
- The lightning flash with an arrowhead symbol, within the equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to cause an electric shock.
- The exclamation point within the equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in this owner's manual.
- WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.
- WARNING:** TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.
- WARNING:** THE APPARATUS SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.

CAUTION:
USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.
TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, THEN FULLY INSERT.

Safety Precautions

- ON SAFETY**
 - Before operating, make sure the voltage requirement of the mains plug matches your local voltage.
 - Disconnect the mains plug immediately if liquid spills into or onto the unit, or if an object falls into the unit. The unit should not be used until service by a qualified service personnel is completed.
 - Do not open the cabinet. Lasers used in rays employed by the unit may damage your eyes. Any servicing should be done by qualified service personnel.
 - When you are not going to use the unit for a long period of time, disconnect the mains plug.
- ON PLACEMENT**
 - Do not leave, mount or use the unit in places which are extremely hot, cold, dusty, or humid.
 - Allow adequate air circulation to prevent internal heat build-up. Do not place the unit on a surface or near materials (a curtain ex. rugs, blankets, curtains, etc.) which might block the ventilation holes.
- ON CONDENSATION**
 - When left in a heated room where it is warm and damp, water droplets or condensation may form inside the CD player. When there is condensation inside the unit, the unit may not function normally. Let it stand for 1 to 2 hours before turning the power on, or gradually heat the room and allow the unit to dry before use.

FCC information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For your safety

The AC power plug is polarized (one blade is wider than the other) and only fits into AC power outlets one way. If the plug won't go into the outlet completely, turn the plug over and try to insert it the other way. If it still won't fit, contact a qualified electrician to change the outlet, or use a different one. Do not attempt to bypass this safety feature.



Removing the power supply is the only way to completely remove power from your product. Make sure the power plug remains easily accessible.

Important Safety Instructions

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your wall outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments / accessories specified by the manufacturer.
- Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

- IF YOUR PRODUCT OPERATES ON BATTERIES**, adhere to the following precautions:
 - A. Any battery may leak electrolyte if mixed with a different battery type, if inserted incorrectly, or if all batteries are not replaced at the same time.
 - B. Any battery may leak electrolyte or explode if disposed of in fire or an attempt is made to charge a battery not intended to be recharged.
 - C. Discard leaky batteries immediately. Leaking batteries can cause skin burns or other personal injury. When discarding batteries, be sure to dispose of them in the proper manner, according to provincial and local regulations.

Important Battery Precautions

- Any battery may present a risk of fire, explosion, or chemical burn if abused. Do not try to charge a battery that is not intended to be recharged, do not incinerate, and do not puncture.
- Non-rechargeable batteries, such as alkaline batteries, may leak if left in your product for a long period of time. Remove the batteries from the product if you are not going to use it for a month or more.
- If your product uses more than one battery, do not mix types and make sure they are inserted correctly. Mixing types or inserting incorrectly may cause them to leak.
- Discard any leaky or deformed battery immediately. They may cause skin burns or other personal injury.
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- Please help to protect the environment by recycling or disposing of batteries according to federal, state, and local regulations.



Portable Cart Warning

Before You Begin

Useful Advice

- Do not use your system immediately after transporting it from a cold place to a warm place, as condensation may cause the system to malfunction. If moisture forms inside this system, it may not operate properly. To correct the problem, turn off the power and wait about 30 minutes for moisture to evaporate.
- This system is fitted with a laser. To avoid accidents, it is to be opened by qualified technicians only.
- Never leave the tray open as dust could cover the laser lens and / or the tray could be bumped into accidentally.
- Do not place the system near wet areas such as bathrooms and pool inside. Avoid storing the system at humid places or near abnormally heated areas.
- Main plug is used as the disconnected device, it shall remain operable and should not be obstructed during intended use. To be completely disconnected the apparatus from supply mains, the main plug of the apparatus shall be disconnected from the mains socket outlet completely.
- Ensure minimum distance around the apparatus for sufficient ventilation. The ventilation should not be impeded by covering the ventilation openings with items, such as ventilation openings with items, such as newspaper, etc.
- No naked flame source, such as lighted candles, should be placed on the apparatus.

Service Information

For your records

In the event that service should be required, you may need the model number. In the space below, record the date and place of purchase: Model No. Date of Purchase Place of Purchase

Service information

This product should be serviced only by those specially trained in appropriate servicing techniques. For instructions on how to obtain service, refer to the warranty included in this Guide.

Technical Information

Technical information

Product: KITCHEN RADIO WITH CD PLAYER
Band: RCA
Model: SPS3600
Power Supply: 120V ~ 60Hz

Mounting Instructions

TOOLS NEEDED:
1) Electric drill with 1/4" bit; 2) Phillips-head (cross style) Screwdriver.

STEP 1

If your cabinet does NOT have an overhang:
a) Place the Mounting Template in the desired location inside or underneath the cabinet (whichever has less obstructions, and will be easier for you to reach to drill holes), flush with the front edge of the cabinet and tape it down. Go to STEP 2.

If your cabinet DOES have an overhang:
a) Measure the thickness of the cabinet overhang (see Figure 1).

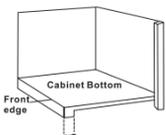


Figure 1

- b) Fold the Mounting Template along the guideline that is closest to the thickness of your cabinet overhang.
- c) Tape Mounting Template to the underside of the cabinet with the folded portion of the Mounting Template flush up against the cabinet overhang (see Figure 2). Go to STEP 2.

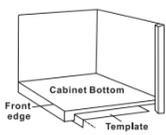


Figure 2

STEP 2

Use an electric drill with a 1/4" bit (not included) to drill all four holes marked on the Mounting Template (see Figure 3). To reduce splintering, place a small piece of masking tape over each hole location before drilling.

Go to STEP 3.

 


Figure 3

STEP 3

- If your cabinet does NOT have an overhang:
a) Eight screws are included with this unit, but you will only need four of them. Select the screw length which will go completely through your cabinet bottom, and provide at least 3/8" of thread to screw into the main unit.
- b) Insert the four selected screws through each hole from the inside of the cabinet going down (see Figure 4).

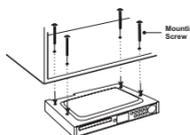


Figure 4

- c) Hold the unit up against the bottom of the cabinet, and align the four holes on the top of the unit with the screws. Partially tighten each screw, but do not fully tighten the screws until all of them have been started.

- d) Gently tighten each screw until they are firmly holding the unit in place. Go to STEP 4.

If your cabinet DOES have an overhang:

- a) Eight screws are included with this unit, but you will only need four of them. Select the screw length which will go completely through your cabinet bottom, and extend at least will go completely through your cabinet bottom, and extend at least 3/8" past the bottom of your cabinet overhang.
- b) This unit includes three sets of four spacers of various lengths. The spacers can be put together to form longer spacers to accommodate various cabinet overhang thicknesses. Determine the best combination of spacers which is equal to or longer than the cabinet overhang thickness.
- c) Insert the four selected screws through each hole from the inside of the cabinet going down (see Figure 5).

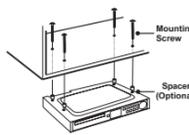


Figure 5

- d) Hold each screw head down and push the unit and spacers onto the screws, then hold the unit up until spacers are firmly against the bottom of the cabinet (and fully nested within each other if you are using multiple spacers for each screw).
- e) Partially tighten each screw, but do not fully tighten the screws until all of them have been started (see Figure 6).
- f) Gently tighten each screw until they are firmly holding the unit in place. The top front edge of the unit should clear the overhang. Go to STEP 4.

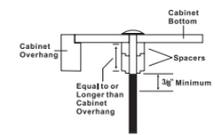


Figure 6

STEP 4

- Plug the cord into the wall outlet
a) Before connecting power cord, make sure the voltage of the unit matches with your local voltage.
- b) Plug the power cord directly into the nearest wall outlet, and wrap the remaining cord around the cord storage knob at the rear of the unit.


MOUNTING SUGGESTIONS

- 1) If your cabinet has obstructions inside it which prevent you from using the template, cut out the corresponding area on the template, but do NOT cut out or through the screw holes.
- 2) If your cabinet has obstructions underneath it, which will interfere with the mounting of the unit, remove the obstruction before mounting the unit, or find another location to mount the unit.
- 3) It is recommended that you wear safety glasses while drilling to prevent eye injuries.
- 4) For wood cabinets, you may want to mark the hole locations with a nail, pressed gently but firmly into the wood so that a slight impression is made. This will also help keep the drill bit centered in the right location.
- 5) Hold the drill firmly against the cabinet to keep the drill from "walking".

CAUTION
TO REDUCE THE RISK OF FIRE, DO NOT PLACE ANY HEATING OR COOKING APPARATUS BENEATH THIS UNIT.


General Controls

Front Panel Controls

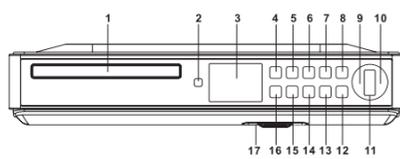


- 1. CD Drawer
- 2. Remote Control Sensor
- 3. LCD Display
- 4. POWER Button
Press to turn ON the unit or put it in STANDBY(OFF) mode.
- 5. PLAY/PAUSE Button
Press to start / pause playback of a disc.
- 6. STOP Button
Press to stop playing a disc.
- 7. CLOCK SET/MEMORY Button
Press to set a clock(in standby mode) / store a track in memory (in CD stop mode).
- 8. TIMER Button
Press to set the cooking timer.
- 9. PREV Button
Press to change the digits(in Timer mode) / skip to the previous track(in CD mode) / tune in to different stations(in Radio mode).
- 10. NEXT Button
Press to change the digits(in Timer mode) / skip to the next track(in CD mode) / tune in to different stations(in Radio mode).
- 11. VOLUME+/- Button
Press to adjust the volume.
- 12. Display Button
- 13. REPEAT/PRESET Button
Press to repeat a single track or an entire disc(in CD mode) / set a radio station preset (in Radio mode).
- 14. CD-RADIO-AUX Button
- 15. AM/FM Band Button
- 16. OPEN/CLOSE Button
Press to open / close the CD door.
- 17. Dock for MP3 Player

Bottom Cabinet Controls

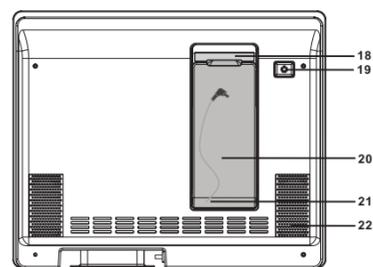

- 18. Lens
- 19. Light ON/OFF Button
- 20. MP3 Player Ducker
- 21. Aux Cable
- 22. Speakers

Remote Control

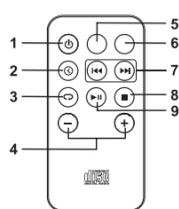

- 1. POWER Button
- 2. CLOCK SET/MEMORY Button
- 3. REPEAT/PRESET Button
- 4. VOLUME+/- Button
- 5. Display Button
- 6. FUNCTION button
- 7. TUNING / <<< >>> Button
- 8. STOP / BAND Button
- 9. PLAY/PAUSE Button

USING THE REMOTE CONTROL CORRECTLY

- Point the remote control at the REMOTE SENSOR located on the unit.
- When there is a strong ambient light source, the performance of the remote's infrared may be degraded, causing unreliable operation.
- The recommended effective distance for remote operation is about 13 feet (4 m).

Notes:

- When tuning the radio or searching for a track, the CLOCK SET / MEMORY buttons on the remote control are the same as the CLOCK SET / MEMORY buttons on the main unit.
- The REPEAT/PRESET button on the remote control is the same as the REPEAT/PRESET button on the main unit.

ATTENTION


- Remove the protective plastic tab before operating the remote control.

To change battery

- 1. Open the battery door.



- 2. Insert one CR2025 (3V) size battery.

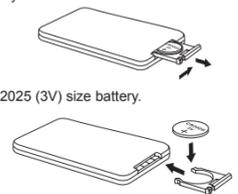

BATTERY REPLACEMENT

When the battery becomes weak, the operating distance of the remote control is greatly reduced and you will need to replace it.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Note:Dispose of used batteries in accordance with local laws and regulations.

WARNING: NEVER DISPOSE OF BATTERY IN FIRE OR IT MAY EXPLODE.

Setting the Clock

SETTING THE CLOCK

The unit must be in standby mode. To enter standby mode, make sure that the unit is plugged in, but not turned on.

1. Press the **⊙** / MEMORY button until the TIME digit blinks.



2. Press the **⏮** button to set the current hour.



3. Press the **⏭** button to set the current minutes.



4. Press the **⊙** / MEMORY button to start the clock. The clock will automatically start if no button is pressed within 10 seconds.



Note: 12-hour system "12:00 PM" = midnight.

CD Playback

CD PLAYBACK

1. Press the **⏻** button on the front panel or the POWER button on the remote to turn on the unit.
2. Press the CD-RADIO-AUX button to change CD mode. 
3. Press the **⏮** button to open the CD drawer. Place a CD onto the CD tray with the label side up and then press the **⏮** button to close it. The CD will be scanned by the unit and the total # of tracks will be displayed.
4. Press the **⏭** button to start playing the CD. The current track appears on the display. 

Note: During playback, the track number will disappear and the time will be displayed if no button is pressed within 10 seconds.

- Adjust volume by pressing the VOLUME +/- buttons.

To Pause Playback

- Press the **⏸** button. The "CD" indicator blinks.
- To resume playback, press the **⏭** button again. 

To Stop Playback

- Press the **■** STOP/BAND button.

To SKIP to a Different Track

- To SKIP to the beginning of the PREVIOUS track, or any earlier track, press the **⏮** button.
- To SKIP to the beginning of the NEXT track, or any later track, press the **⏭** button.

To FAST FORWARD or FAST REVERSE to a Particular Point

- To scan forward at high speed, press and hold the **⏭** button and release it at the desired point.
- To scan backward at high speed, press and hold the **⏮** button and release it at the desired point.
- Fast forward or Fast reverse will continue searching the CD until it reaches the end.

CD REPEAT PLAYBACK

Repeating the Current Track

- Press the **⏮** REPEAT/PRESET button until "REP" appears, the current track will be played repeatedly.
- Select a desired different track to be repeated by pressing the **⏭** / **⏮** buttons. 

Repeat the Entire CD

- Press the **⏮** REPEAT/PRESET button until "REP" blinks.
- All tracks will be played repeatedly. 

Cancel Repeat Play

- Press the **⏮** REPEAT/PRESET button until "REP" disappears.

CD PROGRAMMABLE PLAYBACK

- 20 tracks can be programmed to play in a preset order.
1. When the unit is ON and in CD MODE, make sure the CD is STOPPED. Press the **⊙** / MEMORY button. "MEM" and "P 01" will blink on the display. The "P 01" is the program order (1-20). 

2. Press the **⏭** / **⏮** buttons to select the desired track. For example, to play track 2 first, the display would look like this: 

3. Press the **⊙** / MEMORY button to store the track in memory. 

4. To add additional tracks, repeat steps 2 - 3 (up to 20 tracks).
5. To start playback, press the **⏭** PLAY/PAUSE button.

To check the program:

- After setting, press the **⏭** PLAY/PAUSE button to start playing, then press the **⏭** / **⏮** buttons to check the programmed tracks.

To add additional tracks during program playback:

- Press the **■** STOP/BAND button, then press the **⊙** / MEMORY button repeatedly until the number of the last programmed track appears and repeat steps 2-4 above.

To change the programmed tracks during program playback:

- Press the **■** STOP/BAND button, and press the **⊙** / MEMORY button repeatedly to select the number of the program, then press the **⏭** / **⏮** buttons to alter the track. Press the **⊙** / MEMORY button to register the newly programmed track into memory.

To erase the whole program, do one of the following:

- Press the **■** STOP/BAND button twice.
- Press the CD-RADIO-AUX button to change to radio mode.
- Open the CD drawer by pressing the **⏮** button.

Note: You can use the REPEAT function during program play.

Radio

TUNING IN TO A STATION MANUALLY

1. Press the **⊙** button on the front panel or the POWER button on the remote to turn on the unit.
2. Press the CD-RADIO-AUX button on the unit or the FUNCTION button on the remote control until TUNER is displayed. 

3. Press the AM /FM button on the unit or the **■** STOP/BAND button on the remote control to select AM or FM.
4. Press the **⏭** / **⏮** button to tune in to a desired station.

Note: When using the radio, the station will disappear and the time will be displayed if no button is pressed within 10 seconds.

To Quickly Search for a Station

Press and hold the **⏭** / **⏮** button until the tuner starts searching for a station, then release. The tuner will stop on the next station.

To Turn Off the Radio

Press the **⊙** button on the unit (or the POWER button on the remote) to turn the unit off.

Setting a Radio Station PRESET

The unit can store a total of 20 stations in memory (10 FM, 10 AM). Presetting allows you to tune in to a station directly.

1. Press the CD-RADIO-AUX button on the unit or the FUNCTION button on the remote control to select TUNER.
2. Press the **■** STOP/BAND button on the remote control or the AM /FM button on the unit to select AM or FM.
3. Press the **⏭** / **⏮** buttons to tune in to a desired station.

4. Press the **⊙** / MEMORY button until the "MEM" indicator blinks and "P 01" appears on the display. The "P 01" is the order of the preset station (1-10). 

5. Press the **⏮** REPEAT/PRESET button to select the preset number.
6. Press the **⊙** / MEMORY button to store the station.
7. Repeat steps 3 to 6 for the next preset.

TUNING IN TO A PRESET RADIO STATION

1. Press the CD-RADIO-AUX button on the unit or the FUNCTION button on the remote control until TUNER is displayed.
2. Press the **■** STOP/BAND button on the remote control or the AM /FM button on the unit to select AM or FM.
3. Press the **⏮** REPEAT/PRESET button to select a preset station.

Display Function

CD mode


1. During playback, press the DISPLAY button repeatedly to shuffle between the CD playback mode and the current time.
2. When stopped, press the DISPLAY button to shuffle between the total number of CD tracks and the current time.


RADIO Mode

- Press the DISPLAY button to shuffle between the current radio station and the current time.

Connecting with Other Optional Equipment

Listening to the Audio Signals from the External Equipment

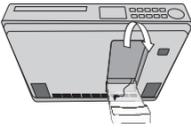1. Connect the AC power cord plug to the AC power outlet.
2. Pull the MP3 player dock downwards to the right place. 

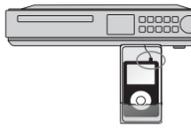3. Connect the plug of the Built-in AUX cable to the AUDIO OUT or Earphone jack of the external equipment. 

4. Press the FUNCTION button on the remote control or the CD-RADIO-AUX button to change to AUX. The AUX indicator lights up.
5. Turn on your audio equipment and play the external source.

Setting the Cooking Timer

1. Press the TIMER button. The **BUZZER** (🔊) indicator appears. 

2. Press the **⏭** / **⏮** buttons to select your desired time from 1-99 minutes.
 - Press the TIMER button repeatedly to select time: 10, 15, 30, 45, 60, 75, 90 minutes.
 - Press and hold the **⏭** / **⏮** buttons to fast forward/reverse the cooking time.
3. When the preset time elapses, the ALARM will sound. 

4. To turn Off the ALARM, press the TIMER button once. Otherwise, the ALARM will automatically turn off after 60 minutes if no button is pressed.

Note: Do not press any buttons within 5 seconds after setting the cooking time, otherwise, the cooking timer will be cancelled.

CANCELLING THE COOKING TIMER

- Press the TIMER button until the time of the cooking timer shows "00". The **BUZZER** (🔊) indicator will disappear.

Troubleshooting, Care & Maintenance

REMOTE CONTROL

- Is the unit plugged into a working power outlet? Try plugging it into one that you know works then test the remote control.
- Is the battery weak? Replace the battery with a new one.
- Make sure that you are pointing the remote control at the remote sensor on the unit.
- Are you too far from the unit when using the remote control? The remote control sensor can only sense a signal from the remote control within 13 feet, so you may need to move closer to the unit.
- Are there any obstacles between the remote control and the unit? If there are, remove all objects in the way.

CLOCK DOES NOT SHOW CORRECT TIME:

- There was a power outage. Set the clock again as described in "SETTING THE CLOCK".

CLEANING THE UNIT

- Do not use volatile chemicals on this unit. Clean by lightly wiping with a dry soft cloth.
- Keep the CD Drawer closed to keep dust out of the unit.

CLEANING THE CD

- If the CD skips or will not play, the disc may need to be cleaned. Before playing, wipe the disc from the center outwards with a clean cloth. After playing, store the disc in its case.

HANDLING THE CD

- Only touch the CD on the edge to avoid finger prints on the underside of the CD.
- Do not stick paper or tape on the underside of the CD, and do not write anything on the underside of the disc.

CD LENS CARE

- When your CD lens gets dirty it can cause the unit to output poor sound quality. To clean the lens you will need to purchase a CD lens cleaner. For instructions on cleaning the CD lens, refer to the instructions accompanying the CD lens cleaner.

Limited Warranty

AVC MULTIMEDIA ("AVC") makes the following limited warranties. These limited warranties extend to the original consumer purchaser and is limited to non-commercial user of the product.

One Year Parts & Labor Warranty

AVC products purchased in the United States are warranted to be free from defects in materials or workmanship for a period of one year from the date of their original retail purchase. If the unit fails to conform to this warranty, we will service the product using new or refurbished parts and products, at AVC's sole discretion.

During a period of one year from the effective warranty date, AVC will provide, when needed, service labor to repair a manufacturing defect at its designated Service Center. To obtain warranty service in the United States, you must first call our **Customer Support Center at 1-877-252-6873, during the hours listed in the box below.** The determination of service will be made by AVC customer support.

PLEASE DO NOT RETURN YOUR UNIT TO AVC WITHOUT PRIOR AUTHORIZATION. New or remanufactured replacements for defective parts or products will be used for repairs by AVC at its designated Service Center for one year from the defective warranty date. Such replacement parts or products are warranted for an additional one year from the date of repair or replacement. The Customer will be required to ship the unit to the Service Center indicated at the time Customer Support is contacted to make the necessary repairs. The customer is responsible for all transportation charges to the service facility.

Packaging and Shipping Instruction

When you send the product to the AVC service facility you must use the original carton box and packing material or an equivalent as designated by AVC.

LIMITED WARRANTY

Your Responsibility

- (1) You must retain your bill of sale to provide proof of purchase.
- (2) These warranties are effective only if the product is purchased and operated in the U.S.A. or Canada.
- (3) Warranties extend only to defects in material or workmanship, and do not extend to any product or parts which have been lost or discarded, or damage to product or parts caused by misuse, accident, improper operation or maintenance, or use in violation of instructions provided with the product, or to product which has been altered or modified without authorization of AVC, or to products or parts thereof which have had the serial number removed or changed.

Out of Warranty

In the event your product requires repair after the limited warranty period has expired, please contact our Customer Support Center at **1-877-252-6873** or **www.1800customersupport.com/RCA.**

Hours: Monday-Thursday: 9am-7pm, Friday: 9am-5pm, Saturday: 9am-NOON Eastern time.

Important: You are responsible for any transportation, shipping or insurance relative to the return of the product to our Product Returns Center.

All warranties implied by state law, including the implied warranties of merchantability and fitness for a particular purpose, are expressly limited to the duration of the limited warranties set forth above. With the exception of any warranties implied by state law as hereby limited, the foregoing warranty is exclusive and in lieu of all other warranties,

guarantees, agreements and similar obligations of manufacturer or seller with respect to the repair or replacement of any parts. In no event shall AVC be liable for consequential or incidental damages.

No person, agent, distributor, dealer or company is authorized to change, modify or extend the terms of these warranties in any manner whatsoever. The time within action must be commenced to enforce any obligation of AVC arising under the warranty or under any statute, or law of the United States or any state thereof, is hereby limited to one year from the date of purchase. This limitation does not apply to implied warranties arising under state law.

This warranty gives you specific legal rights and you may also have other rights, which may vary from state to state. Some states do not allow limitation on how long an implied warranty lasts, when an action may be brought, or the exclusion or limitation of incidental or consequential damages, so the above provisions may not apply to you.

For more information on other products and services, please contact our web site at **www.1800customersupport.com/RCA.**

Important:

Also keep your "Bill of Sale" as proof of purchase.

Model no.	Product name
Type of set	Serial no.
Invoice no.	Date purchased
Dealer name	

FOR SERVICE AND REPAIR, PLEASE VISIT **www.1800customersupport.com/RCA**

Specifications and external appearance are subject to change without notice.

