


Wireless Telephone Quick Reference Guide

Comdial DXP/DX/FX 8012S Impact Speakerphone

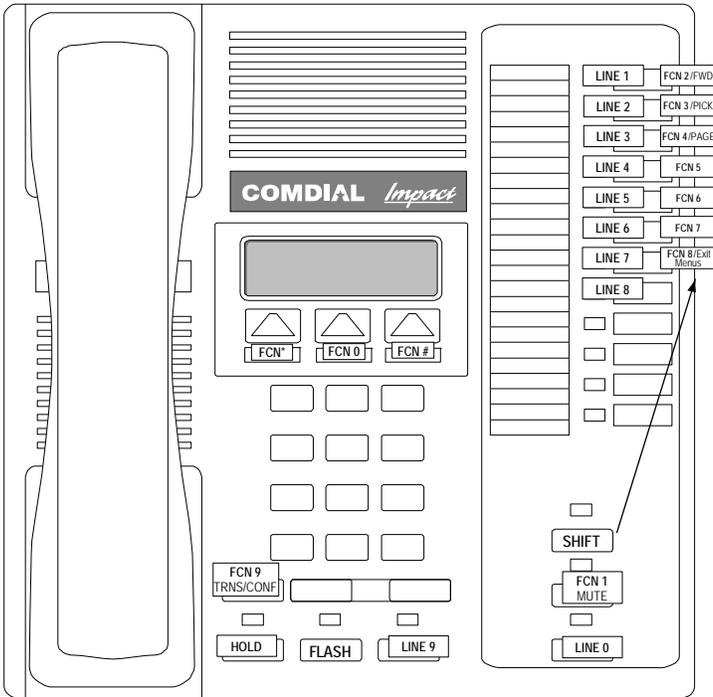


8012S Impact Speakerphone

Pressing **LINE** followed by a digit (1-8) on the Wireless Telephone is equivalent to pressing one of the line buttons (1-8) on the 8012S. **LINE + 9** is Intercom.

FCN followed by a digit (2-9) on the Wireless Telephone is equivalent to using Shift Buttons (1-7) on the 8012S station set.

FCN followed by * on the Wireless Telephone is equivalent to using Softkey 1, **FCN 0** equals Softkey 2, and **FCN #** equals Softkey 3.

Function Key Strokes	Default Settings	Fill In Your Feature Settings
FCN + 1	MUTE	
FCN + 2	FWD	
FCN + 3	PICK	
FCN + 4	PAGE	
FCN + 5		
FCN + 6		
FCN + 7		
FCN + 8	EXIT MENUS	
FCN + 9	TRNS/CONF	
FCN + *		
FCN + 0		
FCN + #		

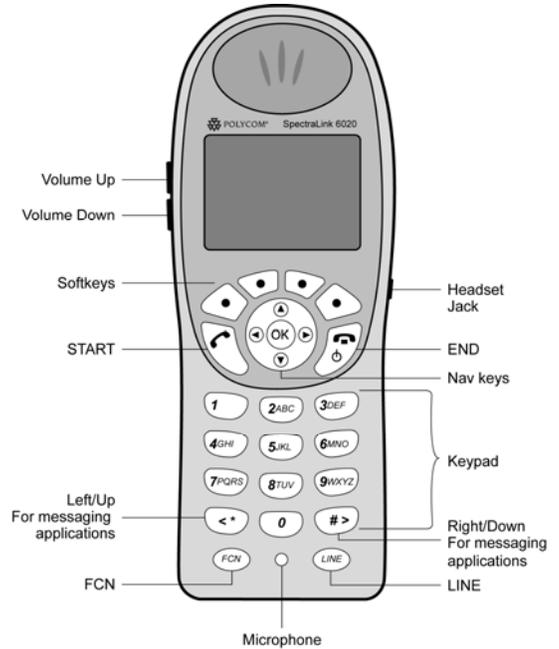

SpectraLink 6020 Wireless Telephone

- On/Off** Press and hold **END**. Two chirps on, one chirp off
- Make a call** Press **START** to get dial tone.
- Hang up** Press **END**. Be sure to do this at the end of each call.
- Answer call** Press **START**. Line indicator comes on steady when the call is answered.
- Answer second call** Press **HOLD** to put your current call on hold, or **END** to hang up. Press **LINE** + the digit that is flashing.
- Hold** Press **HOLD**
- Take off Hold** Press **LINE** followed by the digit for the line on hold, which will be flashing.
- Mute On/Off** Press the **MUTE** softkey.
- Function** Pressing **FCN** while off hook allows you to scroll through menu screens.
- User Options** Press the **CFG** softkey while on hook to change handset settings.

For information on Battery Pack charging and setting user preferences, see the Wireless Telephone User Guide.

