


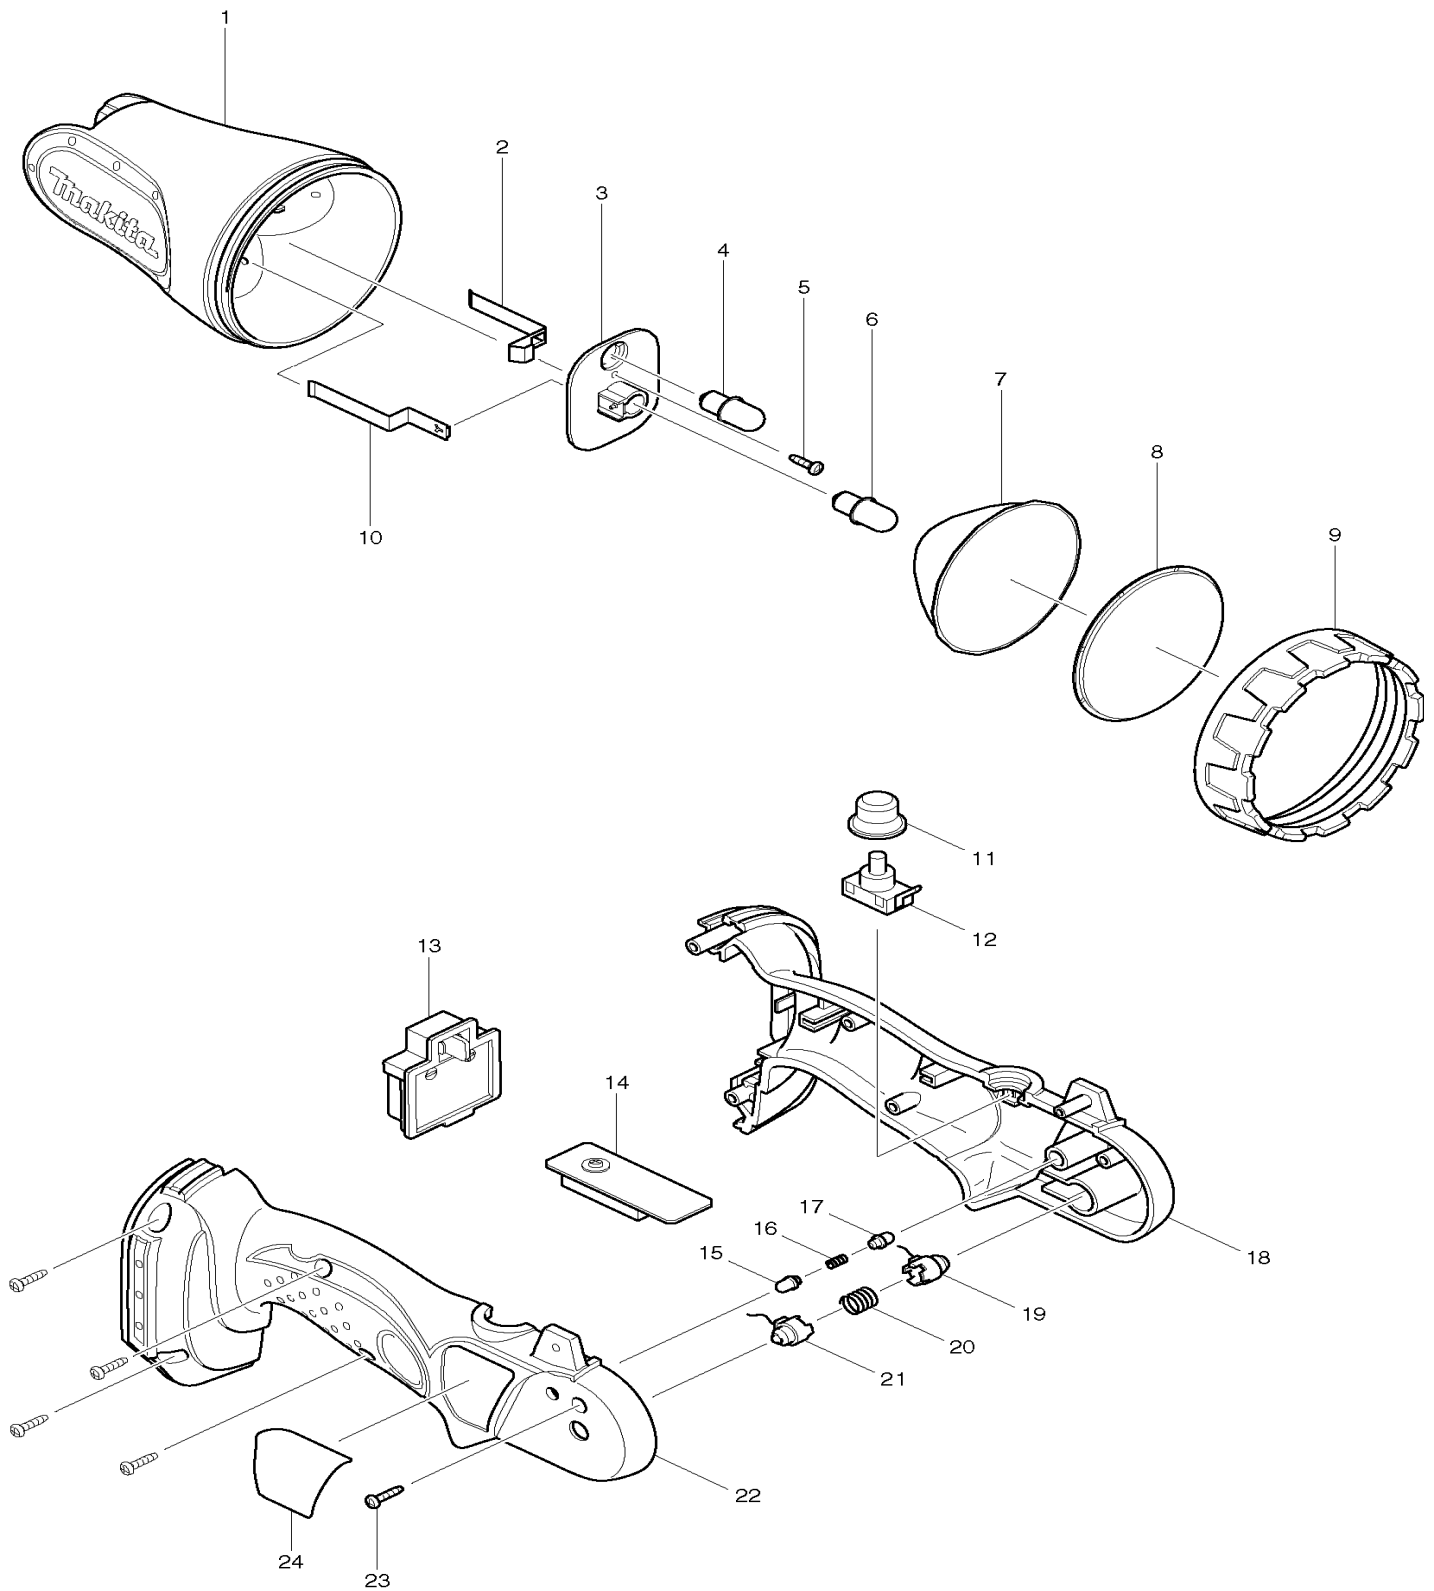



Parts Breakdown

BML18

Products with multiple versions are listed in subsiding order with the newest version on top not indented

<u>Fig #</u>	<u>Part ID</u>	<u>Part Name</u>	<u>Quantity</u>
1	GM00001003	CASE HEAD, BML185	1
2	GM00001010	BULB CONTACT PLATE(-),BML185	1
3	GM00001002	PROTECTOR F/CONTACT, BML185	1
4	A-90261	BULB, ML180	1
5	GM00001012	SCREW 3X12, BML185	1
6	A-90261	BULB, ML180	1
7	GM00000130	REFLECTOR, ML140	1
8	GM00000070	LENS, ML140	1
9	GM00001001	REFLECTOR RETAINER, BML185	1
10	GM00001009	BULB CONTACT PLATE(+),BML185	1
11	GM00001006	RUBBER COVER, BML185	1
12	GM00000200	SWITCH, ML180	1
13	GM00001055	BATTERY HOLDER, BML185W	1
14	GM00001029	PCB, BML185	1
15	GM00001005	KNOCK SHAFT, BML185	1
16	GM00000090	COMPRESSION SPRING 4, ML140	1
17	GM00001005	KNOCK SHAFT, BML185	1
18	GM00001000	HOUSING SET, BML185	1
19	GM00001004	LEFT CASE SHAFT, BML185	1
19	632524-4	PIVOT TERMINAL UNIT R, ML702	1
20	233144-3	COMPRESSION SPRING 7, ML702	1
21	632524-4	PIVOT TERMINAL UNIT R, ML702	1
21	GM00001004	LEFT CASE SHAFT, BML185	1
22	GM00001000	HOUSING SET, BML185	1
23	GM00001013	SCREW 3X14, BML185	5
24	GM00001008	NAME PLATE, BML185	1
5001	810320-2	CAUTION LABEL, BML185W	1