

Care

- To clean, wipe the surface of this toy with a damp cloth. Do not immerse the this toy.
- If sound or light from this toy become faint, or if there is no sound or light, remove the batteries and dispose of them properly. Replace the batteries with three “AAA” (LR03) alkaline batteries.

FCC Note (United States Only)

Loving Family™
Sweet Melodies Bedroom™
Model Number: 75107

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Loving Family™
Sweet Melodies Bedroom™
Consumer Relations Department
636 Girard Avenue
East Aurora, New York 14052

Consumer Information

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-KIDS**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

Fisher-Price Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, New York 14052, U.S.A.
©2000 Mattel, Inc. All Rights Reserved. Printed in China
® and ™ designate U.S. trademarks of Mattel, Inc. 75107pr-0920

Fisher-Price®

Loving Family™ Sweet Melodies Bedroom™

Product Number: 75107



Please save these instructions for future reference.

Adult assembly is required to install batteries.

**Tool needed to install batteries:
Phillips Screwdriver (not included).**

**This product requires three “AAA” (LR03)
alkaline batteries (not included).**

www.fisher-price.com

If you have any questions about this product: **In Canada**, call **1-800-567-7724**, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.


In Great Britain, telephone 01628 500303.

In Australia, Mattel Australia Pty Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1-800-800-812 (valid only in Australia).

Battery Installation

⚠ CAUTION

Please keep small parts, such as the “AAA” batteries, out of children’s reach. Dispose of “AAA” batteries properly.

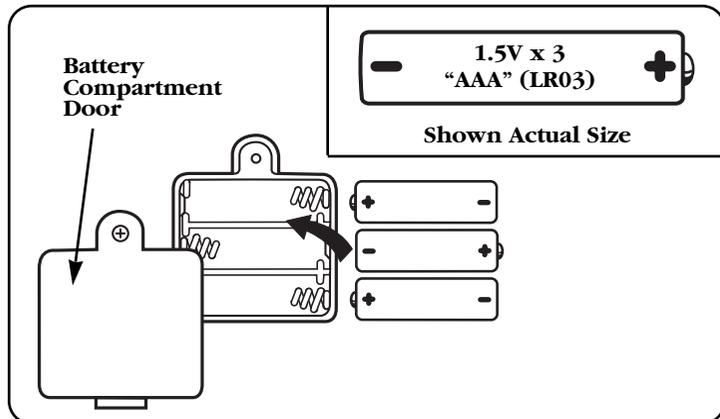

- Loosen the screw in the battery compartment door with a Phillips screwdriver.
- Lift to open the battery compartment door.
- Insert three size “AAA” (LR03) **alkaline** batteries as indicated inside the battery compartment.
- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.


Battery Tips

- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).

2

- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the product. Battery leakage and corrosion can damage the product. Dispose of batteries properly.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the “Battery Installation” instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the product before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired

Use

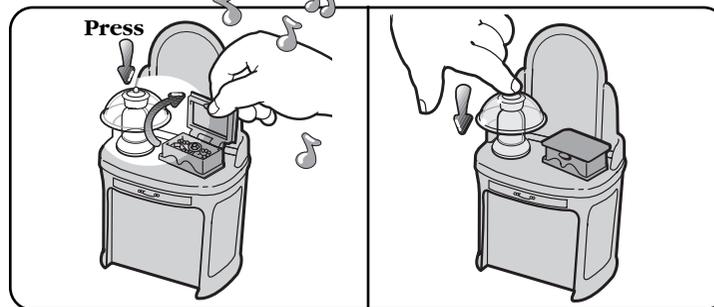

- Press the lamp shade to turn the light on.
- Open the music box for music and to turn the lamp light on.

Hint: Music and light will automatically shut off after approximately 1-2 minutes.

- Press the lamp shade to turn off the light.
- Close the music box and press the lamp shade to turn off music and the light.

3