 


XTS 36 MINI SPEAKER

Cat. No. 40-1994

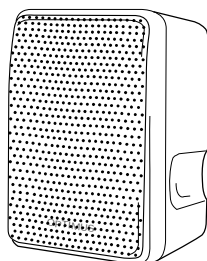

SPECIFICATIONS

Frequency Response	140 Hz— 20 kHz
Power Handling	15 watts (RMS)
Maximum Power	30 watts
Impedance	8 Ω
Speaker Complement	3" (7.62 cm) full range
Enclosure:	Sealed high density plastic cabinet for extended bass response
Dimensions:	5 ⁵ / ₈ \times 3 ⁹ / ₁₆ \times 3 ³ / ₈ Inches (HWD) (14.2 \times 9.0 \times 8.5 cm)
Shipping Weight:	1.4 lbs. (0.6 kg)

CONNECTING THE SPEAKER

You need speaker wire (not supplied) to connect the speaker to your receiver or amplifier. We recommend you use wire that is color-coded or marked on one side. Use 18-gauge or larger speaker wire for distances up to 50 feet. For greater distances, use 16-gauge wire. Your local Radio Shack store has a wide selection of speaker wire.

 
Note: For maximum bass response and the best overall performance, be sure the polarities match when you connect the speaker to the receiver or amplifier (positive to positive and negative to negative).

1. With the speaker in its appropriate location, measure the distance from the speaker to the receiver or amplifier. Then route the proper length of speaker wire from the speaker to the receiver or amplifier.


Cautions:

- Avoid routing the speaker wire near other electrical wires.
- Do not nail or staple the speaker wire.

2. Split apart 4 inches of speaker wire on each end.
3. Strip $\frac{1}{4}$ inch of insulation from each wire's end. Then twist the ends of the wire to secure any loose strands.

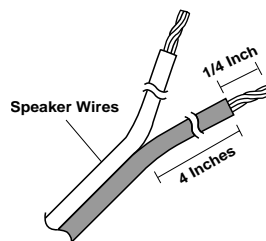

 
4. While pressing and holding down the black (negative) terminal tab on the back of the speaker, insert one end of the negative bare wire into the opening. Then release the tab.

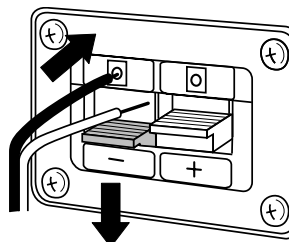

© 1995 Tandy Corporation.
All Rights Reserved.

Optimus and Radio Shack are registered trademarks used by Tandy Corporation.

 5. Repeat Step 4 to insert one end of the positive bare wire into the red (positive) terminal on the back of the speaker.
6. Using the wire's color coding as a guide, insert the other end of the negative bare wire into your receiver or amplifier's negative (–) speaker terminal.
7. Repeat Step 6 to connect the other end of the positive bare wire into your receiver or amplifier's positive (+) speaker terminal.
8. You can place the speaker on a desk, shelf, or table. You can also hang it on a wall using the keyhole slot on the back of the speaker.


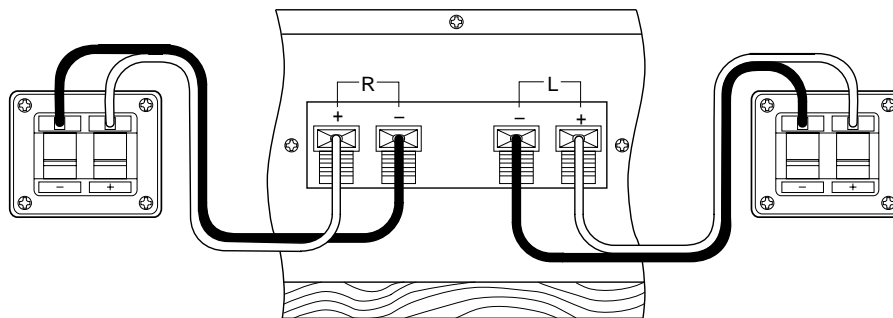


Connections for Two Speakers

RADIO SHACK
A Division of Tandy Corporation
Fort Worth, Texas 76102

7A5

  Printed in Malaysia



RADIO SHACK
A Division of Tandy Corporation
Fort Worth, Texas 76102

7A5

Printed in Malaysia



RADIO SHACK LIMITED WARRANTY

This product is warranted against defects for 5 years from date of purchase from Radio Shack company-owned stores and authorized Radio Shack franchisees and dealers. Within this period, we will repair it without charge for parts and labor. Simply **bring your Radio Shack sales slip** as proof of purchase date to any Radio Shack store. Warranty does not cover transportation costs. Nor does it cover a product subjected to misuse or accidental damage.

EXCEPT AS PROVIDED HEREIN, RADIO SHACK MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. Some states do not permit limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

We Service What We Sell

9/94

RADIO SHACK
A Division of Tandy Corporation
Fort Worth, Texas 76102

7A5

Printed in Malaysia