

CAUTION

- As with all small batteries, the batteries used with this game should be kept away from small children who might still put things in their mouths. If a battery is swallowed, consult a physician immediately.
- Be sure you insert the battery correctly and always follow the game and battery manufacturer's instructions.
- Do not dispose of batteries in fire.
- Batteries might leak if improperly installed, or explode if recharged, disassembled or heated.

MAINTENANCE

- Handle this product carefully.
- Store this product away from dusty or dirty areas.
- Keep this product away from moisture or extreme temperature.
- Do not disassemble this product. If a problem occurs, remove and replace the batteries to reset the product, or try new batteries. If problems persist, consult your warranty card for replacement instructions.

- Use only the recommended battery type.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not use rechargeable batteries.
- Do not attempt to recharge non-rechargeable batteries.
- Remove any exhausted batteries from the product.
- Do not short-circuit the supply terminals.
- Insert batteries with the correct polarity.

Please retain this for future reference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

RADICA:



RADICA:®
GAMESTER™
DVD REMOTE AND "THE UNFAIR ADVANTAGE"
ARE TRADEMARKS OF RADICA CHINA LTD.
© 2000 RADICA CHINA LTD.
PRODUCT SHAPE™
ALL RIGHTS RESERVED

PLAYSTATION IS A REGISTERED TRADEMARK OF
SONY COMPUTER ENTERTAINMENT INC.



INSTRUCTION MANUAL

MODEL RC71113

For 1 player / Ages 8 and up

P/N 82364000 Rev.B

INTRODUCTION

Congratulations on choosing the Gamester DVD Remote, the ultimate DVD remote for the PlayStation 2 game console.

CONTENTS

- 1 x DVD Remote
- 1 x Pass Through Port Receiver

IMPORTANT

- Before using this product, read the PS2 Instruction Manual for safety, health and other information.
- This product will only work with the PlayStation 2 game console.
- **Make sure you press the G/R button to select between the DVD Remote and Gamepad functions. When the DVD Remote function is selected, a green LED will appear on the Pass Through Port Receiver.**

BATTERY INSTALLATION

1. Remove the cover of the battery compartment by loosening the screw.

2. Insert 2 x AAA batteries (we recommend alkaline) taking care to match the polarity correctly, as indicated within the battery compartment.
3. Replace the cover and tighten the screw. Do not over-tighten.

Adult supervision is recommended when changing batteries.

PRODUCT FEATURES

See figure 1 for the complete list of functions for the DVD remote control.

USING YOUR DVD REMOTE

- Power down your PlayStation 2 and insert the Pass Through Port Receiver into game controller port 1 (see figure 2).
- Turn on your PlayStation 2
- Press the G/R button to select the DVD Remote function. When the DVD Remote function is selected, the green LED will appear on the Pass Through Port Receiver.
- Insert a DVD.
- When the on-screen menu appears, scroll down

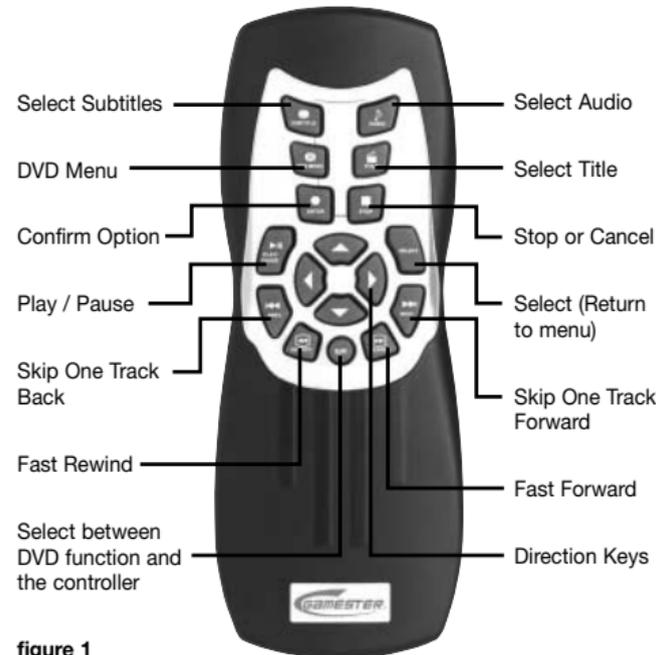


figure 1



figure 2

using the DIRECTION keys and select the PLAY option (see figure 3).



figure 3

- Press the ENTER key to confirm your selection.
- You can access the on-screen menu at any time by pressing either the SELECT key or the DVD MENU key at any time.

USING YOUR PLAYSTATION 2 GAMEPAD

- Power down your PlayStation 2 and plug your gamepad into the Pass Through Port Receiver (see figure 4).
- Turn on your PlayStation 2.



figure 4

- Press the G/R button to select the Game Controller function. The green LED on the Pass Through Port Receiver will turn off when this function is selected.

TROUBLE SHOOTING

Your DVD Remote is not working.

- Make sure the Pass Through Port Receiver is firmly connected to the PlayStation 2 controller port 1.
- Make sure the DVD Remote function is selected. Press the G/R button to select the DVD Remote function. When the DVD Remote function is selected, the green LED will appear on the Pass Through Port Receiver.

- Reset your PlayStation 2 game console.
- Insert new batteries into the remote.

Your gamepad is not working.

- Make sure the Pass Through Port Receiver is firmly connected to the PlayStation 2 controller port 1.
- Make sure the gamepad connector is firmly connected to the Pass Through Port Receiver.
- Reset your PlayStation 2 game console.