

SYLVANIA

Digital Audio Player

Your Pocket Guide

EN



1

Get Connected

2

Transfer Music

3

Plug Your Ears & Enjoy

What's in the box?	2
System Requirement	3
Synchronize songs to the player	4
How to use the player as a USB disk	5 - 10
Know Your Player Well	11 - 13
Music Playback	14
Edit Lyrics	15
EQ Mode & Repeat Mode	16
Record & Voice Playback	17
Settings	18
Technical Data	19
Trouble Shooting	20

What's in the box?


What's in the box?



Digital Audio Player




Earphone

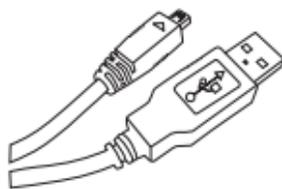

USB Cable



 CD-ROM containing:
Media player driver for
Windows® 98SE



1 x AAA 1.5V Battery



Your Pocket Guide

You'll need a computer with:



Windows® 98SE/ME/2000/XP
Pentium Class or faster Processor
CD-ROM Drive
64MB RAM
30MB free hard disk space
USB Port

For Windows® 98SE users, please install the driver in the CD-ROM before downloading any files to your player.

Synchronize songs to the player




You can use Windows Media Player 10 on Windows® XP SP2 to synchronize music which are downloaded from Internet legally and validly with license to the player. If the song is downloaded illegally without license, it cannot be synchronized.


Step 1:

Connect the player to your PC by USB cable. A dialog box will appear, choose **Synchronize media files to this device using Windows Media Player**, and click **OK** to proceed.

Synchronize songs to the player

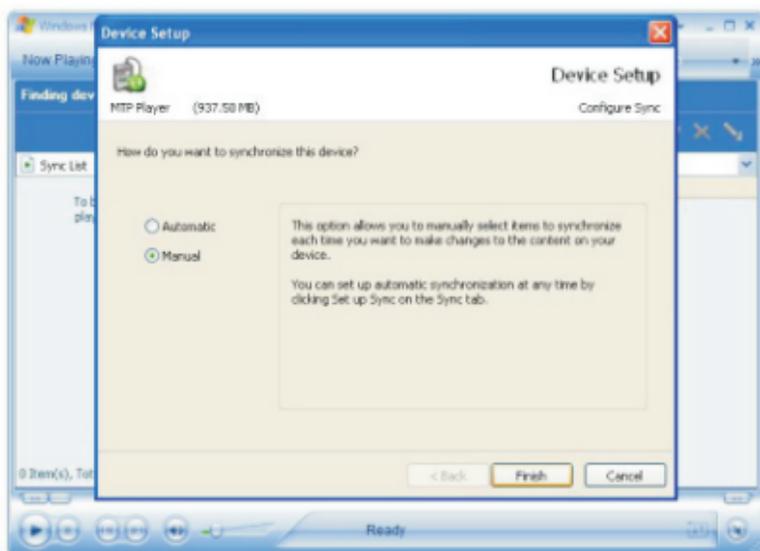


Step 2:
Windows Media Player will find device automatically.
And after a while, a dialog box of **Device Setup** will appear, choose **Manual** and click **Finish**.

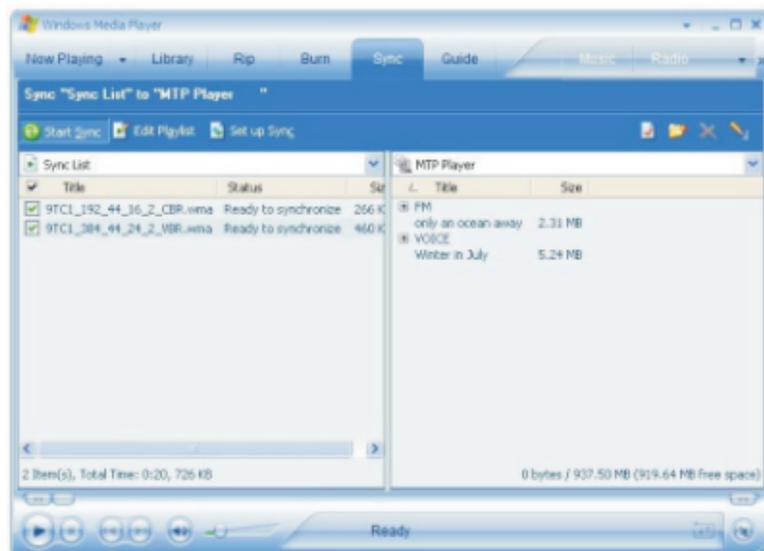


Step 3:
Windows Media Player will be operating.
Drag and drop your downloaded songs into its Sync List, and press **Start Sync**. Then the songs will be synchronized to the player.

How to use the player as a USB disk


Step 1:
Right click **My Computer** on the desktop,
and click **Properties**.

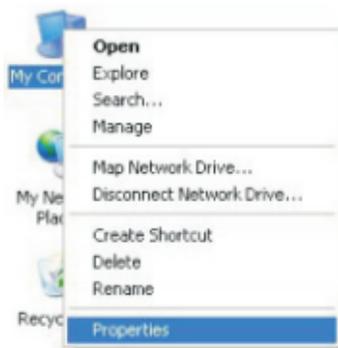

Step 2:
The window screen of **System Properties** will be shown.
Click **Hardware** on the menu bar, and then click
Device Manager.

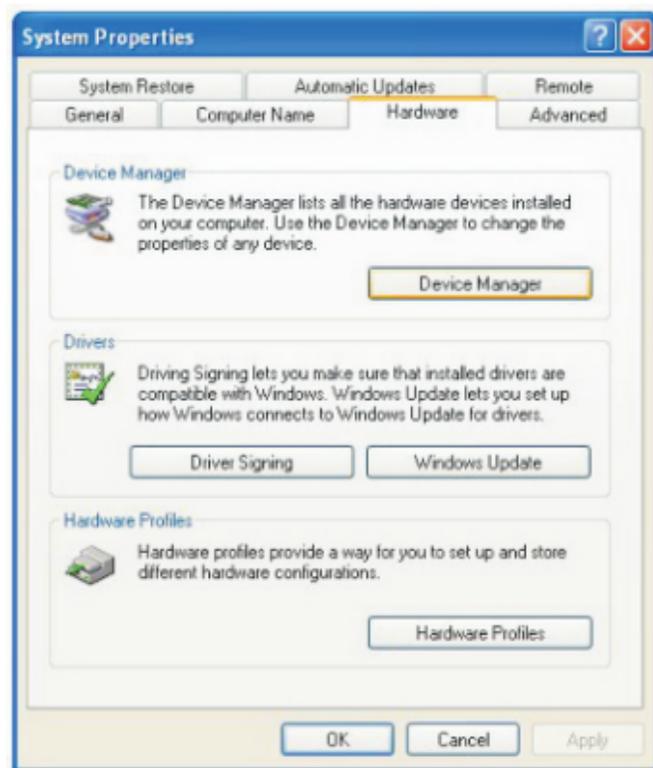

How to use the player as a USB disk

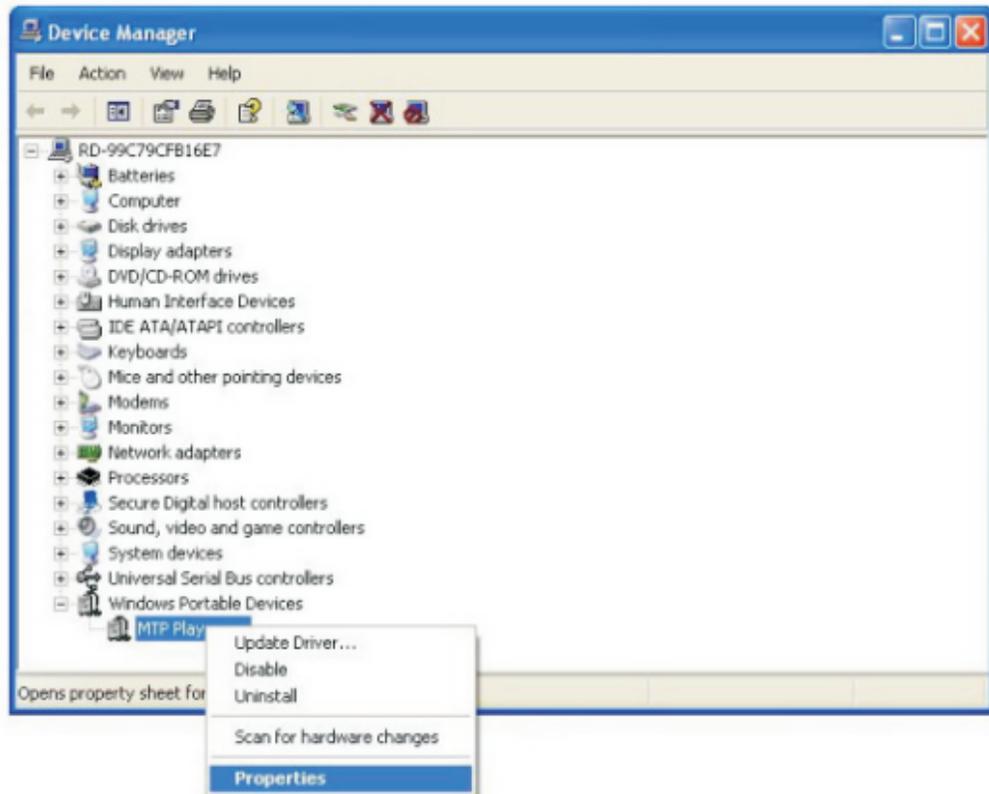


Step 3:

The window screen of **Device Manager** will be shown.

Double click **Windows Portable Devices** to see the **MTP Player**.

Then right click **MTP Player** and click **Properties**.

How to use the player as a USB disk

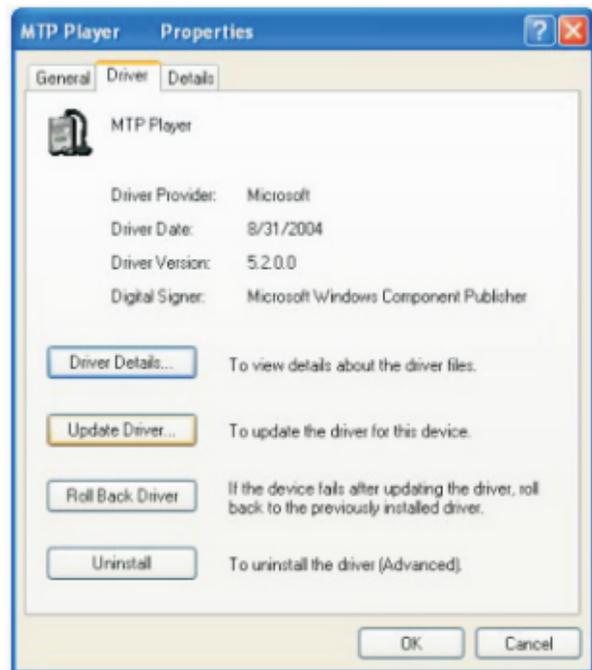


Step 4:
The window screen of **MTP Player Properties** will be shown.
Click **Driver** on the menu bar, and then click **Update Driver**.




Step 5:
You will see the screen of **Hardware Update Wizard**, choose **Install from a list or specific location(Advanced)**, and click **Next** to continue.

How to use the player as a USB disk

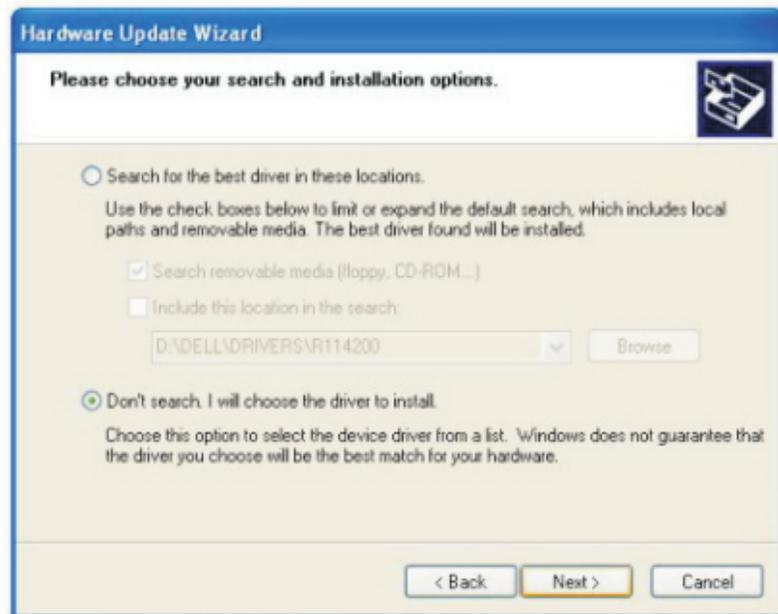


Step 6:
Choose **Don't search. I will choose the driver to install.**
and click **Next** to continue.

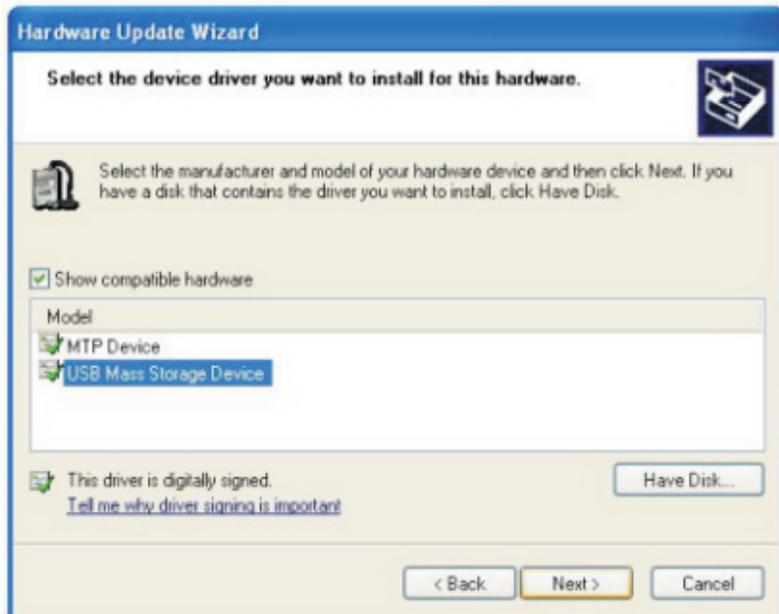


Step 7:
Choose **USB Mass Storage Device**, and click **Next** to go into
the **Completing the Hardware Update Wizard** screen, and click
Finish.

How to use the player as a USB disk

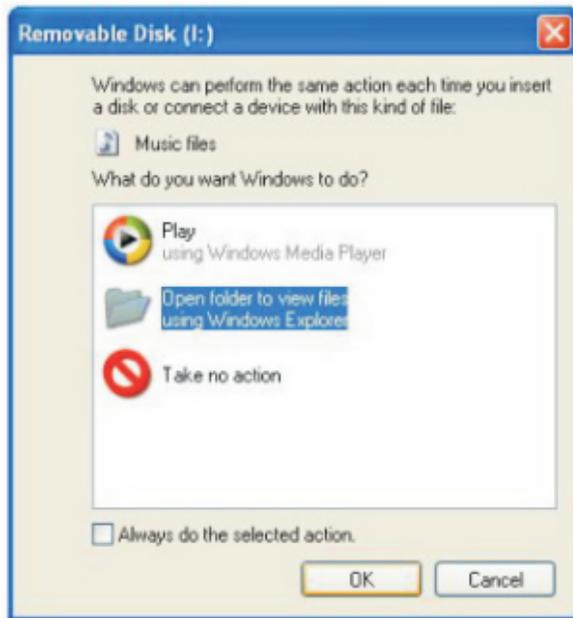


Step 8:
The **Removable Disk** window would pop up.
Select **Open folder to view files using Windows Explorer**, and click **OK**.

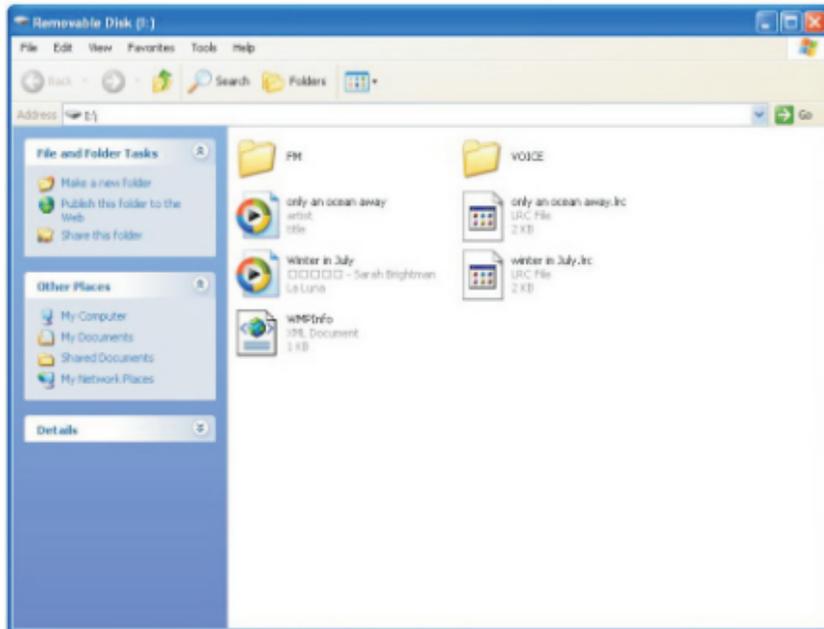


Step 9:
Drag and drop your audio files into the removable disk.
You can create any folder or directory in the removable disk.
Close the removable disk window and disconnect the player from your PC after the data transfer.

Front View

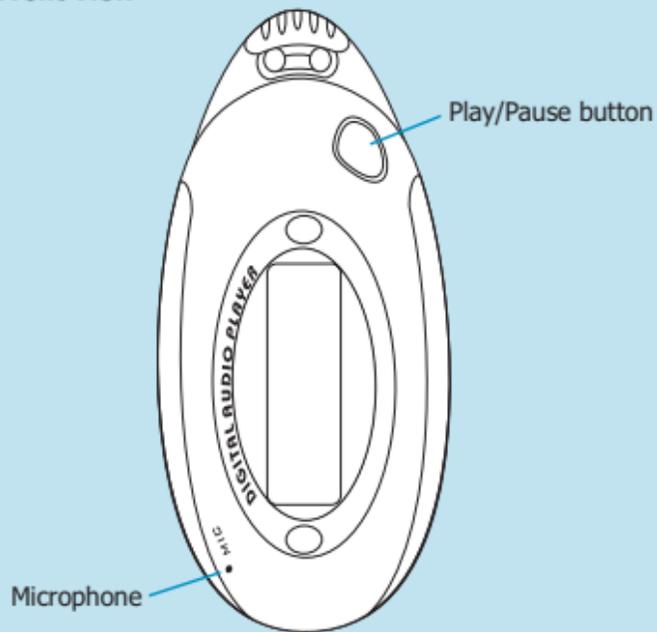


Back View

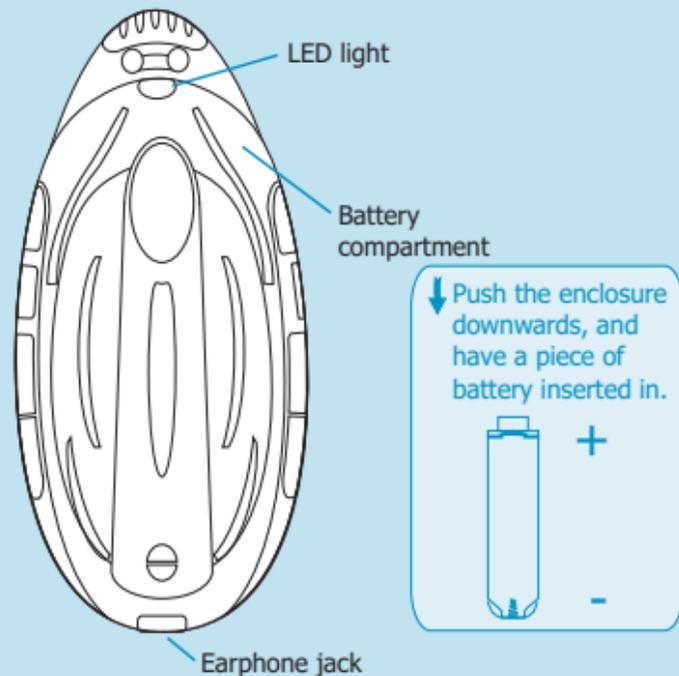


Know Your Player Well

Left View

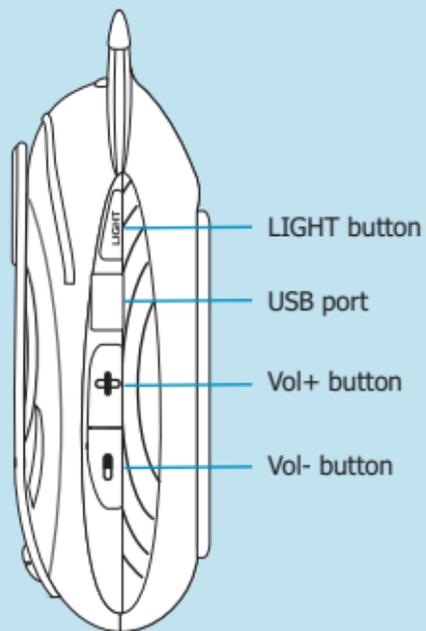

Right View

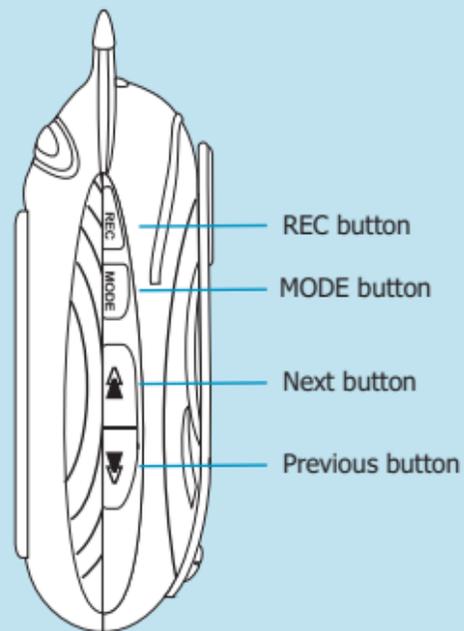


Buttons Operation

	To	Press
General	Turn On/Off	Hold the Play/Pause button
	Scroll through lists	Previous / Next buttons
	Select option	MODE button
	Return to Main Menu	Hold the MODE button
	Have the LED light on	LIGHT button
	Have the player locked / unlocked	Hold the REC button
Music	Play/Pause songs	Play/Pause button
	Jump to next song	Next button
	Fast forward	Hold the Next button
	Move back to previous song	Previous button
	Fast backward	Hold the Previous button
	A-B repeat	REC button
	Disable A-B repeat	REC button
	Volume up	Vol+ button
Volume down	Vol- button	

Have the player locked / unlocked:

If you want to have your player locked while enjoying music, you can hold the REC button long, then all operations on buttons will be invalid. And you can unlock your player by holding it long again.


Music Playback

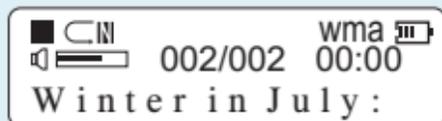

Hold the Play/Pause button to turn on the player, and it will enter the Music Mode automatically. You can select different songs by pressing the Previous / Next buttons, and press the Play/Pause button to start playing the song you select.

While enjoying music, you can press the Play/Pause button to pause or continue the music; Press the Previous / Next buttons to move back to the previous song or jump to the next song; Hold the Previous / Next buttons to move your song forward or rewind it.

If you want to adjust the volume, please press the Vol- / Vol+ buttons. And if you want to repeat a segment of the song, you can press the REC button.

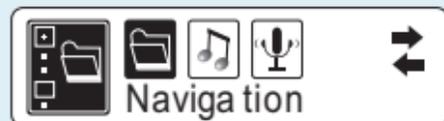




To view the songs list

While enjoying music, if you wanna view the songs list, you can hold the MODE button to the Main Menu screen. Select **Navigation**, and the name of current song will be shown after you press the MODE button. Press the Previous / Next buttons to select a song in the list, then play it by pressing the Play/Pause button.

Edit Lyrics

You can copy the synchronous lyrics from internet, and create a new **Text Document** on your PC, paste them, and then select to save this document in the extension of **.LRC** shown as below.

Then put both **.LRC** and **.MP3** (or **.WMA**) files of the same song into the same folder in the removable disk. Your lyrics will be shown automatically when you play that song.

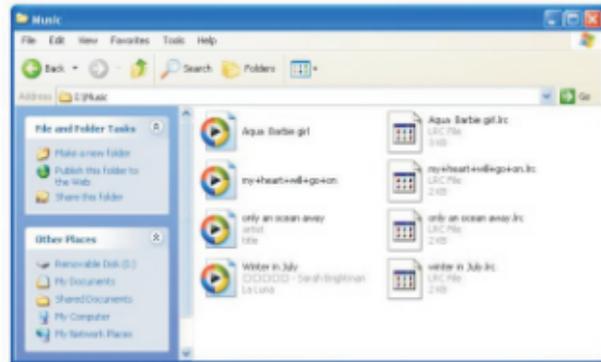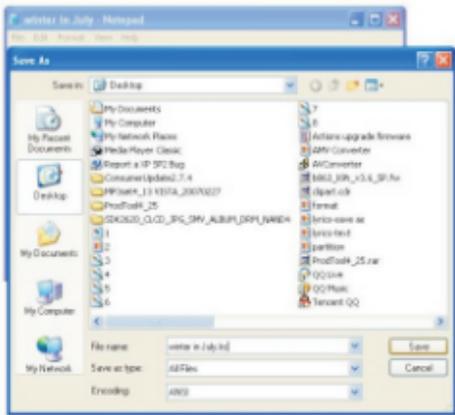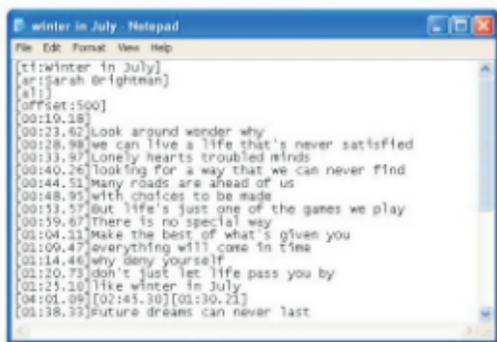

EQ Mode



Procedure:

While playing music, press the MODE button to enter the sub-menu screen. Select **EQ set**, and press the MODE button to confirm.

You can press the Previous / Next buttons to select your desired EQ mode, and press the MODE button to confirm your setting.

7 EQ Modes are available:

Normal, Rock, Jazz, Bass, Pop, Classical, Soft.

Repeat Mode

Procedure:


While playing music, press the MODE button to enter the sub-menu screen. Press the Next button to select **Play Mode**, and press the MODE button to confirm.

You can press the Previous / Next buttons to select your desired repeat mode, and press the MODE button to confirm your setting.

6 Repeat Modes are available:



Normal, Repeat All, Repeat One, Random, Random All, Preview.

Voice Recording

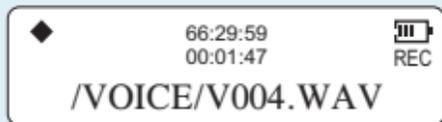

Press the Previous / Next buttons to select **Record** on the Main Menu. Then press the MODE button to start recording. You can finish recording by pressing the MODE button again.

You can have a quick access to the Voice Recording Mode: In the STOP mode, press the REC button to enter the Voice Playback Mode, then press the REC button again to enter the Voice Recording Mode and start recording.

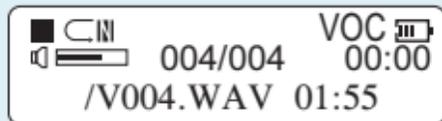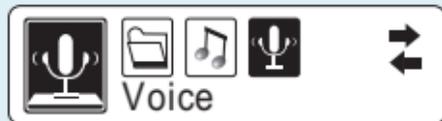

Voice Playback

Press the Previous / Next buttons to select **Voice** on the Main Menu. Then press the MODE button to enter the Voice Playback Mode. You can press the Previous / Next buttons to select a recorded voice file, and then press the Play/Pause button to start voice playing.

If you want to delete a recorded voice file, select **Delete** on the Main Menu, and press the MODE button to enter its sub-menu. Press the Previous / Next buttons to choose **Voice**, and press the MODE button to confirm.

Then you can press the Previous / Next buttons to select the file which you want to delete. Press the Vol- / Vol+ buttons to choose **Yes**, and press the MODE button to confirm to delete it.

Setting Language

Step 1:

Press the Previous / Next buttons to select **Setting** on the Main Menu, then press the MODE button to enter its sub-menu.

Step 2:

Press the Next button to select **Language**, then press the MODE button to confirm.

Step 3:

You can select your preferred language by pressing the Previous / Next buttons, and then press the MODE button to confirm your setting.

13 languages are available:

English	Greek
French	Swedish
German	Turkish
Spanish	Norwegian
Dutch	Danish
Italian	Finnish
Portuguese	



Auto-Power Off Setup

Step 1:

Press the Previous / Next buttons to select **Setting** on the Main Menu, then press the MODE button to enter its sub-menu.

Step 2:

Press the Next button to select **Power set**, then press the MODE button to confirm.

Step 3:

Press the Previous / Next buttons to set the Auto-Power Off time as **2 Minutes**, **10 Minutes**, or **30 Minutes**.

And if you wanna disable this function, you can select **DISABLE**. Then press the MODE button to confirm your setting.

In the IDLE mode (no button is pressed), the player will be turned off automatically based on the duration you set.

General Information

Power Supply	1 x AAA 1.5V Battery
Dimensions	35mm x 79mm x 25mm
Weight	26g
Display	LCD with 7-color backlight
Capacity	128MB/256MB/512MB/1GB/2GB/4GB internal flash memory
Operating System	Windows® 98SE/ME/2000/XP
Interface	USB 2.0 Full Speed

Voice Recording

Supported File Type	.WAV files
---------------------	------------

Audio Playback

Compression Formats	.MP3 (8kbps ~ 320kbps) .WMA (5kbps ~ 384kbps)
S/N ratio	85dB
Earphone Output Power	9mWx, 32ohm
THD+N	<0.6
Crosstalk	>50dB

What should I do if...

Q: I cannot enter the MUSIC mode after using the player for a period of time.

A: You should format the memory of the player under connection to PC.

(Be sure you remember to backup the data in your player before performing the above action.)

Disposal of your old product

Electrical and electronic equipment (EEE) contains materials, parts and substances which can be dangerous to the environment and harmful to human health if wastes of electrical and electronic equipment (WEEE) are not disposed correctly.

Equipments which are marked with the WEEE logo (as shown on the right), should not be thrown away with your household waste. Contact your local Authority Waste Disposal Department as they will be able to provide details of the recycling options available in your area.



Specifications are subject to change without notice.
No part of this document may be reproduced or transmitted
in any form or by any mean, electronic or mechanical,
including photocopying and recording
or translated to another language for any purpose
without the prior written consent of the manufacturer.
All brand names, logos and registered trademarks mentioned
are property of their respective owners.
2008 © Sysbay International Technology Ltd. All right reserved.



Printed in China