

# Quick Start Guide

## Main Room – Wireless Remote Control

**START HERE** – Select your source.\*\* Press the TV, CABLE, SATELLITE, HIGH DEFINITION CABLE/SATELLITE, DVD, VCR, CD or TUNER button.\* The system will automatically turn on the correct components and select the correct inputs.

**WHEN YOU'RE DONE** –

press the System OFF button and the entire system will switch off.

**ADJUST VOLUME** –

with the VOLUME +/- and MUTE buttons.

**CHANGE THE CHANNEL OR TRACK** –

When watching TV you can easily change the channel. While watching a DVD or listening to your favorite CD you can change tracks. Plus with the DISC skip button you can change discs.

**CONTROL PLAYBACK** –

of CD, DVD and VHS with the familiar buttons.

**CHOOSE ANOTHER SOURCE** –

and the system will automatically switch on the correct components.

\*\*Make certain to point the remote at the system until the LED stops flashing.

\*Cable or Satellite require separate set-top box, not included.

# Quick Start Guide

## Remote Room –


### In-wall Keypad and Volume Control

#### **START HERE –** Select your source.

Press the CD, TUNER, DVD or VCR button. The system will automatically turn on the correct components and select the correct inputs.

#### **CHOOSE ANOTHER**

**SOURCE –** and the system will automatically turn on the correct components.

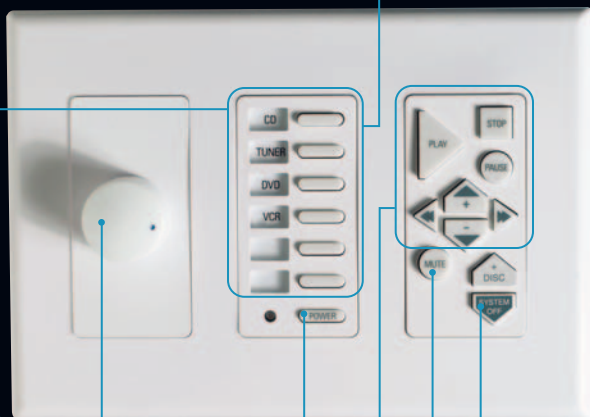

**ADJUST VOLUME –**  
with the in-wall Volume control.

**ROOM OFF –**  
Press the POWER button to turn the room off.

**CONTROL PLAYBACK –**  
of CD, DVD and VHS with these familiar buttons.

**WHEN YOU'RE DONE –** Press the System OFF button to turn off the entire NHS-502 system, except for the Main Room television.

**MUTE –**  
Turns volume off completely.

#### Consumer Support:

Hotline: 1-877-619-7669

email: [sonynewhome@info.sel.sony.com](mailto:sonynewhome@info.sel.sony.com)

Consult operating manual for full details of system.