



EMERSON
PART NO. : FR20SL-08102008-1

Printed in china



ELECTRONIC ICE BUCKET

OWNER'S MANUAL FR20SL

READ AND SAVE THESE INSTRUCTIONS
UNAUTHORIZED MODIFICATIONS TO THIS DEVICE COULD VOID
MANUFACTURER'S WARRANTY.

Visit our web site at "www.emersonradio.com"

 
IMPORTANT SAFEGUARDS (CONTINUED)

- Extreme caution must be used when moving an appliance containing hot liquids.
- Do not use appliance for uses other than intended use.
- Before serving, unplug cord from wall outlet and unit. Do not leave cord within child's reach.
- This unit is not intended to store unpacked beverages. It is recommended to load the unit with a beverage in its original container.
- Beverages stored using the warm setting must be consumed within one hour.

SAVE THESE INSTRUCTIONS

- a) The extension cords are available and may be used if care is exercised in their use.
- b) If a longer extension cord is used:
- (1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
 - (2) The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tipped over.

LOCATION OF CONTROLS

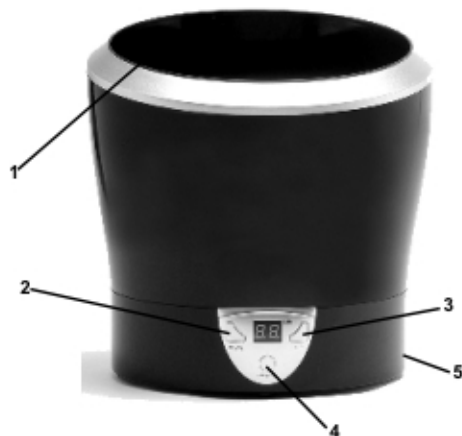

- | | |
|----------------------|------------------|
| 1. Bucket Opening | 4. Power button |
| 2. Timer down button | 5. DC-in jack |
| 3. Timer up button | 6. Bottle Opener |



SAFETY INSTRUCTIONS



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



DANGEROUS VOLTAGE:

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



ATTENTION:

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

IMPORTANT SAFEGUARDS

 
When using this electrical appliance, safety precautions should always be observed, including the following:

- Before using the appliance, read the instructions carefully.
- To protect against electrical shock, do not immerse plug, cord or the appliance itself in water or any other liquid.
- Do not let the cord hang over the edge of the work space or touch any hot surfaces.
- Do not place near hot gas or electric burner.
- Do not use the appliance if the plug or the electrical cable is damaged or if the appliance does not work properly. Please see a qualified electrician for replacement or repair.
- Do not pull or carry appliance by its cord, use the cord as a handle and/or pull cord around sharp edges or corners. Do not use appliance over cord. (Keep cord away from heated surface.)
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Always unplug before cleaning and removing parts. Clean with damp cloth only.
- Do not clean with metal scrubbing pads.
- The appliance has a polarized plug (one blade is wider than the other). This plug will fit into a polarized electrical outlet only one way, as a safety feature. Reverse the plug if the plug does not fully fit in the outlet. Contact a qualified electrician if it still does not fit. Do not attempt to defeat this safety feature.
- The speed at which the unit cools/heats the liquid will depend on the size of the bottle or container and the starting temperature.
- Always check temperature before consuming.
- This is not a toy. Please keep out of reach of children.
- Use only as described in this manual.
- Do not touch the hot surfaces.
- Close supervision is necessary when any appliance is used by or near children.

POWER SOURCE

AC CONNECTION

Insert the small end of the AC adapter into the POWER IN jack (located on the rear of the unit). Connect the AC adapter to a wall outlet having 120V AC, 60 Hz.

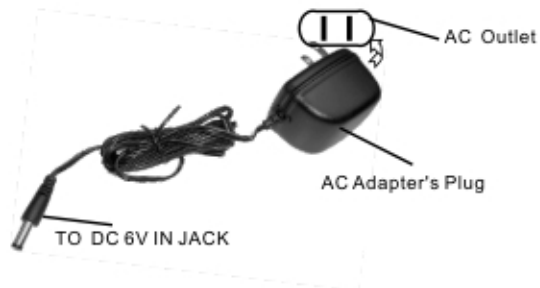


NOTES:

- Only use the supplied AC adapter which has the following specs:
DC 6V, 600mA
- Remove the AC adapter when not using.


IMPORTANT: When not in use, unplug from AC outlet.

 CLEANING

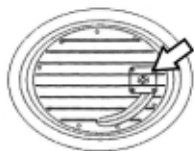

Using a soft brush to clean the water outlet. (If necessary)

 
OPERATION

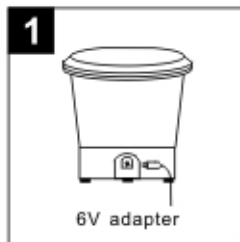

Connect to an AC outlet and switch the power on.

Simply add a couple of trays of ice cubes and enough cold water to fill about halfway. This will depend on how many bottles/cans you need to chill of course, but aim to cover most of the bottle or can. Put your drinks in the ice water.

 Press the up button and the indicator will show you how many minutes the water will swirl around before stopping automatically. One can will take about 5 minutes : one wine bottle will take about 10 minutes. If you want to reduce the chilling time, just press the down button for each minute or switch the power off. The maximum time is 20 minutes so as not to waste battery power and to extend the life of the fan motor. Leave for a minute or two and then switch back on if necessary.

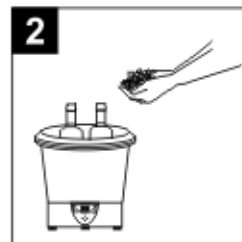

REGULAR CHARGING

Prior to using the ICE BUCKET for the first time, the battery must be fully charged for optimum life and operation.

REGULAR CHARGING

- Be sure to turn the ICE BUCKET power off. Otherwise the battery pack will not be charged.
(Approx. 4 hours for fully charge)
- Plug the AC Adapter to ICE BUCKET to start the battery charging, "CH" indicator appear.
- When battery is weak "LO" indicator will appears.
- The "FU" indicator and "BEEPS" sound appears when the battery fully charged. (Press any key to stop the sound)
- After fully charge remove the AC adapter.
(Operation time approx. 2 hours)

FORCE CHARGING

- Be sure to turn the ICE BUCKET power off. Press the POWER button for 3 seconds to start FORCE CHARGING. For longer battery life shall be completely used up re-charged battery and then fully charged.
- If you don't have idea how long you can operate this ICE BUCKET with re-chargeable battery power and you have situation to use this ICE BUCKET at outdoor, you can use this FORCE CHARGING to fully charge the re-chargeable battery.

REMOVING THE RECHARGEABLE BATTERIES

- Remove the 4 screws to open the battery compartment.
- Unplug the wire between the batteries and ICE BUCKET.
- The battery is now free for correct disposal.



Ni-MH

**THIS UNIT CONTAINS
NI-MH BATTERY PACK;
DISPOSE THIS UNIT PROPERLY.**

LIMITED WARRANTY

Emerson radio Corp. warrants manufacturing defects in original material, including original parts and workmanship, under normal use and conditions, for a period of ninety(90)days from the date of original purchase in U.S. With your dates proof of purchase, We will provide repair service at no charge for labor and parts (excluding battery)at an authorized Depot Repair Facility, or replace the product in our discretion

For repair or replacement, pack your unit in a padded box, enclose your check or money order payable to Emerson Radio Corp. in the amount of \$5.00(not required by California residents)to cover shipping and handling costs, and enclose a copy of you proof of purchase. Send your unit to:

**Emerson Radio Corp.,
5101 Statesman Drive,
Irving, TX 75063**

This warranty does not cover damage from negligence, misuse, abuse, accident, failure to follow operating instructions, commercial use, rental, repairs by an unauthorized facility, or products purchased, used, serviced or damaged outside of the United States.

THIS WARRANTY GIVED YOU SPECIFIC LEGAL RIGHT, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICE VARY FROM STATE TO STATE.

The serial number of your system is located on a label on the bottom. Please take a moment now to locate the serial number and write the number in the space provided below. You may be asked to provide this number when calling for product service.

Model Number:

Serial Number: _____