



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX FAV50879. You'll find the answers to all your questions on the AEG-ELECTROLUX FAV50879 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX FAV50879
User guide AEG-ELECTROLUX FAV50879
Operating instructions AEG-ELECTROLUX FAV50879
Instructions for use AEG-ELECTROLUX FAV50879
Instruction manual AEG-ELECTROLUX FAV50879

FAVORIT 50879 U

Dishwasher

User information



[Your user manual](#)
[AEG-ELECTROLUX FAV50879](#)

Manual abstract:

The multi-display can indicate: the level of hardness to which the water softener is set. whether the rinse aid inflow has been activated/deactivated. the start delay that has been set. the estimated time remaining for the current dishwashing cycle. what type of error has occurred with the dishwasher. 6 The control indicators have the following meanings: 1) 1) Refill with special salt Refill with rinse aid 3 in 1 function activated 3 IN 1 1) These control indicators are never illuminated while a dishwashing cycle is running. Prior to using for the first time 3 If you wish to use 3 in 1 detergent: First read the section "Using 3in1 detergents". Do not fill up with special salt or rinse aid. If you do not use 3in1 detergent, before using for the first time 1. Set the water softener 2.

Fill up with special salt for water softeners 3. Fill up with rinse aid Setting the water softener 3 The water softener must be set manually and electronically: To avoid scale deposits on the dishes and in the dishwasher, the dishes must be washed with soft water, i.e. water with a low lime content. The water softener must be set according to the table to the water hardness in the area where you live.

Your local water company will be able to give you information about the water hardness in your area. The dishwasher must be switched off. Setting manually:
1. Open the dishwasher door. 2.

Remove the lower basket from the dishwasher. 3. Turn water hardness dial on the left wall of the dishwasher interior to 0 or 1 (see table). 7 3 Setting electronically: 1. Press the ON/OFF button. If the only LED indicator illuminated is one that belongs to a programme button, this means that this dishwashing cycle has been activated. The dishwashing cycle must be deselected: Press function buttons 2 and 3 simultaneously for approx. 2 seconds. The LED indicators of all the programme buttons that can be selected light up. 2.

Press function buttons 2 and 3 simultaneously and keep them pressed. The LED indicators for function buttons 1 to 4 will flash. 3. Press function button 1. The LED indicator for function button 1 will flash. The multi-display will indicate the hardness setting. 4. Pressing function button 1 increases the hardness setting by 1. (Exception: hardness setting 1 follows hardness setting 10). 5.

When the hardness setting is correct, press the ON/OFF button. The hardness setting is now saved. If the water softener is set electronically to "1", this switches off the control indicator for special salt. Water hardness in °d1) 51 - 70 43 - 50 37 - 42 29 - 36 23 - 28 19 - 22 15 - 18 11 - 14 4 - 10 below 4 in mmol/l2) 9,0 - 12,5 7,6 - 8,9 6,5 - 7,5 5,1 - 6,4 4,0 - 5,0 3,3 - 3,9 2,6 - 3,2 1,9 - 2,5 0,7 - 1,8 below 0.7 Range Adjusting the hardness setting Manual Electronic 103) 9 8 7 6 5 4* 0* 3 2 1 no salt necessary Indication on the multi-display IV 1 10L .

9L 8L 7L 6L 5L 4L 3L 2L 1L III II I/II I 1) (°d) German degree, measure of the hardness of water 2) [mmol/l] millimol per litre, international unit for water hardness 3) On this setting the length of the dishwashing cycle may be slightly longer. *)factory setting 8 Adding special salt To decalcify the water softener, it must be filled up with special salt. Use only special salt suitable for domestic dishwashers. If you do not use 3 in 1 detergent, fill up with special salt: Before using the dishwasher for the first time. When the control indicator for special salt is illuminated on the control panel.

1. Open the door and remove the lower basket. 2. Screw open the lid on the salt dispenser by turning it anti-clockwise. 3. Only when using the dishwasher for the first time: Fill the salt dispenser with water. 4. Place the funnel (supplied) over the dispenser opening. Fill the dispenser with special salt; the capacity of the dispenser is approx. 1.

0-1.5 kg, depending on the size of the grains..



[Your user manual](#)

[AEG-ELECTROLUX FAV50879](#)