



HP ProBook 4530s Notebook PC  
HP ProBook 4730s Notebook PC

Maintenance and Service Guide

© Copyright 2011 Hewlett-Packard  
Development Company, L.P.

Bluetooth is a trademark owned by its proprietor and used by Hewlett-Packard Company under license. Intel and Core are trademarks or registered trademarks of Intel Corporation in the United States and other countries. Microsoft, Windows, and Windows Vista are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. SD Logo is a trademark of its proprietor.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.


Second Edition: May 2011

First Edition: March 2011

Document Part Number: 650281-002

## Safety warning notice

---

 **WARNING!** To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).

---



---

# Table of contents

<b>1 Product description .....</b>	<b>1</b>
<b>2 External component identification .....</b>	<b>8</b>
Display .....	8
Top .....	9
TouchPad .....	9
Lights .....	10
Buttons and fingerprint reader (select models only) .....	11
Keys .....	13
Front .....	14
Left .....	15
Right .....	16
Bottom .....	17
<b>3 Illustrated parts catalog .....</b>	<b>18</b>
Service tag .....	18
Computer major components .....	19
Display components .....	27
Plastics Kit .....	29
Cable Kit .....	30
Mass storage devices .....	30
Miscellaneous parts .....	31
Sequential part number listing .....	32
<b>4 Removal and replacement procedures .....</b>	<b>41</b>
Preliminary replacement requirements .....	41
Tools required .....	41
Service considerations .....	41
Plastic parts .....	41
Cables and connectors .....	42
Drive handling .....	42

Grounding guidelines .....	43
Electrostatic discharge damage .....	43
Packaging and transporting guidelines .....	44
Workstation guidelines .....	44
Equipment guidelines .....	45
Component replacement procedures .....	46
Service tag .....	46
Battery .....	47
SIM .....	48
Bottom door .....	49
Optical drive .....	50
Hard drive .....	52
Memory modules .....	54
WWAN module .....	56
WLAN/Bluetooth combo card .....	58
Keyboard .....	63
Top cover .....	65
Card reader board .....	70
Speaker assembly .....	71
Quick Launch board .....	73
Power button board .....	74
Modem module .....	76
Lid switch .....	78
USB board .....	80
Optical drive connector .....	82
RJ-11 jack cable .....	84
System board .....	85
Hard drive extension board (4730s models) .....	89
RTC battery .....	91
Fan .....	93
Heat sink .....	95
Processor .....	97
Power cable .....	100
Display assembly .....	102
<b>5 Computer Setup (BIOS) and System Diagnostics .....</b>	<b>112</b>
Using Computer Setup .....	112
Starting Computer Setup .....	112
Navigating and selecting in Computer Setup .....	112
Restoring factory settings in Computer Setup .....	113
Updating the BIOS .....	114

Determining the BIOS version .....	114
Downloading a BIOS update .....	114
Using System Diagnostics .....	115
<b>6 Specifications .....</b>	<b>116</b>
Computer specifications .....	116
39.6-cm (15.6-in), HD+ display specifications .....	117
39.6-cm (15.6-in), HD display specifications .....	117
43.9-cm (17.3-in), HD+ display specifications .....	119
Hard drive specifications .....	120
Blu-ray BD-R/RE DVD±RW SuperMulti DL Drive specifications .....	121
DVD±RW and CD-RW SuperMulti DL Combo Drive specifications .....	122
Blu-ray Disc ROM with SuperMulti DVD±R/RW DL Drive .....	123
DVD-ROM Drive specifications .....	124
Specification information in Device Manager .....	125
<b>7 Backup and recovery .....</b>	<b>126</b>
Windows 7 .....	126
Backing up your information .....	126
Performing a system recovery .....	127
Using the Windows recovery tools .....	128
Using f11 recovery tools .....	128
Using a Windows 7 operating system DVD (purchased separately) .....	129
Windows Vista .....	130
Backing up your information .....	130
Performing a recovery .....	131
Using the Windows recovery tools .....	131
Using f11 recovery tools .....	132
Using a Windows Vista operating system DVD (purchased separately) .....	132
<b>8 Power cord set requirements .....</b>	<b>134</b>
Requirements for all countries and regions .....	134
Requirements for specific countries and regions .....	135
<b>9 Recycling .....</b>	<b>136</b>
Battery .....	136
Display .....	136
<b>Index .....</b>	<b>142</b>



# 1 Product description

Category	Description	4530s (UMA)	4530s (Disc)	4730s (Disc)
Product Name	HP ProBook 4530s Notebook PC	√	√	
	HP ProBook 4730s Notebook PC			√
Processors	Intel® Core™ i7 processor, Quad Core			
	2630QM, 2.00-GHz (Turbo up to 2.90) processor 6-MB L3 cache, 8 threads		√	√
	Intel Core i7 processor, Dual Core			
	2620M, 2.70-GHz (Turbo up to 3.40) processor 4-MB L3 cache, 4 threads	√	√	√
	Intel Core i5 processors, Dual Core			
	2540M, 2.60-GHz (Turbo up to 3.30) processor 3-MB L3 cache, 4 threads	√	√	√
	2520M, 2.50-GHz (Turbo up to 3.20) processor 3-MB L3 cache, 4 threads	√	√	√
	2430M, 2.40-GHz (Turbo up to 3.00) processor 3-MB L3 cache, 4 threads	√	√	√
	2410M, 2.30-GHz (Turbo up to 2.90) processor 3-MB L3 cache, 4 threads	√	√	√
	Intel Core i3 processors, Dual Core			
	2350M, 2.30-GHz processor 3-MB L3 cache, 4 threads	√	√	√
	2330M, 2.20-GHz processor 3-MB L3 cache, 4 threads	√	√	√
	2310M, 2.10-GHz processor 3-MB L3 cache, 4 threads	√	√	√
	Intel Pentium processor, Dual Core			
	B950, 2.10-GHz processor 2-MB L3 cache, 2 threads	√	√	√
	B940, 2.00-GHz processor 2-MB L3 cache, 2 threads	√	√	√
	Intel Celeron processor, Dual Core			
	B810, 1.60-GHz processor 2-MB L3 cache, 2 threads	√	√	√
Chipset	Mobile Intel HM65 chipset	√	√	√
Graphics	Intel HD Graphics 3000 (UMA)	√		

Category	Description	4530s (UMA)	4530s (Disc)	4730s (Disc)
Panel	AMD Radeon™ HD 6490M, 512-MB or 1-GB (discrete)		√	√
	All display assemblies include 2 wireless local area network (WLAN) antennas	√	√	√
	All displays are LED backlit			
	39.6-cm (15.6-inch) HD, 1366x768	√	√	
	39.6-cm (15.6-inch) HD, 1366x768, includes camera	√	√	
	39.6-cm (15.6-inch) HD, 1366x768, includes camera and WWAN	√		
	39.6-cm (15.6-inch) HD, BrightView, 1366x768	√	√	
	39.6-cm (15.6-inch) HD, BrightView, 1366x768, includes camera	√	√	
	39.6-cm (15.6-inch) HD, BrightView, 1366x768, includes camera and WWAN	√		
	39.6-cm (15.6-inch) HD+, 1600x900	√	√	
	39.6-cm (15.6-inch) HD+, 1600x900, includes camera	√	√	
	43.9-cm (17.3-inch) HD+, 1600x900			√
	43.9-cm (17.3-inch) HD+, 1600x900, includes camera			√
	Support privacy filter	√	√	√
Memory	Two customer-accessible/upgradeable memory module slots supporting up to 8 GB of RAM	√	√	√
	Supports dual-channel memory	√	√	√
	PC3-10600, 1333-MHz, DDR3	√	√	√
	Supports the following configurations:	√	√	√
	<ul style="list-style-type: none"> <li>8192 (4096 × 2)</li> <li>4096 (2048 × 2)</li> <li>4096 (4096 × 1)</li> <li>3072 (2048 + 1024)</li> <li>2048 (2048 × 1)</li> <li>2048 (1024 × 2)</li> <li>1024 (1024 × 1)</li> </ul>			
Hard drives	Supports 7-mm/9.5-mm/12.7-mm, 2.5-in SATA hard drives with HP DriveGuard	√	√	√
	Customer-accessible	√	√	√

Category	Description	4530s (UMA)	4530s (Disc)	4730s (Disc)
	Supports the following drives:	√	√	√
	<ul style="list-style-type: none"> <li>750-GB, 7200-rpm</li> <li>500-GB, 7200-rpm</li> <li>320-GB, 7200-rpm</li> <li>250-GB, 7200-rpm</li> <li>640-GB, 5400-rpm</li> <li>500-GB, 5400-rpm</li> <li>320-GB, 5400-rpm</li> <li>250-GB, 5400-rpm</li> </ul>			
<b>Fixed optical drives</b>	Supports the following 12.7-mm SATA optical drives:	√	√	√
	<ul style="list-style-type: none"> <li>DVD-ROM</li> <li>DVD+/-RW SuperMulti DL</li> <li>Blu-ray ROM DVD+/-RW SuperMulti DL</li> <li>Blu-ray R/RE DVD +/-RW SuperMulti DL Drive</li> </ul>			
	Supports no optical drive option	√	√	√
<b>Audio/Visual</b>	Integrated dual-array microphone (webcam models only)	√	√	√
	Integrated mono (non-webcam models)	√	√	√
	Stereo speakers (2)	√	√	√
	Integrated webcam (720p HD)	√	√	√
	Supports no camera option	√	√	√
	Headphone and microphone jacks	√	√	√
<b>Modem</b>	56K V.92 MDC data/fax modem	√	√	√
	Modem cable not included	√	√	√
	Supports "No Modem" option	√	√	√
<b>Ethernet</b>	Realtek RTL8151EH-CG 10/100/1000	√	√	√
	S3/S4/S5 wake on LAN (AC mode only)	√	√	√
	Ethernet cable not included	√	√	√
<b>Wireless</b>	<b>Integrated WLAN options by way of wireless module:</b>			
	Two WLAN antennas built into display assembly	√	√	√
	Supports "no WLAN" option	√	√	√

Category	Description	4530s (UMA)	4530s (Disc)	4730s (Disc)
	Supports the following WLAN formats:	√	√	√
	<ul style="list-style-type: none"> <li>• Ralink 802.11 b/g/n 1×1</li> <li>• Realtek 802.11 b/g/n 1×1</li> <li>• Atheros 802.11 b/g/n +BT Combo</li> <li>• Ralink 802.11 a/b/g/n +BT Combo</li> <li>• Realtek 802.11 b/g/n +BT Combo</li> <li>• Intel 802.11 a/b/g/n 2×2 +BT Combo</li> </ul>			
	<b>Integrated WWAN options by way of wireless module:</b>			
	Two WWAN antennas built into display assembly (world-wide 5 band, configured with panels on all units)	√		
	Subscriber identity module (SIM) security (customer-accessible in battery bay)	√		
	Supports “no WWAN” option	√		
	Supports the following WWAN modules:	√		
	<ul style="list-style-type: none"> <li>• Qualcomm Gobi 3000 HSPA/CDMA with GPS</li> <li>• Ericsson 5521 HSPA+</li> <li>• Ericsson F3307-900</li> </ul>			
	<b>Integrated personal area network (PAN) options by way of Bluetooth® module:</b>			
	Bluetooth 3.0 only supported by combo card	√	√	√
<b>External media card</b>	One ExpressCard 34mm slot	√	√	√
	6-in-1 Digital Media Reader Slot	√	√	√
<b>Ports</b>	Audio-in (stereo microphone)	√	√	√
	Audio-out (stereo headphone)	√	√	√
	RJ-11 (modem)	√	√	√
	RJ-45 (Ethernet, includes link and activity lights)	√	√	√
	USB 2.0 (4)	√	√	√
	VGA (Dsub 15-pin) supporting 1600 × 1200 external resolution at 75-GHz (hot plug/unplug with auto-detect)	√	√	√
	HDMI	√	√	√
	Multi-pin AC port	√	√	√
<b>Keyboard/pointing devices</b>	Full-sized keyboard with numeric keypad	√	√	√
	Touchpad includes: supports 2-way scroll with legend, taps enabled by default, 2-finger scrolling and zoom enabled by default	√	√	√
<b>Power requirements</b>	Smart AC adapter with localized cable plug support (3-wire plug with ground pin):	√	√	√


Category	Description	4530s (UMA)	4530s (Disc)	4730s (Disc)
	90-W		√	√
	65-W	√		
	<b>In-line cavity</b>			
	8-cell, 73-Wh Li-ion battery			√
	<b>L-shape</b>			
	9-cell, 93-Wh Li-ion battery	√	√	
	6-cell, 55-Wh Li-ion battery	√	√	
	6-cell, 47-Wh Li-ion battery	√	√	
<b>Security</b>	Integrated fingerprint reader	√	√	√
	Intel AT support	√	√	√
	Support Kensington security lock	√	√	√
	Support no fingerprint reader option	√	√	√
<b>Operating system</b>	<b>Preinstalled:</b>			
	Windows 7 Professional 32 with Microsoft® Basics	√	√	√
	Windows 7 Professional 64 with Microsoft Basics	√	√	√
	Windows 7 Home Premium 64 with Microsoft Basics	√	√	√
	Windows 7 Home Premium 32 with Microsoft Basics	√	√	√
	Windows Vista Home Basic 32 with Microsoft Basics	√		
	Novell™: SuSE Linux™ – SLED 11	√	√	√
	FreeDOS	√	√	√
	<b>Preinstalled with Microsoft Office:</b>			
	Windows 7 Professional 32 with Microsoft Office 2010 Starter MSNA	√	√	√
	Windows 7 Professional 32 with Microsoft Office 2010 Starter EDGI	√	√	√
	Windows 7 Professional 32 with Microsoft Office 2010 Starter	√	√	√
	Windows 7 Professional 32 with Microsoft Office 2010 Personal	√	√	√
	Windows 7 Professional 32 with Microsoft Office 2010 Home & Business	√	√	√
	Windows 7 Professional 32 with Microsoft Office 2010 Professional	√	√	√
	Windows 7 Professional 64 with Microsoft Office 2010 Starter MSNA	√	√	√
	Windows 7 Professional 64 with Microsoft Office 2010 Starter EDGI	√	√	√

Category	Description	4530s (UMA)	4530s (Disc)	4730s (Disc)
	Windows 7 Professional 64 with Microsoft Office 2010 Starter	√	√	√
	Windows 7 Professional 64 with Microsoft Office 2010 Personal	√	√	√
	Windows 7 Professional 64 with Microsoft Office 2010 Home & Business	√	√	√
	Windows 7 Professional 64 with Microsoft Office 2010 Professional	√	√	√
	Windows 7 Home Premium 32 with Microsoft Office 2010 Starter EDGI	√	√	√
	Windows 7 Home Premium 32 with Microsoft Office 2010 Starter	√	√	√
	Windows 7 Home Premium 32 with Microsoft Office 2010 Personal	√	√	√
	Windows 7 Home Premium 32 with Microsoft Office 2010 Home & Business	√	√	√
	Windows 7 Home Premium 32 with Microsoft Office 2010 Professional	√	√	√
	Windows 7 Home Premium 64 with Microsoft Office 2010 Starter EDGI	√	√	√
	Windows 7 Home Premium 64 with Microsoft Office 2010 Starter	√	√	√
	Windows 7 Premium 64 with Microsoft Office 2010 Personal	√	√	√
	Windows 7 Premium 64 with Microsoft Office 2010 Home & Business	√	√	√
	Windows 7 Premium 64 with Microsoft Office 2010 Professional	√	√	√
	Windows 7 Starter with Microsoft Office 2010 Starter	√	√	√
	Windows 7 Home Basic 32 with Microsoft Office 2010 Starter EDGI	√		
	Windows 7 Home Basic 32 with Microsoft Office 2010 Starter	√		
	Windows Vista Basic 32 with Microsoft Office 2010 Starter	√		
	Windows Vista Basic 32 with Microsoft Office 2010 Personal	√		
	Windows Vista Basic 32 with Microsoft Office 2010 Home & Business	√		
	Windows Vista Basic 32 with Microsoft Office 2010 Professional	√		
	Windows 7 Starter with Office 2010 Starter	√	√	√
	Windows 7 Starter with Office 2010 Starter - EDGI	√	√	√
<b>Restore Media:</b>				

Category	Description	4530s (UMA)	4530s (Disc)	4730s (Disc)
	Windows 7 Professional 64	√	√	√
	Windows 7 Professional 32	√	√	√
	Windows 7 Home Basic 32	√	√	√
	Windows 7 Home Premium 64	√	√	√
	Windows 7 Home Premium 32	√	√	√
	Windows 7 Starter	√	√	√
	DRDVD Windows 7	√	√	√
	Windows Vista – through Service only	√	√	√
	<b>Web-only support:</b>			
	Windows XP Professional	√	√	√
	<b>Certified:</b>			
	Microsoft WHQL	√	√	√
<b>Serviceability</b>	<b>End-user replaceable parts:</b>			
	AC adapter	√	√	√
	Battery (system)	√	√	√
	Hard drive	√	√	√
	Memory module	√	√	√
	Optical drive	√	√	√
	WLAN module	√	√	√
	WWAN module, SIM	√		
	Keyboard	√	√	√

## 2 External component identification

### Display

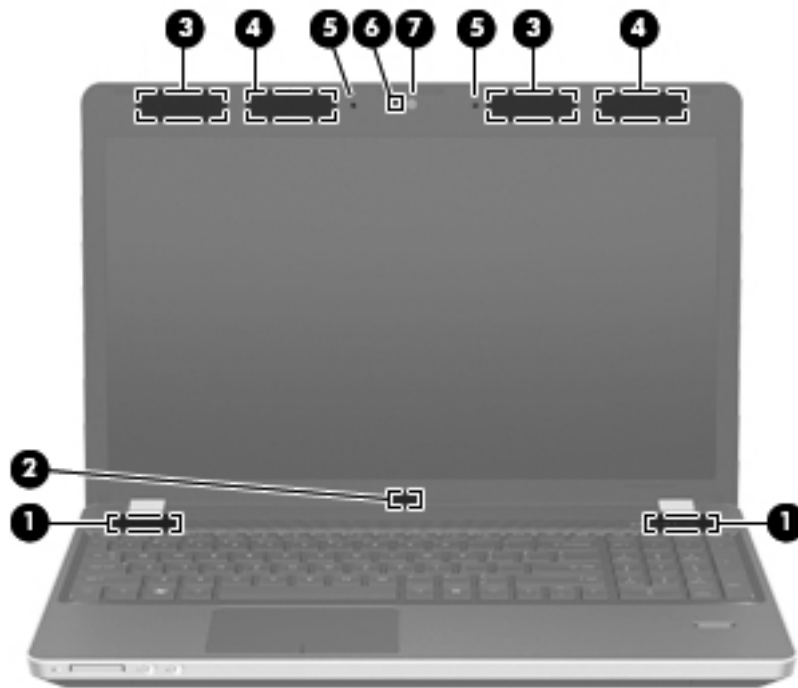


Component		Description
(1)	Speakers (2)	Produce sound.
(2)	Internal display switch	Turns off the display or initiates Sleep if the display is closed while the power is on.  <b>NOTE:</b> The display switch is not visible from the outside of the computer.
(3)	WWAN antennas (2)* (select models only)	Send and receive wireless signals to communicate with wireless wide-area networks (WWAN).
(4)	WLAN antennas (2)*	Send and receive wireless signals to communicate with wireless local area networks (WLAN).
(5)	Internal microphone(s) (1 or 2 depending on model)	Record sound.
(6)	Webcam light (select models only)	On: The webcam is in use.

Component	Description
(7) Webcam (select models only)	Records video and captures still photographs.  To use the webcam, select <b>Start &gt; All Programs &gt; ArcSoft TotalMedia Suite &gt; WebCam Companion</b> .
*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions. To see wireless regulatory notices, refer to the section of the <i>Regulatory, Safety, and Environmental Notices</i> that applies to your country or region. These notices are located in Help and Support.	


# Top


 
## TouchPad

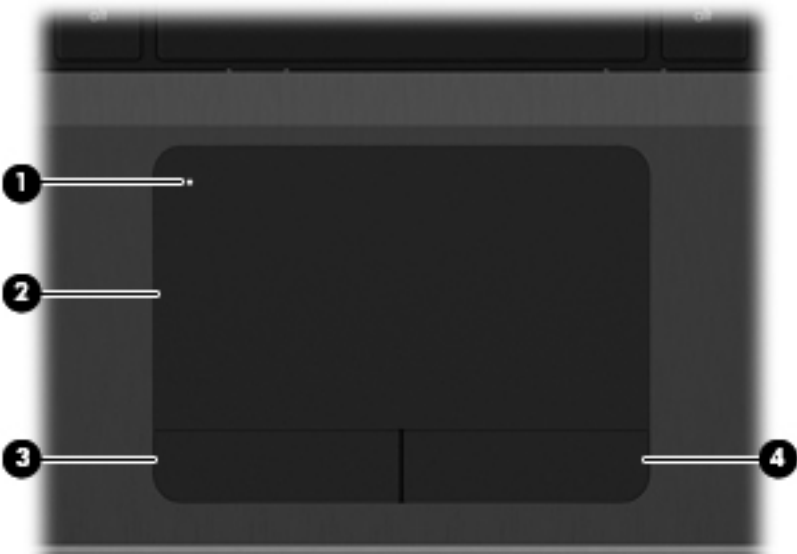


Component	Description
(1) TouchPad on/off button	Turns the TouchPad on and off.
(2) TouchPad	Moves the pointer and selects or activates items on the screen.
(3) Left TouchPad button	Functions like the left button on an external mouse.
(4) Right TouchPad button	Functions like the right button on an external mouse.


## Lights

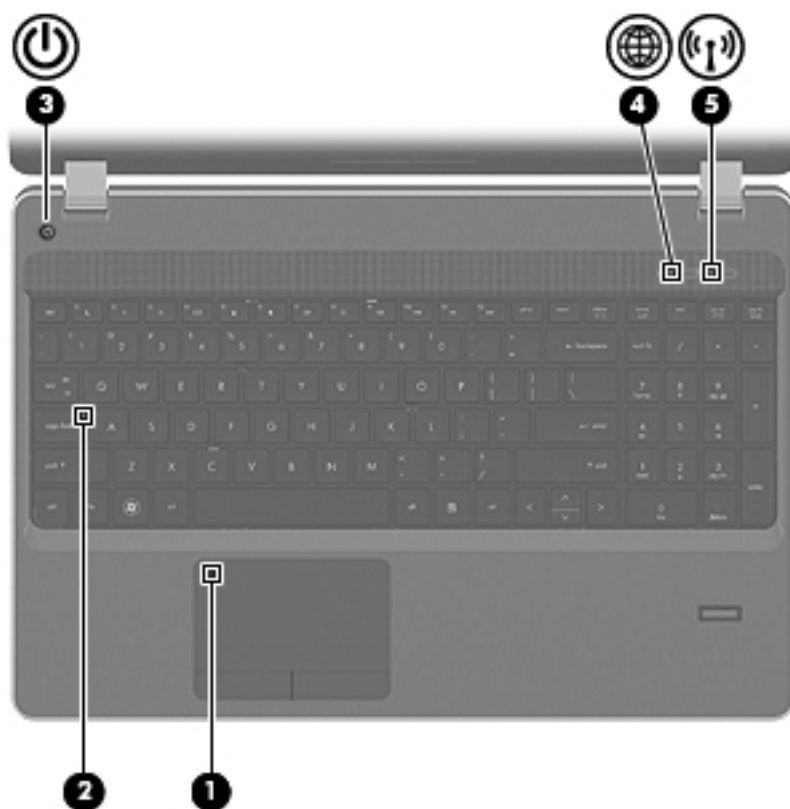




Component		Description
(1)	TouchPad light	<ul style="list-style-type: none"> <li>Amber: The TouchPad is off.</li> <li>Off: The TouchPad is on.</li> </ul>
(2)	Caps lock light	<ul style="list-style-type: none"> <li>White: Caps lock is on.</li> <li>Off: Caps lock is off.</li> </ul>
(3)	Power light	<ul style="list-style-type: none"> <li>On: The computer is on.</li> <li>Blinking: The computer is in the Sleep state.</li> <li>Off: The computer is off or in Hibernation.</li> </ul>
(4)	 QuickWeb light	<ul style="list-style-type: none"> <li>On: The computer is on.</li> <li>Off: The computer is off or in Hibernation.</li> </ul> <p><b>NOTE:</b> For more information, refer to “HP QuickWeb” in this guide and to the HP QuickWeb software Help.</p>
(5)	 Wireless light	<ul style="list-style-type: none"> <li>White: An integrated wireless device, such as a wireless local area network (WLAN) device and/or a Bluetooth® device, is on.</li> <li>Amber: All wireless devices are off.</li> </ul>

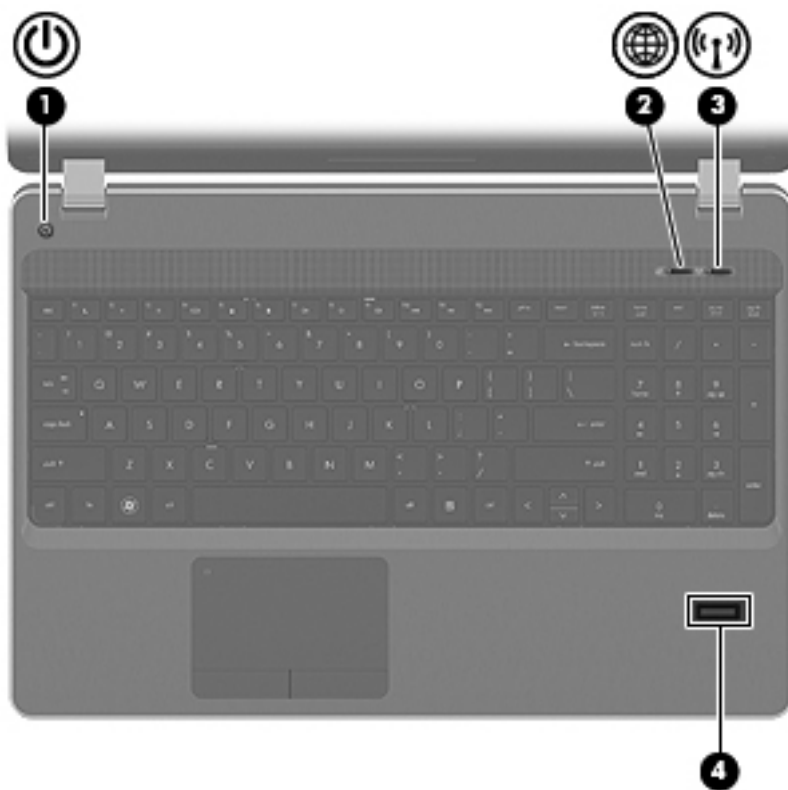
## Buttons and fingerprint reader (select models only)





Component	Description
(1)  Power button	<ul style="list-style-type: none"><li>• When the computer is off, press the button to turn on the computer.</li><li>• When the computer is on, press the button briefly to initiate Sleep.</li><li>• When the computer is in the Sleep state, press the button briefly to exit Sleep.</li><li>• When the computer is in Hibernation, press the button briefly to exit Hibernation.</li></ul> <p>If the computer has stopped responding and Windows® shutdown procedures are ineffective, press and hold the power button for at least 5 seconds to turn off the computer.</p> <p>To learn more about your power settings:</p> <ul style="list-style-type: none"><li>• <b>Windows 7</b>—Select <b>Start &gt; Control Panel &gt; System and Security &gt; Power Options</b>.</li><li>• <b>Windows Vista</b>—Select <b>Start &gt; Control Panel &gt; System and Maintenance &gt; Power Options</b></li><li>• Or refer to the <i>HP Notebook Reference Guide</i>.</li></ul>

Component		Description
(2)	 QuickWeb button	<ul style="list-style-type: none"> <li>• When the computer is off or in Hibernation, press the button to open HP QuickWeb.</li> <li>• When the computer is in Microsoft Windows, press the button to open the default Web browser.</li> <li>• When the computer is in HP QuickWeb, press the button to open the default Web browser.</li> </ul> <p><b>NOTE:</b> For more information, refer to “HP QuickWeb” in this guide and to the HP QuickWeb software Help. If your computer does not have HP QuickWeb software, the button does not perform any action or function.</p>
(3)	 Wireless button	Turns the wireless feature on or off but does not establish a wireless connection.
(4)	 Fingerprint reader (select models only)	Allows a fingerprint logon to Windows, instead of a password logon.

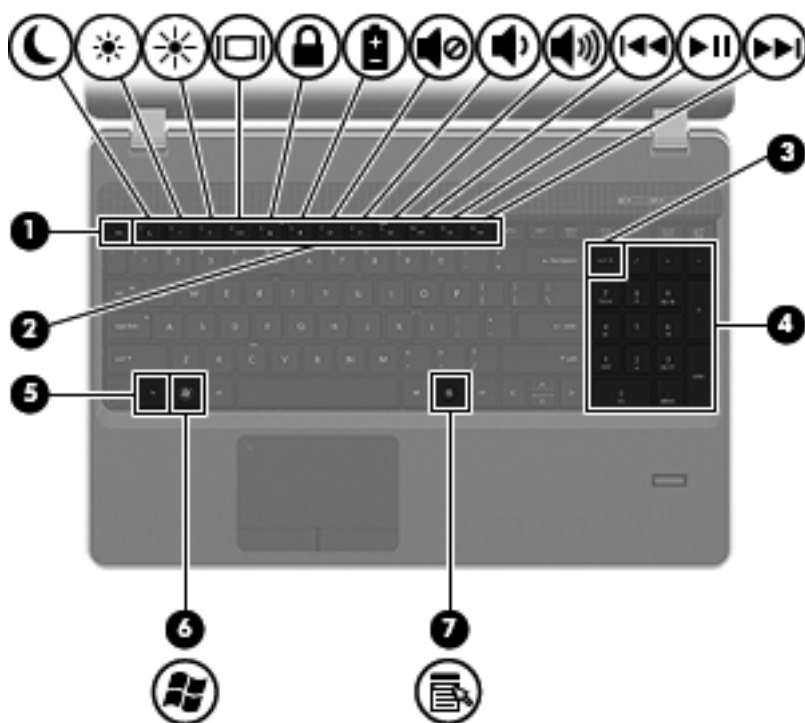


## Keys




Component	Description
(1) <a href="#">esc</a> key	Displays system information when pressed in combination with the <a href="#">fn</a> key.
(2) Function keys	Execute frequently used system functions when pressed in combination with the <a href="#">fn</a> key.
(3) <a href="#">num lk</a> key	Enables/disables the embedded numeric keypad when pressed in combination with the <a href="#">fn</a> key.
(4) Integrated numeric keypad	When the keypad has been enabled, the keys can be used like an external numeric keypad.
(5) <a href="#">fn</a> key	Executes frequently used system functions when pressed in combination with a function key, the <a href="#">num lk</a> key, or the <a href="#">esc</a> key.
(6)  Start key	Displays the Start menu.
(7)  Menu key	Displays the active program's shortcut menu (same as the right-click menu)..






# Front



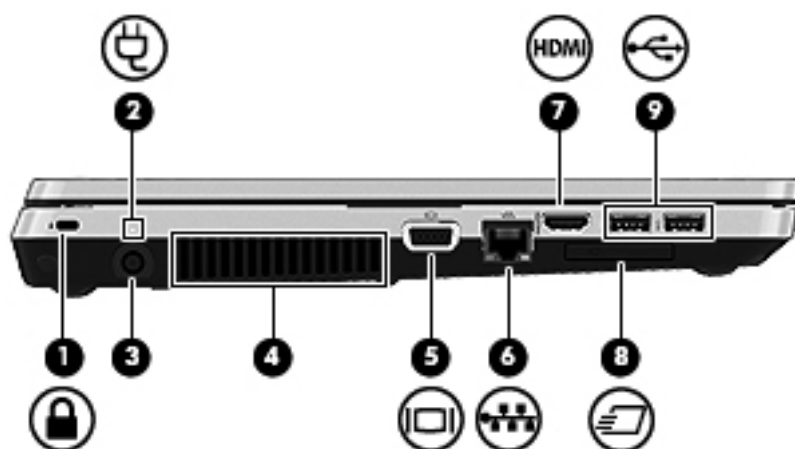

Component		Description
(1)		Drive light <ul style="list-style-type: none"><li>• White: The hard drive or optical drive is being accessed.</li><li>• Amber: HP 3D DriveGuard has temporarily parked the hard drive.</li></ul>
(2)		Media Card Reader <ul style="list-style-type: none"><li>Supports the following digital card formats:<ul style="list-style-type: none"><li>• Memory Stick Pro</li><li>• Memory Stick Duo Pro</li><li>• MultiMediaCard</li><li>• MultiMediaCard Micro</li><li>• Secure Digital (SD) Card</li><li>• Secure Digital (SD) Card Micro</li></ul></li></ul>
(3)		Audio-out (headphone) jack <ul style="list-style-type: none"><li>Connects optional headphones, earbuds, a headset, or television audio.</li><li><b>WARNING!</b> To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, refer to the <i>Regulatory, Safety, and Environmental Notices</i></li><li><b>NOTE:</b> When a device is connected to the jack, the computer speakers are disabled.</li></ul>
(4)		Audio-in (microphone) jack <ul style="list-style-type: none"><li>Connects an optional computer headset microphone, stereo array microphone, or monaural microphone.</li></ul>


## Left




Component	Description
(1)  Security cable slot	<p>Attaches an optional security cable to the computer.</p> <p><b>NOTE:</b> The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen.</p>
(2)  AC adapter light	<ul style="list-style-type: none"> <li>• White: The computer is connected to external power and the battery is 90 to 99% charged.</li> <li>• Amber: The computer is connected to external power and the battery is 0 to 90% charged.</li> <li>• Blinking amber: A battery that is the only available power source has reached a low battery level. When the battery reaches a critical battery level, the battery light begins blinking rapidly.</li> <li>• Off: The battery is fully charged.</li> </ul> <p><b>NOTE:</b> If the computer is plugged into an external power source, the light turns off when all batteries in the computer are fully charged. If the computer is not plugged into an external power source, the light stays off until the battery reaches a low battery level.</p>
(3) Power connector	Connects an AC adapter.
(4) Vent	<p>Enables airflow to cool internal components.</p> <p><b>NOTE:</b> The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.</p>
(5)  External monitor port	Connects an external VGA monitor or projector.
(6)  RJ-45 (network) jack	Connects a network cable.
(7)  HDMI port	Connects an optional video or audio device, such as a high-definition television, or any compatible digital or audio component.


Component		Description
(8)	ExpressCard slot	Reads and writes to ExpressCards.
(9)	 USB port	Connects an optional USB device.
(10)	 USB port	Connects an optional USB device.

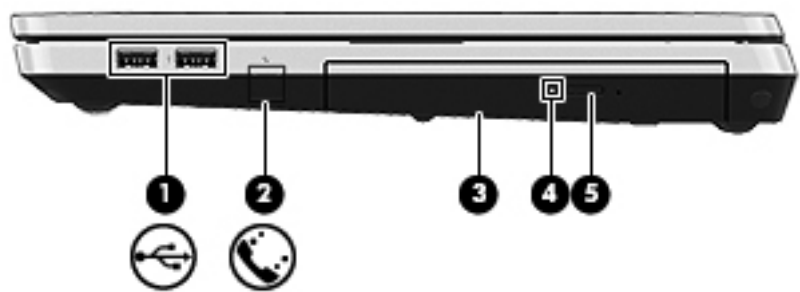

# Right



Component		Description
(1)	 USB ports (2)	Connect optional USB devices.
(2)	RJ-11 (modem) jack (select models only)	Connects a modem cable.
(3)	Optical drive	Reads and writes (select models only) to an optical disc.
(4)	Optical drive light	Lights when optical drive is active.
(5)	Optical drive eject button	Ejects the optical drive.
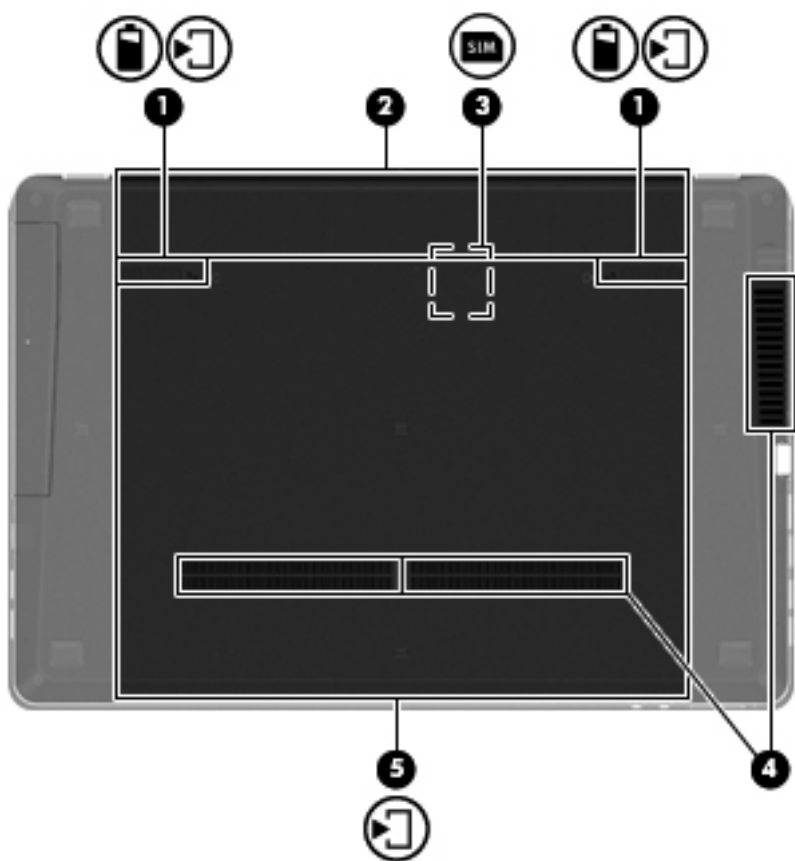
# Bottom




Component		Description
(1)		Battery and access cover release latches Release the battery from the battery bay, and the access cover from the computer.
(2)		Battery bay Holds the battery.
(3)		SIM slot Contains a wireless subscriber identity module (SIM) model 4530s only). The SIM slot is located inside the battery bay.
(4)		Vents (2) Enable airflow to cool internal components. <b>NOTE:</b> The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(5)		Hard drive bay Contains the hard drive, the wireless LAN module slot, and the memory module slot. <b>CAUTION:</b> To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore computer functionality, and then contact technical support through Help and Support.

---

## 3 Illustrated parts catalog


### Service tag

When ordering parts or requesting information, provide the computer serial number and model description provided on the service tag.

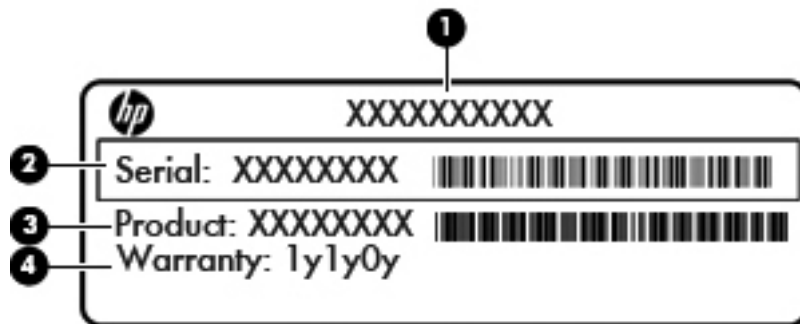

- Product name **(1)**. This is the product name affixed to the front of the computer.
- Serial number (s/n) **(2)**. This is an alphanumeric identifier that is unique to each product.
- Part number/Product number (p/n) **(3)**. This number provides specific information about the product's hardware components. The part number helps a service technician to determine what components and parts are needed.
- Warranty period **(4)**. This number describes the duration (in years) of the warranty period for the computer.

## Computer major components

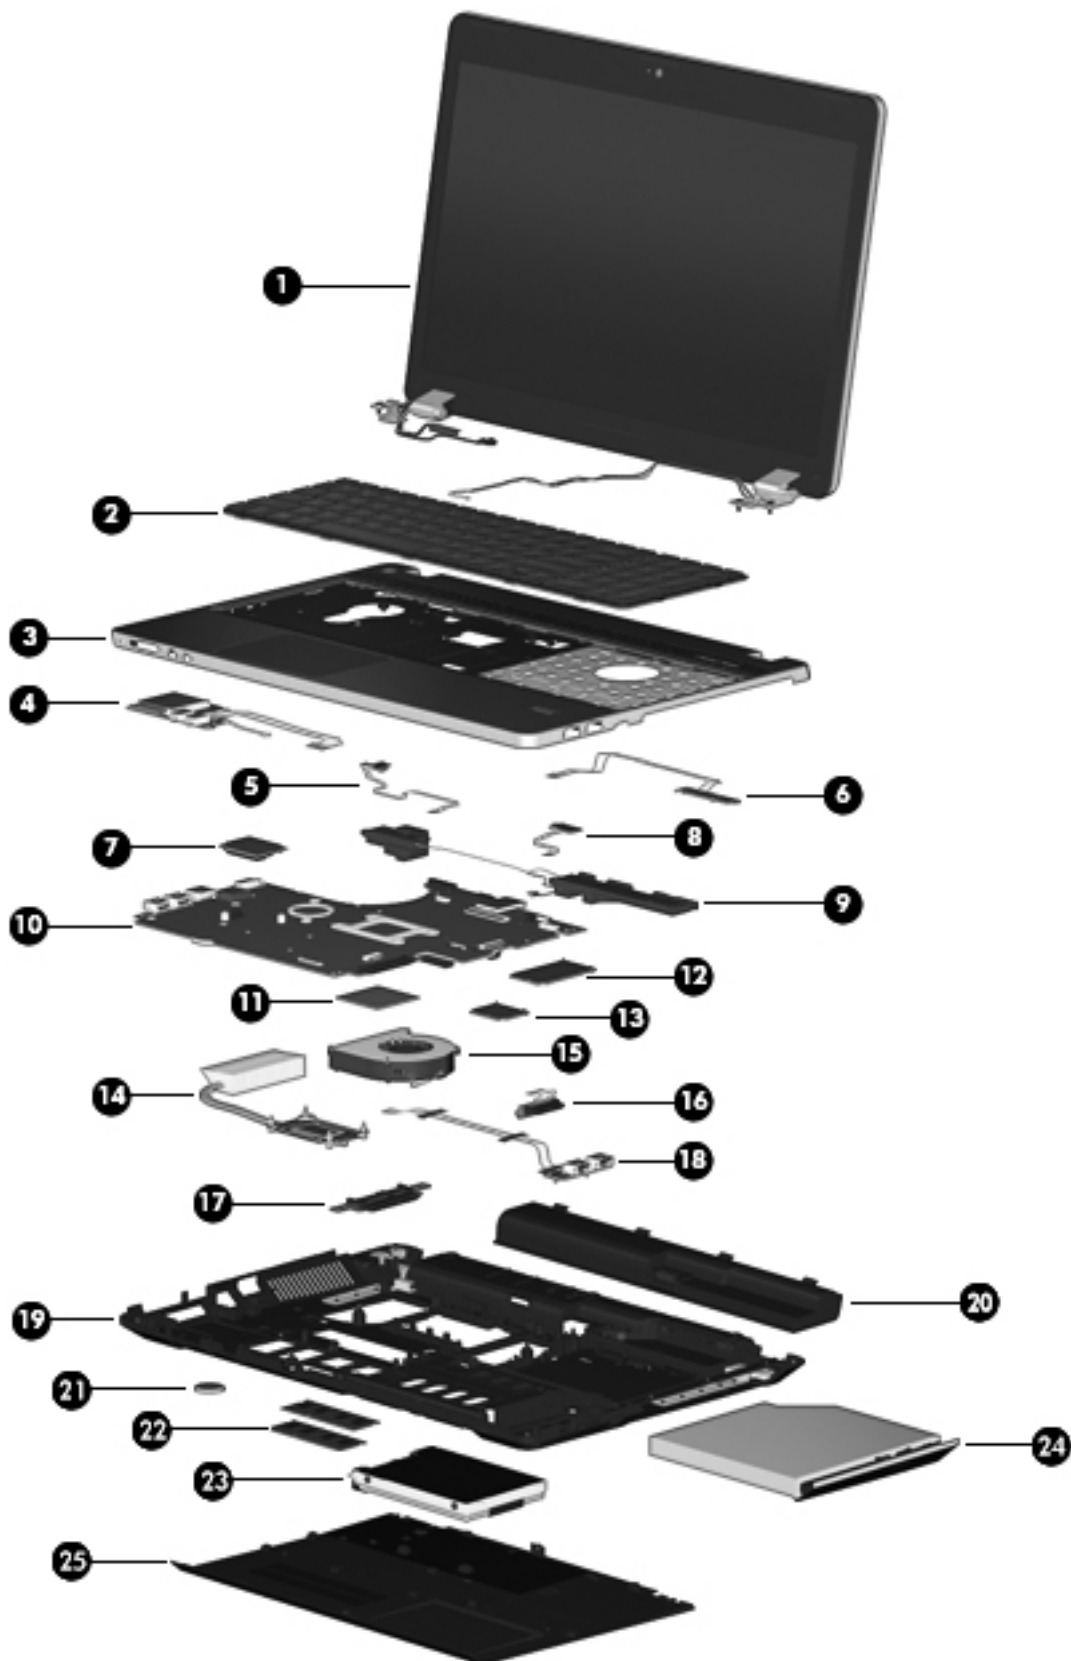

Item	Description	Spare part number
<b>(1)</b>	<b>Display panel</b>	
	For use in silver HP ProBook 4530s models:	
	<ul style="list-style-type: none"> <li>39.6-cm (15.6-inch) HD, anti-glare, without webcam</li> </ul>	647001-001
	<ul style="list-style-type: none"> <li>39.6-cm (15.6-inch) HD, anti-glare, with webcam</li> </ul>	647002-001
	<ul style="list-style-type: none"> <li>39.6-cm (15.6-inch) HD, anti-glare, with webcam and WWAN</li> </ul>	647003-001
	<ul style="list-style-type: none"> <li>39.6-cm (15.6-inch) HD, BrightView, without webcam</li> </ul>	647004-001
	<ul style="list-style-type: none"> <li>39.6-cm (15.6-inch) HD, BrightView, with webcam</li> </ul>	647005-001
	<ul style="list-style-type: none"> <li>39.6-cm (15.6-inch) HD, BrightView, with webcam and WWAN</li> </ul>	647006-001
	<ul style="list-style-type: none"> <li>39.6-cm (15.6-inch) HD+, anti-glare, without webcam</li> </ul>	647007-001
	<ul style="list-style-type: none"> <li>39.6-cm (15.6-inch) HD+, anti-glare, with webcam</li> </ul>	647008-001
	For use in silver HP ProBook 4730s models:	
	<ul style="list-style-type: none"> <li>43.9-cm (17.3-inch), HD+, anti-glare, without webcam</li> </ul>	647151-001
	<ul style="list-style-type: none"> <li>43.9-cm (17.3-inch), HD+, anti-glare, with webcam</li> </ul>	647152-001
<b>(2)</b>	<b>Keyboard</b> (includes cable)	646300-xxx
	<b>NOTE:</b> For a detailed list of available keyboards, see <a href="#">Sequential part number listing on page 32</a> .	
<b>(3)</b>	<b>Top cover</b> (includes Touchpad board)	
	For use in HP ProBook 4530s models :	
	<ul style="list-style-type: none"> <li>With a fingerprint reader and USB 3.0 (includes fingerprint reader board)</li> </ul>	646251-001
	<ul style="list-style-type: none"> <li>Without a fingerprint reader and with USB 3.0</li> </ul>	646253-001
	<ul style="list-style-type: none"> <li>With a fingerprint reader and USB 2.0 (includes fingerprint reader board)</li> </ul>	658344-001
	<ul style="list-style-type: none"> <li>Without a fingerprint reader and with USB 2.0</li> </ul>	658345-001
	For use in HP ProBook 4730s models:	
	With a fingerprint reader (includes fingerprint reader board)	646257-001
	Without a fingerprint reader	646260-001
<b>(4)</b>	<b>Card reader board</b>	
	For use in 4530s models	646292-001
	For use in 4730s models	646293-001
<b>(5)</b>	<b>Power button board</b>	
	For use in HP ProBook 4530s models:	646294-001
	For use in HP ProBook 4730s models:	646295-001
<b>(6)</b>	<b>Quick Launch board</b>	
	For use in 4530s models	646296-001
	For use in 4730s models	646297-001

Item	Description	Spare part number
(7)	<b>Modem module</b>  <b>NOTE:</b> The modem module spare part kit does not include a modem module cable. The modem module cable is included in the Cable Kit, spare part number 646303-001 for 4530s models, 646304-001 for 4730s models. See <a href="#">Cable Kit on page 30</a> for more Cable Kit spare part number information.	628824-001
(8)	<b>Lid switch board</b>  For use in HP ProBook 4530s models:  For use in HP ProBook 4730s models:	646289-001  646290-001
(9)	<b>Speaker assembly</b> (includes housing)  For use in 4530s models  For use in 4730s models	646298-001  646299-001
(10)	<b>System board</b> (includes replacement thermal material)  For use in all countries and regions except for Russia and the People's Republic of China: <ul style="list-style-type: none"> <li>For use in 4530s models with UMA graphics with WWAN and USB 3.0</li> <li>For use in 4530s models with UMA graphics without WWAN and with USB 3.0</li> <li>For use in 4530s models with UMA graphics with WWAN and USB 2.0</li> <li>For use in 4530s models with UMA graphics without WWAN and with USB 2.0</li> <li>For use in discrete models with 512-MB graphics memory</li> <li>For use in discrete models with 1-GB graphics memory</li> </ul> For use in only Russia and the People's Republic of China: <ul style="list-style-type: none"> <li>For use in 4530s models with UMA graphics with WWAN</li> <li>For use in 4530s models with UMA graphics without WWAN</li> <li>For use in discrete models with 512-MB graphics memory</li> <li>For use in discrete models with 1-GB graphics memory</li> </ul>	646245-001 646246-001 658340-001 658341-001 658342-001 658343-001  655563-001 655564-001 655565-001 655566-001
(11)	<b>Processor</b>  <b>Intel Core i7 processors, Quad Core</b>  2630QM, 2.0-GHz (Turbo up to 2.90) processor 6-MB L3 cache  <b>Intel Core i7 processors, Dual Core</b>  2620M, 2.7-GHz (turbo up to 3.4-GHz) processor 4-MB L3 cache  <b>Intel Core i5 processors, Dual Core</b>  2540M, 2.6-GHz (turbo up to 3.3-GHz) processor 3-MB L3 cache (includes phase change material (PCM))  2520M, 2.5-GHz (turbo up to 3.2-GHz) processor 3-MB L3 cache (includes phase change material (PCM))  2430M, 2.4-GHz (turbo up to 3.0-GHz) processor 3-MB L3 cache  2410M, 2.3-GHz (turbo up to 2.9-GHz) processor 3-MB L3 cache (includes thermal grease)	635501-001  631252-001  631255-001 631253-001  653341-001  638039-001

Item	Description	Spare part number
<b>Intel Core i3 processors, Dual Core</b>		
	2350M, 2.3-GHz processor 3-MB L3 cache	653340-001
	2330M, 2.2-GHz processor 3-MB L3 cache	653339-001
	2310M, 2.1-GHz processor 3-MB L3 cache (includes thermal grease)	638037-001
<b>Intel Pentium processors</b>		
	B950, 2.1-GHz, with 2-MB L3 cache	653338-001
	B940, 2.0-GHz, with 2-MB L3 cache	653337-001
<b>Intel Celeron processor, Dual Core</b>		
	B810, 1.6-GHz, with 2-MB L3 cache (includes thermal grease)	646760-001
<b>(12)</b>	<b>WWAN modules</b>	
	HP Ic2010 HSPA Mobile Broadband Module	632155-001
	HP un2430 EV-DO/HSPA Mobile Broadband Module	634400-001
<b>(13)</b>	<b>WLAN module</b>	
	Atheros AR9002WB-1NGB 802.11b/g/n 1x1 WiFi and Bluetooth 2.1+EDR Combo Adapter for use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, Bahamas, Bahrain, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cambodia, Cameroon, Canada, Cape Verde, the Cayman Islands, Central African Republic, Chad, Chile, People's Republic of China, Colombia, Comoros, Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guam, Guatemala, Guinea, Guinea-Bissau, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Indonesia, Ireland, Israel, Italy, Ivory Coast, Jamaica, Japan, Jordan, Kazakhstan, Kenya, Kiribati, Kuwait, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, Maldives, Mali, Malta, Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Netherlands Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Puerto Rico, Peru, Philippines, Poland, Portugal, Qatar, Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia and Montenegro, Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, Solomon Islands, Somalia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Syria, Taiwan, Tajikistan, Tanzania, Thailand, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, Uruguay, the United States, the US Virgin Islands, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe	593127-001


Item	Description	Spare part number
	Realtek 8188BC8 802.11a/b/g/n 2x2 WiFi and Bluetooth 3.0+HS Combo Adapter for use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, Bahamas, Bahrain, Baltics, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cambodia, Cameroon, Canada, Cape Verde, the Cayman Islands, Central African Republic, Chad, Chile, People's Republic of China, Colombia, Comoros, Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equitorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guam, Guatemala, Guinea, Guinea-Bissa, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Indonesia, Iraq, Ireland, Israel, Italy, Ivory Coast, Jamaica, Japan, Jordan, Kazakhstan, Kenya, Kiribati, Kuwait, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, Maldives, Mali, Malta, Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Puerto Rico, Peru, Philippines, Poland, Portugal, Qatar, Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia and Montenegro, Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, Solomon Islands, Somalia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Syria, Taiwan, Tajikistan, Tanzania, Thailand, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, Uruguay, the United States, the US Virgin Islands, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe	602993-001
	Ralink 5390GN 802.11b/g/n 1x1 WiFi Adapter for use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, Bahamas, Bahrain, Baltics, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cambodia, Cameroon, Canada, Cape Verde, the Cayman Islands, Central African Republic, Chad, Chile, People's Republic of China, Colombia, Comoros, Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equitorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guam, Guatemala, Guinea, Guinea-Bissa, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Indonesia, Iraq, Ireland, Israel, Italy, Ivory Coast, Jamaica, Japan, Jordan, Kazakhstan, Kenya, Kiribati, Kuwait, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, Maldives, Mali, Malta, Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Puerto Rico, Peru, Philippines, Poland, Portugal, Qatar, Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia and Montenegro, Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, Solomon Islands, Somalia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Syria, Taiwan, Tajikistan, Tanzania, Thailand, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, Uruguay, the United States, the US Virgin Islands, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe	630703-001

Item	Description	Spare part number
	<p>Ralink 8190BC8 802.11b/g/n 2x2 WiFi and Bluetooth 3.0+HS Combo Adapter for use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, Bahamas, Bahrain, Baltics, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cambodia, Cameroon, Canada, Cape Verde, the Cayman Islands, Central African Republic, Chad, Chile, People's Republic of China, Colombia, Comoros, Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equitorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guam, Guatemala, Guinea, Guinea-Bissau, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Indonesia, Iraq, Ireland, Israel, Italy, Ivory Coast, Jamaica, Japan, Jordan, Kazakhstan, Kenya, Kiribati, Kuwait, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, Maldives, Mali, Malta, Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Puerto Rico, Peru, Philippines, Poland, Portugal, Qatar, Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia and Montenegro, Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, Solomon Islands, Somalia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Syria, Taiwan, Tajikistan, Tanzania, Thailand, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, Uruguay, the United States, the US Virgin Islands, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe</p>	630813-001
	<p>Realtek 8188GN 802.11b/g/n 1x1 WiFi Adapter for use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, Bahamas, Bahrain, Baltics, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cambodia, Cameroon, Canada, Cape Verde, the Cayman Islands, Central African Republic, Chad, Chile, People's Republic of China, Colombia, Comoros, Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equitorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guam, Guatemala, Guinea, Guinea-Bissau, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Indonesia, Iraq, Ireland, Israel, Italy, Ivory Coast, Jamaica, Japan, Jordan, Kazakhstan, Kenya, Kiribati, Kuwait, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, Maldives, Mali, Malta, Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Puerto Rico, Peru, Philippines, Poland, Portugal, Qatar, Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia and Montenegro, Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, Solomon Islands, Somalia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Syria, Taiwan, Tajikistan, Tanzania, Thailand, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, Uruguay, the United States, the US Virgin Islands, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe</p>	640926-001

Item	Description	Spare part number
	Intel Centrino® Advanced-N 6230 for use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, Bahamas, Bahrain, Baltics, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cambodia, Cameroon, Canada, Cape Verde, the Cayman Islands, Central African Republic, Chad, Chile, People's Republic of China, Colombia, Comoros, Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guam, Guatemala, Guinea, Guinea-Bissa, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Indonesia, Iraq, Ireland, Israel, Italy, Ivory Coast, Jamaica, Japan, Jordan, Kazakhstan, Kenya, Kiribati, Kuwait, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, Maldives, Mali, Malta, Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Puerto Rico, Peru, Philippines, Poland, Portugal, Qatar, Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia and Montenegro, Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, Solomon Islands, Somalia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Syria, Taiwan, Tajikistan, Tanzania, Thailand, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, Uruguay, the United States, the US Virgin Islands, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe	636672-001
<b>(14)</b>	<b>Heat sink</b> (includes replacement thermal material)	
	For use in models with discrete graphics	646283-001
	For use in models with UMA graphics	646284-001
<b>(15)</b>	<b>Fan</b>	646285-001
<b>(16)</b>	<b>Optical drive connector</b>	646286-001
<b>(17)</b>	<b>Hard drive extension board</b>	646291-001
<b>(18)</b>	<b>USB board</b>	
	For use in 4530s models	646287-001
	For use in 4730s models	646288-001
<b>(19)</b>	<b>Base enclosure</b>	
	For use in 4530s models	646261-001
	For use in 4730s models	646262-001
<b>(20)</b>	<b>Battery, Li-ion</b>	
	9-cell (93 WHr, 2.8 Ah), for use only in 4530s models	633809-001
	8-cell (73 WHr, 2.55 Ah), for use only in 4730s models	633807-001
	6-cell (55 WHr, 2.8 Ah), for use only in 4530s models	650938-001
	6-cell (47 WHr, 2.2 Ah), for use only in 4530s models	633805-001
<b>(21)</b>	<b>RTC battery</b>	449137-001
<b>(22)</b>	<b>Memory modules</b> (PC3-10600, 1333-MHz, DDR3)	

Item	Description	Spare part number
	4-GB	621569-001
	2-GB	621565-001
	1-GB	639736-001
<b>(23)</b>	<b>Hard drive</b>	
	750-GB, 7200-rpm	633252-001
	640-GB, 5400-rpm	603785-001
	500-GB, 7200-rpm	634925-001
	500-GB, 5400-rpm	634638-001
	320-GB, 5400-rpm	622643-001
	320-GB, 7200-rpm	641672-001
	250-GB, 7200-rpm	635225-001
	250-GB, 5400-rpm	622641-001
<b>(24)</b>	<b>Optical drive</b> (includes bracket, bezel, and screws)	
	For use in 4530s models:	
	• Blu-ray BD-R/RE DVD±RW SuperMulti DL Drive	647951-001
	• Blu-ray ROM DVD±RW SuperMulti DL Drive	647952-001
	• DVD±RW and CD-RW SuperMulti DL Combo Drive	647950-001
	• DVD-ROM Drive	647949-001
	For use in 4730s models:	
	• Blu-ray BD-R/RE DVD±RW SuperMulti DL Drive	647955-001
	• Blu-ray ROM DVD±RW SuperMulti DL Drive	647956-001
	• DVD±RW and CD-RW SuperMulti DL Combo Drive	647954-001
	• DVD-ROM Drive	647953-001
<b>(25)</b>	<b>Bottom door</b>	
	For use in 4530s models	646263-001
	For use in 4730s models	646264-001

## Display components

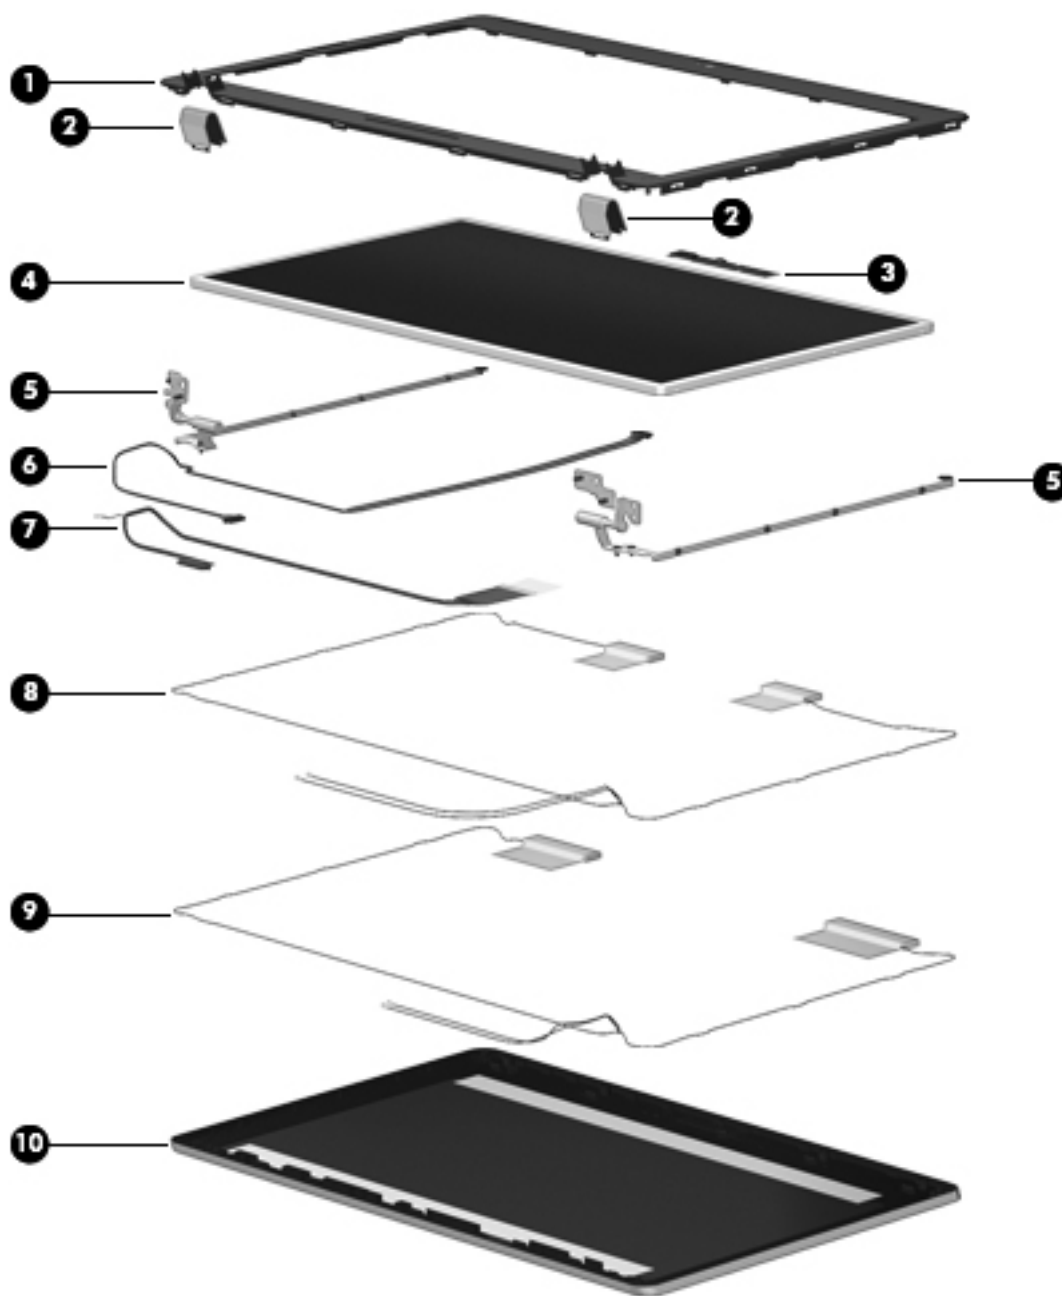

Item	Description	Spare part number
(1)	<b>Display bezel</b>	
	For use with HP ProBook 4530s models with a webcam	646266-001
	For use with HP ProBook 4530s models without a webcam	646265-001
	For use with HP ProBook 4730s models with a webcam	646268-001
	For use with HP ProBook 4730s models without a webcam	646267-001
(2)	<b>Display hinge covers</b>	

Item	Description	Spare part number
	For use with HP ProBook 4530s models	646281-001
	For use with HP ProBook 4730s models	646282-001
<b>(3)</b>	<b>Webcam module</b>	642795-001
	<b>Microphone module</b> (not illustrated)	642797-001
<b>(4)</b>	<b>Display panel</b>	
	39.6-cm (15.6-inch) HD, anti-glare	646311-001
	39.6-cm (15.6-inch) HD, BrightView	646312-001
	39.6-cm (15.6-inch) HD+	647011-001
	43.9-cm (17.3-inch) HD+, anti-glare	646313-001
<b>(5)</b>	<b>Display hinges</b> (includes left and right hinges)	
	For use with HP ProBook 4530s models	646279-001
	For use with HP ProBook 4730s models	646280-001
<b>(6)</b>	<b>Webcam cable</b>	646275-001
<b>(7)</b>	<b>Display Cable Kit</b>	
	For use in models without a webcam	605766-001
	For use in 4530s models with HD+ displays	646273-001
	For use in 4730s models with HD+ displays	646274-001
<b>(8)</b>	<b>WLAN antennas</b>	
	For use with HP ProBook 4530s models	646276-001
	For use with HP ProBook 4730s models	646277-001
<b>(9)</b>	<b>WWAN antennas</b>	646278-001
<b>(10)</b>	<b>Display enclosure</b>	
	For use in HP ProBook 4530s models	646269-001
	For use in HP ProBook 4730s models	646272-001

## Plastics Kit



Item	Description	Spare part number
	<b>Plastics Kit</b> for use in 4530s models	646309-001
	<b>Plastics Kit</b> for use in 4730s models	646310-001
(1)	RJ-11 protective insert	
(2)	Secure Digital card protective insert	
(3)	ExpressCard slot protective insert	
(4)	Optical drive protective insert	

## Cable Kit



Item	Description	Spare part number
	<b>Cable Kit</b> for use in 4530s models	646303-001
	<b>Cable Kit</b> for use in 4730s models	646304-001
(1)	Battery connector cable	
(2)	Power connector cable	
(3)	RJ-11 connector cable	

## Mass storage devices

Description	Spare part number
<b>Optical drives</b>	
For use in 4530s models:	
• Blu-ray BD-R/RE DVD±RW SuperMulti DL Drive	647951-001
• Blu-ray Disc ROM with SuperMulti DVD±R/RW DL Drive	647952-001
• DVD±RW and CD-RW SuperMulti DL Combo Drive	647950-001
• DVD-ROM Drive	647949-001
For use in 4730s models:	
• Blu-ray BD-R/RE DVD±RW SuperMulti DL Drive	647955-001
• Blu-ray Disc ROM with SuperMulti DVD±R/RW DL Drive	647956-001
• DVD±RW and CD-RW SuperMulti DL Combo Drive	647954-001
• DVD-ROM Drive	647953-001
<b>Hard drives</b>	
750-GB, 7200-rpm	633252-001
640-GB, 5400-rpm	603785-001
500-GB, 7200-rpm	634925-001
500-GB, 5400-rpm	634638-001
320-GB, 5400-rpm	622643-001
320-GB, 7200-rpm	641672-001

Description	Spare part number
250-GB, 7200-rpm	635225-001
250-GB, 5400-rpm	622641-001
<b>Hard Drive Hardware Kit</b> (includes hard drive bracket, insulator, and screws)	647944-001

## Miscellaneous parts

Description	Spare part number
<b>AC adapters</b>	
65-W AC adapter	609939-001
65-W AC adapter for use in India	609948-001
90-W AC adapter	609940-001
90-W AC adapter for use in India	609947-001
<b>Power cords:</b>	
For use in Argentina	490371-D01
For use in Australia and New Zealand	490371-011
For use in Brazil	490371-202
For use in the People's Republic of China	490371-AA1
For use in Denmark	490371-081
For use in Europe, the Middle East, and Africa	490371-021
For use in India	490371-D61
For use in Israel	490371-BB1
For use in Italy	490371-061
For use in Japan	490371-202
For use in South Africa	490371-AR1
For use in South Korea	490371-AD1
For use in Switzerland	490371-111
For use in Taiwan	490371-AB1
For use in Thailand	490371-201
For use in the United Kingdom	490371-031
For use in the United States	490371-001
<b>Rubber Kit</b> (includes SIM bumper and feet)	
For use with model 4530s	646307-001
For use with model 4730s	646308-001
<b>Screw Kit</b>	

Description	Spare part number
For use with model 4530s	646305-001
For use with model 4730s	646306-001

## Sequential part number listing

Spare part number	Description
449137-001	RTC battery
490371-001	Power cord for use in North America
490371-011	Power cord for use in Australia and New Zealand
490371-021	Power cord for use in Europe, the Middle East, and Africa
490371-031	Power cord for use in the United Kingdom
490371-061	Power cord for use in Italy
490371-081	Power cord for use in Denmark
490371-111	Power cord for use in Switzerland
490371-201	Power cord for use in Thailand
490371-202	Power cord for use in Brazil
490371-291	Power cord for use in Japan
490371-AA1	Power cord for use in the People's Republic of China
490371-AB1	Power cord for use in Taiwan
490371-AD1	Power cord for use in South Korea
490371-AR1	Power cord for use in South Africa
490371-BB1	Power cord for use in Israel
490371-D01	Power cord for use in Argentina
490371-D61	Power cord for use in India

Spare part number	Description
593127-001	Atheros AR9002WB-1NGB 802.11b/g/n 1x1 WiFi and Bluetooth 2.1+EDR Combo Adapter for use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, Bahamas, Bahrain, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cambodia, Cameroon, Canada, Cape Verde, the Cayman Islands, Central African Republic, Chad, Chile, People's Republic of China, Colombia, Comoros, Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guam, Guatemala, Guinea, Guinea-Bissau, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Indonesia, Ireland, Israel, Italy, Ivory Coast, Jamaica, Japan, Jordan, Kazakhstan, Kenya, Kiribati, Kuwait, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, Maldives, Mali, Malta, Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Netherlands, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Puerto Rico, Peru, Philippines, Poland, Portugal, Qatar, Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia and Montenegro, Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, Solomon Islands, Somalia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Syria, Taiwan, Tajikistan, Tanzania, Thailand, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, Uruguay, the United States, the US Virgin Islands, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe
602993-001	Realtek 8188BC8 802.11a/b/g/n 2x2 WiFi and Bluetooth 3.0+HS Combo Adapter for use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, Bahamas, Bahrain, Baltics, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cambodia, Cameroon, Canada, Cape Verde, the Cayman Islands, Central African Republic, Chad, Chile, People's Republic of China, Colombia, Comoros, Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guam, Guatemala, Guinea, Guinea-Bissau, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Indonesia, Iraq, Ireland, Israel, Italy, Ivory Coast, Jamaica, Japan, Jordan, Kazakhstan, Kenya, Kiribati, Kuwait, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, Maldives, Mali, Malta, Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Netherlands, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Puerto Rico, Peru, Philippines, Poland, Portugal, Qatar, Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia and Montenegro, Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, Solomon Islands, Somalia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Syria, Taiwan, Tajikistan, Tanzania, Thailand, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, Uruguay, the United States, the US Virgin Islands, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe
603785-001	640-GB, 5400-rpm hard drive
605766-001	Display Cable Kit for use in models without a webcam
609939-001	65-W AC adapter
609940-001	90-W AC adapter
609947-001	90-W AC adapter for use in India
609948-001	65-W AC adapter for use in India
621565-001	2-GB memory module (PC3-10600, 1333-MHz, DDR3)
621569-001	4-GB memory module (PC3-10600, 1333-MHz, DDR3)

Spare part number	Description
622641-001	250-GB, 5400-rpm hard drive
622643-001	320-GB, 5400-rpm hard drive
628824-001	Modem module
	<p><b>NOTE:</b> The modem module spare part kit does not include a modem module cable. The modem module cable is included in the Cable Kit, spare part number 646303-001 for 4530s models, 646304-001 for 4730s models. See <a href="#">Cable Kit on page 30</a> for more Cable Kit spare part number information.</p>
630703-001	<p>Ralink 5390GN 802.11b/g/n 1x1 WiFi Adapter for use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, Bahamas, Bahrain, Baltics, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cambodia, Cameroon, Canada, Cape Verde, the Cayman Islands, Central African Republic, Chad, Chile, People's Republic of China, Colombia, Comoros, Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guam, Guatemala, Guinea, Guinea-Bissa, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Indonesia, Iraq, Ireland, Israel, Italy, Ivory Coast, Jamaica, Japan, Jordan, Kazakhstan, Kenya, Kiribati, Kuwait, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, Maldives, Mali, Malta, Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Puerto Rico, Peru, Philippines, Poland, Portugal, Qatar, Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia and Montenegro, Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, Solomon Islands, Somalia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Syria, Taiwan, Tajikistan, Tanzania, Thailand, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, Uruguay, the United States, the US Virgin Islands, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe</p>
630813-001	<p>Ralink 8190BC8 802.11b/g/n 2x2 WiFi and Bluetooth 3.0+HS Combo Adapter for use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, Bahamas, Bahrain, Baltics, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cambodia, Cameroon, Canada, Cape Verde, the Cayman Islands, Central African Republic, Chad, Chile, People's Republic of China, Colombia, Comoros, Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guam, Guatemala, Guinea, Guinea-Bissa, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Indonesia, Iraq, Ireland, Israel, Italy, Ivory Coast, Jamaica, Japan, Jordan, Kazakhstan, Kenya, Kiribati, Kuwait, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, Maldives, Mali, Malta, Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Puerto Rico, Peru, Philippines, Poland, Portugal, Qatar, Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia and Montenegro, Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, Solomon Islands, Somalia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Syria, Taiwan, Tajikistan, Tanzania, Thailand, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, Uruguay, the United States, the US Virgin Islands, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe</p>
631252-001	Intel Core i7 processor, 2620M, 2.7-GHz (turbo up to 3.4-GHz) processor, 4-MB L3 cache (includes thermal material)
631253-001	Intel Core i5 processor, 2520M, 2.5-GHz (turbo up to 3.2-GHz) processor, 3-MB L3 cache (includes thermal material)

Spare part number	Description
631255-001	Intel Core i7 processor, 2540M, 2.6-GHz (turbo up to 3.3-GHz) processor, 3-MB L3 cache (includes thermal material)
632155-001	HP Ic2010 HSPA Mobile Broadband Module
633252-001	750-GB, 7200-rpm hard drive
633805-001	6-cell, 47 WHr, 2.2 Ah Li-ion battery, for use only in 4530s models
633807-001	8-cell, 73 WHr, 2.8 Ah Li-ion battery, for use only in 4730s models
633809-001	9-cell, 93 WHr, 2.8 Ah Li-ion battery, for use only in 4530s models
634400-001	HP un2430 EV-DO/HSPA Mobile Broadband Module
634638-001	500-GB, 5400-rpm hard drive
634925-001	500-GB, 7200-rpm hard drive
635225-001	250-GB, 7200-rpm hard drive
635501-001	Intel Core i7 processor, 2630QM, 2.00-GHz (Turbo up to 2.90) processor 6-MB L3 cache (includes thermal material)
636672-001	Intel Centrino Advanced-N 6230 for use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, Bahamas, Bahrain, Baltics, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cambodia, Cameroon, Canada, Cape Verde, the Cayman Islands, Central African Republic, Chad, Chile, People's Republic of China, Colombia, Comoros, Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guam, Guatemala, Guinea, Guinea-Bissa, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Indonesia, Iraq, Ireland, Israel, Italy, Ivory Coast, Jamaica, Japan, Jordan, Kazakhstan, Kenya, Kiribati, Kuwait, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, Maldives, Mali, Malta, Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Puerto Rico, Peru, Philippines, Poland, Portugal, Qatar, Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia and Montenegro, Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, Solomon Islands, Somalia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Syria, Taiwan, Tajikistan, Tanzania, Thailand, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, Uruguay, the United States, the US Virgin Islands, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe
638037-001	Intel Core i3 processor, 2310M, 2.1-GHz, 3-MB L3 cache (includes thermal material)
638039-001	Intel Core i5 processor, 2410M, 2.3-GHz (turbo up to 2.9-GHz), 3-MB L3 cache (includes thermal material)
639736-001	1-GB memory module (PC3-10600, 1333-MHz, DDR3)

Spare part number	Description
640926-001	Realtek 8188GN 802.11b/g/n 1x1 WiFi Adapter for use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, Bahamas, Bahrain, Baltics, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cambodia, Cameroon, Canada, Cape Verde, the Cayman Islands, Central African Republic, Chad, Chile, People's Republic of China, Colombia, Comoros, Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guam, Guatemala, Guinea, Guinea-Bissau, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Indonesia, Iraq, Ireland, Israel, Italy, Ivory Coast, Jamaica, Japan, Jordan, Kazakhstan, Kenya, Kiribati, Kuwait, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, Maldives, Mali, Malta, Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Netherlands, the Netherlands Antilles, New Guinea, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Puerto Rico, Peru, Philippines, Poland, Portugal, Qatar, Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia and Montenegro, Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, Solomon Islands, Somalia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Syria, Taiwan, Tajikistan, Tanzania, Thailand, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, Uruguay, the United States, the US Virgin Islands, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe
641672-001	320-GB, 7200-rpm hard drive
642795-001	Webcam module
642797-001	Microphone module
646245-001	System board for use in 4530s models with UMA graphics with WWAN for use in all countries and regions except for Russia and the People's Republic of China
646246-001	System board for use in 4530s models with UMA graphics without WWAN for use in all countries and regions except for Russia and the People's Republic of China
646251-001	Top cover for use in 4530s models with a fingerprint reader
646253-001	Top cover for use in 4530s models without a fingerprint reader and with USB 3.0
646257-001	Top cover for use in 4730s models with a fingerprint reader and USB 3.0
646260-001	Top cover for use in 4730s models without a fingerprint reader
646261-001	Base enclosure for use with 4530s models
646262-001	Base enclosure for use with 4730s models
646263-001	Bottom door for use in 4530s models
646264-001	Bottom door for use in 4730s models
646265-001	Display bezel for use with HP ProBook 4530s models without a webcam
646266-001	Display bezel for use with HP ProBook 4530s models with a webcam
646267-001	Display bezel for use with HP ProBook 4730s models without a webcam
646268-001	Display bezel for use with HP ProBook 4730s models with a webcam
646269-001	Display enclosure for use in HP ProBook 4530s models
646272-001	Display enclosure for use in HP ProBook 4730s models
646273-001	Display Cable Kit for use in 4530s HD+ models

Spare part number	Description
646274-001	Display Cable Kit for use in 4730s HD+ models
646275-001	Webcam cable
646276-001	WLAN antennas for use in 4530s models
646277-001	WLAN antennas for use in 4730s models
646278-001	WWAN antennas
646279-001	Display hinges for use on 4530s models (includes left and right hinges)
646280-001	Display hinges for use on 4730s models (includes left and right hinges)
646281-001	Display hinge covers for use in 4530s models
646282-001	Display hinge covers for use in 4530s models
646283-001	Heat sink for use in computers with discrete graphics
646284-001	Heat sink for use in computers with UMA graphics
646285-001	Fan
646286-001	Optical drive connector
646287-001	USB board for use in 4530s models
646288-001	USB board for use in 4730s models
646289-001	Lid switch for use in 4530s models
646290-001	Lid switch for use in 4730s models
646291-001	Hard drive extension board for use in 4730s models
646292-001	Card reader board for use in 4530s models
646293-001	Card reader board for use in 4730s models
646294-001	Power button board for use in 4530s models
646295-001	Power button board for use in 4730s models
646296-001	Quick Launch board for use in 4530s models
646297-001	Quick Launch board for use in 4730s models
646298-001	Speaker assembly for use in 4530s models (includes housing)
646299-001	Speaker assembly for use in 4730s models (includes housing)
646300-001	Keyboard for use in the United States
646300-031	Keyboard for use in the United Kingdom
646300-041	Keyboard for use in Germany
646300-051	Keyboard for use in France
646300-061	Keyboard for use in Italy
646300-071	Keyboard for use in Spain
646300-121	Keyboard for use in French Canada
646300-131	Keyboard for use in Portugal

Spare part number	Description
646300-141	Keyboard for use in Turkey
646300-161	Keyboard for use in Latin America
646300-171	Keyboard for use in Saudi Arabia
646300-211	Keyboard for use Hungary
646300-251	Keyboard for use in Russia
646300-261	Keyboard for use in Bulgaria
646300-281	Keyboard for use in Thailand
646300-291	Keyboard for use in Japan
646300-A41	Keyboard for use in Belgium
646300-A81	Keyboard for use in the Czech Republic
646300-AB1	Keyboard for use in Taiwan
646300-AD1	Keyboard for use in South Korea
646300-B31	Keyboard for use in the Netherlands and Europe
646300-BA1	Keyboard for use in Slovakia
646300-BB1	Keyboard for use in Israel
646300-BG1	Keyboard for use in Switzerland
646300-DD1	Keyboard for use in Iceland
646300-DH1	Keyboard for use in the Netherlands
646300-DJ1	Keyboard for use in Greece
646300-DW1	Keyboard for use in the French Arabic region
646303-001	Cable Kit for use in 4530s models (see <a href="#">Cable Kit on page 30</a> for more Cable Kit spare part information)
646304-001	Cable Kit for use in 4730s models (see <a href="#">Cable Kit on page 30</a> for more Cable Kit spare part information)
646305-001	Screw Kit for use in 4530s models
646306-001	Screw Kit for use in 4730s models
646307-001	Rubber Kit for use with model 4530s (includes SIM bumper and feet)
646308-001	Rubber Kit for use with model 4730s (includes SIM bumper and feet)
646309-001	Plastics Kit for use in 4530s models
646310-001	Plastics Kit for use in 4730s models
646311-001	Display panel, 39.6-cm (15.6-inch) HD, anti-glare
646312-001	Display panel, 39.6-cm (15.6-inch) HD, BrightView
646313-001	Display panel, 43.9-cm (17.3-inch) HD+, anti-glare
646760-001	Intel Celeron processor, B810, 1.6-GHz, 2-MB L3 cache (include thermal material)
647151-001	43.9-cm (17.3-inch) display assembly, HD+, anti-glare, without webcam
647152-001	43.9-cm (17.3-inch) display assembly, HD+ anti-glare, with webcam

Spare part number	Description
647001-001	39.6-cm (15.6-inch) display assembly, HD, anti-glare, without webcam, for use in 4530s models
647002-001	39.6-cm (15.6-inch) display assembly, HD, anti-glare, with webcam, for use in 4530s models
647003-001	39.6-cm (15.6-inch) display assembly, HD, anti-glare, with webcam and WWAN, for use in 4530s models
647004-001	39.6-cm (15.6-inch) display assembly, HD, BrightView, without webcam, for use in 4530s models
647005-001	39.6-cm (15.6-inch) display assembly, HD, BrightView, with webcam, for use in 4530s models
647006-001	39.6-cm (15.6-inch) display assembly, HD, BrightView, with webcam and WWAN for use in 4530s models
647007-001	39.6-cm (15.6-inch) display assembly, HD+, anti-glare, without webcam, for use in 4530s models
647008-001	39.6-cm (15.6-inch) display assembly, HD+, anti-glare, with webcam, for use in 4530s models
647011-001	Display panel, 39.6-cm (15.6-inch) HD+
647944-001	Hard Drive Hardware Kit (includes hard drive bracket, insulator, and screws)
647949-001	DVD-ROM drive for use in 4530s models (includes bracket, bezel, and screws)
647950-001	DVD±RW and CD-RW SuperMulti DL combo drive for use in 4530s models (includes bracket, bezel, and screws)
647951-001	Blu-ray BD-R/RE DVD±RW SuperMulti DL Drive for use in 4530s models (includes bracket, bezel, and screws)
647952-001	Blu-ray ROM DVD±RW SuperMulti DL Drive for use in 4530s models (includes bracket, bezel, and screws)
647953-001	DVD-ROM drive for use in 4730s models (includes bracket, bezel, and screws)
647954-001	DVD±RW and CD-RW SuperMulti DL combo drive for use in 4730s models (includes bracket, bezel, and screws)
647955-001	Blu-ray BD-R/RE DVD±RW SuperMulti DL Drive for use in 4730s models (includes bracket, bezel, and screws)
647956-001	Blu-ray ROM DVD±RW SuperMulti DL Drive for use in 4730s models (includes bracket, bezel, and screws)
650938-001	6-cell, 55 WHr, 2.8 Ah battery for use only in 4530s models
653337-001	Intel Pentium B940 processor , 2.0-GHz, with 2-MB L3 cache (include thermal material)
653338-001	Intel Pentium B950 processor , 2.1-GHz, with 2-MB L3 cache (include thermal material)
653339-001	Intel Core i3 2330M processor, 2.2-GHz processor 3-MB L3 cache (include thermal material)
653340-001	Intel Core i3 2350M processor, 2.3-GHz processor 3-MB L3 cache (include thermal material)
653341-001	Intel Core i5 2430M processor, 2.4-GHz (turbo up to 3.0-GHz) processor 3-MB L3 cache (include thermal material)
655563-001	System board for use in 4530s models with UMA graphics with WWAN in only Russia and the People's Republic of China
655564-001	System board for use in 4530s models with UMA graphics without WWAN in only Russia and the People's Republic of China
655565-001	System board for use in discrete models with 512-MB graphics memory in only Russia and the People's Republic of China
655566-001	System board for use in discrete models with 1-GB graphics memory in only Russia and the People's Republic of China

Spare part number	Description
658340-001	System board for use in 4530s models with UMA graphics with WWAN and USB 2.0 in all countries and regions except for Russia and the People's Republic of China
658341-001	System board for use in 4530s models with UMA graphics without WWAN and with USB 2.0 in all countries and regions except for Russia and the People's Republic of China
658342-001	System board for use in discrete models with 512-MB graphics memory for use in all countries and regions except for Russia and the People's Republic of China in all countries and regions except for Russia and the People's Republic of China
658343-001	System board for use in discrete models with 1-GB graphics memory for use in all countries and regions except for Russia and the People's Republic of China in all countries and regions except for Russia and the People's Republic of China
658344-001	Top cover for use in 4530s models with a fingerprint reader and USB 2.0
658345-001	Top cover for use in 4530s models without a fingerprint reader and with USB 2.0

---

## 4 Removal and replacement procedures

### Preliminary replacement requirements

#### Tools required

You will need the following tools to complete the removal and replacement procedures:

- Flat-bladed screwdriver
- Phillips P0 and P1 screwdrivers
- Torx T8 screwdriver

#### Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.



**NOTE:** As you remove each subassembly from the computer, place the subassembly (and all accompanying screws) away from the work area to prevent damage.

---

#### Plastic parts




**CAUTION:** Using excessive force during disassembly and reassembly can damage plastic parts. Use care when handling the plastic parts. Apply pressure only at the points designated in the maintenance instructions.

---

## Cables and connectors

---


 **CAUTION:** When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.

---

Cables must be handled with extreme care to avoid damage. Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed in such a way that they cannot be caught or snagged by parts being removed or replaced. Handle flex cables with extreme care; these cables tear easily.

## Drive handling

---

 **CAUTION:** Drives are fragile components that must be handled with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

---

Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.

Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.

Before removing a diskette drive or optical drive, be sure that a diskette or disc is not in the drive and be sure that the optical drive tray is closed.

Handle drives on surfaces covered with at least one inch of shock-proof foam.

Avoid dropping drives from any height onto any surface.

After removing a hard drive, an optical drive, or a diskette drive, place it in a static-proof bag.

Avoid exposing a hard drive to products that have magnetic fields, such as monitors or speakers.

Avoid exposing a drive to temperature extremes or liquids.

If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging and label the package "FRAGILE."

---


## Grounding guidelines

### Electrostatic discharge damage

Electronic components are sensitive to electrostatic discharge (ESD). Circuitry design and structure determine the degree of sensitivity. Networks built into many integrated circuits provide some protection, but in many cases, ESD contains enough power to alter device parameters or melt silicon junctions.

A discharge of static electricity from a finger or other conductor can destroy static-sensitive devices or microcircuitry. Even if the spark is neither felt nor heard, damage may have occurred.

An electronic device exposed to ESD may not be affected at all and can work perfectly throughout a normal cycle. Or the device may function normally for a while, and then degrade in the internal layers, reducing its life expectancy.

 **CAUTION:** To prevent damage to the computer when you are removing or installing internal components, observe these precautions:

Keep components in their electrostatic-safe containers until you are ready to install them.


Use nonmagnetic tools.

Before touching an electronic component, discharge static electricity by using the guidelines described in this section.

Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.

If you remove a component, place it in an electrostatic-safe container.

The following table shows how humidity affects the electrostatic voltage levels generated by different activities.

 **CAUTION:** A product can be degraded by as little as 700 V.

Typical electrostatic voltage levels			
Event	Relative humidity		
	10%	40%	55%
Walking across carpet	35,000 V	15,000 V	7,500 V
Walking across vinyl floor	12,000 V	5,000 V	3,000 V
Motions of bench worker	6,000 V	800 V	400 V
Removing DIPS from plastic tube	2,000 V	700 V	400 V
Removing DIPS from vinyl tray	11,500 V	4,000 V	2,000 V
Removing DIPS from Styrofoam	14,500 V	5,000 V	3,500 V
Removing bubble pack from PCB	26,500 V	20,000 V	7,000 V
Packing PCBs in foam-lined box	21,000 V	11,000 V	5,000 V

## Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment:

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

## Workstation guidelines

Follow these grounding workstation guidelines:

- Cover the workstation with approved static-shielding material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use conductive field service tools, such as cutters, screwdrivers, and vacuums.
- When fixtures must directly contact dissipative surfaces, use fixtures made only of static-safe materials.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and Styrofoam.
- Handle ESD-sensitive components, parts, and assemblies by the case or PCM laminate. Handle these items only at static-free workstations.
- Avoid contact with pins, leads, or circuitry.
- Turn off power and input signals before inserting or removing connectors or test equipment.

## Equipment guidelines

Grounding equipment must include either a wrist strap or a foot strap at a grounded workstation.

- When seated, wear a wrist strap connected to a grounded system. Wrist straps are flexible straps with a minimum of one megohm  $\pm 10\%$  resistance in the ground cords. To provide proper ground, wear a strap snugly against the skin at all times. On grounded mats with banana-plug connectors, use alligator clips to connect a wrist strap.
- When standing, use foot straps and a grounded floor mat. Foot straps (heel, toe, or boot straps) can be used at standing workstations and are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use foot straps on both feet with a minimum of one megohm resistance between the operator and ground. To be effective, the conductive strips must be worn in contact with the skin.

The following grounding equipment is recommended to prevent electrostatic damage:

- Antistatic tape
- Antistatic smocks, aprons, and sleeve protectors
- Conductive bins and other assembly or soldering aids
- Nonconductive foam
- Conductive tabletop workstations with ground cords of one megohm resistance
- Static-dissipative tables or floor mats with hard ties to the ground
- Field service kits
- Static awareness labels
- Material-handling packages
- Nonconductive plastic bags, tubes, or boxes
- Metal tote boxes
- Electrostatic voltage levels and protective materials

The following table lists the shielding protection provided by antistatic bags and floor mats.

Material	Use	Voltage protection level
Antistatic plastic	Bags	1,500 V
Carbon-loaded plastic	Floor mats	7,500 V
Metallized laminate	Floor mats	5,000 V


# Component replacement procedures

This chapter provides removal and replacement procedures.

There are as many as 95 screws and screw locks, in 15 different sizes, that must be removed, replaced, or loosened when servicing the computer. Make special note of each screw and screw lock size and location during removal and replacement.

## Service tag

When ordering parts or requesting information, provide the computer serial number and model description provided on the service tag.

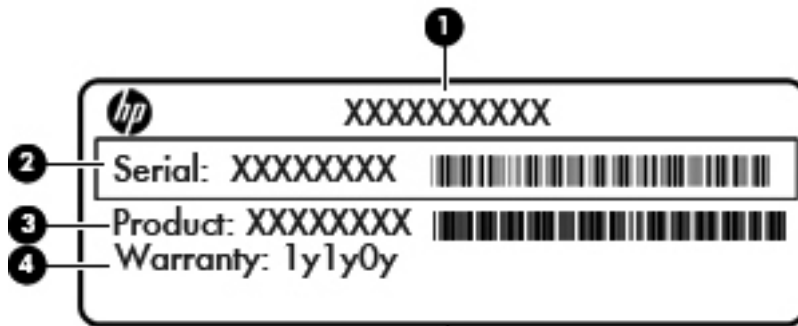

- Product name **(1)**. This is the product name affixed to the front of the computer.
- Serial number (s/n) **(2)**. This is an alphanumeric identifier that is unique to each product.
- Part number/Product number (p/n) **(3)**. This number provides specific information about the product's hardware components. The part number helps a service technician to determine what components and parts are needed.
- Warranty period **(4)**. This number describes the duration (in years) of the warranty period for the computer.

## Battery

Description	Spare part number
9-cell, 93 WHr, 2.8 Ah Li-ion battery, for use only in 4530s models	633809-001
8-cell, 73 WHr, 2.8 Ah Li-ion battery, for use only in 4730s models	633807-001
6-cell, 55 WHr, 2.8 Ah, for use only in 4530s models	650938-001
6-cell, 47 WHr, 2.2 Ah Li-ion battery, for use only in 4530s models	633805-001

Before disassembling the computer, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.

Remove the battery:

1. Position the computer upside-down on a flat surface with the battery bay toward you.
2. Slide the battery release latches (1) to release the battery.
3. Pivot the battery (2) upward to remove it from the computer (3).



Install the battery by inserting it into the battery bay until you hear a click.

## SIM



**NOTE:** This section applies only to computer models with WWAN capability.




**NOTE:** If there is a SIM inserted in the SIM slot, it must be removed before disassembling the computer. Be sure that the SIM is reinserted in the SIM slot after reassembling the computer.

Before removing the SIM, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 47](#)).

Remove the SIM:

1. Position the computer upside-down with the battery bay toward you.
2. Press in on the SIM **(1)**. (The module is partially ejected from the SIM slot.)
3. Remove the SIM **(2)** from the SIM slot.

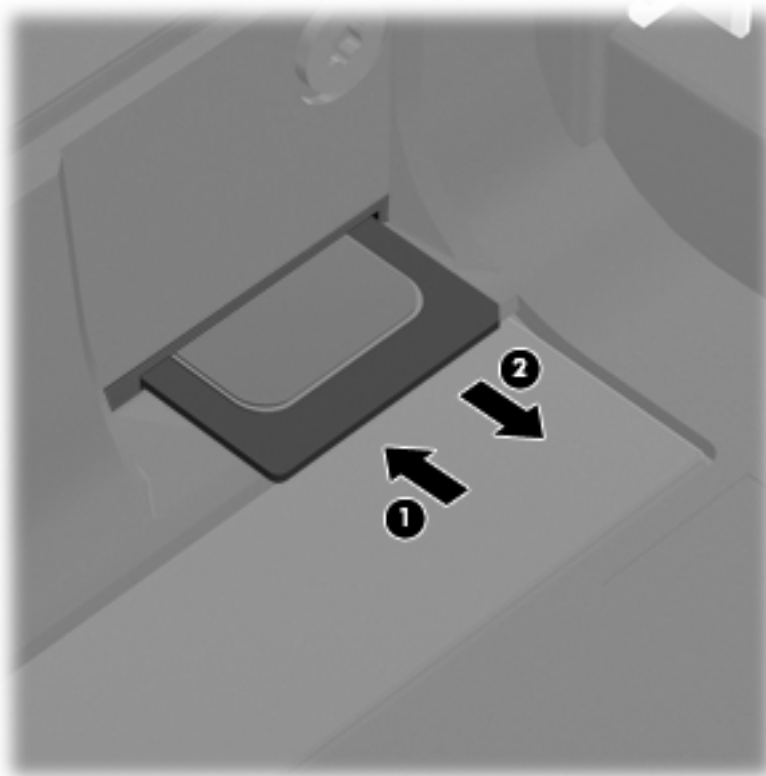

Reverse this procedure to install the SIM.

## Bottom door


Description	Spare part number
Bottom door for use in 4530s models	646263-001
Bottom door for use in 4730s models	646264-001

Before disassembling the computer, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 47](#)).

Remove the bottom door:

1. Position the computer upside-down on a flat surface with the battery bay toward you.
2. Remove the locking screw (if installed) **(1)** and slide the bottom door release latches **(2)** to release the door.
3. Slide the door toward the front of the computer **(3)**, and then lift the door off the computer **(4)**.

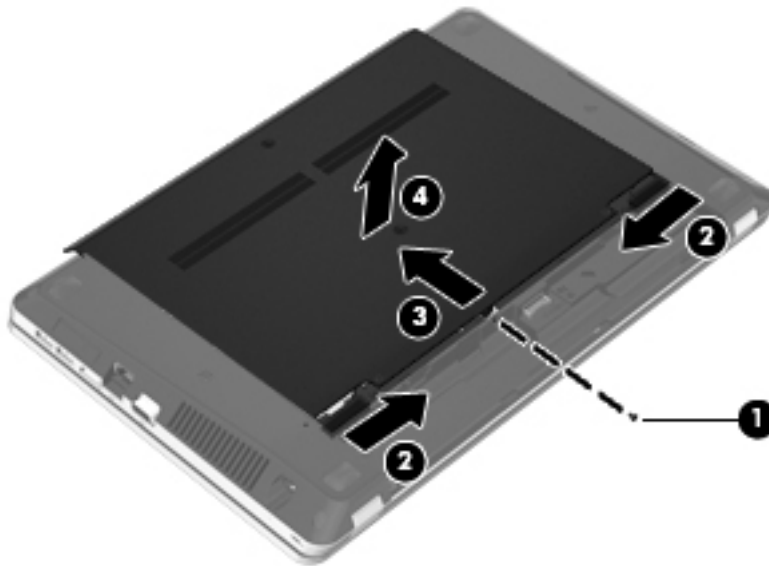

Reverse the removal procedures to install the bottom door.

## Optical drive



**NOTE:** All optical drive spare part kits include an optical drive bezel.

Description	Spare part number
<b>For use in 4530s models:</b>	
Blu-ray BD-R/RE DVD±RW SuperMulti DL Drive	647951-001
Blu-ray ROM DVD±RW SuperMulti DL Drive	647952-001
DVD±RW and CD-RW SuperMulti DL Combo Drive	647950-001
DVD-ROM Drive	647949-001
<b>For use in 4730s models:</b>	
Blu-ray BD-R/RE DVD±RW SuperMulti DL Drive	647955-001
Blu-ray ROM DVD±RW SuperMulti DL Drive	647956-001
DVD±RW and CD-RW SuperMulti DL Combo Drive	647954-001
DVD-ROM Drive	647953-001


Before removing the optical drive, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 47](#)).
5. Remove the bottom door (see [Bottom door on page 49](#)).


Remove the optical drive:

1. Position the computer upside-down with the battery bay toward you.
2. Remove the Phillips PM2.5×5.0 screw **(1)** that secures the optical drive to the computer.
3. Push the optical drive tab **(2)** to release the optical drive from the computer.

4. Remove the optical drive **(3)** from the computer.

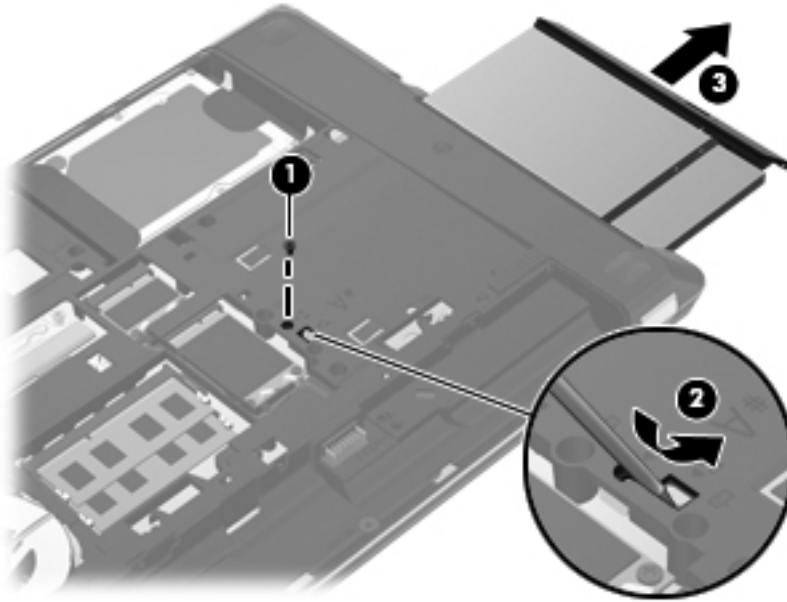

5. If it is necessary to replace the optical drive bracket, position the optical drive with the rear toward you.
6. Remove the two Phillips PM2.0×3.0 screws **(1)** that secure the optical drive bracket to the optical drive.
7. Remove the optical drive bracket **(2)**.

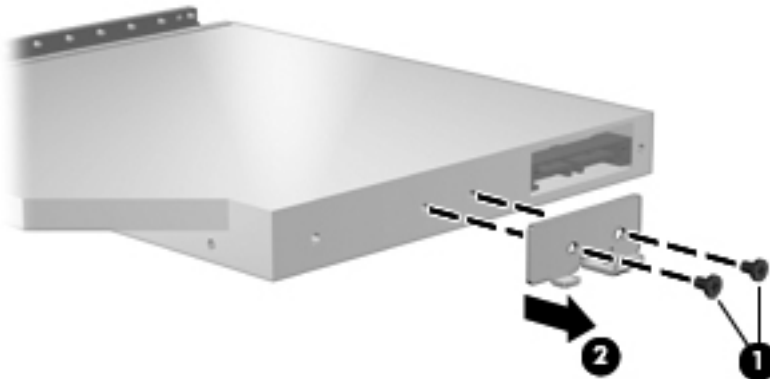

Reverse this procedure to install an optical drive.

## Hard drive



**NOTE:** All hard drive spare part kits include a hard drive bracket and screws.

Description	Spare part number
750-GB, 7200-rpm hard drive	633252-001
640-GB, 5400-rpm hard drive	603785-001
500-GB, 7200-rpm hard drive	634925-001
500-GB, 5400-rpm hard drive	634638-001
320-GB, 7200-rpm hard drive	641672-001
320-GB, 5400-rpm hard drive	622643-001
250-GB, 7200-rpm hard drive	635225-001
250-GB, 5400-rpm hard drive	622641-001
Hard Drive Hardware Kit (includes hard drive bracket, insulator, and screws)	647944-001


Before disassembling the computer, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 47](#)).
5. Remove the bottom door (see [Bottom door on page 49](#)).


Remove the hard drive:

1. Position the computer upside-down with the front toward you.
2. Remove the four Phillips PM2.0×4.0 screws **(1)** that secure the hard drive to the computer.
3. Grasp the Mylar tabs on the hard drive and slide the hard drive to the right **(2)** to disconnect it from the system board connector.

4. Remove the hard drive **(3)** from the hard drive bay.

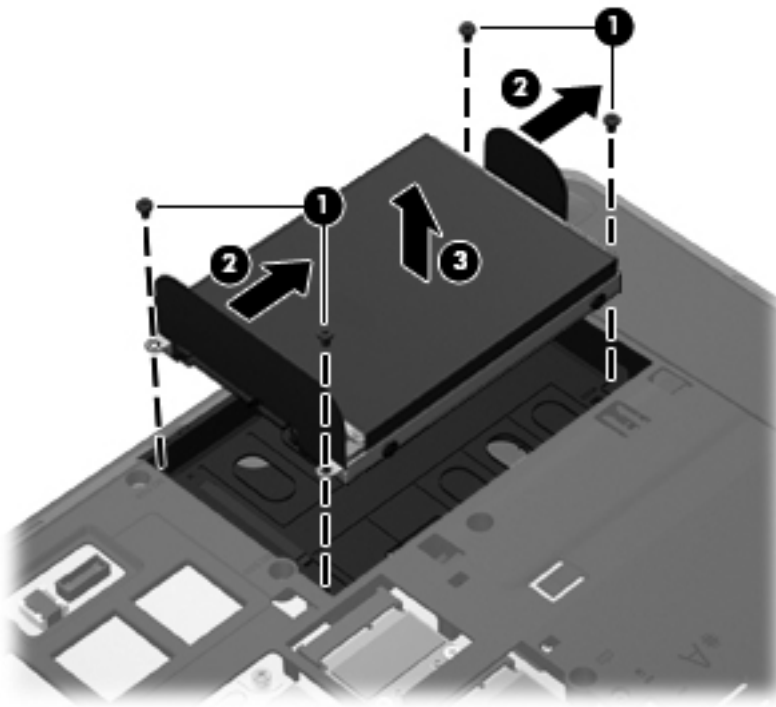

5. If it is necessary to replace the hard drive bracket, remove the tape **(1)** that secures the Mylar cover down onto the bracket, and then lift to open the Mylar cover **(2)**.
6. Remove the two Phillips PM3.0×3.0 hard drive bracket screws **(3)** from each side of the hard drive (4 total screws).
7. Rotate the hard drive upward and remove it from the bracket **(4)**.

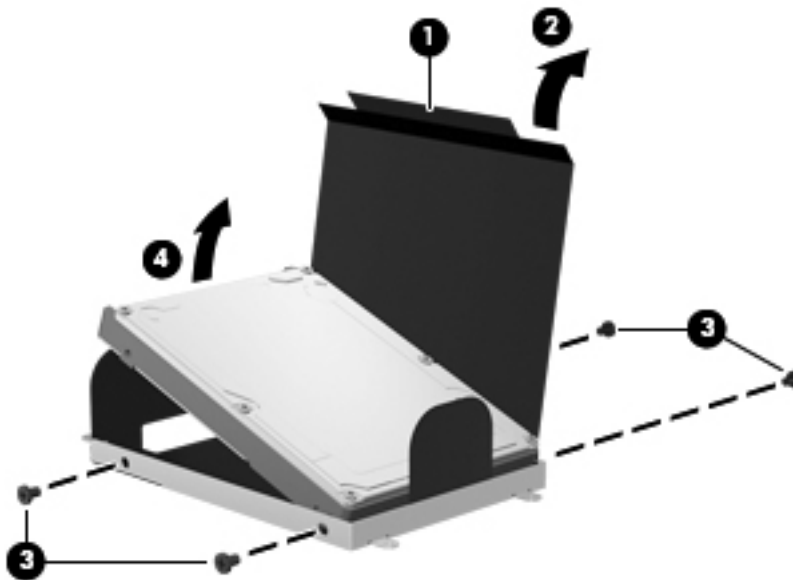

Reverse this procedure to reassemble and install the hard drive.

## Memory modules



**NOTE:** Primary and expansion memory is installed in a stacked configuration in the bottom of the computer.

Description	Spare part number
1-GB (PC3-10600, 1333-MHz, DDR3)	639736-001
2-GB (PC3-10600, 1333-MHz, DDR3)	621565-001
4-GB (PC3-10600, 1333-MHz, DDR3)	621569-001


Before removing the memory module, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 47](#)).
5. Remove the bottom door (see [Bottom door on page 49](#)).


Remove the memory module:

1. Position the computer upside-down with the battery bay toward you.
2. Spread the retaining tabs **(1)** on each side of the memory module slot to release the memory module. (The edge of the module opposite the slot rises away from the computer.)

3. Remove the memory module (2) by pulling the module away from the slot at an angle.

 **NOTE:** Memory modules are designed with a notch (3) to prevent incorrect insertion into the memory module slot.

 **NOTE:** The computer uses two memory sockets. The top socket houses the expansion memory module and is shown in the following image. The bottom socket houses the primary memory module. The removal procedure is the same for both memory sockets.

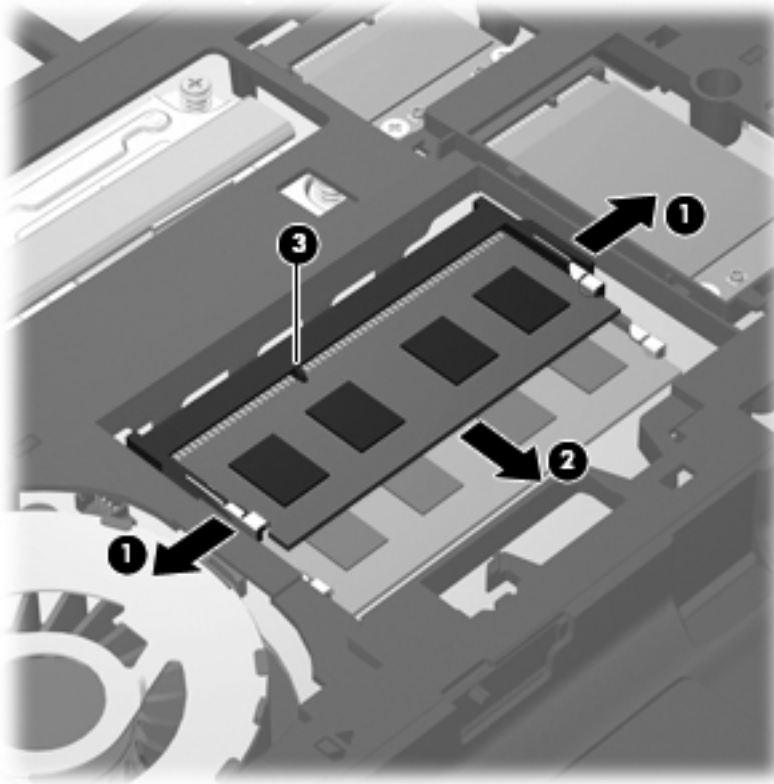

Reverse this procedure to install a memory module.

## WWAN module



**CAUTION:** The WWAN module and the WLAN module are not interchangeable.

Description	Spare part number
HP Ic2010 HSPA Mobile Broadband Module	632155-001
HP un2430 EV-DO/HSPA Mobile Broadband Module	634400-001

Before removing the WWAN module, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 47](#)).
5. Remove the SIM (see [SIM on page 48](#)).
6. Remove the bottom door (see [Bottom door on page 49](#)).

Remove the WWAN module:


1. Position the computer upside-down with the battery bay toward you.
2. Disconnect the WWAN antenna cables **(1)** from the terminals on the WWAN module.




**NOTE:** The red WWAN antenna cable is connected to the WWAN module “Main” terminal. The blue WWAN antenna cable is connected to the WWAN module “Aux” terminal.


3. Remove the two Phillips PM2.0×3.0 screws **(2)** that secure the WWAN module to the computer. (The edge of the module opposite the slot rises away from the computer.)


4. Remove the WWAN module (3) by pulling the module away from the slot at an angle.

 **NOTE:** WWAN modules are designed with a notch (4) to prevent incorrect insertion.

**Figure 4-1** Removing the WWAN module

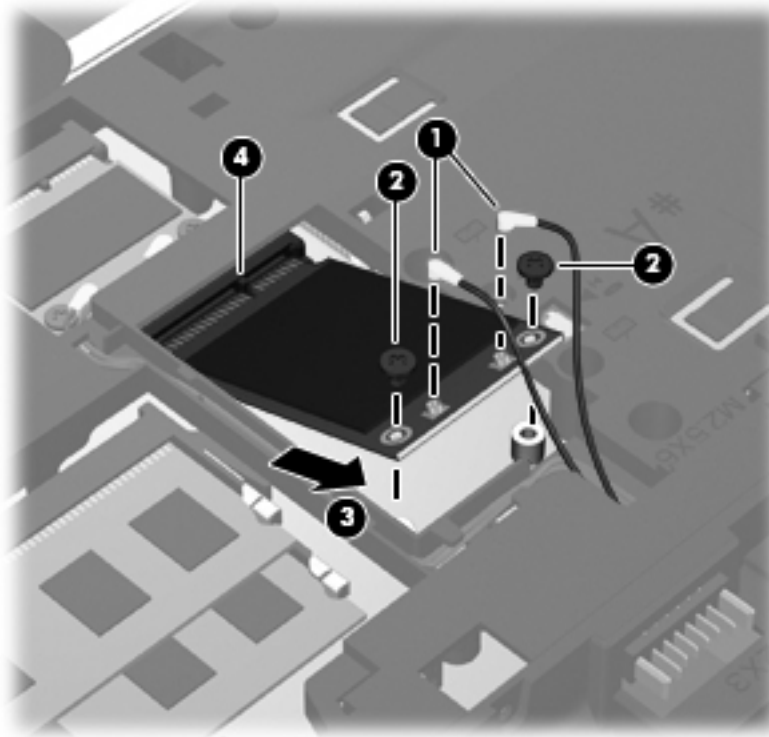


 **NOTE:** If the WWAN antennas are not connected to the terminals on the WWAN module, the protective sleeves must be installed on the antenna connectors, as shown in the following illustration.

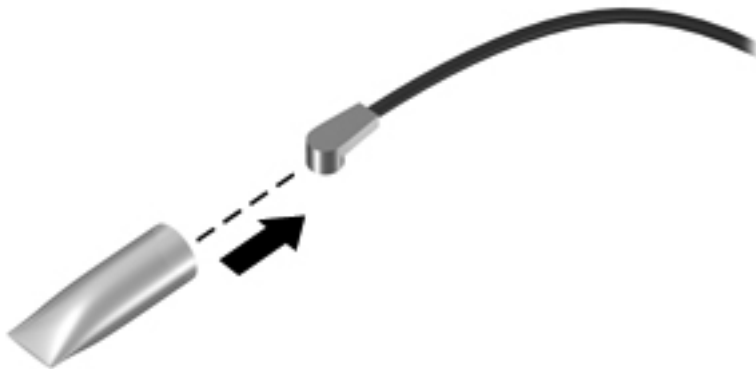

Reverse this procedure to install the WWAN module.

## WLAN/Bluetooth combo card

The computer uses a card that provides both WLAN and Bluetooth functionality.

 **CAUTION:** The WLAN module and the WWAN module are not interchangeable.

Description	Spare part number
Atheros AR9002WB-1NGB 802.11b/g/n 1x1 WiFi and Bluetooth 2.1+EDR Combo Adapter for use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, Bahamas, Bahrain, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cambodia, Cameroon, Canada, Cape Verde, the Cayman Islands, Central African Republic, Chad, Chile, People's Republic of China, Colombia, Comoros, Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guam, Guatemala, Guinea, Guinea-Bissau, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Indonesia, Ireland, Israel, Italy, Ivory Coast, Jamaica, Japan, Jordan, Kazakhstan, Kenya, Kiribati, Kuwait, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, Maldives, Mali, Malta, Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Puerto Rico, Peru, Philippines, Poland, Portugal, Qatar, Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia and Montenegro, Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, Solomon Islands, Somalia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Syria, Taiwan, Tajikistan, Tanzania, Thailand, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, Uruguay, the United States, the US Virgin Islands, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe	593127-001
Realtek 8188BC8 802.11a/b/g/n 2x2 WiFi and Bluetooth 3.0+HS Combo Adapter for use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, Bahamas, Bahrain, Baltics, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cambodia, Cameroon, Canada, Cape Verde, the Cayman Islands, Central African Republic, Chad, Chile, People's Republic of China, Colombia, Comoros, Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guam, Guatemala, Guinea, Guinea-Bissau, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Indonesia, Iraq, Ireland, Israel, Italy, Ivory Coast, Jamaica, Japan, Jordan, Kazakhstan, Kenya, Kiribati, Kuwait, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, Maldives, Mali, Malta, Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Puerto Rico, Peru, Philippines, Poland, Portugal, Qatar, Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia and Montenegro, Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, Solomon Islands, Somalia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Syria, Taiwan, Tajikistan, Tanzania, Thailand, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, Uruguay, the United States, the US Virgin Islands, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe	602993-001

Description	Spare part number
<p>Ralink 5390GN 802.11b/g/n 1x1 WiFi Adapter for use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, Bahamas, Bahrain, Baltics, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cambodia, Cameroon, Canada, Cape Verde, the Cayman Islands, Central African Republic, Chad, Chile, People's Republic of China, Colombia, Comoros, Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guam, Guatemala, Guinea, Guinea-Bissa, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Indonesia, Iraq, Ireland, Israel, Italy, Ivory Coast, Jamaica, Japan, Jordan, Kazakhstan, Kenya, Kiribati, Kuwait, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, Maldives, Mali, Malta, Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Puerto Rico, Peru, Philippines, Poland, Portugal, Qatar, Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia and Montenegro, Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, Solomon Islands, Somalia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Syria, Taiwan, Tajikistan, Tanzania, Thailand, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, Uruguay, the United States, the US Virgin Islands, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe</p>	630703-001
<p>Ralink 8190BC8 802.11b/g/n 2x2 WiFi and Bluetooth 3.0+HS Combo Adapter for use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, Bahamas, Bahrain, Baltics, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cambodia, Cameroon, Canada, Cape Verde, the Cayman Islands, Central African Republic, Chad, Chile, People's Republic of China, Colombia, Comoros, Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guam, Guatemala, Guinea, Guinea-Bissa, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Indonesia, Iraq, Ireland, Israel, Italy, Ivory Coast, Jamaica, Japan, Jordan, Kazakhstan, Kenya, Kiribati, Kuwait, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, Maldives, Mali, Malta, Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Puerto Rico, Peru, Philippines, Poland, Portugal, Qatar, Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia and Montenegro, Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, Solomon Islands, Somalia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Syria, Taiwan, Tajikistan, Tanzania, Thailand, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, Uruguay, the United States, the US Virgin Islands, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe</p>	630813-001

Description	Spare part number
Realtek 8188GN 802.11b/g/n 1x1 WiFi Adapter for use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, Bahamas, Bahrain, Baltics, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cambodia, Cameroon, Canada, Cape Verde, the Cayman Islands, Central African Republic, Chad, Chile, People's Republic of China, Colombia, Comoros, Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guam, Guatemala, Guinea, Guinea-Bissa, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Indonesia, Iraq, Ireland, Israel, Italy, Ivory Coast, Jamaica, Japan, Jordan, Kazakhstan, Kenya, Kiribati, Kuwait, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, Maldives, Mali, Malta, Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Puerto Rico, Peru, Philippines, Poland, Portugal, Qatar, Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia and Montenegro, Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, Solomon Islands, Somalia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Syria, Taiwan, Tajikistan, Tanzania, Thailand, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, Uruguay, the United States, the US Virgin Islands, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe	640926-001
Intel Centrino Advanced-N 6230 for use in Afghanistan, Albania, Algeria, Andorra, Angola, Antigua and Barbuda, Argentina, Armenia, Aruba, Australia, Austria, Azerbaijan, Bahamas, Bahrain, Baltics, Bangladesh, Barbados, Belarus, Belgium, Belize, Benin, Bermuda, Bhutan, Bolivia, Bosnia and Herzegovina, Botswana, Brazil, the British Virgin Islands, Brunei, Bulgaria, Burkina Faso, Burundi, Cambodia, Cameroon, Canada, Cape Verde, the Cayman Islands, Central African Republic, Chad, Chile, People's Republic of China, Colombia, Comoros, Congo, Costa Rica, Croatia, Cyprus, the Czech Republic, Denmark, Djibouti, Dominica, the Dominican Republic, East Timor, Ecuador, Egypt, El Salvador, Equatorial Guinea, Eritrea, Estonia, Ethiopia, Fiji, Finland, France, French Guiana, Gabon, Gambia, Georgia, Germany, Ghana, Gibraltar, Greece, Grenada, Guadeloupe, Guam, Guatemala, Guinea, Guinea-Bissa, Guyana, Haiti, Honduras, Hong Kong, Hungary, Iceland, India, Indonesia, Iraq, Ireland, Israel, Italy, Ivory Coast, Jamaica, Japan, Jordan, Kazakhstan, Kenya, Kiribati, Kuwait, Kyrgyzstan, Laos, Latvia, Lebanon, Lesotho, Liberia, Liechtenstein, Lithuania, Luxembourg, Macedonia, Madagascar, Malawi, Malaysia, Maldives, Mali, Malta, Marshall Islands, Martinique, Mauritania, Mauritius, Mexico, Micronesia, Monaco, Mongolia, Montenegro, Morocco, Mozambique, Namibia, Nauru, Nepal, the Nether Antilles, the Netherlands, New Zealand, Nicaragua, Niger, Nigeria, Norway, Oman, Pakistan, Palau, Panama, Papua New Guinea, Paraguay, Puerto Rico, Peru, Philippines, Poland, Portugal, Qatar, Republic of Moldova, Romania, Russia, Rwanda, Samoa, San Marino, Sao Tome and Principe, Saudi Arabia, Senegal, Serbia and Montenegro, Seychelles, Sierra Leone, Singapore, Slovakia, Slovenia, Solomon Islands, Somalia, South Africa, South Korea, Spain, Sri Lanka, St. Kitts and Nevis, St. Lucia, St. Vincent and the Grenadines, Suriname, Swaziland, Sweden, Switzerland, Syria, Taiwan, Tajikistan, Tanzania, Thailand, Togo, Tonga, Trinidad and Tobago, Tunisia, Turkey, Turkmenistan, Tuvalu, Uganda, Ukraine, the United Arab Emirates, the United Kingdom, Uruguay, the United States, the US Virgin Islands, Uzbekistan, Vanuatu, Venezuela, Vietnam, Yemen, Zaire, Zambia, and Zimbabwe	636672-001

Before removing the WLAN module, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.

3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 47](#)).
5. Remove the bottom door (see [Bottom door on page 49](#)).

Remove the WLAN module:

1. Position the computer upside-down with the battery bay toward you.
2. Disconnect the WLAN antenna cables **(1)** from the terminals on the WLAN module.




---


**NOTE:** The WLAN antenna cable labeled “1” connects to the WLAN module “Main” terminal labeled “1”. The WLAN antenna cable labeled “2” connects to the WLAN module “Aux” terminal labeled “2”. If the computer is equipped with an 802.11a/b/g/n WLAN module, the yellow WLAN antenna cable connects to the middle terminal on the WLAN module.


---


3. Remove the two Phillips PM2.0×3.0 screws **(2)** that secure the WLAN module to the computer. (The edge of the module opposite the slot rises away from the computer.)

4. Remove the WLAN module (3) by pulling the module away from the slot at an angle.

 **NOTE:** WLAN modules are designed with a notch (4) to prevent incorrect insertion.

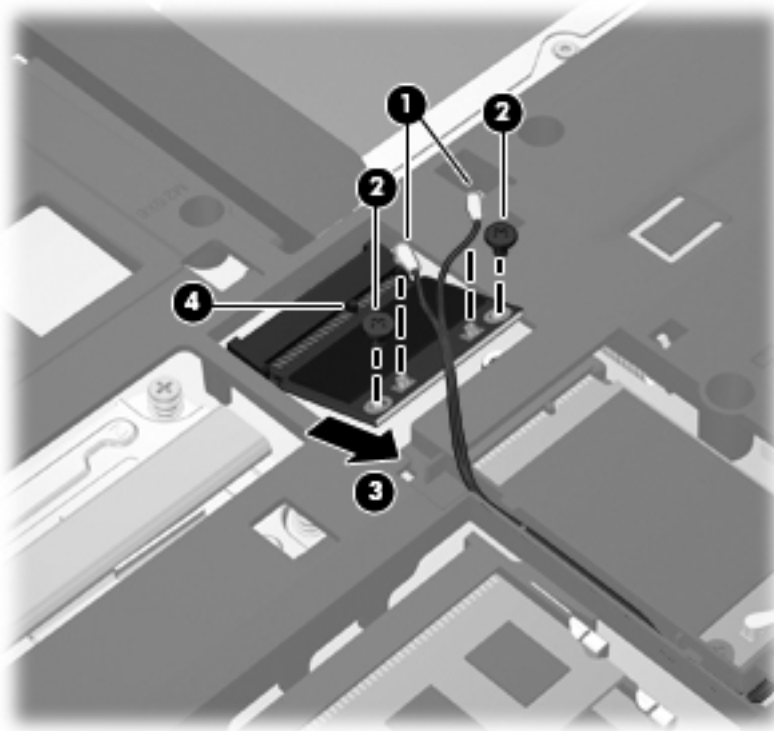

 **NOTE:** If the WLAN antennas are not connected to the terminals on the WLAN module, the protective sleeves must be installed on the antenna connectors, as shown in the following illustration.

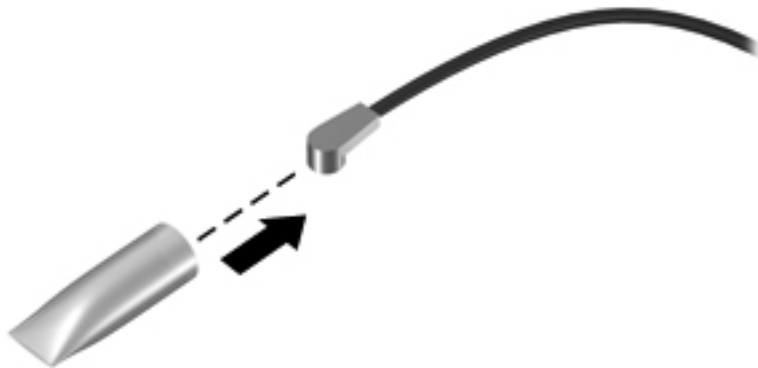

Reverse this procedure to install the WLAN module.

## Keyboard



**NOTE:** For a detailed list of available keyboards, see [Sequential part number listing on page 32](#).


Description	Spare part number
Keyboard	646300-xxx

Before removing the keyboard, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 47](#)).
5. Remove the bottom door (see [Bottom door on page 49](#)).


Remove the keyboard:

1. Position the computer upside-down with the front toward you.
2. Remove the two Phillips PM2.5×5.0 screws that secure the keyboard to the computer.

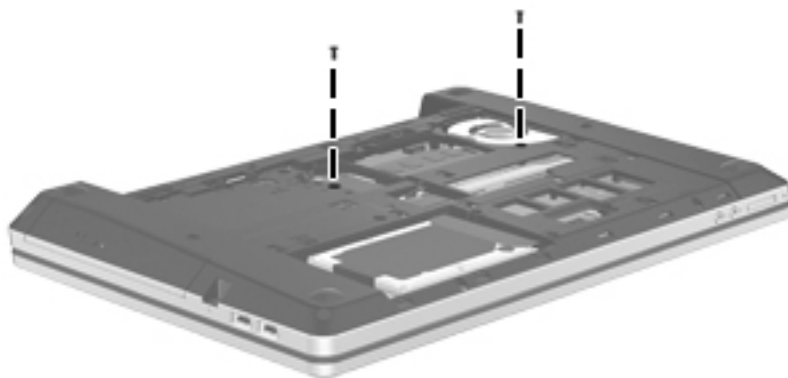


3. Position the computer on its side with the bottom facing you and the computer open.

4. Insert a screwdriver or similar tool into the gap near the WWAN module compartment and push to disengage the keyboard.

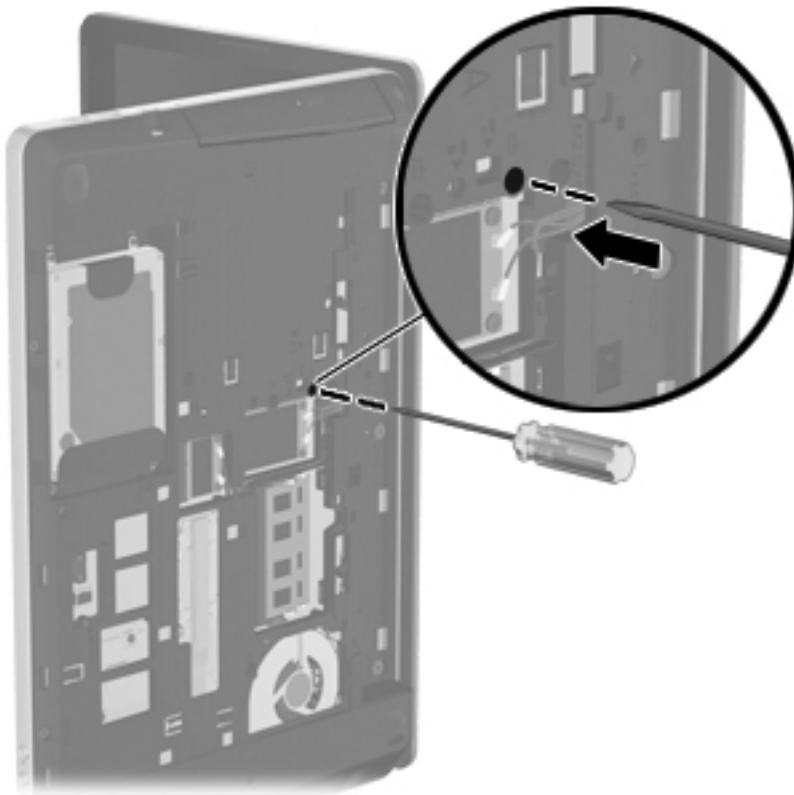


5. Position the computer upright with the front toward you.
6. Open the computer as far as possible.
7. Lift and rotate the keyboard (1) until it rests on the palm rest (2).

 **NOTE:** Some units have double-sided tape securing the keyboard to the top cover.



8. Lift the keyboard connector latch (1).
9. Disconnect the keyboard cable from the system board (2)

10. Remove the keyboard (3).

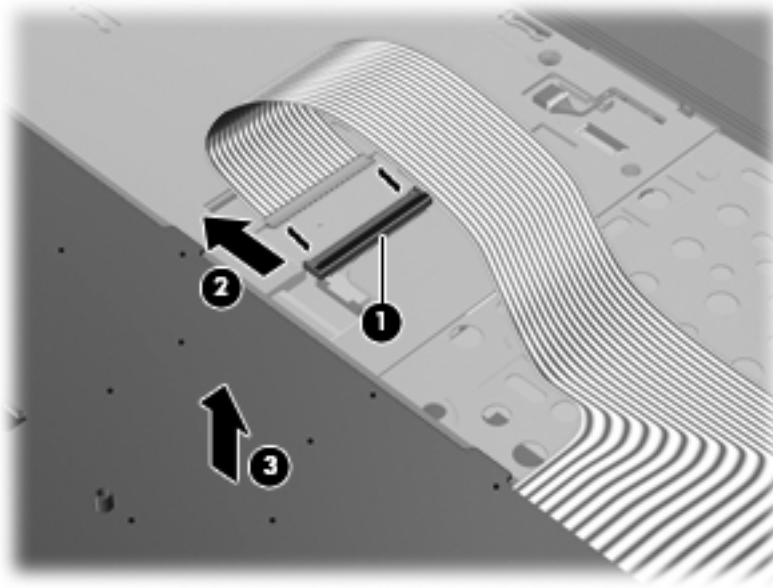

Reverse this procedure to install the keyboard.

## Top cover

Description	Spare part number
<b>Top cover for use in model 4530s:</b>	
With a fingerprint reader and USB 3.0	646251-001
Without a fingerprint reader and with USB 3.0	646253-001
With a fingerprint reader and USB 2.0	658344-001
Without a fingerprint reader and with USB 2.0	658345-001
<b>Top cover for use in model 4730s:</b>	
With a fingerprint reader	646257-001
Without a fingerprint reader	646260-001


Before removing the top cover, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.

4. Remove the battery (see [Battery on page 47](#)).
5. Remove the following components:
  - a. Bottom door (see [Bottom door on page 49](#)).
  - b. Optical drive (see [Optical drive on page 50](#))
  - c. Keyboard (see [Keyboard on page 63](#))

Remove the top cover:


1. Position the computer upside-down with the front toward you.
2. Remove the following covers and screws that secure the top cover to the computer:
  - (1) 4 rubber screw covers
  - (2) 10 Torx T8M2.5×6.0 screws


 **NOTE:** The following image shows model 4530s. Model 4730s has 15 Torx screws on the bottom.

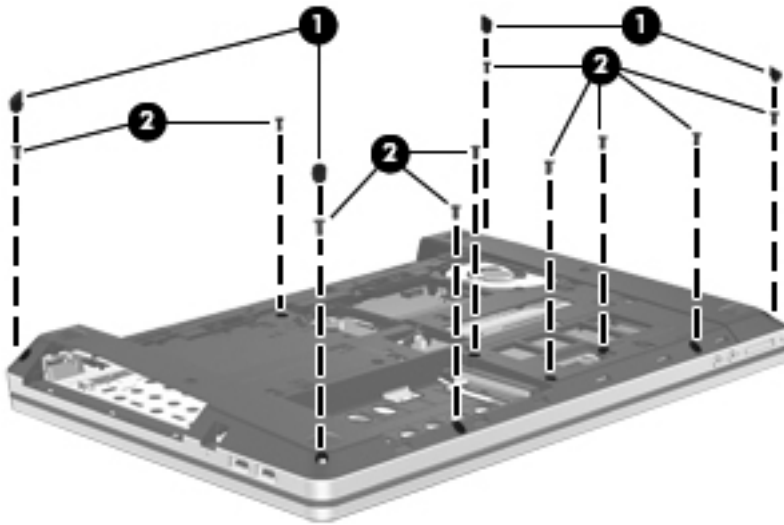


3. Remove the following screws that secure the top cover to the computer:


- (1) 3 Phillips PM2.0×4.0 screws from the optical drive bay
- (2) 3 Phillips PM2.5×2.5 broadhead screws from the battery bay

 **NOTE:** The following image shows model 4530s. Model 4730s has 5 screws in the battery bay

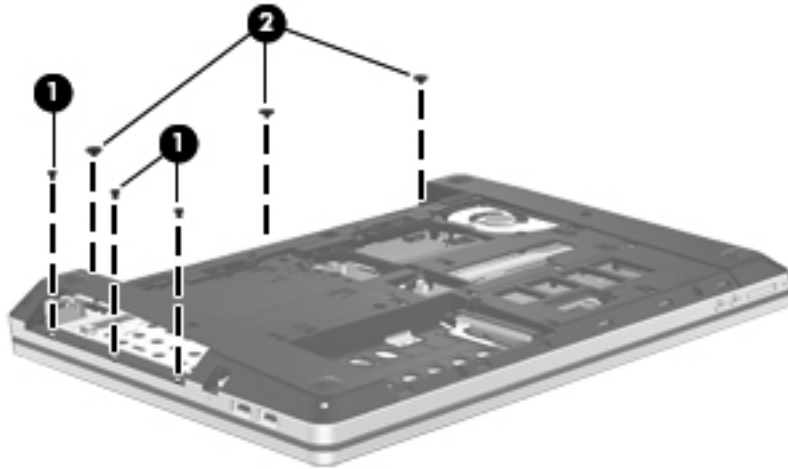


4. Turn the computer upright and open it as far as possible.
5. Remove the 6 Torx T8M2.5×6.0 screws that secure the top cover to the computer.


 **NOTE:** The following image shows model 4530s. Model 4730s has 3 screws on the top side of the top cover.

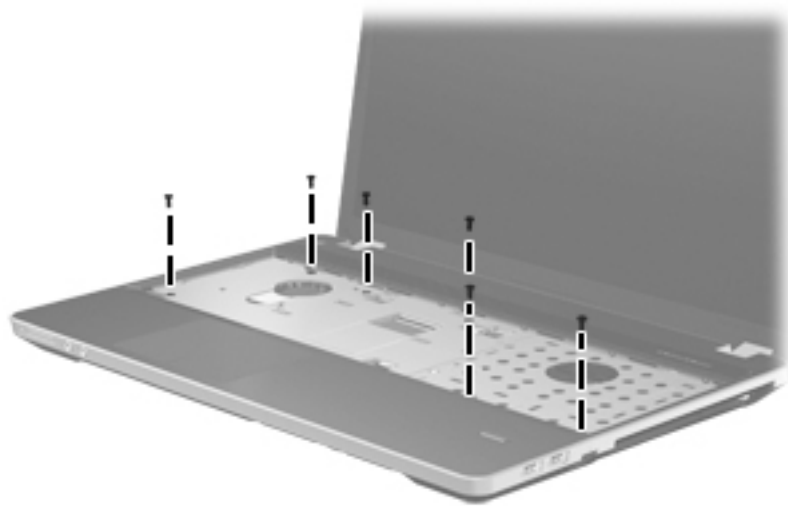

6. Remove the following cables from the system board:
- Lift the connector latch (1) and disconnect the function board cable (2)
  - Disconnect the speaker cable (3)
  - Lift the connector latch (4) and disconnect the power button board cable (5)
  - Lift the connector latch (6) and disconnect the fingerprint reader board cable (7)

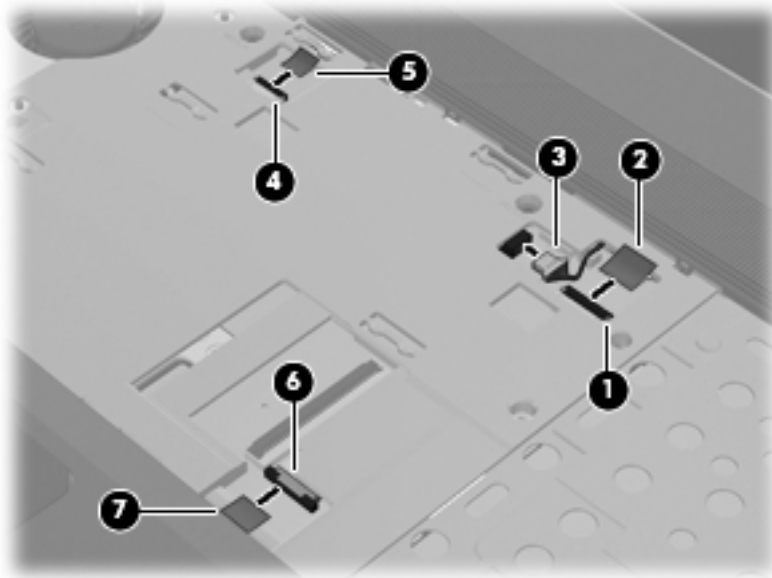


7. Position the computer on its side with the display open.
8. Insert a screwdriver through the holes in the battery bay and press to disengage the top cover from the computer.

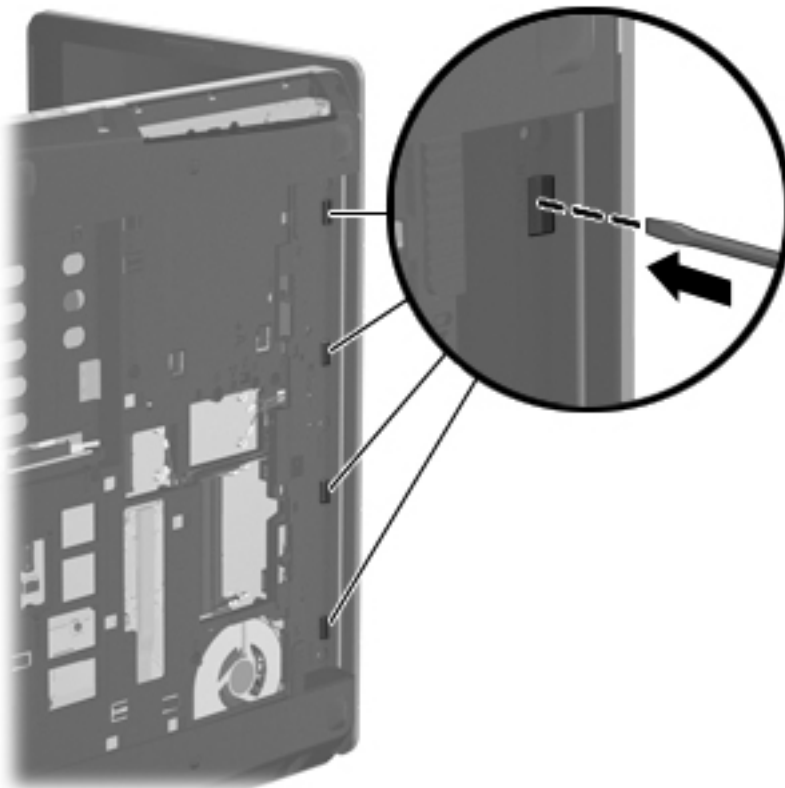


9. Position the computer upright with the front toward you.

10. To remove the top cover, pull up on the top of the top cover (1), pull upward on the left (2) and right sides (3), and then lift the bottom of the top cover (4) to remove it enough to access the card reader cable underneath.

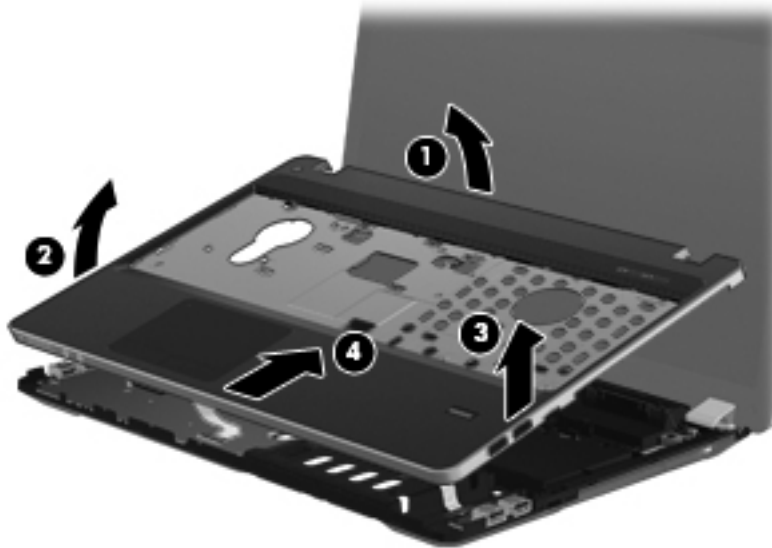

11. Lift the front of the top cover slightly to gain access to the cable and connector underneath.
12. Lift the connector latch (1), disconnect the card reader cable (2), and then lift the top cover from the computer (3).

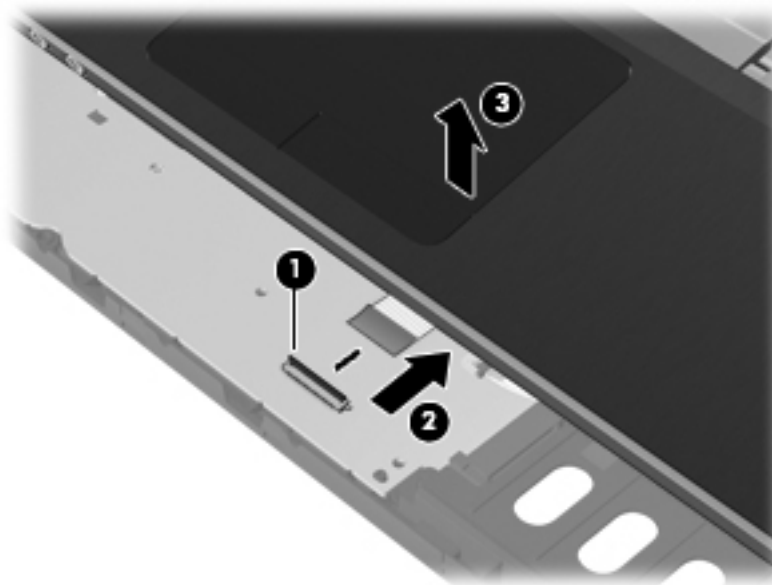

Reverse this procedure to install the top cover.

## Card reader board

Description	Spare part number
Card reader board for use in 4530s models	646292-001
Card reader board for use in 4730s models	646293-001

Before removing the card reader, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 47](#)).
5. Remove the following components:
  - a. Bottom door (see [Bottom door on page 49](#)).
  - b. Optical drive (see [Optical drive on page 50](#))
  - c. Keyboard (see [Keyboard on page 63](#))
  - d. Top cover (see [Top cover on page 65](#))


Remove the card reader:

1. Position the top cover upside-down with the front toward you.
2. Remove the tape that secures the cable to the Touchpad button board **(1)**.
3. Disconnect the cable from the connector on the Touchpad button board **(2)**.
4. Remove the two Phillips PM2.5×5.0 screws **(3)** that secure the card reader board to the top cover.



**NOTE:** Screw position may vary.

5. Rotate the Touchpad button board upward (4), and then remove it (5).

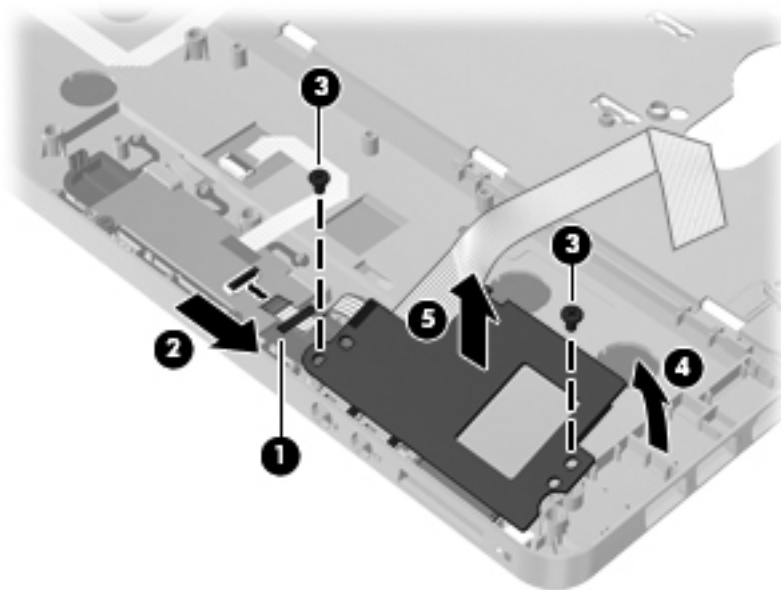

Reverse this procedure to install the card reader.

## Speaker assembly

Description	Spare part number
Speaker assembly for use in 4530s models (includes housing)	646298-001
Speaker assembly for use in 4730s models (includes housing)	646299-001

Before removing the speaker assembly, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 47](#)).
5. Remove the following components:
  - a. Bottom door (see [Bottom door on page 49](#)).
  - b. Optical drive (see [Optical drive on page 50](#))
  - c. Keyboard (see [Keyboard on page 63](#))
  - d. Top cover (see [Top cover on page 65](#))

Remove the speaker assembly:



**NOTE:** The following image shows model 4530s. Speaker appearance differs in model 4730s.

1. Position the top cover upside-down with the front toward you.
2. If disassembling model 4530s, remove the power button board cable from atop the left speaker (1).
3. Remove the four Phillips PM2.0×4.0 screws (2) that secure the speakers to the computer.
4. Lift the speaker from the top cover (3) while removing the cable from its routing path in the top cover (4).

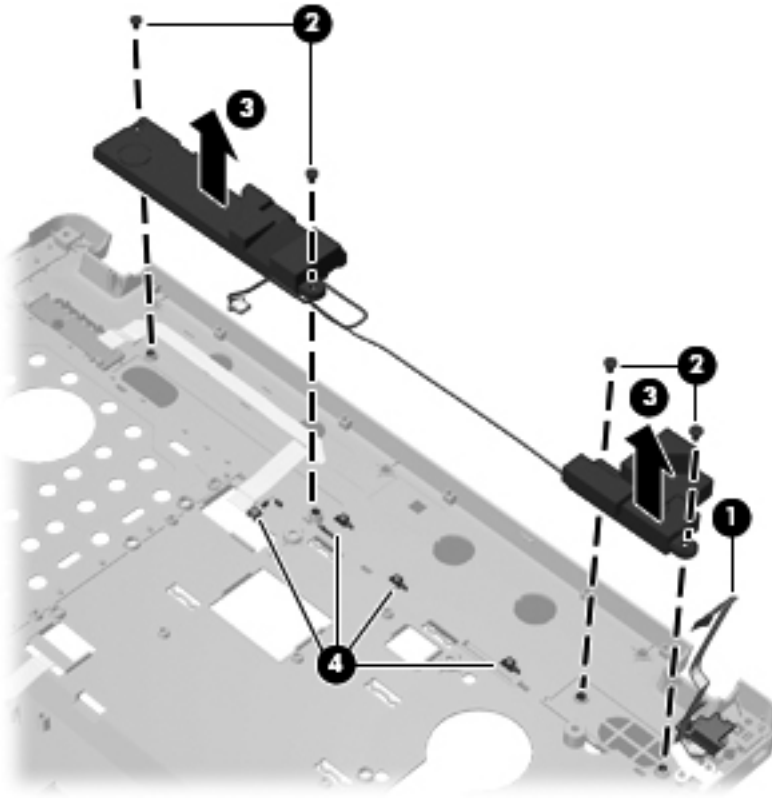

Reverse this procedure to install the speaker assembly.

## Quick Launch board

Description	Spare part number
Quick Launch board for use in 4530s models	646296-001
Quick Launch board for use in 4730s models	646297-001


Before removing the Quick Launch board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 47](#)).
5. Remove the following components:
  - a. Bottom door (see [Bottom door on page 49](#)).
  - b. Optical drive (see [Optical drive on page 50](#))
  - c. Keyboard (see [Keyboard on page 63](#))
  - d. Top cover (see [Top cover on page 65](#))
  - e. Speakers (see [Speaker assembly on page 71](#))

Remove the Quick Launch board:

1. Position the top cover upside-down with the front toward you.
2. Remove the two Phillips PM2.5×5.0 screws **(1)** that secure the board to the top cover.
3. Remove the cable **(2)** from the adhesive that secures it to the top cover.

4. Lift the side of the board (3), slide it out from under the tab, and then remove the board from the top cover (4).

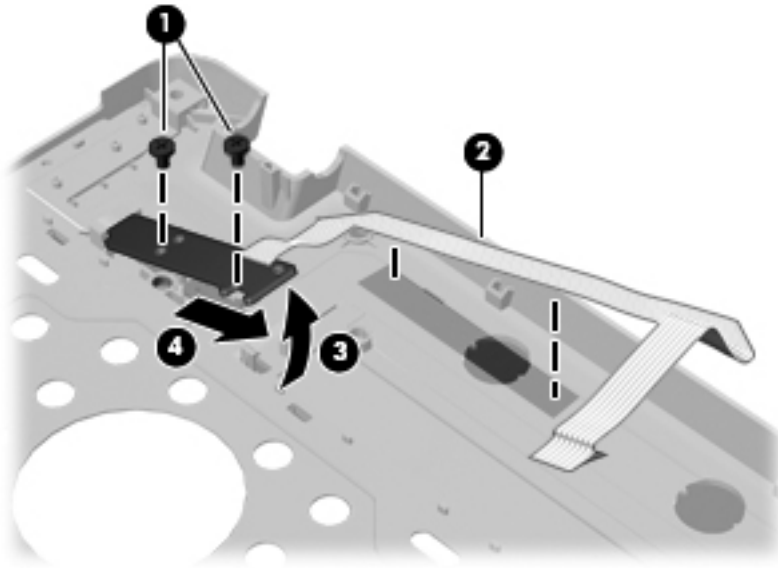

Reverse this procedure to install the Quick Launch board.

## Power button board

Description	Spare part number
Power button board for use in model 4530s	646294-001
Power button board for use in model 4730s	646295-001

Before removing the power button board, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 47](#)).
5. Remove the following components:
  - a. Bottom door (see [Bottom door on page 49](#)).
  - b. Optical drive (see [Optical drive on page 50](#))
  - c. Keyboard (see [Keyboard on page 63](#))
  - d. Top cover (see [Top cover on page 65](#))

Remove the power button board:



**NOTE:** Model 4530s shown below. Power button board appearance differs in model 4730s.

1. Position the top cover upside-down with the front toward you.
2. Remove the Phillips PM2.0×4.0 screw (1) that secures the board to the top cover.
3. Lift the board up at an angle (2), and then remove it from the top cover (3).

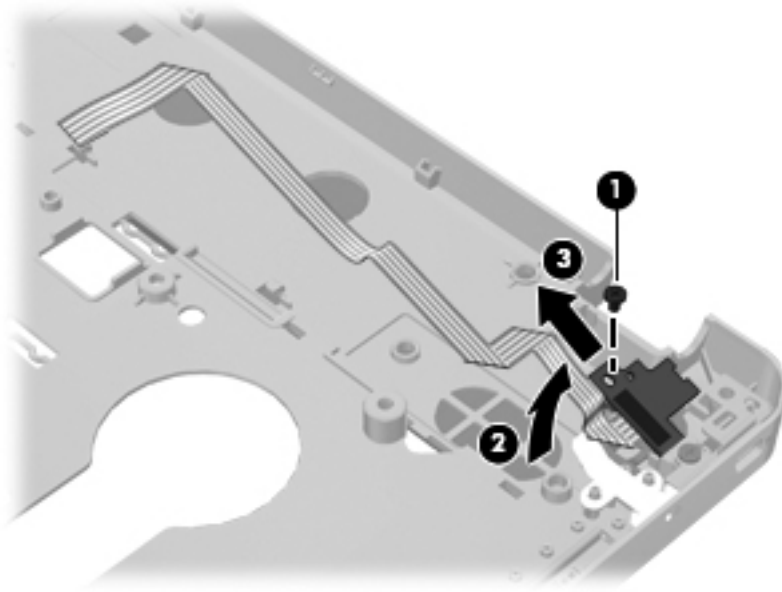

Reverse this procedure to install the power button board.

## Modem module



**NOTE:** The modem module spare part kit does not include a modem module cable. The modem module cable is included in the Cable Kit, spare part number 646303-001 for 4530s models, 646304-001 for 4730s models. See [Cable Kit on page 30](#) for more Cable Kit spare part number information.

Description	Spare part number
Modem module	628824-001


Before removing the modem module, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 47](#)).
5. Remove the following components:
  - a. Bottom door (see [Bottom door on page 49](#)).
  - b. Optical drive (see [Optical drive on page 50](#))
  - c. Keyboard (see [Keyboard on page 63](#))
  - d. Top cover (see [Top cover on page 65](#))

Remove the modem module:

1. Position the computer upright with the front toward you.
2. Remove the two Phillips PM2.5×5.0 screws **(1)** that secures the modem module to the system board.
3. Disconnect the modem module **(2)** from the system board by lifting it straight up.

4. Disconnect the modem module cable (3) from the modem module.

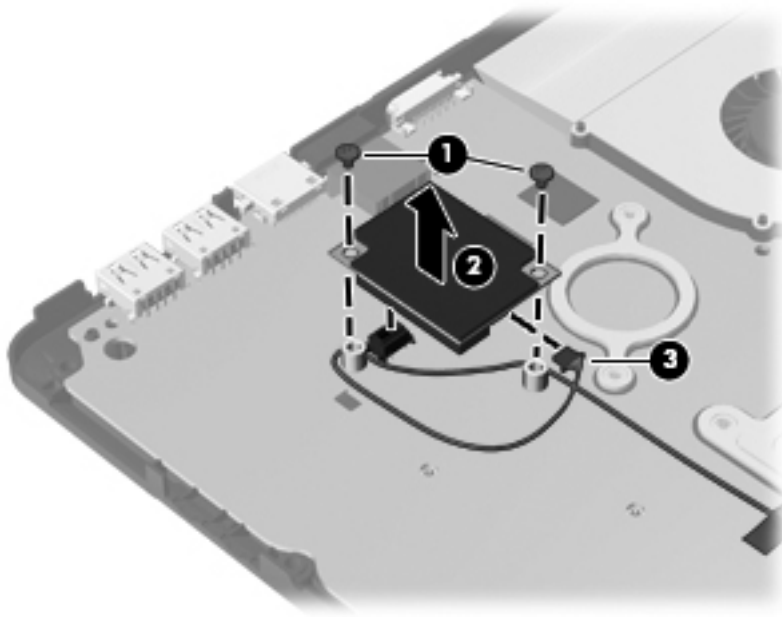

Reverse this procedure to install the modem module.

## Lid switch

Description	Spare part number
Lid switch for use in 4530s models	646289-001
Lid switch for use in 4730s models	646290-001


Before removing the lid switch, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 47](#)).
5. Remove the following components:
  - a. Bottom door (see [Bottom door on page 49](#)).
  - b. Optical drive (see [Optical drive on page 50](#))
  - c. Keyboard (see [Keyboard on page 63](#))
  - d. Top cover (see [Top cover on page 65](#))

Remove the lid switch:

1. Position the computer upright with the front toward you.
2. Lift the system board connector latch **(1)**, and then disconnect the cable **(2)**.
3. Remove the tape **(3)** that secures the board to the computer.

4. Lift the board from the computer (4).

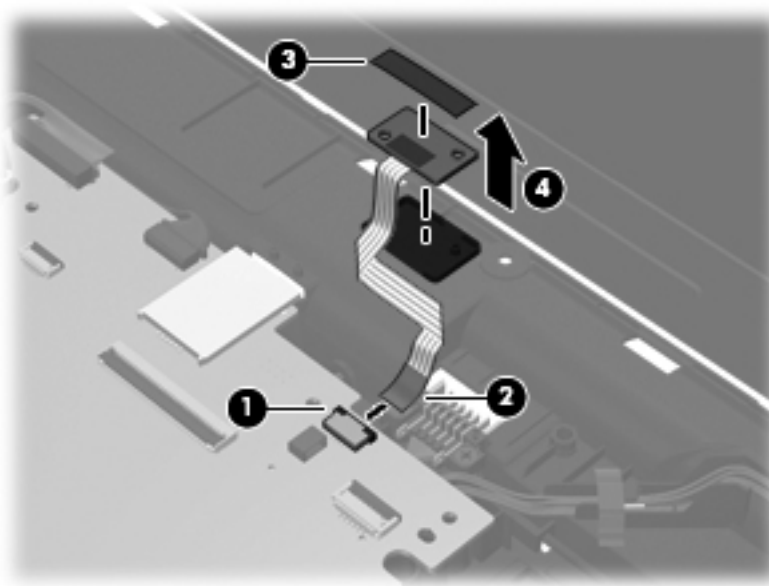

Reverse this procedure to install the lid switch.

## USB board

Description	Spare part number
USB board for use in 4530s models	646287-001
USB board for use in 4730s models	646288-001


Before removing the USB board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 47](#)).
5. Remove the following components:
  - a. Bottom door (see [Bottom door on page 49](#)).
  - b. Optical drive (see [Optical drive on page 50](#))
  - c. Keyboard (see [Keyboard on page 63](#))
  - d. Top cover (see [Top cover on page 65](#))

Remove the USB board:

1. Position the computer upright with the front toward you.
2. Lift the system board connector latch **(1)**, and then disconnect the USB board cable from the system board **(2)**.
3. Remove the tape **(3)** that secures the cable to the computer.
4. Remove the two Phillips PM2.5×5.0 screws **(4)** that secure the USB board to the computer.

5. Lift the board and cable straight up out of the computer (5)

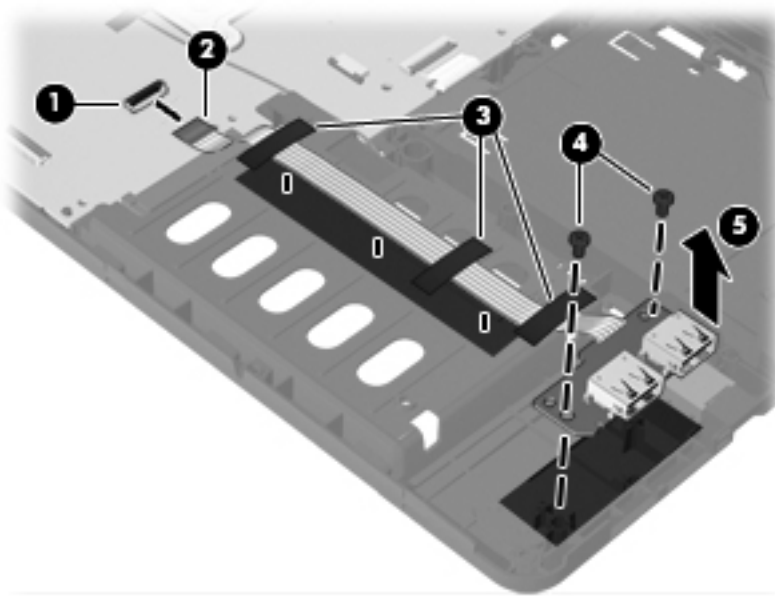

Reverse this procedure to install the USB board.

## Optical drive connector

Description	Spare part number
Optical drive connector	646286-001


Before removing the optical drive connector, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 47](#)).
5. Remove the following components:
  - a. Bottom door (see [Bottom door on page 49](#)).
  - b. Optical drive (see [Optical drive on page 50](#))
  - c. Keyboard (see [Keyboard on page 63](#))
  - d. Top cover (see [Top cover on page 65](#))

Remove the optical drive connector:

1. Position the computer upright with the front toward you.
2. Lift the left side of the connector to disengage it from the computer (1).

3. Lift the optical drive connector from the computer (2).

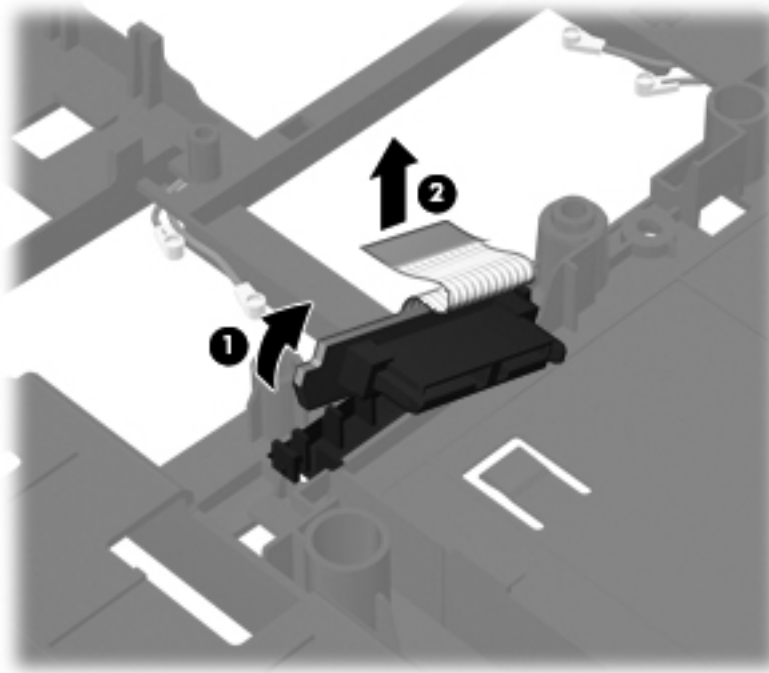

Reverse this procedure to install the optical drive connector.

## RJ-11 jack cable



**NOTE:** The RJ-11 jack cable is included in the Cable Kit, spare part number 646303-001 for 4530s models, 646304-001 for 4730s models.

---


Before removing the RJ-11 jack cable, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 47](#)).
5. Remove the following components:
  - a. Bottom door (see [Bottom door on page 49](#)).
  - b. Optical drive (see [Optical drive on page 50](#))
  - c. Modem module (see [Modem module on page 76](#))
  - d. Keyboard (see [Keyboard on page 63](#))
  - e. Top cover (see [Top cover on page 65](#))
  - f. USB board (see [USB board on page 80](#))

Remove the RJ-11 jack cable:


1. Position the computer upright with the front toward you.
2. Remove the tape **(1)** that secures the cable to the computer.
3. Remove the RJ-11 jack cable from the clips and routing channel **(2)** built into the base enclosure.

4. Remove the RJ-11 jack from the clip built into the base enclosure (3).

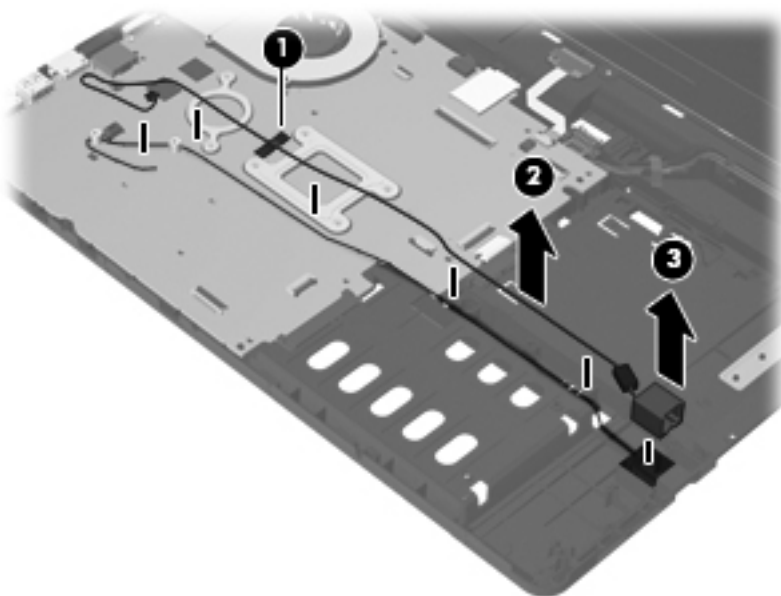

Reverse this procedure to install the RJ-11 jack cable.

## System board

 **NOTE:** All system board spare part kits include replacement thermal material.

Description	Spare part number
<b>System board for use in all countries and regions except for Russia and the People's Republic of China:</b>	
For use in 4530s models with UMA graphics with WWAN and USB 3.0	646245-001
For use in 4530s models with UMA graphics without WWAN and with USB 3.0	646246-001
For use in 4530s models with UMA graphics with WWAN and USB 2.0	
For use in 4530s models with UMA graphics without WLAN and with USB 2.0	
For use in discrete models with 512-MB graphics memory	658342-001
For use in discrete models with 1-GB graphics memory	658343-001
<b>System board for use in only Russia and the People's Republic of China:</b>	
For use in 4530s models with UMA graphics with WWAN	655563-001
For use in 4530s models with UMA graphics without WWAN	655564-001
For use in discrete models with 512-MB graphics memory	655565-001
For use in discrete models with 1-GB graphics memory	655566-001

Before removing the system board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 47](#)).
5. Remove the following components:
  - a. Bottom door (see [Bottom door on page 49](#)).
  - b. Hard drive (see [Hard drive on page 52](#))
  - c. Optical drive (see [Optical drive on page 50](#))
  - d. Modem module (see [Modem module on page 76](#))
  - e. Keyboard (see [Keyboard on page 63](#))
  - f. Top cover (see [Top cover on page 65](#))


When replacing the system board, be sure to remove the following components from the defective system board and install on the replacement system board:

- SIM (see [SIM on page 48](#))
- Memory module (see [Memory modules on page 54](#))
- WLAN module (see [WLAN/Bluetooth combo card on page 58](#))
- WWAN module (see [WWAN module on page 56](#))
- Modem module (see [Modem module on page 76](#))
- Processor (see [Processor on page 97](#))


Remove the system board:

1. Position the computer upright with the front toward you.


2. Disconnect the webcam cable (1) and the display cable (2) from the system board, and remove the cables from the routing clip (3).

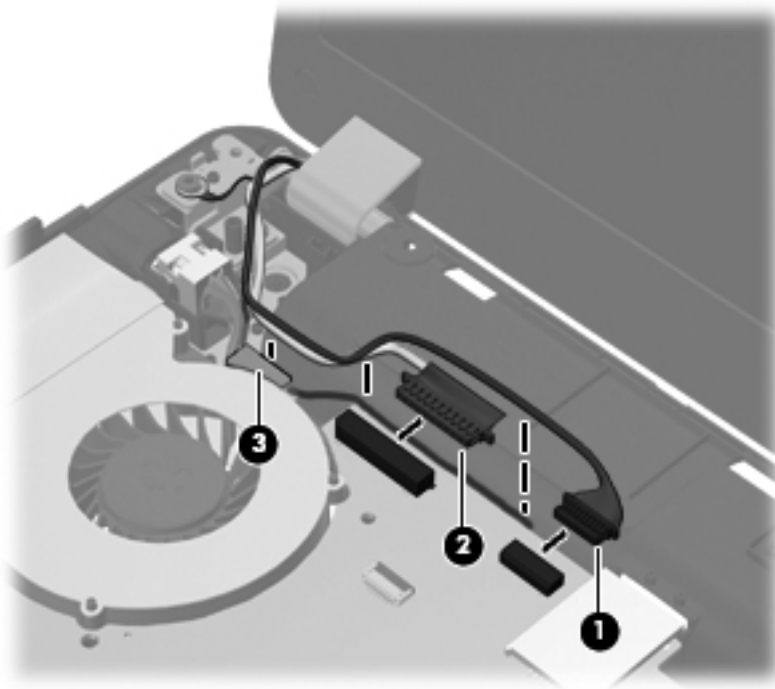


3. If removing the system board from model 4730s, skip to step 6.  
If removing the system board from model 4530s, remove the two Phillips PM2.5×5.0 screws (1) that secure the system board to the base enclosure.
4. Lift the optical drive connector latch (2), and then disconnect the optical drive cable (3).
5. Lift the system board up at an angle (4) to gain access to the cables underneath.

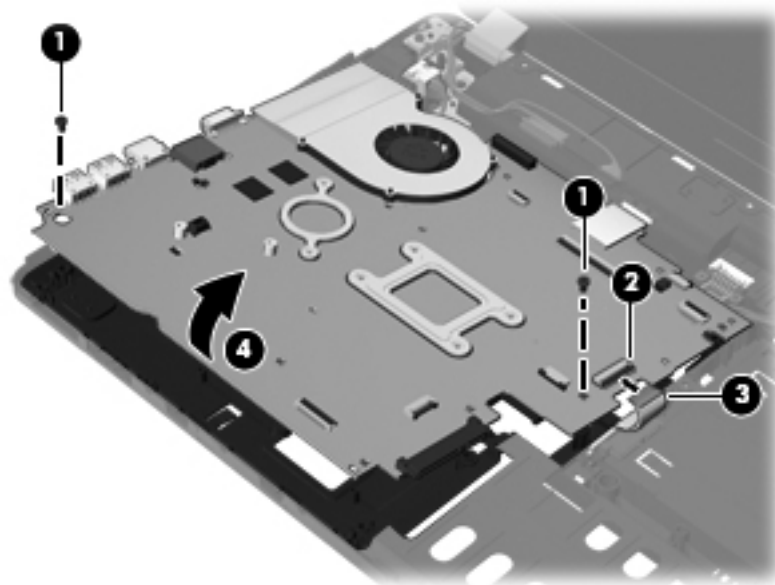

6. If removing the system board from model 4730s, remove the three Torx T8M2.0×5.0 screws (1) that secure the system board to the computer, and the two Torx T8M2.0×5.0 screws (2) that secure the hard drive extension board to the computer.
7. Lift the optical drive connector latch (3), and then disconnect the optical drive cable (4).
8. Lift the right side of the system board upward (5), and then lift it away enough to gain access to the cables underneath (6).

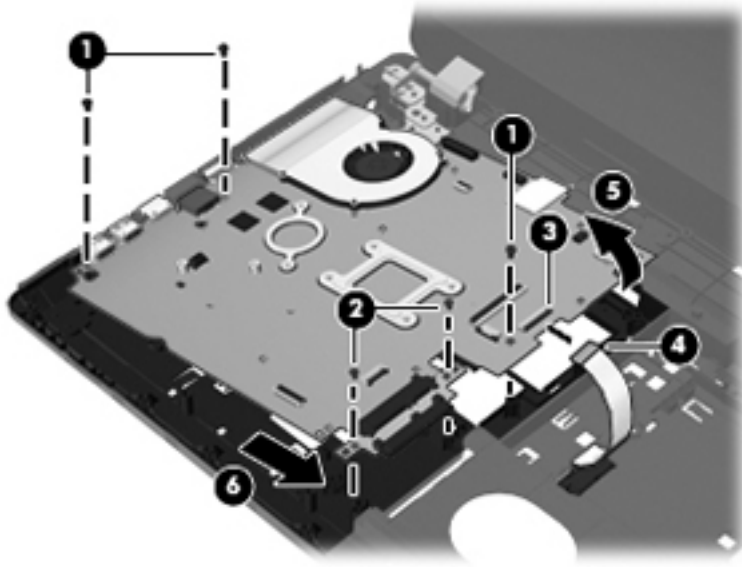

9. On the bottom of the system board, disconnect the battery connector cable (1) from the system board.
10. Disconnect the smaller power cable (2) and the larger power cable (3) from the system board.
11. Lift the system board out of the computer (4).

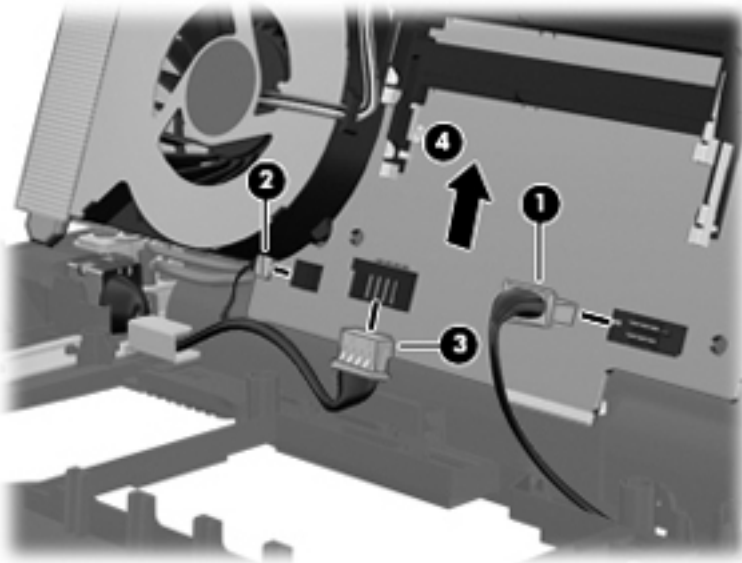

Reverse this procedure to install the system board.

## Hard drive extension board (4730s models)

Description	Spare part number
Hard drive extension board	646291-001


Before removing the hard drive extension board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 47](#)).
5. Remove the following components:
  - a. Bottom door (see [Bottom door on page 49](#)).
  - b. Hard drive (see [Hard drive on page 52](#))
  - c. Optical drive (see [Optical drive on page 50](#))
  - d. WLAN module (see [WLAN/Bluetooth combo card on page 58](#))
  - e. WWAN module (see [WWAN module on page 56](#))
  - f. Fan (see [Fan on page 93](#))
  - g. Heat sink (see [Heat sink on page 95](#))
  - h. Keyboard (see [Keyboard on page 63](#))
  - i. Top cover (see [Top cover on page 65](#))
  - j. System board (see [System board on page 85](#))

Remove the hard drive extension board:

1. Position the system board upright with the right side toward you.

2. Pull the hard drive extension board straight off the system board.

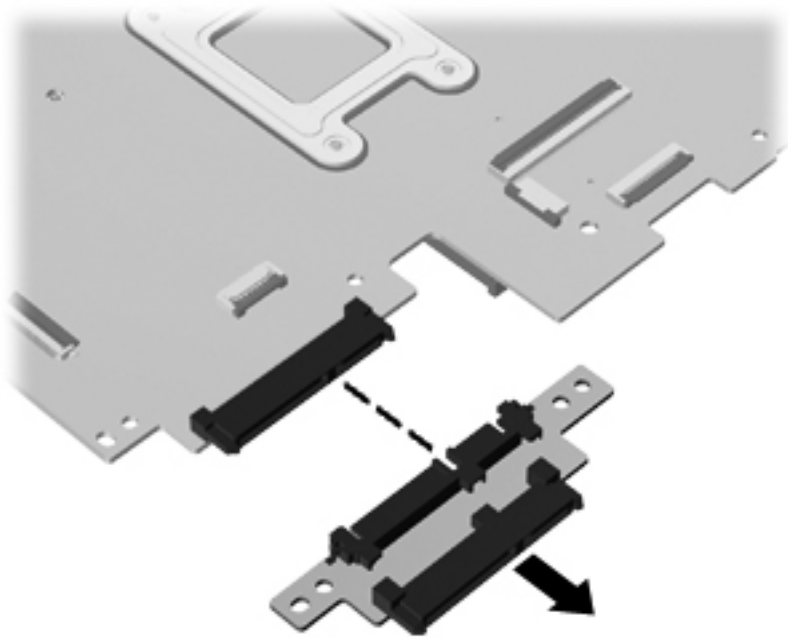

Reverse this procedure to install the hard drive extension board.

## RTC battery

Description	Spare part number
RTC battery	449137-001


Before removing the RTC battery, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 47](#)).
5. Remove the following components:
  - a. Bottom door (see [Bottom door on page 49](#)).
  - b. Hard drive (see [Hard drive on page 52](#))
  - c. Optical drive (see [Optical drive on page 50](#))
  - d. WLAN module (see [WLAN/Bluetooth combo card on page 58](#))
  - e. WWAN module (see [WWAN module on page 56](#))
  - f. Fan (see [Fan on page 93](#))
  - g. Heat sink (see [Heat sink on page 95](#))
  - h. Keyboard (see [Keyboard on page 63](#))
  - i. Top cover (see [Top cover on page 65](#))
  - j. System board (see [System board on page 85](#))

Remove the RTC battery:

1. Position the computer upside-down with the front toward you.
2. Use a screwdriver to loosen the battery from the slot (1).

3. Lift the battery from the system board (2).

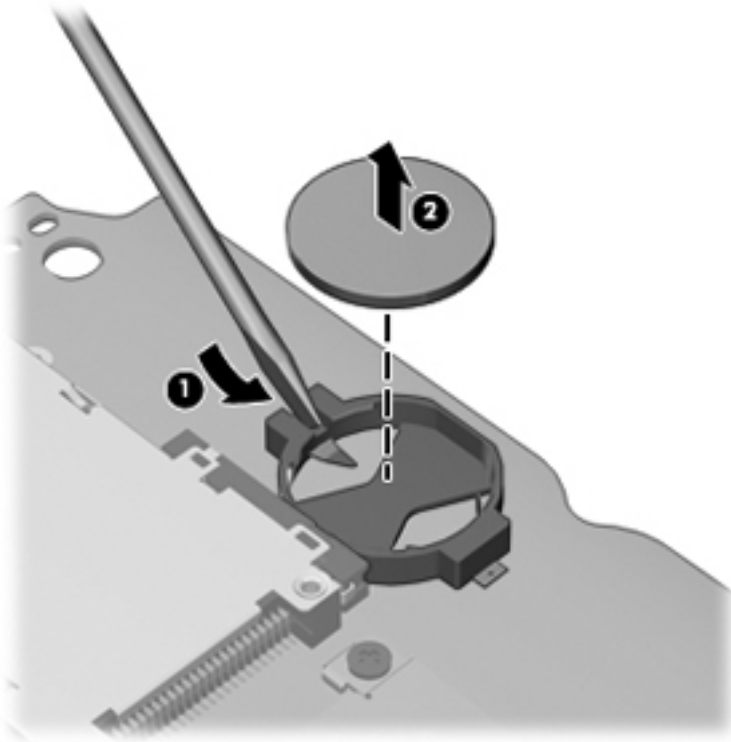

Reverse this procedure to install the RTC battery.

## Fan

Description	Spare part number
Fan	646285-001


Before removing the fan, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 47](#)).
5. Remove the following components:
  - a. Bottom door (see [Bottom door on page 49](#)).
  - b. Hard drive (see [Hard drive on page 52](#))
  - c. Optical drive (see [Optical drive on page 50](#))
  - d. WLAN module (see [WLAN/Bluetooth combo card on page 58](#))
  - e. WWAN module (see [WWAN module on page 56](#))
  - f. Fan (see [Fan on page 93](#))
  - g. Heat sink (see [Heat sink on page 95](#))
  - h. Keyboard (see [Keyboard on page 63](#))
  - i. Top cover (see [Top cover on page 65](#))
  - j. System board (see [System board on page 85](#))

Remove the fan:

1. Position the system board upright.
2. Disconnect the fan cable **(1)** from the system board.
3. Remove the Phillips PM2.5×5.0 screw **(2)** that secures the fan to the system board.

4. Remove the fan from the system board (3).

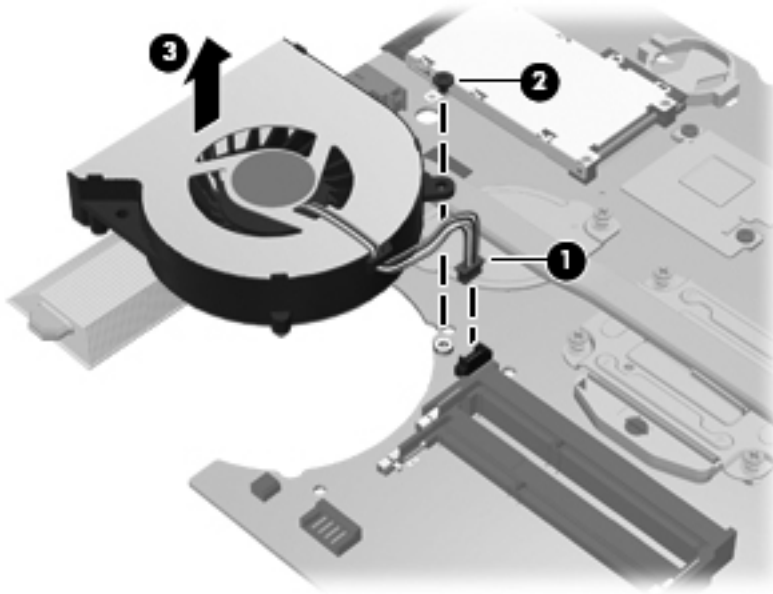

Reverse this procedure to install the fan.



**NOTE:** To properly ventilate the computer, allow at least a 7.6-cm (3-in) clearance on the left side of the computer.

The computer uses an electric fan for ventilation. The fan is controlled by a temperature sensor and is designed to turn on automatically when high temperature conditions exist. These conditions are affected by high external temperatures, system power consumption, power management/battery conservation configurations, battery fast charging, and software requirements. Exhaust air is displaced through the ventilation grill located on the left side of the computer.

## Heat sink

All heat sink spare part kits include replacement thermal material.

Description	Spare part number
Heat sink for use in computers with UMA graphics	646283-001
Heat sink for use in computers with discrete graphics	646284-001


Before removing the heat sink, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 47](#)).
5. Remove the following components:
  - a. Bottom door (see [Bottom door on page 49](#)).
  - b. Hard drive (see [Hard drive on page 52](#))
  - c. Optical drive (see [Optical drive on page 50](#))
  - d. WLAN module (see [WLAN/Bluetooth combo card on page 58](#))
  - e. WWAN module (see [WWAN module on page 56](#))
  - f. Fan (see [Fan on page 93](#))
  - g. Heat sink (see [Heat sink on page 95](#))
  - h. Keyboard (see [Keyboard on page 63](#))
  - i. Top cover (see [Top cover on page 65](#))
  - j. System board (see [System board on page 85](#))
  - k. Fan (see [Fan on page 93](#))


Remove the heat sink:


1. Position the system board upright.
2. To remove the discrete heat sink, in the order indicated, loosen the six captive Phillips screws **(1) — (6)** that secure the heat sink to the system board.


3. Remove the heat sink from the system board (7).

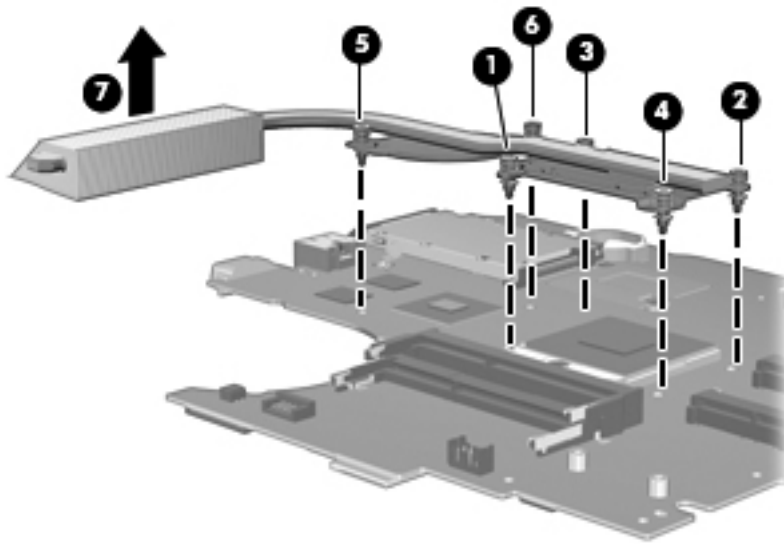


4. To remove the UMA heat sink, in the order indicated, loosen the four captive Phillips screws (1) — (4) that secure the heat sink to the system board.
5. Remove the heat sink from the system board (5).

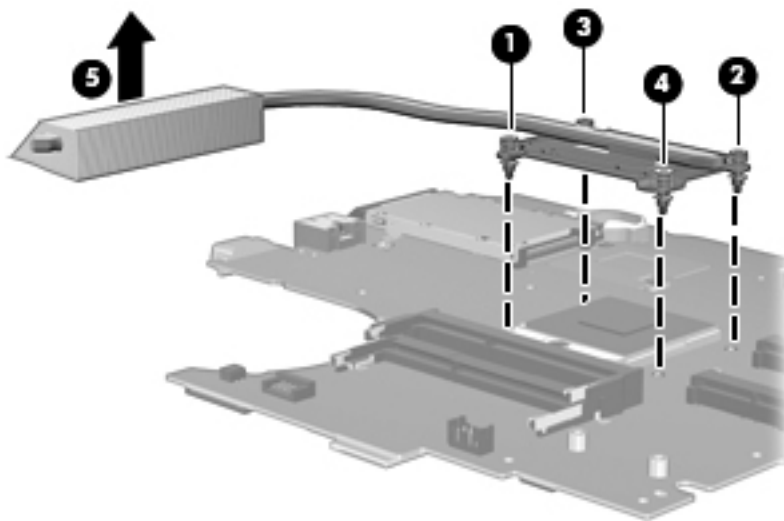

 **NOTE:** For discrete models, thoroughly clean thermal material from the surfaces of the system board components (1)(3) and the heat sink (2)(4) each time you remove the heat sink. All heat sink and processor spare part kits include thermal material.

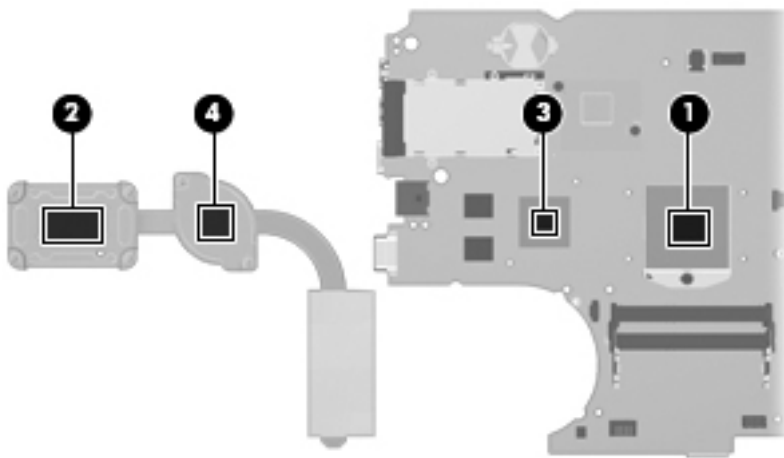

**NOTE:** For UMA models, thoroughly clean thermal material from the surface of the system board (1) and heat sink (2) each time you remove the heat sink. All heat sink and processor spare part kits include thermal material.

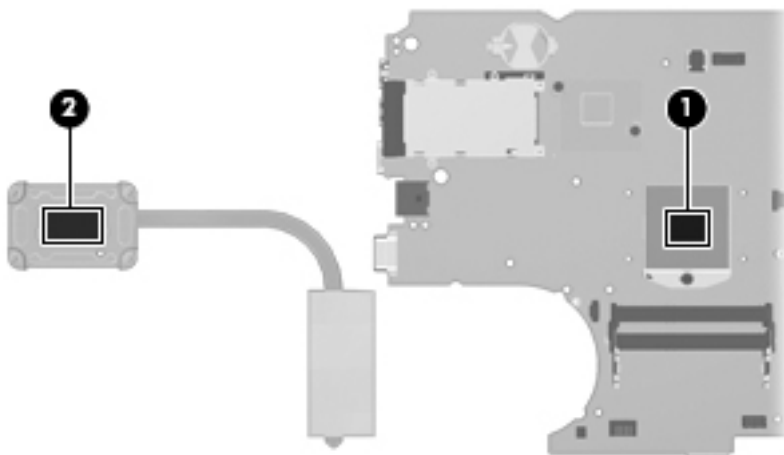

Reverse this procedure to install the heat sink.

## Processor

**NOTE:** All processor spare part kits include replacement thermal material.

Description	Spare part number
<b>Intel Core i7 processor, Quad Core</b>	
Intel Core i7 processor, 2630QM, 2.00-GHz (Turbo up to 2.90) processor 6-MB L3 cache, 8 threads	635501-001
<b>Intel Core i7 processor, Dual Core</b>	
2620M, 2.7-GHz (turbo up to 3.4-GHz) processor with 4-MB L3 cache	631252-001
<b>Intel Core i5 processors, Dual Core</b>	
2540M, 2.6-GHz (turbo up to 3.3-GHz) processor with 3-MB L3 cache	631255-001
2520M, 2.5-GHz (turbo up to 3.2-GHz) processor with 3-MB L3 cache	631253-001
2430M, 2.4-GHz (turbo up to 3.0-GHz) processor 3-MB L3 cache	653341-001


Description	Spare part number
2410M, 2.3-GHz (turbo up to 2.9-GHz) processor with 3-MB L3 cache	638039-001
<b>Intel Core i3 processors, Dual Core</b>	
2350M, 2.3-GHz processor 3-MB L3 cache	653340-001
2330M, 2.2-GHz processor 3-MB L3 cache	653339-001
2310M, 2.1-GHz processor with 3-MB L3 cache	638037-001
<b>Intel Pentium processors</b>	
B950, 2.1-GHz, with 2-MB L3 cache	653338-001
B940, 2.0-GHz, with 2-MB L3 cache	653337-001
<b>Intel Celeron processor, Dual Core</b>	
B810, 1.6-GHz, with 2-MB L3 cache	646760-001


Before removing the processor, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 47](#)).
5. Remove the following components:
  - a. Bottom door (see [Bottom door on page 49](#)).
  - b. Hard drive (see [Hard drive on page 52](#))
  - c. Optical drive (see [Optical drive on page 50](#))
  - d. WLAN module (see [WLAN/Bluetooth combo card on page 58](#))
  - e. WWAN module (see [WWAN module on page 56](#))
  - f. Fan (see [Fan on page 93](#))
  - g. Heat sink (see [Heat sink on page 95](#))
  - h. Keyboard (see [Keyboard on page 63](#))
  - i. Top cover (see [Top cover on page 65](#))
  - j. System board (see [System board on page 85](#))
  - k. Fan (see [Fan on page 93](#))
  - l. Heat sink (see [Heat sink on page 95](#))

Remove the processor:

1. Position the computer upside-down with the front toward you.
2. Use a flat-bladed screwdriver to turn the processor locking screw **(1)** one-half turn counterclockwise until you hear a click.
3. Lift the processor **(2)** straight up and remove it.

 **NOTE:** The gold triangle **(3)** on the processor must be aligned with the triangle **(4)** embossed on the processor slot when you install the processor.

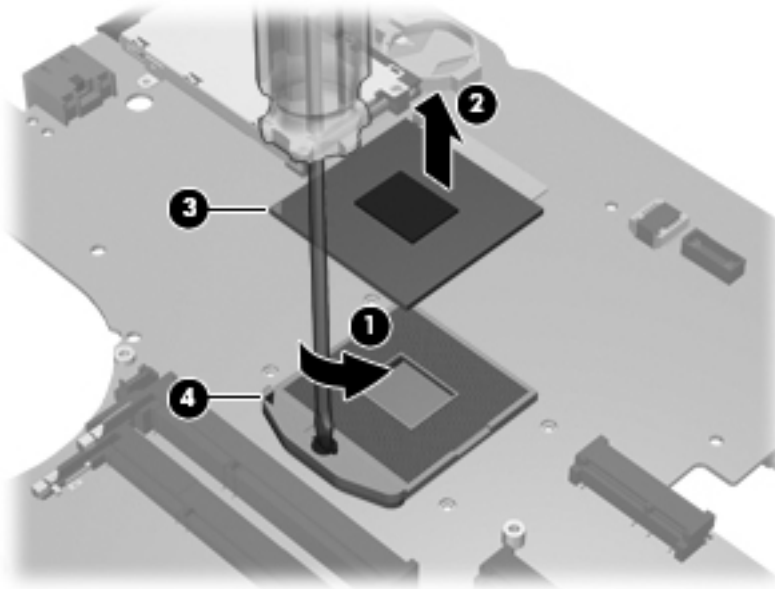

Reverse this procedure to install the processor.

## Power cable

The power cable is included in the Cable Kit, spare part number 646303-001 for 4530s models, 646304-001 for 4730s models.


Before removing the power cable, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 47](#)).
5. Remove the following components:
  - a. Bottom door (see [Bottom door on page 49](#)).
  - b. Hard drive (see [Hard drive on page 52](#))
  - c. Optical drive (see [Optical drive on page 50](#))
  - d. WLAN module (see [WLAN/Bluetooth combo card on page 58](#))
  - e. WWAN module (see [WWAN module on page 56](#))
  - f. Fan (see [Fan on page 93](#))
  - g. Heat sink (see [Heat sink on page 95](#))
  - h. Keyboard (see [Keyboard on page 63](#))
  - i. Top cover (see [Top cover on page 65](#))
  - j. System board (see [System board on page 85](#))

Remove the power cable:

1. Position the computer upright with the front toward you.
2. Remove the cable from the routing clamp **(1)**.

3. Lift the power cable assembly from the computer (2).

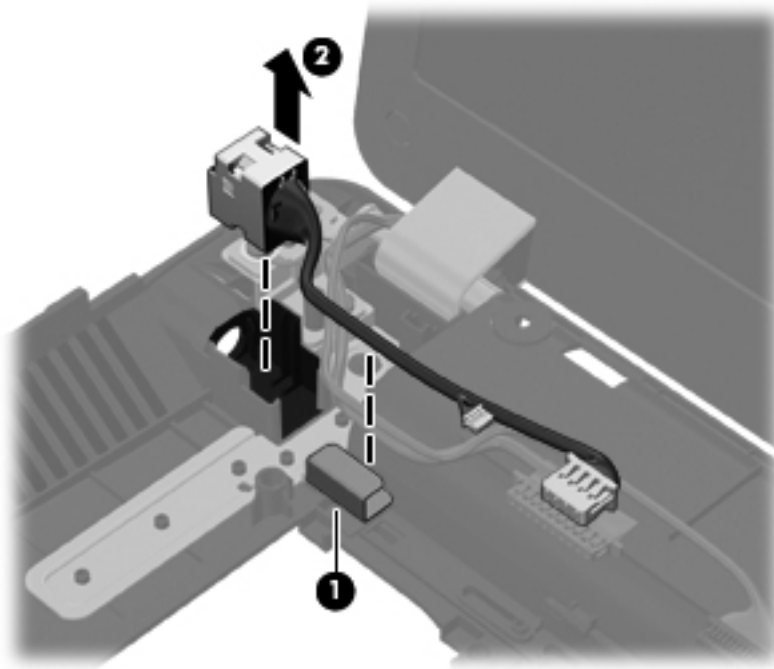

Reverse this procedure to install the power cable.

## Display assembly

All display assemblies include WLAN antenna transceivers and cables. WWAN models include 2 WWAN antenna transceivers and cables.

For a list of individual display spare parts, see [Display components on page 27](#).

Description	Spare part number
For use in silver HP ProBook 4530s models:	
• 39.6-cm (15.6-inch) HD, anti-glare, without webcam	647001-001
• 39.6-cm (15.6-inch) HD, anti-glare, with webcam	647002-001
• 39.6-cm (15.6-inch) HD, anti-glare, with webcam and WWAN	647003-001
• 39.6-cm (15.6-inch) HD, BrightView, without webcam	647004-001
• 39.6-cm (15.6-inch) HD, BrightView, with webcam	647005-001
• 39.6-cm (15.6-inch) HD, BrightView, with webcam and WWAN	647006-001
• 39.6-cm (15.6-inch) HD+, anti-glare, without webcam	647007-001
• 39.6-cm (15.6-inch) HD+, anti-glare, with webcam	647008-001
For use in silver HP ProBook 4730s models:	
• 43.9-cm (17.3-inch), HD+, anti-glare, without webcam	647151-001
• 43.9-cm (17.3-inch), HD+, anti-glare, with webcam	647152-001


Before removing the display assembly, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 47](#)).
5. Remove the following components:
  - a. Bottom door (see [Bottom door on page 49](#)).
  - b. WLAN module (see [WLAN/Bluetooth combo card on page 58](#))
  - c. WWAN module (see [WWAN module on page 56](#))
  - d. Keyboard (see [Keyboard on page 63](#))
  - e. Top cover (see [Top cover on page 65](#))

Remove the display assembly:

1. Position the computer upright with the front toward you.
2. Open the computer as far as possible.


3. If necessary, disconnect the webcam cable (1) and display cable (2) from the system board, and then remove the cables from the clip (3).

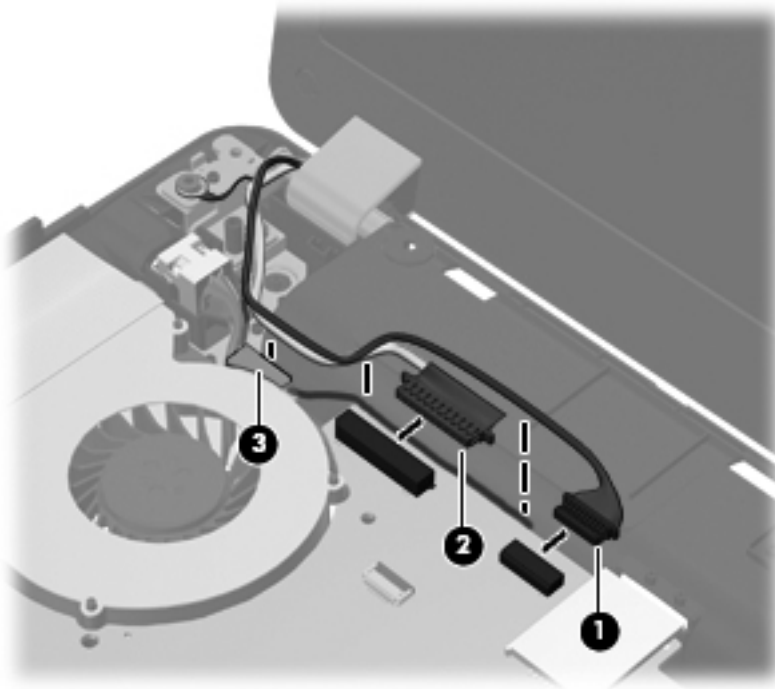

4. Remove the four Phillips PM2.5×7.0 screws (1) from the hinges, and then remove the display from the computer (2).


When installing the display assembly, be sure that the wireless antenna cables are routed and arranged properly.

Failure to properly route the antennas can result in degradation of the computer's WLAN and WWAN performance.

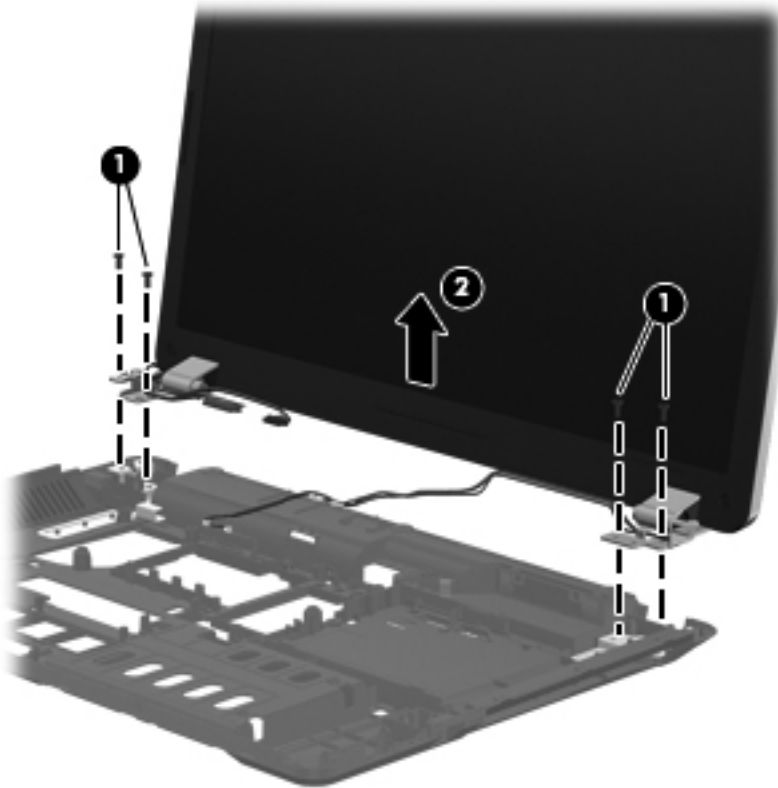

5. If you need to remove the hinge covers from the display hinges, pull the hinges straight up and off the display to remove them.

Display hinge covers are available using spare part number 646281-001 for 4530s models and 646282-001 for 4730s models.

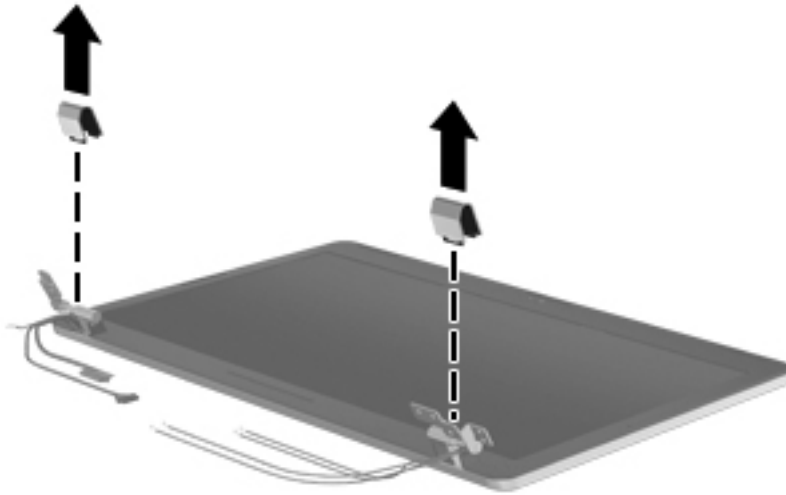

6. To replace the display bezel, remove the two rubber screw covers **(1)** and the two Torx T8M2.5×6.0 screws **(2)** in the bottom corners of the display bezel.

7. Flex the top **(3)** of the bezel, the inside edges of the left and right sides **(4)**, and then the bottom **(5)** of the bezel until it disengages from the display enclosure.


The bezel is available using the following spare part numbers:

646265-001: 4530s models without a webcam

646266-001: 4530s models with a webcam

646267-001: 4730s models without a webcam

646268-001: 4730s models with a webcam

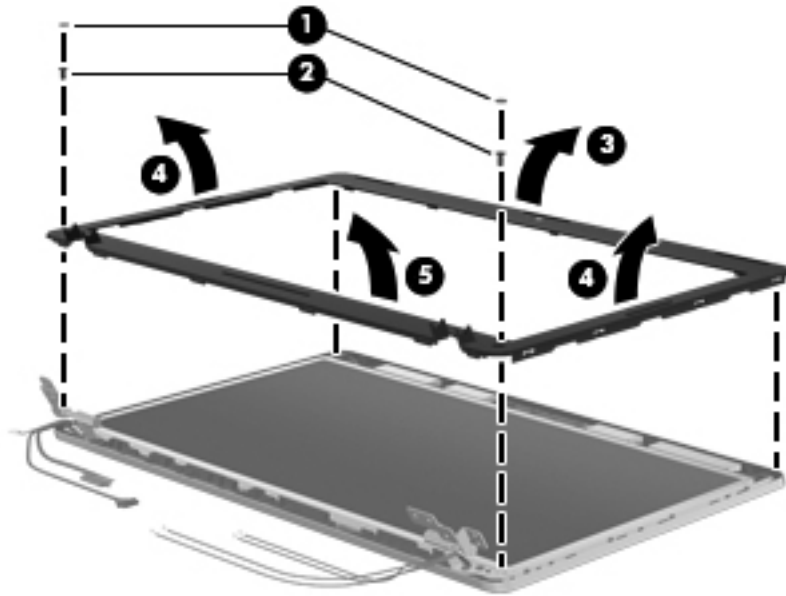


8. Remove the display bezel.

9. If it is necessary to replace the webcam module (shown in the following image) or microphone module from the display enclosure, disconnect the cable from the module **(1)**, and then gently pull the module away from the double-sided tape on the display enclosure **(2)**.

The webcam module is available using spare part number 642795-001.


The microphone module is removed using the same procedure and is available using spare part number 642797-001.

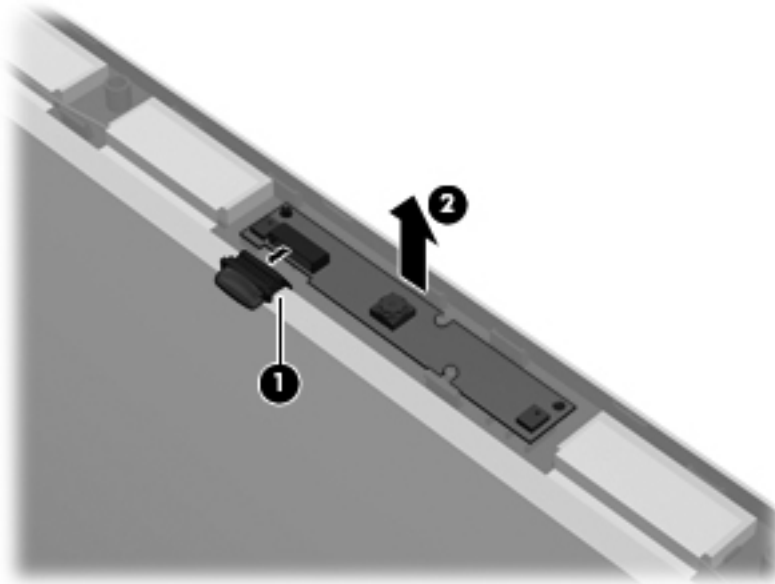

10. If it is necessary to replace the display panel, remove the four Phillips PM2.5×5.0 screws **(1)** at the bottom and two Phillips PM2.5×5.0 broadhead screws **(2)** at the top that secure the panel to the display enclosure.
11. Rotate the top of the panel upward **(3)**.


The display panel is available using the following spare part numbers:

- 646311-001: 39.6-cm (15.6-inch) HD, anti-glare
- 646312-001: 39.6-cm (15.6-inch) HD, Brightview
- 647011-001: 39.6-cm (15.6-inch) HD+
- 646313-001: 43.9-cm (17.3-inch) HD+, anti-glare

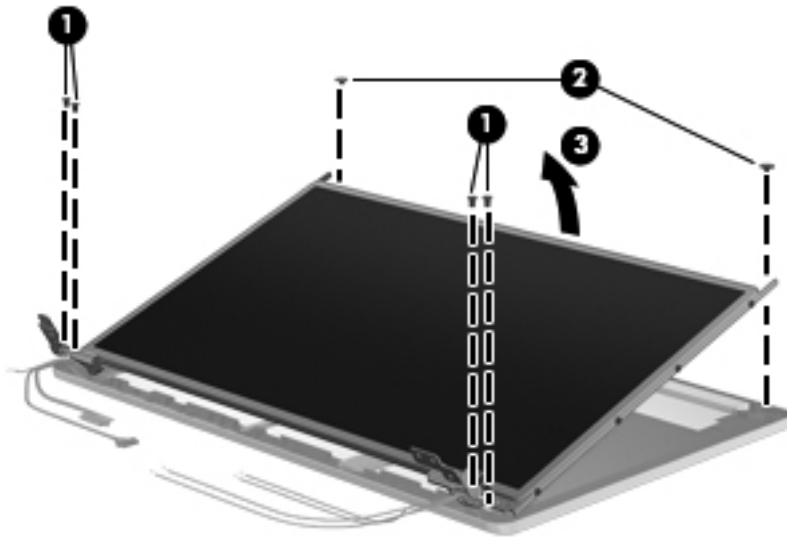

12. Disconnect the display panel cable from the back of the display panel by lifting the tape over the connector (1), and then disconnecting the cable from the panel (2).


The display cable is available using spare part number 605766-001 for models without a webcam, 646273-001 for 4530s HD+ models, 646274-001 for 4730s models.

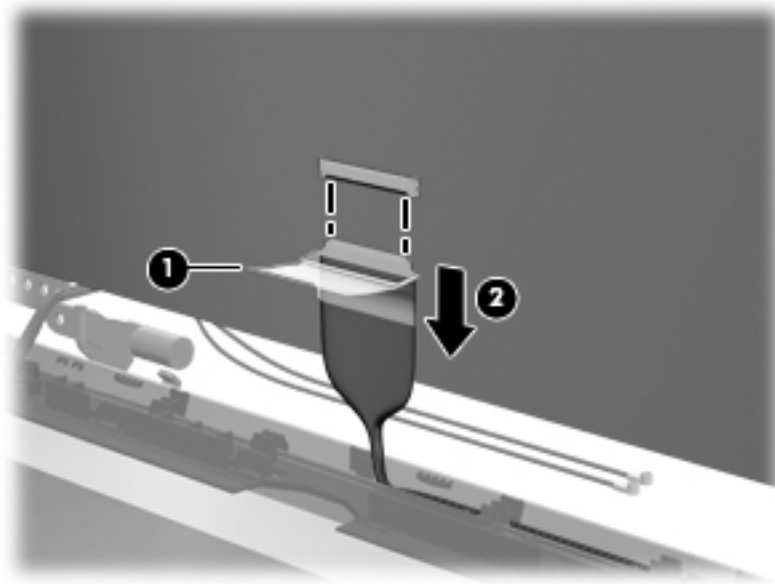

13. If it is necessary to replace the display hinges, remove the four Phillips PM2.5×3.0 screws (1) that secure each display hinge to the display panel.


14. Remove the display hinges (2).

Display hinges are available using spare part number 646279-001 for 4530s models and 646280-001 for 4730s models.

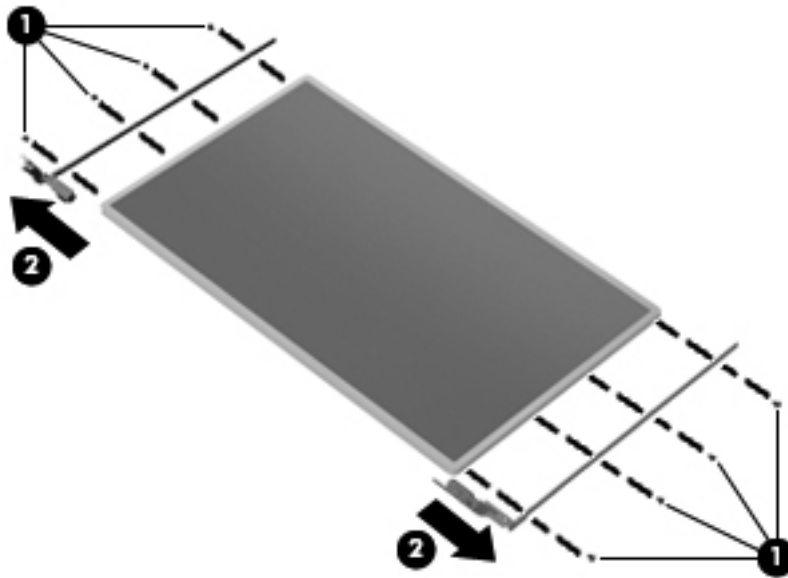

15. If you need to remove the WLAN or WWAN antennas, lift the WLAN antenna cables (1) or WWAN antenna cables (2) from the clips and routing paths (3) built into the display enclosure.

The WLAN antennas are available using spare part number 646276-001 for 4530s models, 646277-001 for 4730s models, and the WWAN antennas are available using spare part number 646278-001.

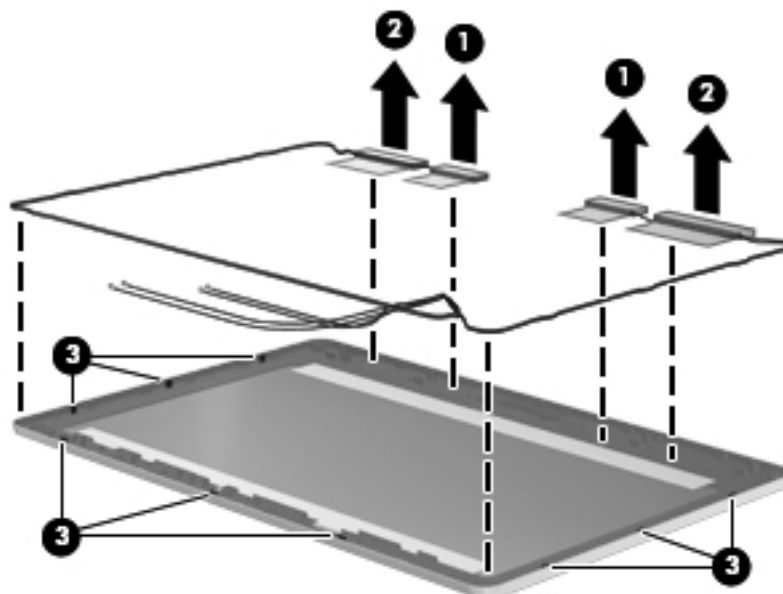


**CAUTION:** When installing the display assembly, be sure that the wireless antenna cables are routed and arranged properly.

Failure to properly route the antennas can result in degradation of the computer's wireless performance.

16. To remove the display cable (1) or webcam cable (2) from the display enclosure, remove the cable from the clips (3) and routing paths in the display enclosure.


The display cable is available using spare part number 605766-001 for models without a webcam, 646273-001 for 4530s HD+ models, 646274-001 for 4730s models. The webcam cable is available using spare part number 646275-001.

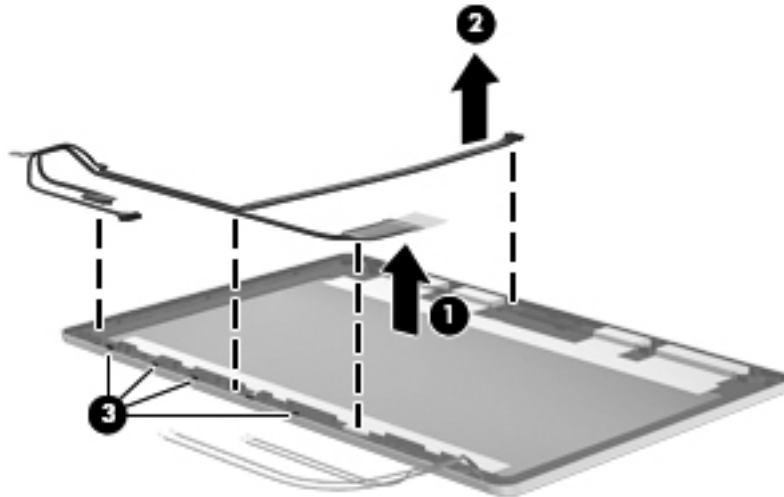


Reverse this procedure to reassemble and install the display assembly.

Note the correct cable routing paths for the antenna cables. Make sure you properly route all cables when assembling the computer as shown in the following images.

#### **Cable routing path – top**

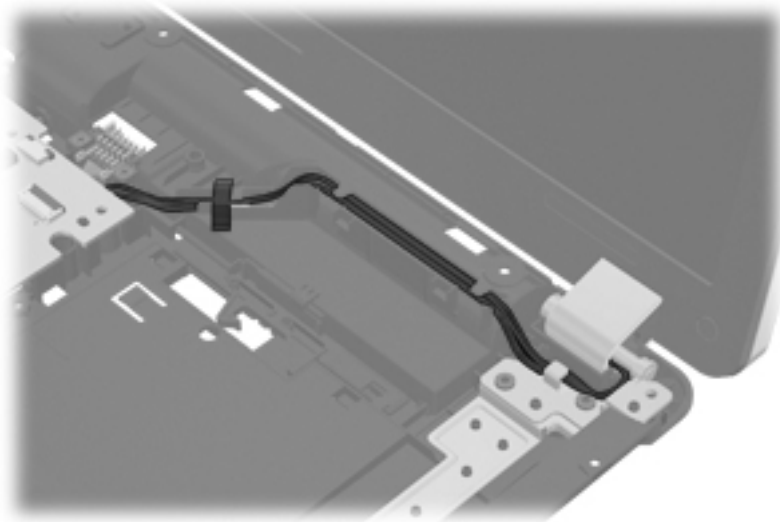

#### **Cable routing path – bottom**

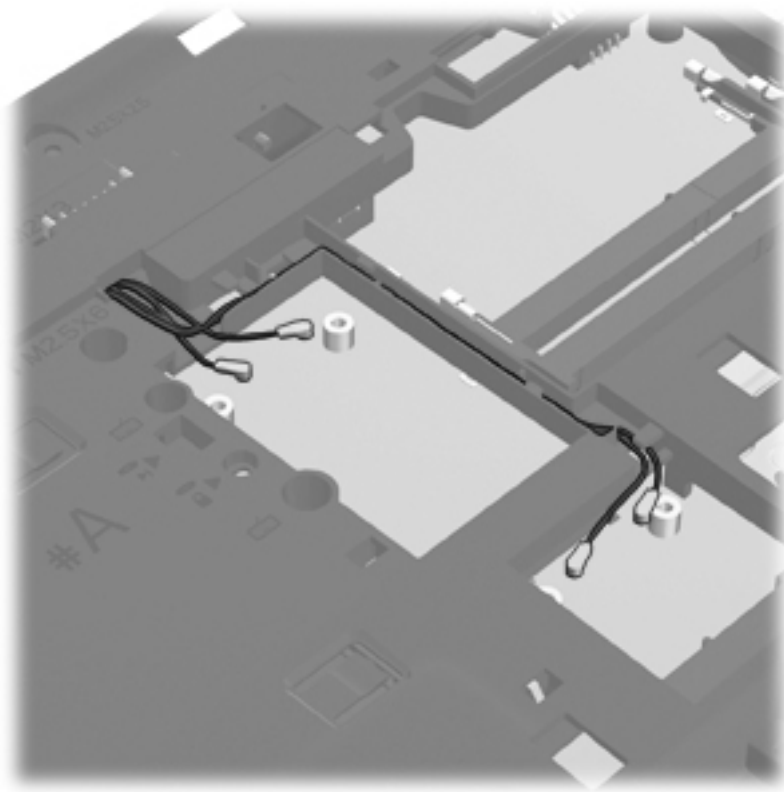


---

# 5 Computer Setup (BIOS) and System Diagnostics

## Using Computer Setup

Computer Setup, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Computer Setup includes settings for the types of devices installed, the startup sequence of the computer, and the amount of system and extended memory.


---

 **NOTE:** Use extreme care when making changes in Computer Setup. Errors can prevent the computer from operating properly.

---

## Starting Computer Setup

---

 **NOTE:** An external keyboard or mouse connected to a USB port can be used with Computer Setup only if USB legacy support is enabled.

---

To start Computer Setup, follow these steps:


1. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
2. Press **f10** to enter Computer Setup.

## Navigating and selecting in Computer Setup

To navigate and select in Computer Setup, follow these steps:

1. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
  - To select a menu or a menu item, use the tab key and the keyboard arrow keys and then press **enter**, or use a pointing device to click the item.
  - To scroll up and down, click the up arrow or the down arrow in the upper-right corner of the screen, or use the up arrow key or the down arrow key.
  - To close open dialog boxes and return to the main Computer Setup screen, press **esc**, and then follow the on-screen instructions.

---

 **NOTE:** You can use either a pointing device (TouchPad, pointing stick, or USB mouse) or the keyboard to navigate and make selections in Computer Setup.

---

2. Press **f10** to enter Computer Setup.

To exit Computer Setup menus, choose one of the following methods:

- To exit Computer Setup menus without saving your changes:

Click the **Exit** icon in the lower-left corner of the screen, and then follow the on-screen instructions.

– or –

Use the tab key and the arrow keys to select **File > Ignore Changes and Exit**, and then press [enter](#).

- To save your changes and exit Computer Setup menus:

Click the **Save** icon in the lower-left corner of the screen, and then follow the on-screen instructions.

– or –

Use the tab key and the arrow keys to select **File > Save Changes and Exit**, and then press [enter](#).

Your changes go into effect when the computer restarts.

## Restoring factory settings in Computer Setup



**NOTE:** Restoring defaults will not change the hard drive mode.

To return all settings in Computer Setup to the values that were set at the factory, follow these steps:

1. Turn on or restart the computer, and then press [esc](#) while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
2. Press [f10](#) to enter Computer Setup.
3. Use a pointing device or the arrow keys to select **File > Restore Defaults**.
4. Follow the on-screen instructions.
5. To save your changes and exit, click the **Save** icon in the lower-left corner of the screen, and then follow the on-screen instructions.

– or –

Use the arrow keys to select **File > Save Changes and Exit**, and then press [enter](#).

Your changes go into effect when the computer restarts.



**NOTE:** Your password settings and security settings are not changed when you restore the factory settings.

## Updating the BIOS

Updated versions of the BIOS may be available on the HP Web site.

Most BIOS updates on the HP Web site are packaged in compressed files called *SoftPaqs*.

Some download packages contain a file named *Readme.txt*, which contains information regarding installing and troubleshooting the file.

### Determining the BIOS version

To determine whether available BIOS updates contain later BIOS versions than those currently installed on the computer, you need to know the version of the system BIOS currently installed.


BIOS version information (also known as *ROM date* and *System BIOS*) can be displayed by pressing **fn+esc** (if you are already in Windows) or by using Computer Setup.

1. Start Computer Setup.
2. Use a pointing device or the arrow keys to select **File > System Information**.
3. To exit Computer Setup without saving your changes, click the **Exit** icon in the lower-left corner of the screen, and then follow the on-screen instructions.

– or –

Use the tab key and the arrow keys to select **File > Ignore Changes and Exit**, and then press **enter**.

### Downloading a BIOS update

 **CAUTION:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:

Do not disconnect power from the computer by unplugging the power cord from the AC outlet.

Do not shut down the computer or initiate Sleep or Hibernation.

Do not insert, remove, connect, or disconnect any device, cable, or cord.

1. Select **Start > Help and Support > Maintain**.
2. Follow the on-screen instructions to identify your computer and access the BIOS update you want to download.
3. At the download area, follow these steps:
  - a. Identify the BIOS update that is later than the BIOS version currently installed on your computer. Make a note of the date, name, or other identifier. You may need this information to locate the update later, after it has been downloaded to your hard drive.
  - b. Follow the on-screen instructions to download your selection to the hard drive.

Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.



---

**NOTE:** If you connect your computer to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

---

BIOS installation procedures vary. Follow any instructions that are displayed on the screen after the download is complete. If no instructions are displayed, follow these steps:

1. Open Windows Explorer by selecting **Start > Computer**.
2. Double-click your hard drive designation. The hard drive designation is typically Local Disk (C:).
3. Using the hard drive path you recorded earlier, open the folder on your hard drive that contains the update.
4. Double-click the file that has an .exe extension (for example, *filename.exe*).

The BIOS installation begins.

5. Complete the installation by following the on-screen instructions.



---

**NOTE:** After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

---

## Using System Diagnostics

System Diagnostics allows you to run diagnostic tests to determine if the computer hardware is functioning properly. The following diagnostic tests are available in System Diagnostics:

- **Start-up test**—This test analyzes the main computer components that are required to start the computer.
- **Run-in test**—This test repeats the start-up test and checks for intermittent problems that the start-up test does not detect.
- **Hard disk test**—This test analyzes the physical condition of the hard drive, and then checks all data in every sector of the hard drive. If the test detects a damaged sector, it attempts to move the data to a good sector.
- **Memory test**—This test analyzes the physical condition of the memory modules. If it reports an error, replace the memory modules immediately.
- **Battery test**—This test analyzes the condition of the battery. If the battery fails the test, contact HP Customer Support to report the issue and purchase a replacement battery.

You can also view system information and error logs in the System Diagnostics window.

To start System Diagnostics:

1. Turn on or restart the computer. While the “Press the ESC key for Startup Menu” message is displayed in the lower-left corner of the screen, press **esc**. When the Startup Menu is displayed, press **f2**.
2. Click the diagnostic test you want to run, and then follow the on-screen instructions.



---

**NOTE:** If you need to stop a diagnostics test while it is running, press **esc**.

---

# 6 Specifications

## Computer specifications

	Metric	U.S.
<b>Dimensions, 4530s models</b>		
Length	25.6 cm	10.1 in
Width	37.5 cm	14.8 in
Height (front to rear)	2.9 to 3.6 cm	1.1 to 1.4 in
<b>Weight</b> (equipped with optical drive, 1 DIMM, hard drive, optical drive, WLAN module, 6 cell battery)	2.5 kg	5.5 lbs
<b>Dimensions, 4730s models</b>		
Length	28.0 cm	11.0 in
Width	41.4 cm	16.3 in
Height (front to rear)	2.9 to 3.6 cm	1.1 to 1.4 in
<b>Weight</b> (equipped with optical drive, 1 DIMM, hard drive, optical drive, WLAN module, 6 cell battery)	3.1 kg	6.8 lbs
<b>Input power</b>		
Operating voltage	19.0 V dc @ 4.74 A – 90 W or 18.5 V dc @ 3.5 A - 65 W	
Operating current	4.74 A or 3.5 A	
<b>Temperature</b>		
Operating (not writing to optical disc)	0°C to 35°C	32°F to 95°F
Operating (writing to optical disc)	5°C to 35°C	41°F to 95°F
Nonoperating	-20°C to 60°C	-4°F to 140°F
<b>Relative humidity</b>		
Operating	10% to 90%	
Nonoperating	5% to 95%	
<b>Maximum altitude</b> (unpressurized)		
Operating (14.7 to 10.1 psia)	-15 m to 3,048 m	50 ft to 10,000 ft
Nonoperating (14.7 to 4.4 psia)	-15 m to 12,192 m	-50 ft to 40,000 ft
<b>Shock</b>		

	Metric	U.S.
Operating	125 g, 2 ms, half-sine	
Nonoperating	200 g, 2 ms, half-sine	
<b>Random vibration</b>		
Operating	0.75 g zero-to-peak, 10 Hz to 500 Hz, 0.25 oct/min sweep rate	
Nonoperating	1.50 g zero-to-peak, 10 Hz to 500 Hz, 0.5 oct/min sweep rate	
<b>NOTE:</b> Applicable product safety standards specify thermal limits for plastic surfaces. The computer operates well within this range of temperatures.		

## 39.6-cm (15.6-in), HD+ display specifications

	Metric	U.S.
Active diagonal size	39.6-cm	15.6-in
Resolution	1600x900 (HD+)	
Active area	344.16x193.59	
PPI	118	
Surface treatment	Anti-glare	
Contrast ratio	300:1 (typical) – Anti-glare 500:1 – BrightView	
Response time	8 ms	
Brightness	200 nits (typical)	
Viewing angle	WVA	
Backlight	LED	
Luminance uniformity @ 13 points	1.4 (typ), 1.6 (max)	
Lifetime (1/2 luminance)	12,000 hours	
Color coordinate (white)	(0.313, 0.329)	
Color tolerance (R, G, B)	+/- 0.03	
Color gamut	60% (typical)	

## 39.6-cm (15.6-in), HD display specifications

	Metric	U.S.
Active diagonal size	39.6-cm	15.6-in
Resolution	1366x768 (HD)	
Active area	344.232x193.536	

	<b>Metric</b>	<b>U.S.</b>
PPI	100	
Surface treatment	Anti-glare or BrightView	
Contrast ratio	300:1 (typical) – Anti-glare 500:1 – BrightView	
Response time	8 ms	
Brightness	200 nits (typical)	
Viewing angle	SVA	
Backlight	LED	
Luminance uniformity @ 13 points	1.4 (typ), 1.6 (max)	
Lifetime (1/2 luminance)	12,000 hours	
Color coordinate (white)	(0.313, 0.329)	
Color tolerance (White)	+/- 0.02	
Color tolerance (R, G, B)	+/- 0.03	
Color gamut	60% (typical)	

## 43.9-cm (17.3-in), HD+ display specifications

	<b>Metric</b>	<b>U.S.</b>
Active diagonal size	43.9-cm	17.3-in
Resolution	1600x900 (HD+)	
Active area	382.08x214.92	
PPI	106	
Surface treatment	Anti-glare or BrightView	
Contrast ratio	300:1 (typical) – Anti-glare 500:1 – BrightView	
Response time	16 ms	
Brightness	200 nits (typical)	
Viewing angle	SVA	
Backlight	LED	
Luminance uniformity @ 13 points	1.4 (typ), 1.6 (max)	
Lifetime (1/2 luminance)	12,000 hours	
Color coordinate (white)	(0.313, 0.329)	
Color tolerance (White)	+/- 0.02	
Color tolerance (W, R, G, B)	+/- 0.03	
Color gamut	60% NTSC @ CIE 1931	

## Hard drive specifications

	750-GB*	640-GB*	500-GB*	320-GB*	250-GB*
Dimensions					
Height	9.5 mm	9.5 mm	9.5 mm	9.5 mm	9.5 mm
Width	70 mm	70 mm	70 mm	70 mm	70 mm
Weight	115 g	101 g	101 g	101 g	101 g
Interface type	SATA	SATA	SATA	SATA	SATA
Transfer rate	100 MB/sec	100 MB/sec	100 MB/sec	100 MB/sec	100 MB/sec
Security	ATA security	ATA security	ATA security	ATA security	ATA security
Seek times (typical read, including setting)					
Single track	1.5 ms	2 ms	3 ms	3 ms	3 ms
Average	11 ms	12 ms	13 ms	13 ms	13 ms
Maximum	14 ms	22 ms	24 ms	24 ms	24 ms
Logical blocks	1,465,149,168	1,250,263,728	1,048,576,000	625,141,400	488,397,168
Disc rotational speed	7200 rpm	7200 rpm or 5400 rpm			
Operating temperature					
5°C to 55°C (41°F to 131°F)					
*1 GB = 1 billion bytes when referring to hard drive storage capacity. Actual accessible capacity is less. Actual drive specifications may differ slightly.					
NOTE: Certain restrictions and exclusions apply. Contact technical support for details.					

# Blu-ray BD-R/RE DVD±RW SuperMulti DL Drive specifications

Applicable disc	Read:	Write:	
	CD-DA, CD+(E)G, CD-MIDI, CD-TEXT, CD-ROM, CD-ROM XA, MIXED MODE CD, CD-I, CD-I Bridge (Photo-CD, Video CD), Multisession CD (Photo-CD, CD-EXTRA, Portfolio, CD-R, CD-RW), CD-R, CD-RW, DVD-ROM (DVD-5, DVD-9, DVD-10, DVD-18), DVD-R, DVD-RW, DVD+R, DVD+RW, DVD-RAM, BD-ROM, BD-R, BD-RE	CD-R, CD-RW, DVD+R, DVD+R(9), DVD+RW, DVD-R, DVD-R(9), DVD-RW, DVD-RAM, BD-R, BD-RE	
Access time	CD	DVD	BD-ROM
Random	<180 ms	<180 ms	<230 ms
Maximum Media Capacity (read)	50 GB		
Maximum Media Capacity (write)	8.5 GB		
Data transfer rate			
24X CD-ROM	3,600 KB/sec		
8X DVD	10,800 KB/sec		
2X BD-ROM	9,000 KB/sec		
16X CD-R	3,600 KB/sec		
16X CD-RW	2,400 KB/sec		
8X DVD+R	10,800 KB/sec		
6X DVD+RW	8,100 KB/sec		
8X DVD-R	10,800 KB/sec		
6X DVD-RW	8,100 KB/sec		
4X DVD+R Dual Layer	5,400 KB/sec		
4X DVD-R Dual Layer	5,400 KB/sec		
5X DVD-RAM	6,750 KB/sec		
2X BD-R	9,000 KB/sec		
2X BD-RE	9,000 KB/sec		

# DVD±RW and CD-RW SuperMulti DL Combo Drive specifications

Applicable disc	Read:	Write:
	CD-DA, CD+(E)G, CD-MIDI, CD-TEXT, CD-ROM, CD-ROM XA, MIXED MODE CD, CD-I, CD-I Bridge (Photo-CD, Video CD), Multisession CD (Photo-CD, CD-EXTRA, Portfolio, CD-R, CD-RW), CD-R, CD-RW, DVD-ROM (DVD-5, DVD-9, DVD-10, DVD-18), DVD-R, DVD-RW, DVD+R, DVD+RW, DVD-RAM	CD-R and CD-RW  DVD+R, DVD+RW, DVD-R, DVD-RW, DVD-RAM
<b>Center hole diameter</b>	1.5 cm (0.59 in)	
<b>Disc diameter</b>		
Standard disc	12 cm (4.72 in)	
Mini disc	8 cm (3.15 in)	
<b>Disc thickness</b>	1.2 mm (0.047 in)	
<b>Track pitch</b>	0.74 µm	
<b>Access time</b>	<b>CD</b>	<b>DVD</b>
Random	< 175 ms	< 230 ms
Full stroke	< 285 ms	< 335 ms
<b>Audio output level</b>	Line-out, 0.7 Vrms	
<b>Cache buffer</b>	2 MB	
<b>Data transfer rate</b>		
24X CD-ROM	3,600 KB/sec	
8X DVD-ROM	10,800 KB/sec	
24X CD-R	3,600 KB/sec	
16X CD-RW	2,400 KB/sec	
8X DVD+R	10,800 KB/sec	
4X DVD+RW	5,400 KB/sec	
8X DVD-R	10,800 KB/sec	
4X DVD-RW	5,400 KB/sec	
2.4X DVD+R(9)	2,700 KB/sec	
5X DVD-RAM	6,750 KB/sec	
<b>Transfer mode</b>	Multiword DMA Mode	
<b>Startup time</b>	< 15 seconds	
<b>Stop time</b>	< 6 seconds	

## Blu-ray Disc ROM with SuperMulti DVD±R/RW DL Drive

Applicable disc	Read:	Write:	
	CD-DA, CD+(E)G, CD-MIDI, CDTEXT, CD-ROM, CD-ROM XA, MIXED MODE CD, CD-I, CD-I Bridge (Photo-CD, Video CD), Multisession CD (Photo-CD, CD-EXTRA, Portfolio, CD-R, CD-RW), CD-R, CD-RW, DVDROM (DVD-5, DVD-9, DVD-10, DVD-18), DVD-R, DVD-RW, DVD+R, DVD+RW, DVD-RAM, HD-ROM (Single Layer), HD-ROM (Dual Layer), HD DVD-R, HD DVD-R for Dual Layer, HD DVD-RW	CD-R and CD-RW DVD+R, DVD+R(9), DVD+RW, DVD-R, DVD-R(9), DVD-RW, DVD-RAM	
Access time	CD	DVD	HD
Random	170 ms	170 ms	230 ms
Cache buffer	8 MB		
Data transfer rate			
24X CD-ROM	3,600 KB/sec		
8X DVD	10,800 KB/sec		
24X CD-R	3,600 KB/sec		
16X CD-RW	2,400 KB/sec		
8X DVD+R	10,800 KB/sec		
4X DVD+RW	5,400 KB/sec		
8X DVD-R	10,800 KB/sec		
4X DVD-RW	5,400 KB/sec		
2.4X DVD+R(9)	2,700 KB/sec		
5X DVD-RAM	6,750 KB/sec		
1X BD-ROM	4,500 KB/sec		
1X BD-R read	4,500 KB/sec		
1X BD-RE read	4,500 KB/sec		
Transfer mode	Multiword DMA Mode		

## DVD-ROM Drive specifications

<b>Applicable disc</b>	DVD-ROM (DVD-5, DVD-9, DVD-10, DVD-18, CD-ROM (Mode 1 and 2), CD Digital Audio, CD-XA ready (Mode 2, Form 1 and Form 2), CD-I (Mode 2, Form 1 and Form 2), CD-R, CD-RW, Photo CD (single and multisession), CD-Bridge	
<b>Center hole diameter</b>	1.5 cm (0.59 in)	
<b>Disc diameter</b>		
Standard disc	12 cm (4.72 in)	
Mini disc	8 cm (3.15 in)	
<b>Disc thickness</b>	1.2 mm (0.047 in)	
<b>Track pitch</b>	0.74 $\mu$ m	
<b>Access time</b>	<b>CD</b>	<b>DVD</b>
Random	< 100 ms	< 125 ms
Full stroke	< 175 ms	< 225 ms
<b>Audio output level</b>	Line-out, 0.7 Vrms	
<b>Cache buffer</b>	512 KB	
<b>Data transfer rate</b>		
CD-R (24X)	3600 KB/s (150 KB/s at 1X CD rate)	
CD-RW (10X)	1500 KB/s (150 KB/s at 1X CD rate)	
CD-ROM (24X)	3600 KB/s (150 KB/s at 1X CD rate)	
DVD (8X)	10,800 KB/s (1,352 KB/s at 1X DVD rate)	
Multiword DMA mode 2	16.6 MB/s	
<b>Startup time</b>	< 10 seconds	
<b>Stop time</b>	< 3 seconds	

# Specification information in Device Manager

Device Manager allows you to view and control the hardware attached to the computer, as well as provides hardware specification information.

You can also add hardware or modify device configurations using Device Manager.



**NOTE:** Windows 7 and Windows Vista include the User Account Control feature to improve the security of your computer. You may be prompted for your permission or password for tasks such as installing software, running utilities, or changing Windows settings. Refer to Windows Help and Support for more information.

After you open Device Manager, drill-down to a device and double-click it to access its properties.

## To access Device Manager in Windows 7:

1. Select **Start > Computer > System properties**.
2. In the left pane, click **Device Manager**.

## To access Device Manager in Windows Vista:

1. Select **Start > Computer > System properties**.
2. In the left pane, click **Device Manager**.

## To access Device Manager in Windows XP:

1. Select **Start > My Computer**.
2. In the left pane of the System Tasks window, select **View system information**.
3. Select **Hardware** tab > **Device Manager**.

---

# 7 Backup and recovery

## Windows 7

- [Backing up your information](#)
- [Performing a system recovery](#)

To protect your information, use Windows Backup and Restore to back up individual files and folders, back up your entire hard drive (select models only), create system repair discs (select models only) by using the installed optical drive (select models only) or an optional external optical drive, or create system restore points. In case of system failure, you can use the backup files to restore the contents of your computer.

Windows Backup and Restore provides the following options:

- Creating a system repair disc (select models only) by using the installed optical drive (select models only) or an optional external optical drive
- Backing up your information
- Creating a system image (select models only)
- Scheduling automatic backups (select models only)
- Creating system restore points
- Recovering individual files
- Restoring the computer to a previous state
- Recovering information using recovery tools



**NOTE:** For detailed instructions, perform a search for these topics in Help and Support.

In case of system instability, HP recommends that you print the recovery procedures and save them for later use.



**NOTE:** Windows includes the User Account Control feature to improve the security of your computer. You may be prompted for your permission or password for tasks such as installing software, running utilities, or changing Windows settings. Refer to Help and Support for more information.

---

## Backing up your information

Recovery after a system failure is as good as your most recent backup. You should create system repair discs (select models only) by using the installed optical drive (select models only) or an optional external optical drive, and your initial backup immediately after software setup. As you add

new software and data files, you should continue to back up your system on a regular basis to maintain a reasonably current backup. The system repair discs (select models only) are used to start up (boot) the computer and repair the operating system in case of system instability or failure. Your initial and subsequent backups allow you to restore your data and settings if a failure occurs.

You can back up your information to an optional external hard drive, a network drive, or discs.

Note the following when backing up:

- Store personal files in the Documents library, and back it up regularly.
- Back up templates that are stored in their associated programs.
- Save customized settings that appear in a window, toolbar, or menu bar by taking a screen shot of your settings. The screen shot can be a time-saver if you have to reset your preferences.
- When backing up to discs, use any of the following types of discs (purchased separately): CD-R, CD-RW, DVD+R, DVD+R DL, DVD-R, DVD-R DL, or DVD±RW. The discs you use will depend on the type of optical drive installed in your computer or the type of external optical drive you are using.



**NOTE:** DVDs and DVDs with double-layer (DL) support store more information than CDs, so using them for backup reduces the number of recovery discs required.

- When backing up to discs, number each disc before inserting it into the optical drive of the computer.

To create a backup using Backup and Restore:



**NOTE:** Be sure that the computer is connected to AC power before you start the backup process.



**NOTE:** The backup process may take over an hour, depending on file size and the speed of the computer.

1. Select **Start > All Programs > Maintenance > Backup and Restore**.
2. Follow the on-screen instructions to set up your backup, create a system image (select models only), or create a system repair disc (select models only).

## Performing a system recovery

In case of system failure or instability, the computer provides the following tools to recover your files:

- Windows recovery tools: You can use Windows Backup and Restore to recover information you have previously backed up. You can also use Windows Startup Repair to fix problems that might prevent Windows from starting correctly.
- f11 recovery tools: You can use the f11 recovery tools to recover your original hard drive image. The image includes the Windows operating system and software programs installed at the factory.



**NOTE:** If you are unable to boot (start up) your computer and you cannot use the system repair discs you previously created (select models only), you must purchase a Windows 7 operating system DVD to reboot the computer and repair the operating system. For additional information, refer to [Using a Windows 7 operating system DVD \(purchased separately\) on page 129](#).


## Using the Windows recovery tools

To recover information you previously backed up:

1. Select **Start > All Programs > Maintenance > Backup and Restore**.
2. Follow the on-screen instructions to recover your system settings, your computer (select models only), or your files.

To recover your information using Startup Repair, follow these steps:

---

 **CAUTION:** Using Startup Repair completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. When reformatting is complete, the recovery process restores the operating system, as well as the drivers, software, and utilities from the backup used for recovery.


---

1. If possible, back up all personal files.
2. If possible, check for the presence of the Windows partition and the HP Recovery partition.

To check for the Windows partition, select **Start > Computer**.

To check for the HP Recovery partition, click **Start**, right-click **Computer**, click **Manage**, and then click **Disk Management**.


---

 **NOTE:** If the Windows partition and the HP Recovery partition are not listed, you must recover your operating system and programs using the Windows 7 operating system DVD and the *Driver Recovery* disc (both purchased separately). For additional information, refer to [Using a Windows 7 operating system DVD \(purchased separately\) on page 129](#).

---

3. If the Windows partition and the HP Recovery partition are listed, restart the computer, and then press **f8** before the Windows operating system loads.
4. Select **Startup Repair**.
5. Follow the on-screen instructions.


---

 **NOTE:** For additional information on recovering information using the Windows tools, perform a search for these topics in Help and Support.

---

## Using f11 recovery tools

---


 **CAUTION:** Using **f11** completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. The **f11** recovery tool reinstalls the operating system and HP programs and drivers that were installed at the factory. Software not installed at the factory must be reinstalled.

---

To recover the original hard drive image using **f11**:

1. If possible, back up all personal files.
2. If possible, check for the presence of the HP Recovery partition: click **Start**, right-click **Computer**, click **Manage**, and then click **Disk Management**.

---

 **NOTE:** If the HP Recovery partition is not listed, you must recover your operating system and programs using the Windows 7 operating system DVD and the *Driver Recovery* disc (both purchased separately). For additional information, refer to [Using a Windows 7 operating system DVD \(purchased separately\) on page 129](#).


---

3. If the HP Recovery partition is listed, restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
4. Press **f11** while the “Press <F11> for recovery” message is displayed on the screen.
5. Follow the on-screen instructions.

## Using a Windows 7 operating system DVD (purchased separately)

To order a Windows 7 operating system DVD, go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions. You can also order the DVD by calling technical support. For contact information, refer to the *Worldwide Telephone Numbers* booklet included with the computer.


---

 **CAUTION:** Using a Windows 7 operating system DVD completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. When reformatting is complete, the recovery process helps you restore the operating system, as well as drivers, software, and utilities.

---

To initiate recovery using a Windows 7 operating system DVD:

---

 **NOTE:** This process takes several minutes.

---

1. If possible, back up all personal files.
2. Restart the computer, and then insert the Windows 7 operating system DVD into the optical drive before the Windows operating system loads.
3. When prompted, press any keyboard key.
4. Follow the on-screen instructions.
5. Click **Next**.
6. Select **Repair your computer**.
7. Follow the on-screen instructions.


# Windows Vista


To protect your information, use the Backup and Restore Center to back up individual files and folders, back up your entire hard drive (select models only), or create system restore points. In case of system failure, you can use the backup files to restore the contents of your computer.


The Backup and Restore Center provides the following options:

- Backing up individual files and folders
- Backing up the entire hard drive (select models only)
- Scheduling automatic backups (select models only)
- Creating system restore points
- Recovering individual files
- Restoring the computer to a previous state
- Recovering information using recovery tools

---

 **NOTE:** For detailed instructions, perform a search for these topics in Help and Support.

 **NOTE:** In case of system instability, HP recommends that you print the recovery procedures and save them for later use.

 **NOTE:** Windows® includes the User Account Control feature to improve the security of your computer. You may be prompted for your permission or password for tasks such as installing software, running utilities, or changing Windows settings. Refer to Help and Support for more information.

---

## Backing up your information


Recovery after a system failure is as complete as your most current backup. You should create your initial backup immediately after software setup. As you add new software and data files, you should continue to back up your system on a regular basis to maintain a reasonably current backup.

You can back up your information to an optional external hard drive, a network drive, or discs.

Note the following when backing up:

- Store personal files in the Documents folder, and back it up regularly.
- Back up templates that are stored in their associated programs.
- Save customized settings that appear in a window, toolbar, or menu bar by taking a screen shot of your settings. The screen shot can be a time-saver if you have to reset your preferences.
- When backing up to discs, use any of the following types of discs (purchased separately): CD-R, CD-RW, DVD+R, DVD+R DL, DVD-R, DVD-R DL, or DVD±RW. The discs you use will depend on the type of optical drive installed in your computer.

---


 **NOTE:** DVDs and DVDs with double-layer (DL) support store more information than CDs, so using them for backup reduces the number of recovery discs required.

---


- When backing up to discs, number each disc before inserting it into the optical drive of the computer.

To create a backup using Backup and Restore Center:

---

 **NOTE:** Be sure that the computer is connected to AC power before you start the backup process.

---

 **NOTE:** The backup process may take over an hour, depending on file size and the speed of the computer.

---


1. Select **Start > All Programs > Maintenance > Backup and Restore Center**.
2. Follow the on-screen instructions to back up your entire computer (select models only) or your files.

## Performing a recovery

In case of system failure or instability, the computer provides the following tools to recover your files:

- Windows recovery tools: You can use the Backup and Restore Center to recover information you have previously backed up. You can also use Windows Startup Repair to fix problems that might prevent Windows from starting correctly.
- f11 recovery tools: You can use the f11 recovery tools to recover your original hard drive image. The image includes the Windows operating system and software programs installed at the factory.

---

 **NOTE:** If you are unable to boot (start up) your computer, you must purchase a Windows Vista® operating system DVD to reboot the computer and repair the operating system. For additional information, refer to [Using a Windows Vista operating system DVD \(purchased separately\) on page 132](#).

---


## Using the Windows recovery tools

To recover information you previously backed up:

1. Select **Start > All Programs > Maintenance > Backup and Restore Center**.
2. Follow the on-screen instructions to recover your entire computer (select models only) or your files.

To recover your information using Startup Repair, follow these steps:


---

 **CAUTION:** Using Startup Repair completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. When reformatting is complete, the recovery process restores the operating system, as well as the drivers, software, and utilities from the backup used for recovery.

---

1. If possible, back up all personal files.
2. If possible, check for the presence of the Windows partition and the HP Recovery partition. To find the partitions, select **Start > Computer**.


---

 **NOTE:** If the Windows partition and the HP Recovery partition have been deleted, you must recover your operating system and programs using the Windows Vista operating system DVD and the *Driver Recovery* disc (both purchased separately). For additional information, refer to [Using a Windows Vista operating system DVD \(purchased separately\) on page 132](#).

---


3. Restart the computer, and then press f8 before the Windows operating system loads.


4. Select **Repair your computer**.
5. Follow the on-screen instructions.

 **NOTE:** For additional information on recovering information using the Windows tools, perform a search for these topics in Help and Support.

---

## Using f11 recovery tools


 **CAUTION:** Using **f11** completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. The **f11** recovery tool reinstalls the operating system and HP programs and drivers that were installed at the factory. Software not installed at the factory must be reinstalled. Personal files must be restored from a backup.

 **NOTE:** If your computer includes a solid-state drive (SSD), you may not have a recovery partition. Recovery discs have been included for computers that do not have a partition. Use these discs to recover your operating system and software. To check for the presence of a recovery partition, select **Start > Computer**. If the partition is present, an HP Recovery drive is listed in the Hard Disk Drives section of the window.

---

To recover the original hard drive image using **f11**, follow these steps:

1. If possible, back up all personal files.
2. If possible, check for the presence of the HP Recovery partition. To find the partition, select **Start > Computer**.


 **NOTE:** If the HP Recovery partition has been deleted, you must recover your operating system and programs using the Windows Vista operating system DVD and the *Driver Recovery* disc (both purchased separately). For additional information, refer to [Using a Windows Vista operating system DVD \(purchased separately\) on page 132](#).

---

3. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
4. Press **f11** while the “Press <F11> for recovery” message is displayed on the screen.
5. Follow the on-screen instructions.

## Using a Windows Vista operating system DVD (purchased separately)

To order a Windows Vista operating system DVD, go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions. You can also order the DVD by calling technical support. For contact information, refer to the *Worldwide Telephone Numbers* booklet included with the computer.

 **CAUTION:** Using a Windows Vista operating system DVD completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. When reformatting is complete, the recovery process helps you restore the operating system, as well as drivers, software, and utilities.

---

To initiate recovery using a Windows Vista operating system DVD:



---

**NOTE:** This process takes several minutes.

---

1. If possible, back up all personal files.
2. Restart the computer, and then insert the Windows Vista operating system DVD into the optical drive before the Windows operating system loads.
3. When prompted, press any keyboard key.
4. Follow the on-screen instructions.
5. Click **Next**.
6. Select **Repair your computer**.
7. Follow the on-screen instructions.

---

## 8 Power cord set requirements

The wide range input feature of the computer permits it to operate from any line voltage from 100 to 120 volts AC, or from 220 to 240 volts AC.

The 3-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries and regions must meet the requirements of the country or region where the computer is used.

### Requirements for all countries and regions

The requirements listed below are applicable to all countries and regions:

- The length of the power cord set must be at least 1.5 m (5.0 ft) and no more than 2.0 m (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 amps and a nominal voltage rating of 125 or 250 V AC, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.

## Requirements for specific countries and regions

Country/region	Accredited agency	Applicable note number
Australia	EANSW	1
Austria	OVE	1
Belgium	CEBC	1
Canada	CSA	2
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1
Germany	VDE	1
Italy	IMQ	1
Japan	METI	3
The Netherlands	KEMA	1
Norway	NEMKO	1
The People's Republic of China	CCC	5
South Korea	EK	4
Sweden	SEMKO	1
Switzerland	SEV	1
Taiwan	BSMI	4
The United Kingdom	BSI	1
The United States	UL	2

1. The flexible cord must be Type HO5VV-F, 3-conductor, 1.0-mm<sup>2</sup> conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
2. The flexible cord must be Type SPT-3 or equivalent, No. 18 AWG, 3-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V) or NEMA 6-15P (15 A, 250 V) configuration.
3. The appliance coupler, flexible cord, and wall plug must bear a "T" mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCT or VCTF, 3-conductor, 1.00-mm<sup>2</sup> conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V) configuration.
4. The flexible cord must be Type RVV, 3-conductor, 0.75-mm<sup>2</sup> conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
5. The flexible cord must be Type VCTF, 3-conductor, 0.75-mm<sup>2</sup> conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.

---

## 9 Recycling

### Battery

When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for computer battery disposal.

### Display

---

**⚠ WARNING!** The backlight contains mercury. Exercise caution when removing and handling the backlight to avoid damaging this component and causing exposure to the mercury.

**⚠ CAUTION:** The procedures in this chapter can result in damage to display components. The only components intended for recycling purposes are the LCD panel and the backlight. When you remove these components, handle them carefully.

**📝 NOTE: Materials Disposal.** This HP product contains mercury in the backlight in the display assembly that might require special handling at end-of-life. Disposal of mercury may be regulated because of environmental considerations. For disposal or recycling information, contact your local authorities, or see the Electronic Industries Alliance (EIA) Web site at <http://www.eiae.org>.

---

This section provides disassembly instructions for the display assembly. The display assembly must be disassembled to gain access to the backlight **(1)** and the liquid crystal display (LCD) panel **(2)**.




---

**📝 NOTE:** The procedures provided in this chapter are general disassembly instructions. Specific details, such as screw sizes, quantities, and locations, and component shapes and sizes, can vary from one computer model to another.


---

Perform the following steps to disassemble the display assembly:


1. Remove all screw covers (1) and screws (2) that secure the display bezel to the display assembly.

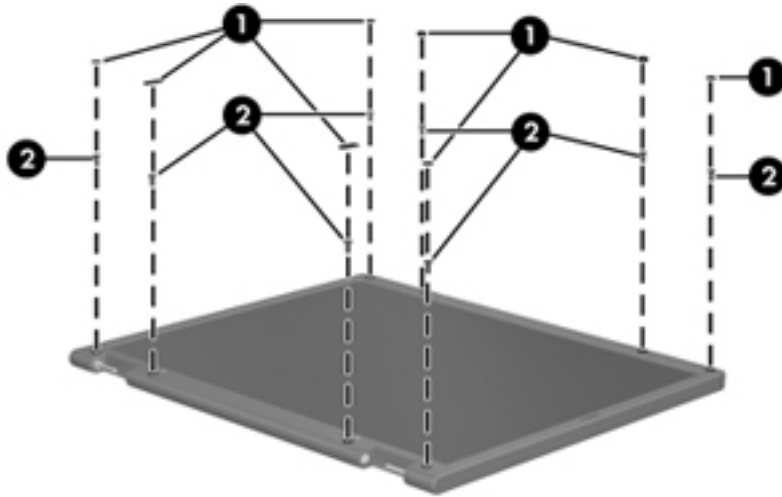

2. Lift up and out on the left and right inside edges (1) and the top and bottom inside edges (2) of the display bezel until the bezel disengages from the display assembly.
3. Remove the display bezel (3).

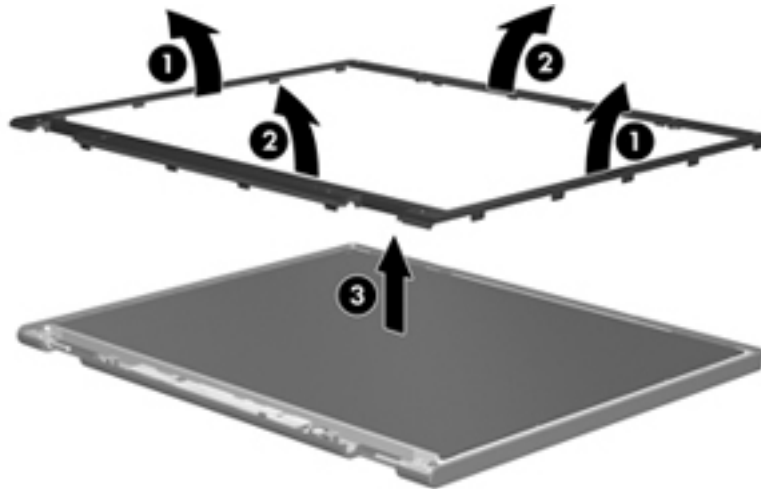


4. Disconnect all display panel cables (1) from the display inverter and remove the inverter (2).

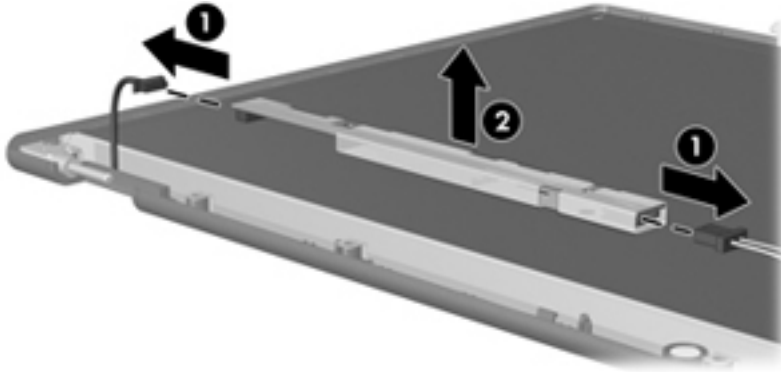


5. Remove all screws (1) that secure the display panel assembly to the display enclosure.

6. Remove the display panel assembly (2) from the display enclosure.

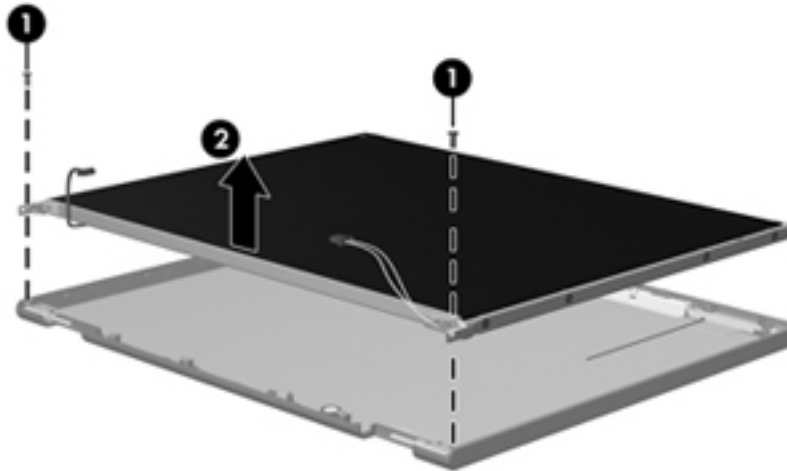


7. Position the display panel assembly upside-down.

8. Remove all screws that secure the display panel frame to the display panel.

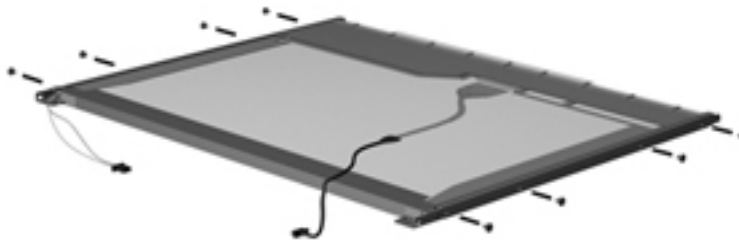


9. Use a sharp-edged tool to cut the tape (1) that secures the sides of the display panel to the display panel frame.

10. Remove the display panel frame (2) from the display panel.

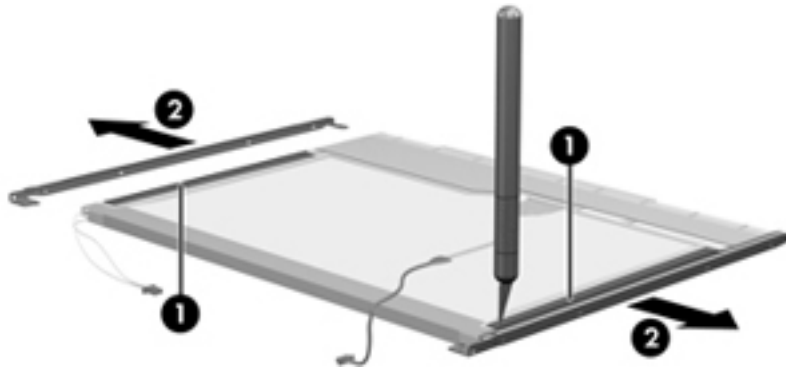

11. Remove the screws (1) that secure the backlight cover to the display panel.


12. Lift the top edge of the backlight cover (2) and swing it outward.

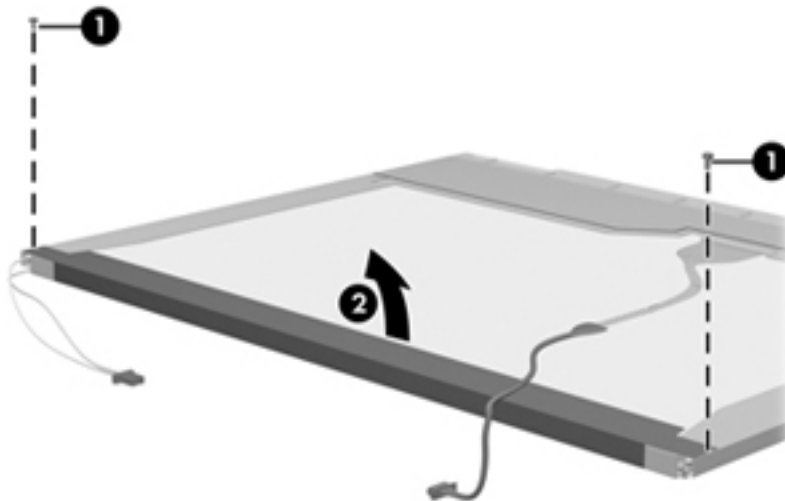

13. Remove the backlight cover.

14. Position the display panel right-side up.


15. Remove the backlight cables (1) from the clip (2) in the display panel.

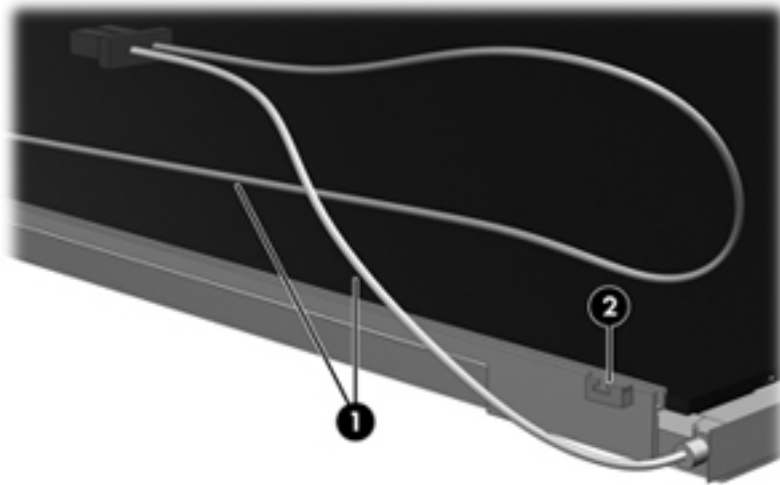


16. Position the display panel upside-down.

**⚠ WARNING!** The backlight contains mercury. Exercise caution when removing and handling the backlight to avoid damaging this component and causing exposure to the mercury.


17. Remove the backlight frame from the display panel.

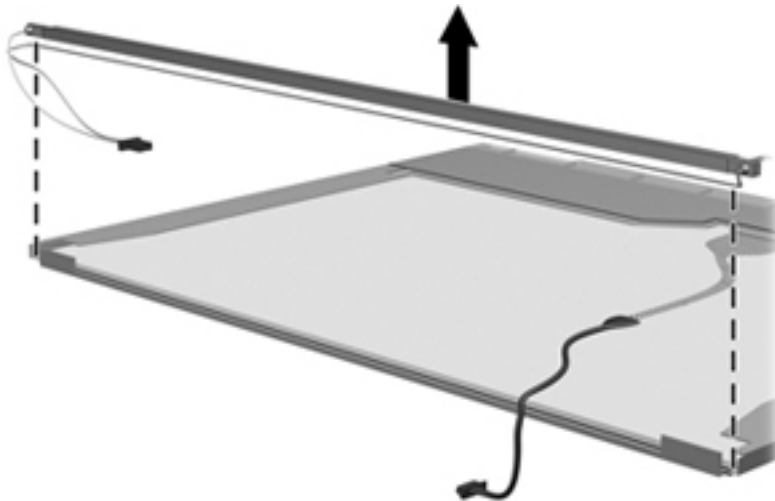


18. Remove the backlight from the backlight frame.

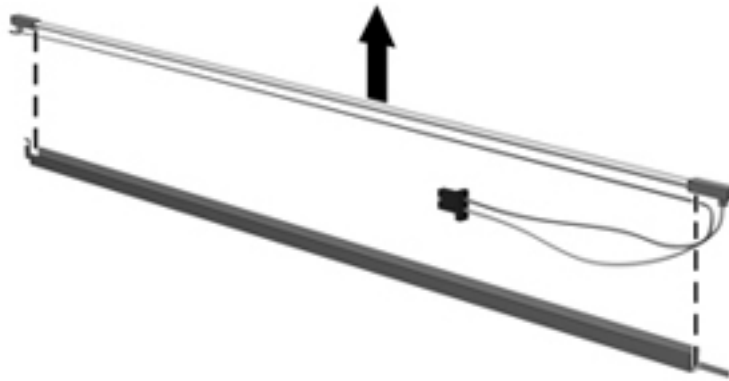

19. Disconnect the display panel cable (1) from the LCD panel.
20. Remove the screws (2) that secure the LCD panel to the display rear panel.
21. Release the LCD panel (3) from the display rear panel.
22. Release the tape (4) that secures the LCD panel to the display rear panel.

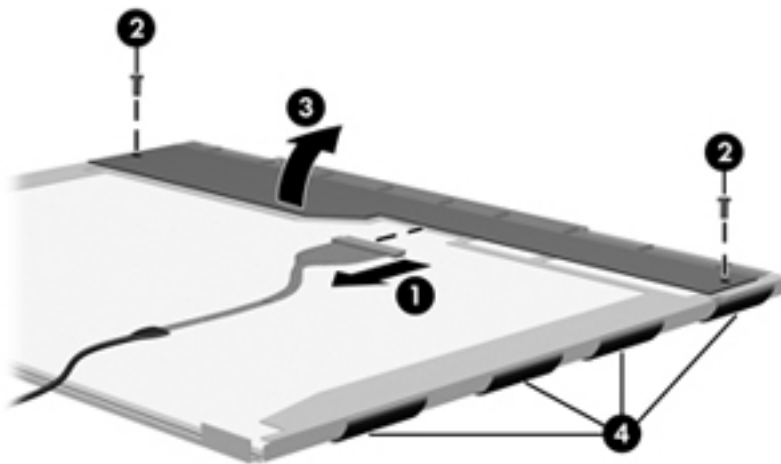

23. Remove the LCD panel.

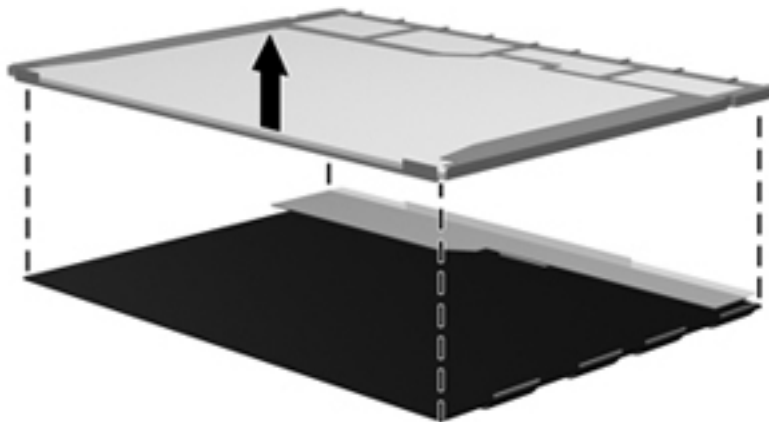

24. Recycle the LCD panel and backlight.

---

# Index

- A**
- AC adapter light 15
  - AC adapter, spare part numbers 31, 33
  - access cover release latches 17
  - antennas
    - disconnecting 56, 61
  - audio, product description 3
  - audio-in (microphone) jack 14
  - audio-out (headphone) jack 14
- B**
- Backup and Restore 127
  - Backup and Restore Center 130, 131
  - base enclosure, spare part number 25, 36
  - battery
    - removal 47
    - spare part number 25, 47
  - battery bay 17
  - battery connector cable, illustrated 30
  - battery release latches 17
  - BIOS
    - determining version 114
    - downloading an update 114
    - updating 114
  - Blu-ray BD-R/RE DVD±RW SuperMulti DL Drive 121
    - spare part number 26, 39, 50
  - Blu-ray Disc ROM with SuperMulti DVD±R/RW DL Drive
    - spare part number 30
    - specifications 123
  - Blu-ray ROM DVD±RW SuperMulti DL Drive, spare part number 26, 30, 39, 50
- C**
- Bluetooth card
    - spare part number 58
  - bottom door
    - removal 49
    - spare part number 26, 36, 49
  - buttons
    - left TouchPad 9
    - optical drive eject 16
    - power 11
    - QuickWeb 12
    - right TouchPad 9
    - TouchPad on/off 9
    - wireless 12
  - Cable Kit
    - contents 30
    - spare part number 30, 38
  - cables, service considerations 42
  - caps lock light, identifying 10
  - card reader board
    - removal 70
    - spare part number 20, 37, 70
  - chipset, product description 1
  - components
    - bottom 17
    - display 8
    - front 14
    - left side 15
    - right side 16
    - top 9
  - Computer Setup
    - navigating and selecting 112
    - restoring factory settings 113
  - computer specifications 116
  - connectors, service considerations 42
- D**
- diskette drive
    - precautions 42
  - display assembly
    - removal 102
    - spare part numbers 102
  - display bezel
    - removal 105
    - spare part numbers 27, 36
  - display component recycling 136
  - display components, spare part numbers 27
  - display enclosure, spare part number 28, 36
  - display hinge
    - removal 108
    - spare part number 37
  - display hinge cover
    - spare part numbers 27, 37
  - Display Hinge Kit
    - spare part number 28
  - display panel
    - product description 2
    - removal 107
    - spare part number 28, 38
  - display specifications 117, 119
  - drive light 14
  - drives
    - optical 16
    - preventing damage 42
  - DVD-ROM Drive
    - precautions 42
    - removal 50
    - spare part number 26, 30, 39, 50
    - specifications 124
  - DVD±RW and CD-RW SuperMulti DL Combo Drive
    - precautions 42

removal 50  
spare part number 26, 30, 39, 50

## E

electrostatic discharge 43  
esc key, identifying 13  
Ethernet, product description 3  
ExpressCard slot insert, illustrated 29  
ExpressCard slot, identifying 16  
external media cards, product description 4  
external monitor port 15

## F

f11 recovery 128, 132  
fan  
    removal 93  
    spare part number 25, 37, 93  
fingerprint reader, identifying 12  
fn key, identifying 13  
function keys  
    identifying 13

## G

graphics, product description 1  
grounding equipment and methods 45

## H

hard drive  
    precautions 42  
    product description 2  
    removal 52  
    spare part numbers 26, 30, 35, 36, 52  
    specifications 120  
hard drive bay, identifying 17  
hard drive bracket, removal 53  
hard drive extension board  
    removal 89  
    spare part number 89  
Hard Drive Hardware Kit, spare part number 31, 39, 52  
hard drive recovery 128, 132  
HDMI port, identifying 15  
heat sink  
    removal 95  
    spare part number 25, 95

hinge  
    removal 108  
    spare part number 37

## I

integrated numeric keypad, identifying 13  
integrated webcam light, identifying 8  
internal display switch 8  
internal microphones, identifying 8

## J

jacks  
    audio-in (microphone) 14  
    audio-out (headphone) 14  
    network 15  
    RJ-11 (modem) 16  
    RJ-45 (network) 15

## K

keyboard  
    product description 4  
    removal 63  
    spare part numbers 20, 37, 63  
keypad, integrated numeric 13  
keys  
    esc 13  
    fn 13  
    function 13  
    menu 13  
    num lk 13  
    start 13

## L

legacy support, USB 112  
lid switch  
    removal 78  
    spare part number 37, 78  
lid switch board  
    spare part number 21  
lights  
    AC adapter 15  
    caps lock 10  
    drive 14  
    optical drive 16  
    power 10  
    QuickWeb 10  
    TouchPad 10

webcam 8  
wireless 10

## M

mass storage devices, spare part numbers 30  
Media Card Reader 14  
memory module  
    product description 2  
    removal 54  
    spare part numbers 25, 54  
menu key, identifying 13  
microphone (audio-in) jack  
    product description 3  
microphone module  
    spare part number 36  
model name 1  
modem module  
    product description 3  
    removal 76  
    spare part number 21, 34, 76

## N

network jack, identifying 15  
num lk key, identifying 13

## O

operating system, product description 5  
optical drive 16  
    precautions 42  
    product description 3  
    removal 50  
    spare part numbers 26, 30, 50  
    specifications 121, 122, 123, 124  
optical drive connector  
    removal 82  
    spare part number 25, 37, 82  
optical drive eject button 16  
optical drive light 16  
optical drive protective insert  
    illustrated 29

## P

packing guidelines 44  
plastic parts 41  
Plastics Kit, spare part number 29, 38  
pointing device, product description 4

## ports

- external monitor 15
- HDMI 15
- product description 4
- USB 16
- power button board
  - removal 74
  - spare part number 20, 37, 74
- power button, identifying 11
- power cable
  - removal 100
  - spare part number 100
- power connector cable,
  - illustrated 30
- power connector, identifying 15
- power cord
  - set requirements 134
  - spare part numbers 31, 32
- power light 10
- power requirements, product description 4
- processor
  - product description 1
  - removal 97
  - spare part numbers 21, 97
- product description
  - audio 3
  - chipset 1
  - display panel 2
  - Ethernet 3
  - external media cards 4
  - graphics 1
  - hard drives 2
  - keyboard 4
  - memory module 2
  - microphone 3
  - modem module 3
  - operating system 5
  - optical drives 3
  - pointing devices 4
  - ports 4
  - power requirements 4
  - processors 1
  - product name 1
  - security 5
  - serviceability 7
  - webcam 3
  - wireless 3
- product name 1

## Q

- Quick Launch board
  - removal 73
  - spare part number 20, 37, 73
- QuickWeb button, identifying 12
- QuickWeb light 10

## R

- recovery partition 128, 132
- release latches
  - access cover 17
  - battery 17
- removal/replacement
  - preliminaries 41
  - procedures 46
- restoring the hard drive 128, 132
- RJ-11 (modem) jack, identifying 16
- RJ-11 connector cable
  - illustrated 30
- RJ-11 holder, illustrated 29
- RJ-11 jack cable
  - removal 84
- RJ-45 (network) jack, identifying 15
- RTC battery
  - removal 91
  - spare part number 25, 32, 91
- Rubber Kit, spare part number 38

## S

- Screw Kit, spare part number 31, 38
- Secure Digital card insert,
  - illustrated 29
- security cable slot, identifying 15
- security, product description 5
- service considerations 41
- service tag 18, 46
- serviceability, product description 7
- setup utility
  - navigating and selecting 112
  - restoring factory settings 113
- SIM slot, identifying 17
- SIM, removal 48
- slots
  - ExpressCard 16

- security cable 15

- SIM 17

## speaker assembly

- removal 71
- spare part number 21, 37, 71
- speakers, identifying 8

## specifications

- Blu-ray BD-R/RE DVD±RW SuperMulti DL Drive 121
- Blu-ray Disc ROM with SuperMulti DVD±R/RW DL Drive 123
- computer 116
- display 117, 119
- DVD-ROM Drive 124
- DVD±RW and CD-RW SuperMulti DL Combo Drive 122
- hard drive 120
- optical drive 121, 122, 123, 124
- start key, identifying 13
- static-shielding materials 45
- system board
  - removal 85
  - spare part numbers 21, 36, 39, 85
- system repair disc 126
- system restore points 126

## T

- thermal material, replacement 96, 97
- tools required 41
- top cover
  - removal 65
  - spare part number 20, 36, 65
- TouchPad
  - buttons 9
  - identifying 9
- TouchPad light, identifying 10
- TouchPad on/off button 9
- transporting guidelines 44

## U

- USB board
  - removal 80
  - spare part number 25, 80
- USB legacy support 112
- USB port, identifying 16

USB ports, identifying 16

## V

vents, identifying 15, 17

## W

webcam 9

- product description 3

- spare part number 28, 36

webcam light, identifying 8

webcam, identifying 9

Windows 7 operating system

- DVD 129

Windows Backup and Restore

- 126

Windows Vista operating system

- DVD 132

wireless antennas

- disconnecting 56, 61

wireless antennas, identifying 8

wireless button, identifying 12

wireless light 10

wireless, product description 3

WLAN antennas

- identifying 8

- spare part number 28, 37

WLAN module

- spare part numbers 22, 33

WLAN/Bluetooth combo card

- removal 58

- spare part number 58

workstation guidelines 44

WWAN antennas

- identifying 8

- spare part number 28, 37

WWAN module

- removal 56

- spare part number 22, 35, 56