Motorized Bumper Boat with Squirt Gun EXCALIBUR

ELECTRONICS, INC.



www.ExcaliburElectronics.com

Congratulations on your purchase of the Motorized Bumper Boat with Squirt Gun from Excalibur. Sit on your very own inflatable throne as you cruise the water thanks to the powerful, single propeller.

Please read this manual thoroughly, especially noting safety and care instructions. Keep this manual for reference. This package contains 1 Bumper Boat with Squirt Gun and its parts for assembly, 1 air pump, and one user's manual.

Main Parts List

Steering Wheel and Battery Cover



Control Arm Sleeve



Propeller Attachment



Air Pump



Table of Contents

Introduction	page 2
Main Parts List	page 2
Inflation	page 3
Assembling your Motorized Bumper Boat	page 4
Operating your Motorized Bumper Boat	page 6
Battery Information	page 6
Safety and Care	page 6
Limited 90-Day Warranty	page 7

Inflation



1. Remove the valve cover.

2. There are two "cavities" where the Bumper Boat needs to be inflated. Insert the nozzle into the air cavity and begin pumping air by stepping on the foot pump repeatedly.



3. Close the valve cover after filling each cavity.

Assembling your Motorized Bumper Boat

Once you have properly inflated the Bumper Boat, you can begin assembling the motor and steering wheel.

1. Use the wrench (included) to unscrew the nuts on the battery cover.



2. Assemble the battery cover with the nuts and bolts in place.



3. Place the nut onto the bolt and then into the battery compartment.



4. Insert 6 D-cell (not included) batteries in the battery compartment, matching the polarity (+ and -) with the diagram in the compartment.



5. Align the battery compartment cover by matching inside.



6. Fasten the nuts with the wrench. It is generally best to start at the two nuts directly across from the handle, then the two nuts on both sides of the handle, then the remaining two.



7. Hold the Bumper Boat vertically. This will make it easier for the final steps of the assembly. Insert the control arm sleeve set into the hole located at the frontcenter of the Bumper Boat.



8. Insert the electrical connection line into the motor subassembly that encloses the propeller.



9. Insert the control arm through the top of sleeve set. Insert the electrical line through the bottom of the control arm sleeve set.

10. From the bottom of the Bumper Boat, you can see the "1" printed on both sides of the control arm and propeller.



11. Push the connection up and make sure that it is tightly secured into the propeller.



12. You have finished assembling the Bumper Boat.



13. After step 12, insert the air pump and inflate the small cavity in the middle of the Bumper Boat until firm.

Operating your Motorized Bumper Boat

The accelerator button is located on the right hand top of the steering wheel. The left hand top is the squirt gun. Press to activate the propeller and make the Bumper Boat go!

Use the steering wheel to control in which direction you move. The steering wheel can rotate 360°.

Battery Information

- · Use 6 D-cell batteries
- · Use alkaline batteries for best performance
- · Do not use rechargeable batteries
- · Do not mix old and new batteries
- · Remove exhausted batteries from unit
- · Remove batteries when Bumper Boat is not in use
- · To avoid explosion or leakage, do not dispose of batteries in a fire or attempt to recharge standard or alkaline batteries
- · Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries

Safety and Care

When assembling, please make sure that you tighten the screws on the battery compartment so that water does not get
on the inside of the compartment. This will damage the electrical system of the Bumper Boat.

· Children under 8 years of age should not operate this product without parental supervision.

This product is designed for pool use only. It may be used in ponds or small lakes only within the range of the user's
comfortable ability to swim to shore, provided that there are no strong currents, waves, or water crafts present which
could create wakes. Do not use in any other body of water or in salt water.

- This product is designed to hold one person not exceeding 200 lbs.
- · Keep hands, hair, and loose objects such as clothing away from the propeller.

· If an object becomes lodged in the propeller, make sure that this product is turned off before attempting to dislodge.

Always inspect the pool area before use to ensure it is free of hazards and/or obstacles, such as pool toys and
 swimmers.

- · Never ride into or over swimmers.
- · Keep this product away from hot or sharp objects.
- · Always use caution and common sense.
- · Never jump or dive off this product.

FCC Part 15 Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable I interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

90-Day Limited Warranty

EXCALIBUR ELECTRONICS, INC., warrants to the original consumer that its products are free from any electrical or mechanical defects for a period of 90 DAYS from the date of purchase. If any such defect is discovered within the warranty period, EXCALIBUR ELECTRONICS, INC., will repair or replace the unit free of charge upon receipt of the unit, shipped postage prepaid and insured to the factory address below.

The warranty covers normal consumer use and does not cover damage that occurs in shipment or failure that results from alterations, accident, misuse, abuse, neglect, wear and tear, inadequate maintenance, commercial use, or unreasonable use of the unit. This warranty does not cover cost of repairs made or attempted outside of the factory.

Any applicable implied warranties, including warranties of merchantability and fitness, are hereby limited to 90 DAYS from the date of purchase. Consequential or incidental damages resulting from a breach of any applicable express or implied warranties are hereby excluded. Some states do not allow limitations on the duration of LIMITED 90-DAY WARRANTY implied warranties and do not allow exclusion of incidental or consequential damages, so the above limitations and exclusions in these instances may not apply. The only authorized service center in the United States is:

> Excalibur Electronics, Inc. 13755 SW 119th Ave Miami, Florida 33186 U.S.A. Phone: 305.477.8080 Fax: 305.477.9516 www.ExcaliburElectronics.com

Ship the unit carefully packed, preferably in the original carton, and send it prepaid, and adequately insured. Include a letter, detailing the complaint and including your daytime telephone number, inside the shipping carton. If your warranty has expired and you want an estimated fee for service, write to the above address, specifying the model and the problem.

NOTE: Please do not send your unit without first receiving an estimate for servicing from EXCALIBUR ELECTRONICS, INC. Contact us before sending your unit. We cannot store your unit!

Excalibur Electronics, Inc. reserves the right to make technical changes without notice in the interest of progress.

