 


# User Manual



**PHILIPS**

**A**

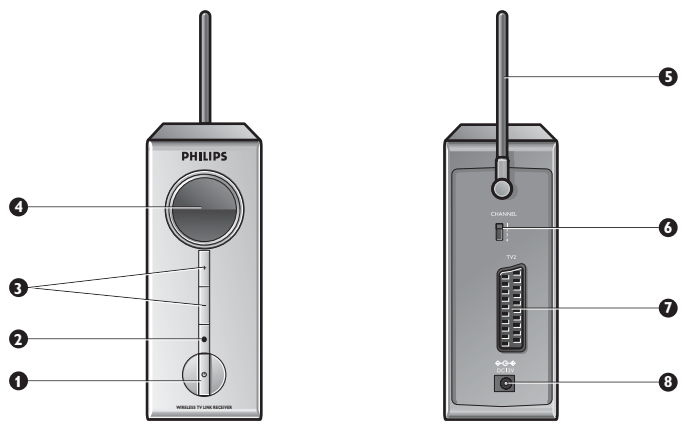

	Page
<b>Overview</b>	<b>4</b>
Control and display elements	4
<b>Your Wireless TV Link</b>	<b>5</b>
<b>Safety</b>	<b>5</b>
<b>Installation</b>	<b>6</b>
<b>Operation</b>	<b>6</b>
Enjoy your Wireless TV Link	6
<b>Troubleshooting</b>	<b>8</b>
<b>Information</b>	<b>10</b>
Health and safety	10
Maintenance and service	10
Recycling and disposal	10
Warranty	11
Glossary	11

## Control and display elements

### A Receiver

- 1 On/off switch
- 2 Power light
  - > *red: standby*
  - > *green: on*
  - > *blinking: remote control signalling*
- 3 Source selector buttons (+/-)
  - > *in combination with the SLV5400 transmitter*
- 4 Integrated remote control blaster light
- 5 Antenna
- 6 Wireless channel selection switch
- 7 **SCART** port for **TV2**
- 8 Power input connector (DC 12V)


You can say good-bye to wires. With your Wireless TV Link receiver you can now wirelessly connect a third TV and choose between four devices to watch on your third TV.

## Safety

- Read the instructions in this manual carefully before you connect, install and use the product.
- Keep this manual for future reference.
- The product is for indoor use only.
- Do not use the product close to water.
- Do not expose the product to extreme heat.
- In case of technical difficulties, do not open the product. Bring it to your Philips dealer.
- Do not cover the product.
- Connect the power adapters only to a 220-240 V AC/50 Hz power supply.
- The product can cause interference to other equipment. Check if any equipment near the product can be affected before you start using it.


# Installation

For basic installation, see the quick start guide that came with your Wireless TV Link.

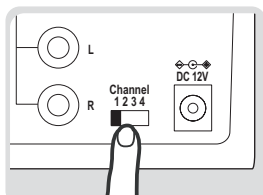

## Remove interference on TV3

- 1 Find the **CHANNEL** switch on the transmitter.
- 2 Check the setting of the **CHANNEL** switch.

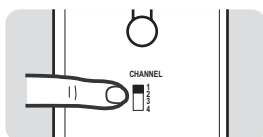

- 3 Find the **CHANNEL** switch on the receiver (A).
- 4 Set the **CHANNEL** switch to the same number as on the transmitter.

Make sure to set the **CHANNEL** switch on both the original and the new receiver.

# Operation


## Enjoy your Wireless TV Link

For basic installation, see the quick start guide that came with your Wireless TV Link.




## Watch a cable TV program on TV3


Your VCR or DVD recorder needs to be connected to the transmitter (A) of the Wireless TV Link and connected to the Cable-TV signal.

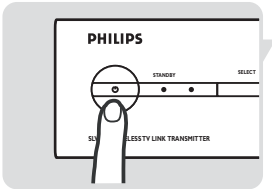

- 1 Switch on the transmitter.
- 2 Switch on the VCR or DVD recorder.
- 3 Take the remote control of the VCR or DVD recorder with you.
- 4 Go to TV3.

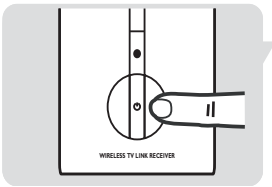

- 5 Switch on TV3.
- 6 Switch on the receiver (A).

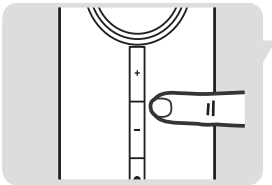

- 7 Press + or - on the receiver (A) to select the VCR or DVD recorder;  
or: press 4 on the remote control.
- 8 Select the channel on the VCR or DVD recorder with its remote control.

Turn off the auto standby mode when you use the VCR or DVD recorder to watch a cable tv program. Refer to the user manual of the VCR or DVD recorder.

If the VCR or DVD recorder records a television program, you watch the recorded channel.

Problem	Tip
No image or wrong image on TV3	<ul style="list-style-type: none"> <li>• Make sure SCART cables are firmly inserted.</li> <li>• Make sure the receiver (A) is connected to TV3.</li> <li>• Make sure both receiver (A) and transmitter are switched on.</li> <li>• Make sure the video source is switched on.</li> <li>• Make sure the correct SCART input on TV3 is selected.</li> <li>• Select the correct video source with +/- on the receiver (A).               <ul style="list-style-type: none"> <li>&gt; <i>In combination with the SLV5400 transmitter.</i></li> </ul> </li> <li>• If the video source gives proper image on TV1: Make sure the video source gives video signal in CVBS mode. See its user manual</li> <li>• Change the wireless channel that is used for communication. See page 6.</li> <li>• The receiver (A) is out of range of the transmitter. The number of walls and ceilings in between the receiver (A) and transmitter restrict the distance.</li> </ul>
Interference in the image on TV3	<ul style="list-style-type: none"> <li>• Slightly change the position of the receiver (A) or the transmitter.</li> <li>• Change the wireless channel that is used for communication. See page 6.</li> <li>• The receiver (A) is out of range of the transmitter. The number of walls and ceilings in between the receiver (A) and transmitter restrict the distance.</li> </ul>



<b>Problem</b>	<b>Tip</b>
The video sources do not respond to the remote control commands from TV3	<ul style="list-style-type: none"><li>• Point the remote control directly to the receiver (A).</li><li>• Replace the batteries of the remote controls with new ones.</li><li>• Install the remote control blaster cord. See the user manual of the Wireless TV Link.</li><li>• The maximum operating distance of the remote control is 5 m.</li></ul>
The image of the video source disappears on TV3	<ul style="list-style-type: none"><li>• Turn off the auto standby mode of the video source. See its user manual.</li><li>• Follow the instructions to reconnect the video sources. See the quick start guide.</li></ul>
Buzzing sound when you use the remote control.	<ul style="list-style-type: none"><li>• Slightly change the position of the receiver or the transmitter until the buzzing sound stops.</li><li>• Sometimes it is not possible to solve the problem.</li></ul>
Black and white image with S-VHS VCR.	<ul style="list-style-type: none"><li>• Check if the SCART connector of the S-VHS VCR gives signal in CVBS. See its user manual.</li></ul>

## Health and safety

The product transmits and receives radio waves when it is switched on. The product complies with the standards that are defined for it.

The quality of the image can be influenced by the use of microwave ovens. Other wireless systems (Bluetooth, wireless networks etc.) can also have influence on the quality of the image.

The product is based on RF technology. Therefore the product can suffer from the same kinds of interference as GSMs, portable radios and other RF-based products.

## Maintenance and service

If your product is defective and needs repair, but your warranty period has expired, you can consult our specialists (see the rear page)

## Recycling and disposal

All redundant packaging material has been omitted. Your set consists of materials that can be recycled if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, batteries and old equipment.

### Disposal of your old product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.



## Warranty

### One year limited warranty

For 12 month from the date of purchase the manufacturer repairs or replaces any faulty product free of charge, subject to proof of purchase, provided the fault has not been caused by improper handling or use, and provided the product has not been damaged, whether as a result of an accident or of repair by others than the manufacturer.

## Glossary

CVBS	Video standard for showing colors on a TV.
Easylink	Gives a VCR or DVD recorder the possibility to automatically take over the preset programming of the TV.
RF technology	Technology based on radio frequency, used for wireless connections.
SCART	Single connector to easily connect audio and video equipment.



# PHILIPS

AQ95-56F-614KR  
*(report No.)*

## EC DECLARATION OF CONFORMITY

We , Philips Consumer Electronics B.V., P&A CC: Building SBP6  
*(manufacturer's name)*

P.O.Box 80002, 5600 JB Eindhoven, The Netherlands  
*(manufacturer's address)*

declare under our responsibility that the electrical product:

Philips  
*(name)*

SLV5405 -/00 -/05 ( Rx: SLV5405 -/00-R )  
*(type or model)*

Wireless TV link receiver  
*(product description)*

to which this declaration relates is in conformity with the following standards:

EN 300 440 part 1&2, (2001-9).  
EN 300 220-1 v1.3.1  
EN 301 489-1 V1.2.1  
EN 301 489-3 V1.2.1  
EN 60065:1998 ed.6  
EN 60950:2000

*(title and/or number and date of issue of the standards)*

following the provisions of 1999/5/EC ( R&TTE Directive)  
and is produced by a manufacturing organisation on ISO 9000 level.

Eindhoven, 27/06/2005

*(place, date)*

K.Rysman  
Approbation manager  
*(signature, name and function)*



# Need help?

## Troubleshooting

See page 8

Online help: [www.philips.com/support](http://www.philips.com/support)

### Helpline

<b>België/Belgique/Belgien</b>	070 222 303 (€ 0.17)
<b>Danmark</b>	3525 8759
<b>Deutschland</b>	0900 1101211 (€ 0.12)
<b>España</b>	902 888 784 (€ 0.15)
<b>France</b>	08 9165 0005 (€ 0.23)
<b>Ελλάδα</b>	0 0800 3122 1280
<b>Ireland</b>	01 764 0292
<b>Italia</b>	899 23 45 06 (€ 0.25)
<b>Luxemburg/Luxembourg</b>	40 6661 6544
<b>Nederland</b>	0900 8407 (€ 0.20)
<b>Norge</b>	2270 8111
<b>Österreich</b>	0900 060 827 (€ 0.20)
<b>Portugal</b>	2 1359 1442
<b>Schweiz/Suisse/Svizzera</b>	0900 001 600
<b>Suomi</b>	0600 412 001
<b>Sverige</b>	08 5792 9100
<b>UK (United Kingdom)</b>	0906 1010 016 (£ 0.15)

Specifications are subject to change without notice.

Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

2005 © Koninklijke Philips Electronics N.V. All rights reserved.

[www.philips.com](http://www.philips.com)

DFU-SLV5405-AEN-V1.0