

When calling our Authorized Service Centre for in warranty service please make reference to your model number and the manufacturing date code. This information can be found in the rating area on the body or underneath the base of your unit. The model number will follow the word Model: DCG-12BCC. The manufacturing date code is a 4 or 5 digit number. Example, 60630 would designate year, month & day (2006, June 30th).

If your Cuisinart® product should prove to be defective within the warranty period, we will repair it or, if we think it necessary, replace it. To obtain warranty service, please call our Consumer Service Centre toll-free at 1-800-472-7606 or write to:

Cuisinart Canada

156 Parkshore Drive

Brampton, Ont. L6T 5M1

To facilitate the speed and accuracy of your return, please also enclose \$10.00 for shipping and handling of the product. Please also be sure to include a return address, description of the product defect, product serial number, and any other information pertinent to the product's return. Please pay by cheque or money order.

NOTE: For added protection and secure handling of any Cuisinart® product that is being returned, we recommend you use a traceable, insured delivery service.

Cuisinart cannot be held responsible for in transit damage or for packages that are not delivered to us. Lost and/or damaged products are not covered under warranty.

Your Cuisinart® product has been manufactured to strict specifications and has been designed for use with Cuisinart® authorized accessories and replacement parts for your model.

These warranties expressly exclude any defects or damages caused by accessories, replacement parts or repair service other than those that have been authorized by Cuisinart. These warranties exclude all incidental or consequential damages.

## BEFORE RETURNING YOUR CUISINART PRODUCT

Important: If the nonconforming product is to be serviced by someone other than Cuisinart's Authorized Service Centre, please remind the servicer to call our Consumer Service Centre to ensure that the problem is properly diagnosed, the product serviced with the correct parts, and to ensure that the product is still under warranty.

## GRINDING SUGGESTIONS:

Some general guidelines for grinding are listed below. However, times will vary depending upon the amount of coffee used and your personal preference. To determine the right grind consistencies, experiment with different grinds and coffee types to suit your taste.

<b>Grind</b>	<b>Suggested Use</b>	<b>Grind Time*</b>
<b>Coarse</b>	<b>Percolator/ French Press</b>	<b>20 Seconds</b>
<b>Medium</b>	<b>Automatic Drip</b>	<b>30 Seconds</b>
<b>Fine</b>	<b>Espresso</b>	<b>40 Seconds</b>

**\*based on full capacity**

## MEASUREMENT SUGGESTIONS:

For the richest coffee flavour, we suggest using one rounded table-spoon (15 ml) of ground coffee for every 5 ounces (148 ml) of water.

The measurement markings in the grinder bowl indicate reference measurements. Fill beans to the marking level indicated by number of cups desired.

For example, when making automatic drip coffee, if you fill the bowl with beans to the maximum 18 cup marking, you will have enough ground coffee for 18 cups (2.6 L).

Note: These markings are approximate. Experiment with different quantities to determine what works best.

© 2006 Cuisinart

Cuisinart® is a registered trademark of Cuisinart

Cuisinart Canada

156 Parkshore Drive

Brampton, Ontario L6T 5M1


Visit our Website: [www.cuisinart.ca](http://www.cuisinart.ca)

Consumer Call Centre E-mail: [Consumer\\_Canada@Conair.com](mailto:Consumer_Canada@Conair.com)

Printed in China.

03CC18060

# Cuisinart®

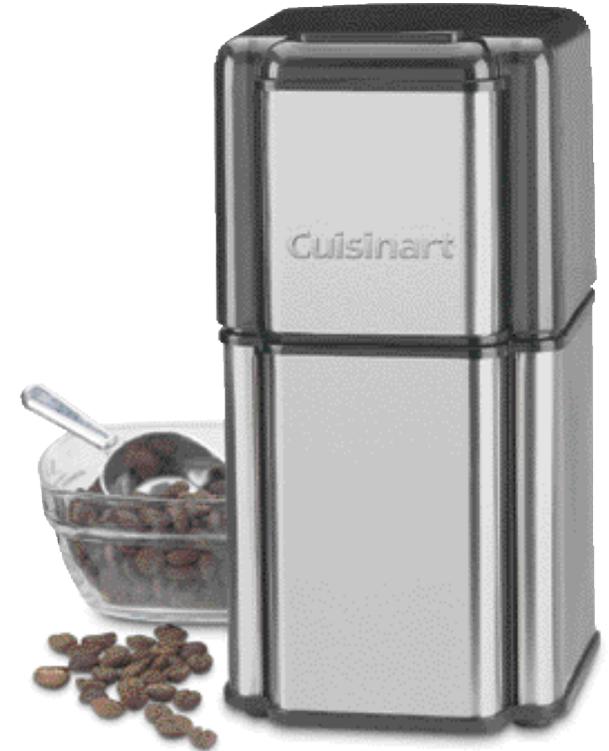

Grind Central™ Stainless Coffee Grinder

DCG-12BCC

IB-4557FA-CAN-B

---

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. **READ ALL INSTRUCTIONS.**
2. To protect against risk of electrical shock, do not immerse cord, plug or grinder in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, before removing coffee and before cleaning.
5. Avoid contacting moving parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized Cuisinart service facility for examination, repair, or mechanical or electrical adjustment.
7. The use of attachments not recommended or sold by Cuisinart may cause fire, electrical shock, or risk of injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. heek hopper for presence of foreign objects before using.
11. Do not use appliance for other than intended use.

# SAVE THESE INSTRUCTIONS

**NOTICE:** This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

## OPERATING INSTRUCTIONS

1. Plug cord into outlet.
2. Remove lid from base of grinder.
3. Fill stainless steel bowl with desired quantity of beans. Measure beans in bowl using measurement markings. Do not fill beans above the "max" fill line at top of the stainless steel bowl (max fill is equal to 90 grams).

4. Make sure the grinding bowl is in the locked position, then place the lid onto grinder base.
5. Press and hold on/off button to begin grinding. Please note: A safety feature of this grinder does not allow it to operate unless the lid is in place.
6. Grind until beans are ground to desired consistency. To stop grinding, release pressure from on/off button.
7. Remove plug from outlet.
8. Measure coffee as desired. See measurement suggestions on reverse.
9. To store unused ground coffee, remove grinding bowl and cover with storage lid. Refrigerate.

## FOR HOUSEHOLD

## USE ONLY

## CLEANING/STORAGE INSTRUCTIONS


1. Be sure that grinder plug has been removed from outlet.
2. All removable parts are dishwasher safe on the top rack. Do not put parts on bottom shelf. Never immerse the grinder base unit in water or other liquid.
3. Store excess cord by pushing a section at a time into the cord storage area in the base of the unit.

## WARRANTY 18-MONTH LIMITED WARRANTY

This warranty supersedes all previous warranties on this Cuisinart® product. This warranty is available to consumers only. You are a consumer if you own a Cuisinart® product that was purchased at retail for personal, family or household use. This warranty is not available to retailers or other commercial purchasers or owners.

We warrant that this Cuisinart® product will be free of defects in material or workmanship under normal home use for 18-months from the date of original purchase.

For warranty purposes, we would like to suggest that you register your product on-line at [www.cuisinart.ca](http://www.cuisinart.ca) to facilitate verification of the date of original purchase. However, should you not wish to register on-line we recommend the consumer to maintain original receipt indicating proof of purchase. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture.

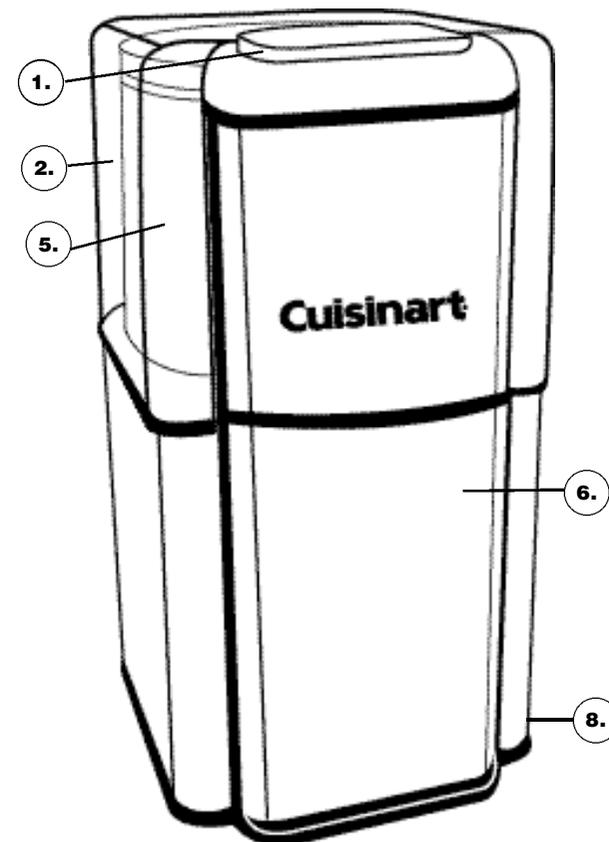

- 
- |  |  |
|--|--|
| <b>1. On/Off Button</b>                      | <b>5. Stainless Steel Removable Bowl</b> |
| <b>2. Cover</b>                              | <b>6. Grinder Base</b>                   |
| <b>3. Stainless Steel Blades (not shown)</b> | <b>7. Storage Lid (not shown)</b>        |
| <b>4. Measurement Markings (not shown)</b>   | <b>8. Cord Storage</b>                   |
-