

Model # 7678T 7639T

Triplet Stroller

Instruction Manual

Triplet Stroller

02.06

⚠ WARNING: Please follow all of these instructions to ensure the safety of your children. Keep these instructions for future reference.

⚠ WARNING: Failure to follow these instructions could result in serious injury or death. Avoid serious injury from falling or sliding out. Always use the safety belts and insure that the children are properly positioned according to these instructions.

⚠ WARNING: Never leave children unattended.


- Purses, shopping bags, parcels, diaper bags or accessory items may change the balance of the stroller and cause hazardous unstable conditions.
- The maximum weight that can be carried in the basket is 5 lbs and in the parent tray is 3 lbs. Excessive weight may cause a hazardous unstable condition to exist.
- Be certain the stroller is fully erect and latched in the open position before allowing the children near the stroller.
- Use of the stroller with three (3) children weighing more than 45 pounds each, or children totaling more than 135 pounds, will cause excessive wear and stress on the stroller and may cause a hazardous unstable condition to exist.
- DO NOT use the stroller on stairways or escalators.
- Never allow your stroller to be used as a toy
- To clean use only mild household soap or detergent and warm water on a sponge or clean cloth.
- Check your stroller for loose screws, worn parts, torn material or stitching on a regular basis. Replace or repair parts as needed
- Discontinue use of stroller should it malfunction or become damaged. Please contact our customer service Parts Hotline to arrange for repair or obtain replacement parts.

Please: If you experience any difficulty with the use of our product or have a question regarding these instructions, please contact our Customer Service Department at (800) 328-7363 between the hours of 8:00 and 4:30 Pacific Coast Time. Please do not return the product to the store as once it is returned it cannot be re-sold and the materials and energy used to make it are wasted.

To contact us:

BABY TREND, INC.
1567 S. Campus Ave.
Ontario, CA 91761

Parts Hotline:
(800) 328-7363
8:00am to 4:30pm Pacific Coast Time

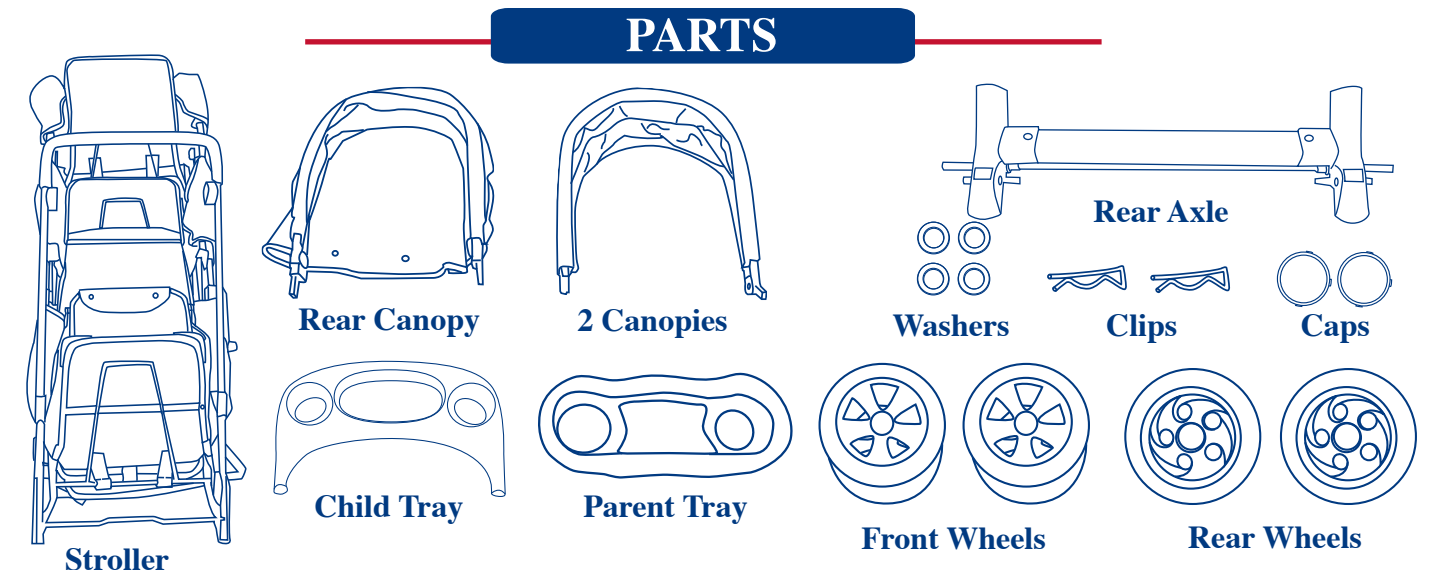

ASSEMBLING

TO ENSURE SAFE OPERATION OF YOUR STROLLER, PLEASE FOLLOW THESE INSTRUCTIONS CAREFULLY. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

ASSEMBLY

1. Remove stroller from box. The front wheels, rear wheels, child tray, parent tray and canopies need to be installed prior to use.
2. To attach the front wheels, unfold stroller as described in the section following. Lift front of stroller and snap each of the front wheels onto the wheel casting steel bayonet. Ensure that the wheels are firmly locked into place. Please see figure 1.
3. Assemble the rear wheels to the rear axle assembly as shown in figure 2a. Slide washer onto axle. Slide wheel onto axle. Slide the other washer onto axle. Secure wheel with the locking clip. Snap wheel cap into place. Lean the stroller forward to rest on the front wheels. To attach the rear wheels, position the rear axle and wheel assembly such that the brake levers are facing to the rear of the stroller. Press the rear wheel assembly onto the rear frame tubes being careful that the push buttons on the forward side of each rear tube engage the hole on the forward side of each rear wheel housing. Pull on the rear wheel assembly to ensure that it is securely attached to the stroller. Please see figure 2b.

Ensure that the wheels are firmly locked into place. Do Not use the stroller if the wheels are not locked into place, but rather contact our customer service department immediately at (800) 328-7363, between the hours of 8:00am and 4:30pm PCT, for assistance

4. Attach the canopies by inserting the male plastic fitting on the bottom of the canopy into the female plastic fitting on either side of the respective seat. See figure 3. The rear seat canopy has a skirt that must be snapped to the rear seat seatback.
5. To attach the front tray, push the tray onto the front tubes of the stroller frame until the tray locks into place. To remove the front tray, push the small metal ball located on each side

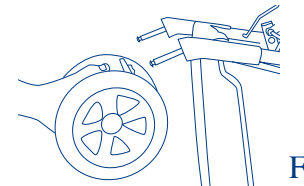


Figure 1.

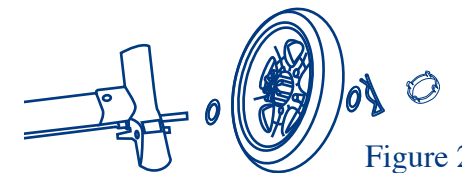


Figure 2a.

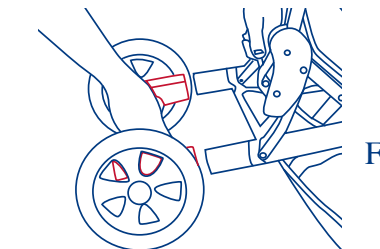


Figure 2b.

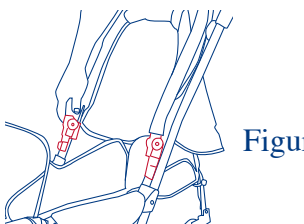


Figure 3.

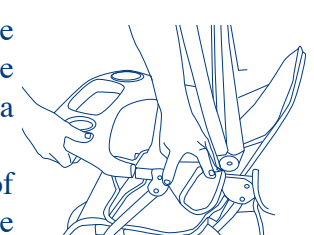


Figure 4.

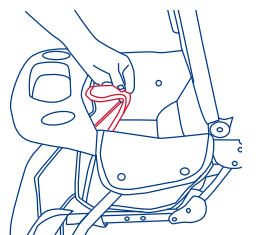


Figure 4a.

of the tray with a small object such as a closed ballpoint pen. Simultaneously pull outward on the tray until removed. See figure 4. Insert the fabric crotch pad into the slot on the child tray and snap together. See figure 4a.

6. To attach the parent tray, position the tray so that the warning statement on the inside can be read from the normal position of pushing the stroller. Push the tray male end fittings into the plastic female fittings on the inside of the stroller handle. Check that the tray is securely latched in place. Please see figure 5.
5. To remove parent tray, pull upward on the tray.

WARNING: Do not place hot liquids in the parent tray. Hot liquids can burn your child. Do not place more than 3 pounds in the tray as it may cause a hazardous unstable condition to exist.

TO UNFOLD STROLLER

1. Disengage the side locking latch located near the top of the stroller handle on the right side. Please see figure 16.
2. Place one hand on the handlebar and one hand on the front child tray and push your hands apart until the stroller is unfolded and locked. Please see figure 6. The stroller will lock into the open position automatically. Please check that the stroller has locked open before placing your children in the stroller.
3. Pull the canopies forward until fully open. The rear seat canopy must be snapped to the back of the rear seat, on both the left and right sides.

SEATBACK POSITIONING

The front and middle seats have a 2-position adjustment. The rear seat has a 3-position adjustment: upright, semi-recline and reclined. To adjust the recline of any seat, pull up on the release wire until the latch is released and place the seat back in the desired position. Ensure that seat back is locked. See figure 7.

WARNING: Child may slip into leg openings and strangle. Never use the rear seat's fully reclined position unless you close the footrest opening as follows:

1. Remove the boot from the rear pouch located on the back of the middle seat.
2. Snap the sides of the boot to the outside of the side panels of the rear seat. See figure 8a.
3. Snap the boot to the underside of the seat pad of the rear seat. See figure 8b. Please ensure that when completed

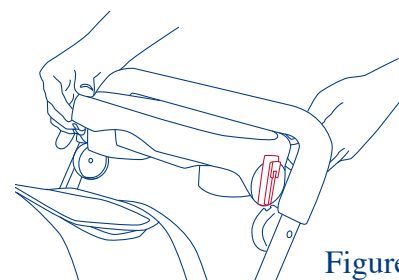


Figure 5.

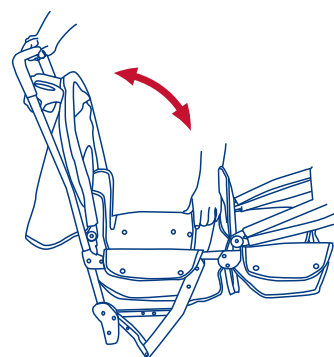


Figure 6.

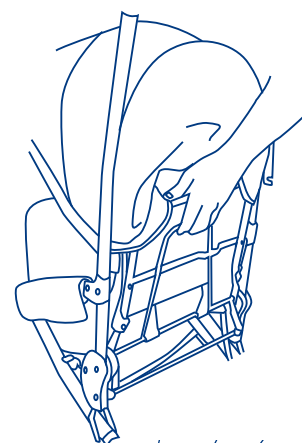


Figure 7.

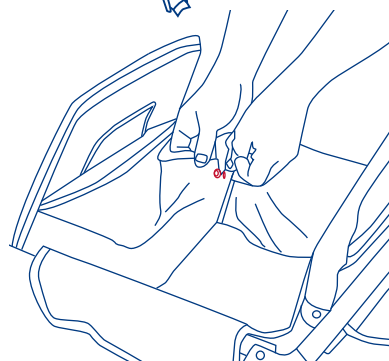


Figure 8a.

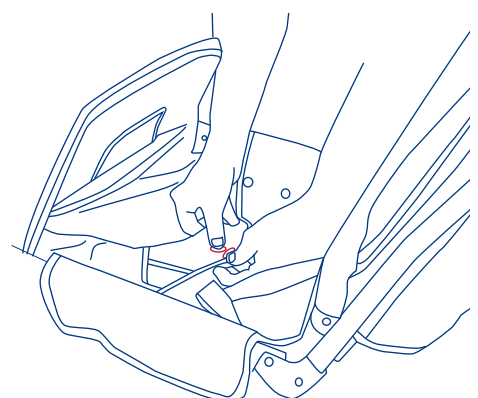


Figure 8b.

the footrest area is completely closed off.

FOOTRESTS

Footrests have 2 positions: lowered and raised. To raise, lift the footrest and hook the underneath support bar into the hooks on the underside of the footrest. See figure 9.

BRAKES

To engage brakes, apply light downward pressure to the brake lever located on the insides of both the left and right wheels. To release, gently lift up on the brake lever. See figure 10. Always set brakes when the stroller is not being pushed so that the stroller will not roll away. Never leave stroller unattended on a hill or incline as the stroller may slide down the hill.

CANOPIES

All three canopies are removable. To remove a canopy, depress the retainer clip located on the inside of the canopy base while applying light upward pressure to the canopy frame. The canopy should slide out easily if the retainer clip is completely depressed. If you experience difficulty, apply increased pressure on the retaining clip and not on the canopy frame. Repeat for the opposite side. See figure 11.

SEAT BELTS

WARNING: Avoid serious injury from falling or sliding out. Always use the seat belts.

1. The shoulder straps of the 5-point harness has 2 attachment positions. Select the loop position that places the shoulder strap level with, or below the top of the child's shoulder and feed the shoulder harness under the correct loop. Please see figure 11a.
2. Carefully place the child in the stroller seat and bring the safety harness around the child's waist and over the shoulders. Place the crotch strap and between the child's legs. Insert the male end of each shoulder / waist belt into the buckle on the crotch strap. Tighten the harness to be snug around the child's waist and over the child's shoulders. Please see figure 12.
3. To release, apply pressure to both sides of each male clip until the clip is released. This process requires a moderate amount of effort so as to prevent an accidental release by your child. NOTE: Buckles may be hard to release when 1st used.

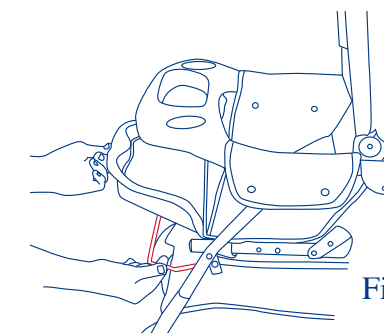


Figure 9.

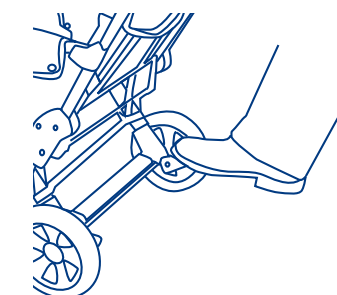


Figure 10.

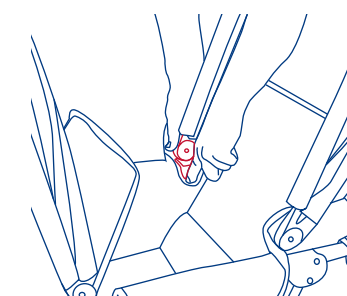


Figure 11.

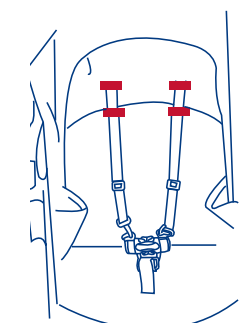


Figure 12.

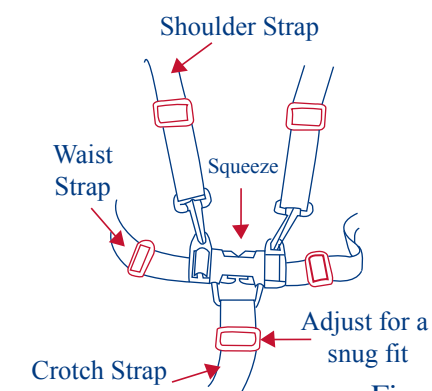


Figure 12.

TO FOLD STROLLER

1. Rotate the front and middle canopies forward as shown in figure 13. The middle canopy should not be folded down completely as it may catch on the front seat when folding.
2. The front wheels must be rotated away from the stroller to allow the stroller to fold completely. This is best accomplished by pulling the stroller backwards for a foot or so.
3. Press downward on the fold latch crossbar, located behind the rear seat as shown in figure 14, while pushing forward on the handle.
4. Release the red second fold lock located on the left side of the stroller by lifting upward on the lock as shown in figure 15. Continue folding the stroller until completely folded.
5. Engage the folding lock, located on the right side of the stroller near the top of the handle, by hooking the latch over the rivet that protrudes from the stroller upper frame just behind the

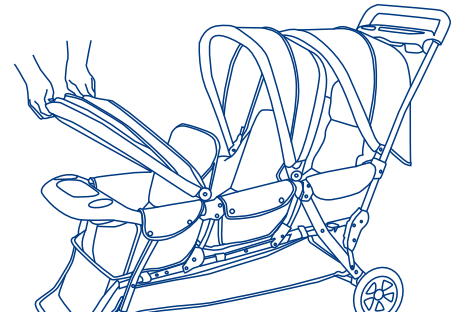


Figure 13.

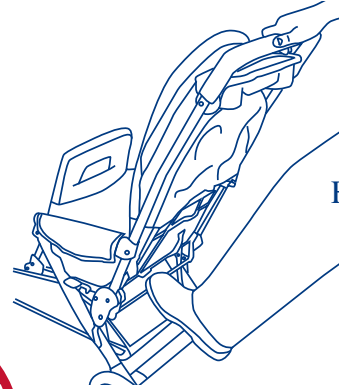


Figure 14.

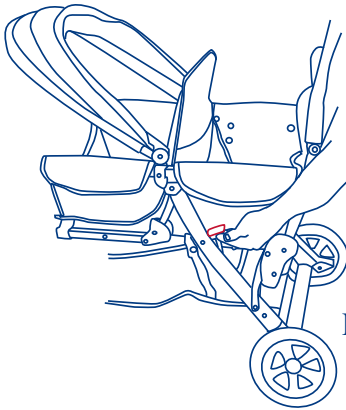


Figure 15.

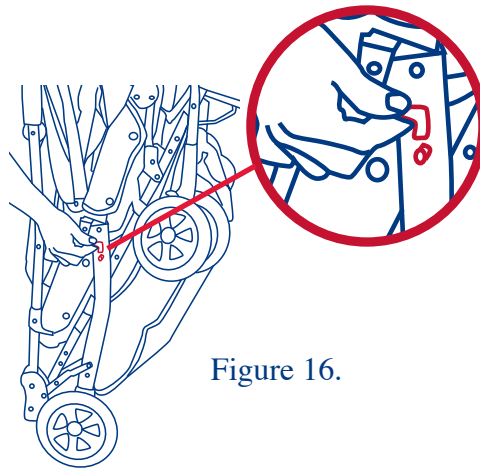


Figure 16.




middle seat. See figure 16.


IF YOU EXPERIENCE ANY DIFFICULTY IN USING THIS PRODUCT, PLEASE CONTACT OUR CUSTOMER SERVICE DEPARTMENT AT (800) 328-7363 BETWEEN THE HOURS OF 8:00AM

WARNING

Exercise care when folding the stroller

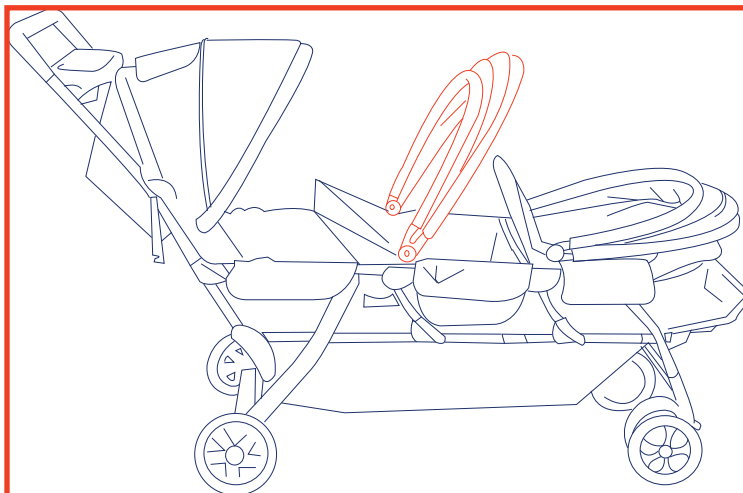

Place the center canopy in this position before folding. Once the stroller is folded, you can push the canopy down completely.

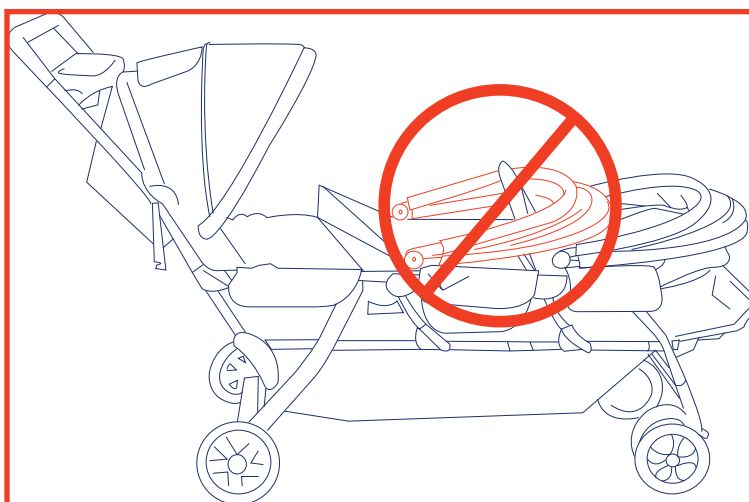

DO NOT place the canopy in this position prior to folding the stroller: the front seat may catch the canopy and become damaged.