

IMPRESSA
if you love coffee



Art. 65478 – XF70 GB – 12/2/2005

IMPRESSA XF70
Short operating instructions

Control elements



Control elements

1. Rotary Switch
2. Illuminated ring
3. ON/OFF key
4. Programming key
5. Draw-off key 1 cup
6. Draw-off key 2 cups
7. Maintenance key
8. Steam pre-selection key
9. Display dialog system
10. Water tank with carrying handle
11. Filler funnel for pre-ground coffee
12. Bean tank cover
13. Aroma preservation cover
14. Steam/hot water draw-off valve
15. Replaceable 2-stage frothing jet
16. Replaceable hot water nozzle mounted in illustration
17. Height-adjustable coffee spout
18. Coffee grounds container
19. Drip grate
20. Drip tray
21. Power Switch
22. Metal shelf

First use



- Press power switch (I) (on rear)
- Fill bean tank
- Touch symbol



Display text: SPRACHE – DEUTSCH

- Turn the Rotary Switch until the required language is displayed
- Confirm selected language by pressing the Rotary Switch
- Lift out water tank
- Fill water tank and place back into the machine



Display text: OPEN TAP

- Place a receptacle (ca. 1 litre) under the hot water nozzle
- Turn tap to position
- Turn it back to the initial position when display prompts you to do so




Display text: PRESS – MAINT.

- Place receptacle under height-adjustable coffee spout
- Touch symbol when display prompts you to do so

The machine is ready for use

Insert filter (first use)

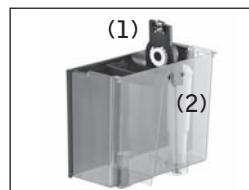

- Remove water tank and empty it
- Flip up cartridge (1) holder
- Insert filter cartridge (2) into water tank, applying slight pressure
- Close cartridge holder (1) (engages audibly)
- Fill water tank and insert



- Hold Rotary Switch down until the display shows FILTER
- Confirm setting by pressing the Rotary Switch



- Turn Rotary Switch until the display shows YES
- Confirm setting by pressing the Rotary Switch



- Place a receptacle (ca. 1 litre) under the hot water nozzle
- Turn tap to position
- Turn it back to the initial position when display prompts you to do so

The machine is ready for use

Cleaning (duration: approx. 15 minutes)



Display text: READY - CLEAN

- Touch the maintenance symbol until the display shows EMPTY - TRAY
- Empty drip and grounds tray and place back into the machine



- Remove drip tray
- Place a receptacle (ca. 1 litre) under the coffee spout
- Touch the maintenance symbol



- Drop an original JURA cleaning tablet into the filler funnel for ground coffee when display prompts you to do so
- Close lid
- Touch the maintenance symbol



- Empty drip and grounds tray and place back into machine when display prompts you to do so
- Wipe out filler funnel for ground coffee with a dry cloth after the cleaning program has finished.

The machine is ready for use


Changing the filter



Display text: READY - FILTER

NOTE:

- After having used 50 litres of water or after two months at the latest, the filter cartridge will be used up.

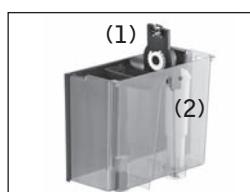

- Touch symbol to switch machine off
- Touch maintenance symbol until the display shows CHG FILTER - OPEN TAP

- Remove and empty water tank
- Flip up cartridge holder (1)
- Remove old CLARIS plus filter cartridge from the tank
- Place new filter cartridge (2) into water tank, applying slight pressure
- Close cartridge holder (1) (engages audibly)

- Fill water tank and place back into machine
- Place a receptacle (ca. 1 litre) under the hot water nozzle
- Turn tap to position
- Turn it back to the initial position when display prompts you to do so

The machine is ready for use

Decalcifying (duration: approx. 40 minutes)



Display text: READY - DECALCIFY

- Touch symbol to switch machine off



- Touch maintenance symbol until the display shows EMPTY - TRAY
- Empty drip and grounds tray and place back into machine
- Remove 2-stage frothing jet or hot water nozzle



- Remove water tank and empty it
- Completely dissolve contents of a blister (3 tablets) in 0.6 litres of water
- Pour solution into the empty water tank
- Place water tank back into machine



- Place a receptacle (ca. 1 litre) under the spout
- Turn tap to position
- Turn it back to the initial position when display prompts you to do so

Decalcifying (continuation)



- Empty drip and grounds tray and place back into machine when display prompts you to do so
- Rinse water tank well, fill with cold, fresh tap water and place it back into the machine



- Place receptacle under spout
- Turn tap to position
- Turn it back to the initial position when display prompts you to do so



- Empty drip and grounds tray and place back into machine when display prompts you to do so
- Fit 2-stage frothing jet or hot water nozzle



- Shift receptacle under height-adjustable coffee spout
- Touch maintenance symbol when display prompts you to do so

The machine is ready for use


Cleaning the 2-stage frothing jet

Notes

TIP:

To ensure perfect operation of the 2-stage frothing jet, we recommend you clean it regularly.

- Hold the nozzle at the top and at the bottom end or use a 7 mm open-ended spanner
- Screw the nozzle apart

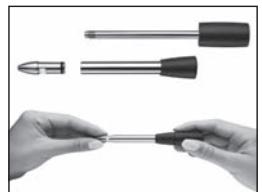

- Thoroughly rinse the 3 parts under running water

NOTE:

The display will not prompt you to clean the 2-stage frothing jet