

TQ600

User Manual



**Proximity Badge
Terminal**

**Fingerprint
Terminal**



FCC Warning:

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his or her own expense.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Canada

This Class A digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe A est conforme à la norme NMB-003 Du Canada.

Lithium Battery Caution:

The circuit board on this terminal is populated with a lithium battery to protect data or programs stored in the Random Access Memory (RAM). Do not, under any circumstances, attempt to replace the lithium battery in the terminal. Failure to comply may invalidate your warranty. Battery replacement should be done by qualified personnel wearing the proper eye protection.

CAUTION: Danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instruction.

<p>This product utilizes a battery that contains Perchlorate Material. Perchlorate Material – special handling may apply, See www.dtsc.ca.gov/hazardouswaste/perchlorate</p>
--

Declaration Of Conformity According To EMC Directive 89/336/EEC

We declare under our sole responsibility that the U600 Finger Print reader and/or U600P Proximity reader and/or data recording equipment to which this declaration relates are in conformity with the following standards: EN61000-6-1, EN55022-2006, EN55024-1998+A1:2001+A2:2003. I, the undersigned, hereby declare that the equipment specified above conforms to the above directive and standards.

Raleigh, North Carolina USA

September 15, 2008

All Rights Reserved. © COPYRIGHT 2008

Acroprint Time Recorder Company



W. Glenn Robbins

Contents

Getting Started	1
Terminal Configurations.....	2
Operator Panel LEDs	3
Menu Tree	4
Basic Concepts	8
User Enrollment: Fingerprints.....	8
User Identification / Verification	9
Threshold.....	9
User ID (PIN number).....	11
Privilege Levels.....	11
Start-up	12
Enrolling – Fingerprint Terminals	13
Fingerprint Enrollment Tips	13
Enrolling Users – Fingerprint Terminals	16
Fingerprint Enrollment	17
Testing a Fingerprint Enrollment.....	19
Enrolling Auxillary Fingerprints	19
Password Enrollment.....	20
Fingerprint & Password	22
User Verification Types.....	24
Fingerprint Verification	24

Password Verification	27
Enrolling – Proximity Terminals	29
Proximity Card Enrollment.....	29
Password Enrollment	30
Proximity Card & Password Enrollment	32
Privilege Levels	34
Enroll w/ Privilege Level.....	35
Delete User Data	37
Options.....	38
System Options	39
Set Date and Time.....	39
Changing the Time Format.....	40
Changing the Language	40
Changing the Date Format	41
Advanced Options	42
Power Manager	44
Communication Options	46
Log Options.....	47
Auto Test	48
System Information	49
View Time and Attendance Records	51

Review All Attendance Records	51
Review Individual Attendance Records	52
Browsing Attendance Records	53
Cleaning the TQ600.....	55
Troubleshooting	56
Appendix.....	58
USB Flash Drive Management	58
Bell Schedule	58
Reserve Battery (Mini-UPS).....	59
Daylight Saving Time (DST)	60
Work Codes	61

Getting Started

Important!

Do not attempt to service the TQ600 yourself. Opening the terminal will void the warranty. Always follow the instructions in the user guide.

- Do not place the terminal in direct sunlight. Bright light may significantly affect fingerprint reads or cause fingerprint verification to fail. The terminal is designed for indoor use in a temperature range of 32-104° F (0-40° C). Keep the terminal away from heat sources such as radiators.
- The terminal warranty does not cover defects or damages arising from improper installation, improper storage, abuse, ordinary wear or unauthorized service.

Terminal Configurations

The TQ600 is available with either a fingerprint sensor or a proximity badge sensor. The fingerprint sensor provides the most secure user verification as it uniquely identifies each user. The proximity (“Prox”) badge is a faster method of verifying a user since you only need place your badge near the front of the terminal for verification but security could be circumvented since a user other than the owner of the badge can use the badge.

This manual provides information for both terminal configurations. Sections specifically about fingerprint verification or proximity badge verification will pertain only to the corresponding terminal.

Operator Panel LEDs

1) Normal Operation.

Green light blinks each second.

2) Error Condition (Fingerprint or Badge not Enrolled)


Red light shines for 2 seconds

3) Transaction (Fingerprint or Badge Read) successful

Green light shines for 2 seconds

Note: Contact Acroprint support if you receive any LED sequence other than those listed above.

Menu Tree

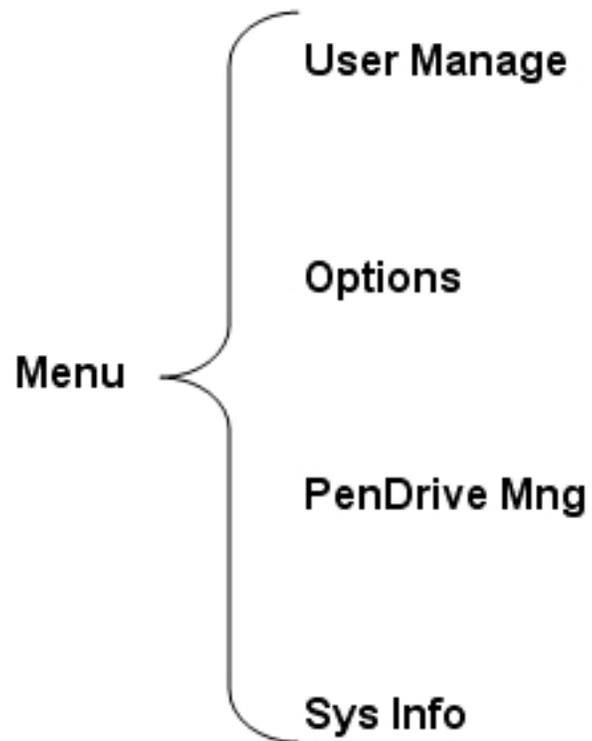

Menu Level 1

Menu Level 2

Menu Level 3

User Manage

Enroll User


Reg RFID (*Prox*)
Enroll FP (*FIU*)
Enroll Pwd
Reg Card&Pwd (*Prox*)
FP & Pwd (*FIU*)

Enroll Admin

Reg RFID (*Prox*)
Enroll FP (*FIU*)
Enroll Pwd
Reg Card&Pwd (*Prox*)
FP & Pwd (*FIU*)

Delete

Browse ATT Logs

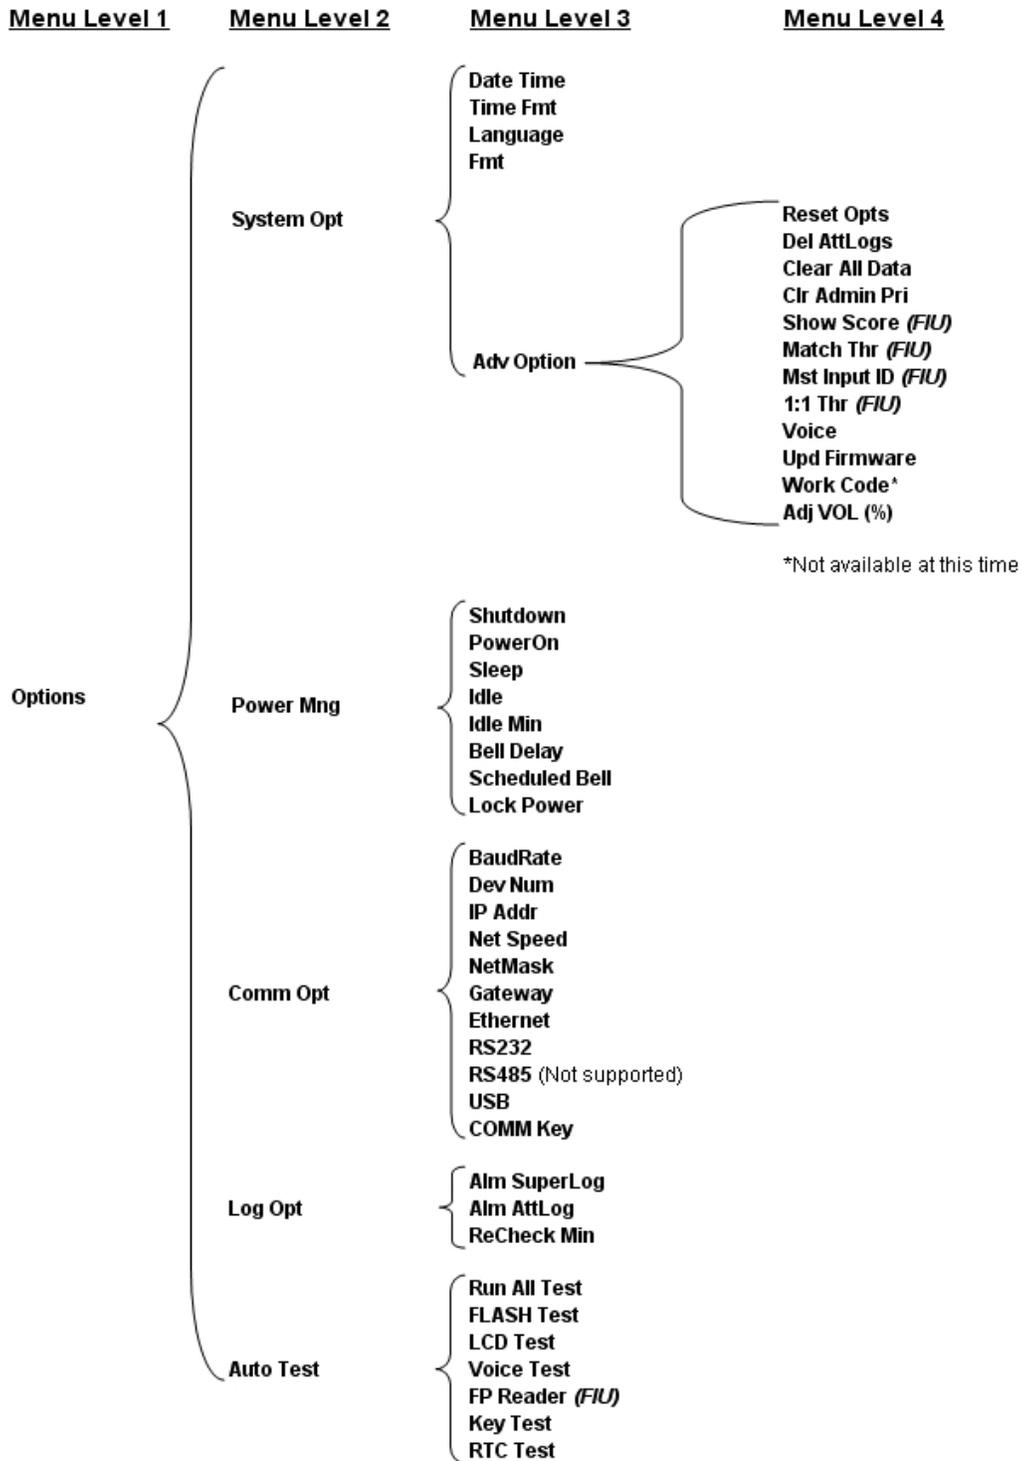

Menu Level 1

Menu Level 2

Menu Level 3

PenDrive Mng*

- DwnLoad AttLog
- DwnLoad User
- UpLoad User
- Download SMS
- Upload SMS

*Not available at this time

Sys Info

- User Cnt
- FP Cnt (*FIU*)
- Att Log
- Admin Cnt
- Pwd Usr (*FIU*)
- S Logs
- Free Space Info
- Dev Info

- User Cnt (*Prox*)
- FP Cnt (*FIU*)
- Att Log
- S Logs

- Users (100) (*Prox*)
- FPCnt (100) (*FIU*)
- AttLog (10k)
- S Logs
- Manu Time
- Serial Num
- Vendor
- Device Name
- Alg Version (*FIU*)
- Firmware Ver

Basic Concepts

This section contains definitions and descriptions of fingerprint identification concepts:

- User Enrollment: Fingerprints
- User Identification/Verification
- Threshold
- User ID (PIN Number)
- Privilege Levels
- Start-up

The two most important functions of fingerprint identification are user enrollment and user verification.

User Enrollment: Fingerprints

Enrollment is the process of capturing a user's fingerprint and storing it as a "template" in the TQ600 along with a unique five (5) digit user ID. The user's fingerprint template is created by taking three sample fingerprints on the TQ600.

Each user should enroll at least two different fingers so that if an enrolled finger is injured an alternate finger can be used. The TQ600 allows users to enroll 1-10 fingerprints.

User Identification / Verification

User identification is the process of comparing a user's fingerprint against a fingerprint template stored in the terminal. When a user's fingerprint matches a fingerprint template stored in the TQ600 the terminal will show a successful match, thus verifying the user's identity.

Threshold

The threshold is a predefined number (set by the terminal system administrator) which establishes the degree of correlation necessary for a fingerprint comparison to be deemed a match. It can be thought of as the minimum accuracy required to confirm a fingerprint match. Some biometric systems call this the "sensitivity" level. If the score resulting from a fingerprint read compared to a fingerprint template stored in the terminal exceeds the threshold the templates are approved as a "match" (though the templates themselves are not identical).

The threshold establishes a balance between False Acceptance Rate (FAR) and False Rejection Rate (FRR). FAR means the probability that a biometric system will incorrectly identify an individual or will fail to reject an impostor. FRR means the probability that a biometric system will fail to identify an enrolled individual.

The threshold value is a global setting, i.e., it is set for all users. If a user has a problem with fingerprint verification due to worn fingerprints or dry skin you may need to have the user enter their User ID in order to match their fingerprint to their stored template. This is referred to as 1:1 (one to one) verification since they are specifically comparing their fingerprint to their stored template.

Raising the threshold increases security or the probability that a successful fingerprint read accurately corresponds to the correct stored fingerprint template. Lowering the threshold increases the possibility of a false acceptance. The correct balance is vital for maximum security as well as usability.

Notice: FAR and FRR are interrelated: For example, raising the threshold reduces FAR but increases FRR, while lowering the threshold increases FAR but reduces FRR. The threshold value can be set independently for “one to many” (1:N) matching and “one to one” (1:1) matching. The default threshold for (1:N) is 35 and the default threshold for (1:1) matching is 15.

Table 1—1 Suggested Threshold Settings

FRR	FAR	One-to-Many (1:N)	One-to-One (1:1)
High	Low	45	25
Middle	Middle	35	15
Low	High	25	10

User ID (PIN number)

Before beginning fingerprint enrollment, a user is assigned a User ID number (sometimes referred to as a PIN number). This User ID number is used to recall fingerprint templates or passwords each time verification is requested.

Privilege Levels

Privilege levels are the levels at which users are authorized to access terminal functions. These levels define the authority of a user to access specified administrative functions including the ability to view, edit, add, or renew specified information categories.

Privilege levels are built-in terminal functions that can be set as required. The TQ600 has four user privilege levels: User, Enroller, Admin (administrator) and Supervisor.

- **Users** are people whose identity must be verified to record time such as punching in/out or the time spent working on a job or working in specific departments.
- **Enrollers** can enroll supervisors, administrators, enrollers and users. Enrollers can delete users. Enrollers can access “User Manage” and “System Information” menus.
- **Administrators** (Admin) can enroll supervisors, administrators, enroller and users. Administrators can delete enrollers and users. Administrators can access all operations, except “Advanced Options”.


-
- **Supervisor** is the highest authorization level. Supervisors can enroll supervisors, administrators, enrollers and users. Supervisors can delete administrators, enrollers and users. Supervisors can access all functions and change all setups.

Note: If no user has administrative privileges (enroller, administrator or supervisor) in the terminal, ALL users will be enrolled with “Supervisor” privileges.

To change a user that is currently enrolled as an administrator or enroller, delete the user and then re-enroll the user with the new privilege level.

Start-up

Press the power button (⊙) to turn the TQ600 on. The Start-up” window will appear:

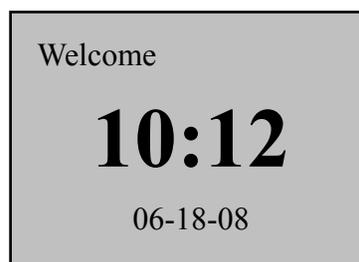

Press and hold the power button (⊙) for 2 seconds to turn off the TQ600.

Enrolling – Fingerprint Terminals

This chapter describes how to enroll and verify users on the TQ600.

The following topics are included:

- Fingerprint Enrollment Tips
- Enrolling User
- Testing an Enrollment
- Enrolling an Auxiliary Fingerprint of User
- Verifying Your Identity

Fingerprint Enrollment Tips


It is recommended that you use your index or middle finger for enrollment. If the fingerprints on your preferred hand are worn or damaged try using your other hand.

The TQ600 will require three (3) sample fingerprints to enroll a user. Place your finger in the middle of the sensor. To ensure better fingerprint reads take each fingerprint sample with slightly different positioning; one centered, one rolled slightly to the left and the last rolled slightly to the right. The different angles will help account for different finger positioning during actual use.

CORRECT finger positioning:


Place finger flat on the sensor surface

Place finger in the center of the sensor surface

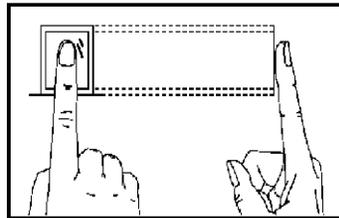


INCORRECT finger positioning:


Vertical

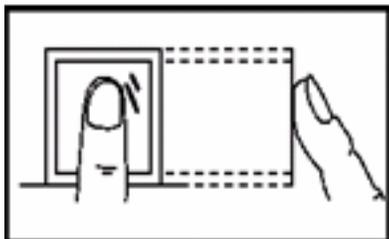


Offset

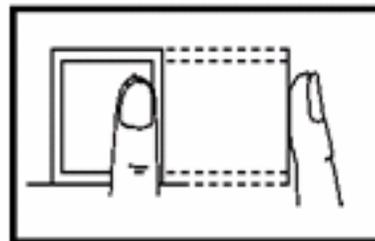

Inclined

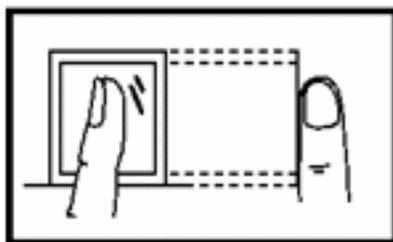

Lower

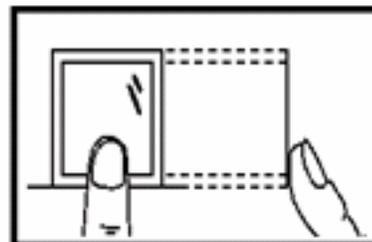

Tips for improving the quality of finger print reads:

	Correction
Dirty or Dry Finger	Clean finger with moisturizing soap or wipe with a pre-moisturized tissue (alcohol-free wipes preferably, enriched to hydrate the skin)
Not enough pressure	The user should place finger firmly and flat on the sensor surface.
How to select finger?	Use the index or middle finger to enroll; try the left hand fingers if the right hand fingerprints are worn, damaged or missing. If the user's fingers are small, select the thumb.
How to position the finger?	Place finger in the middle of the sensor; keep finger flat on the sensor and apply pressure while covering as much of the sensor window as possible; DO NOT touch the sensor in an angled or tilted position, DO NOT slide finger.
Fingerprint pattern change	For a user with a worn or injured finger, the identification can be affected. Use an alternate finger or select password verification.
Others	A few people's fingerprint quality is too poor to verify. Use the User ID & Fingerprint verification, and lower the 1:1 Threshold. Otherwise use Password verification.

Enrolling Users – Fingerprint Terminals

After configuring the TQ600 you are ready to enroll users. If there are no users on the system all users will have a privilege level of supervisor, if an administrator (Admin) is enrolled on the system they will be the only one allowed to enroll a new user.

The TQ600 provides three ways to enroll, Fingerprint Enrollment, Password Enrollment, or Fingerprint with Password Enrollment. Fingerprint Enrollment is preferable for personnel with good fingerprint definition; Fingerprint with Password is preferable for users that have difficulty verifying their finger print. Password Enrollment is necessary for users whose fingerprints are too worn or damaged for the terminal to read their fingerprint.

To start the enrollment process, identify yourself. Press [MENU], enter your ID number or fingerprint, and verify your identity.

Note: If this is the first enrollment in a new or empty system, you will not be prompted for verification.

Fingerprint Enrollment

Notes on Buttons:


F1 = ESC, use to back up in the menu or quit

F2 = ▲, use to scroll up in the menu


F3 = ▼, use to scroll down in the menu

F4= OK, use to select a menu item

1) Press [**MENU**], select “User Manage”, press [**OK**], select “Enroll User”, press [**OK**]. Three enrollment methods are displayed, select “Enroll FP”, press [**OK**]. The following screen is displayed:

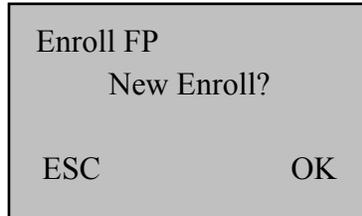

2) Press [**OK**]. The following screen is displayed:

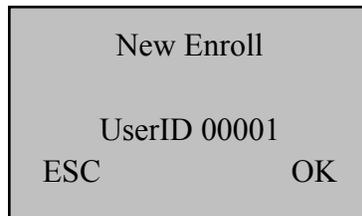

Note: The User ID (PIN number) is a 5 digit number. If you input less than 5 digits the terminal pads the User ID with 0's in front of the User ID, i.e., if you enter 11 the User ID 00011 is displayed on the terminal.

3) Input the User ID (range is 1 to 65534), press [OK].


The following appears:



New Enroll
00011-0
Place Finger...
ESC/Exit

**Note: 00011-0
The dash number (-0)
indicates the first
fingerprint.**

4) You will be prompted to take (3) samples of your fingerprint. If the test is successful three times in a row, the following appears:

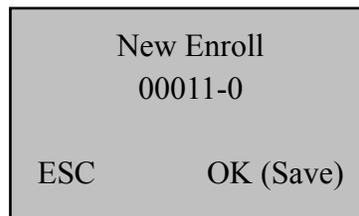

New Enroll
00011-0
ESC OK (Save)


5) Press [OK], the previous message continues to be displayed while the template is created. If your identity cannot be verified, you are prompted to try again and you must restart the verification procedure (Refer to Step 2).

Testing a Fingerprint Enrollment

Ask the user to place their finger on the fingerprint sensor. If the test was successful the enrollment is complete. If the terminal cannot read the fingerprint or if several attempts are required for the terminal to verify the fingerprint, the user should try 1:1 verification (refer to page 25).

Enrolling Auxiliary Fingerprints


It is a good practice to enroll at least two fingers for each user. Press [**MENU**], select “User Manage”, press [**OK**], select “Enroll User”, press [**OK**], select “Enroll FP”, press [**OK**], the following appears:

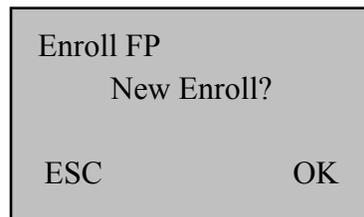

```
Enroll FP
New Enroll?

ESC          OK
```

Press [**ESC**] to cancel the new enrollment, enter the User ID (PIN number) of the user you wish to enroll an additional fingerprint for:

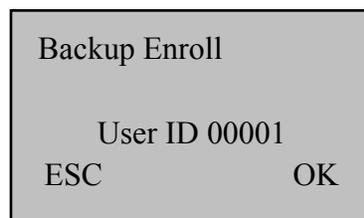


```
Backup Enroll

User ID 00001

ESC          OK
```


Password Enrollment

1) Press [**MENU**], select “User Manage”, press [**OK**], select “Enroll User”, press [**OK**]. Three enrollment methods are displayed, select “Enroll Pwd”, press [**OK**]. The following screen is displayed:

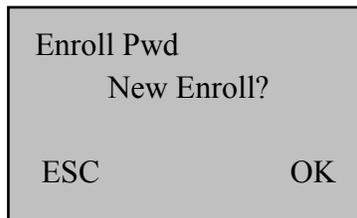


Enroll Pwd
New Enroll?
ESC OK

2) Press [**OK**] to enroll new user, the following screen is displayed:

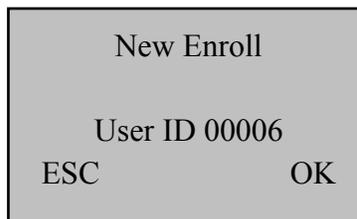


New Enroll
User ID 00006
ESC OK

3) Note: The next available User ID is displayed. Press [**OK**] to choose this ID or enter a User ID (range is 1 to 65534) & press [**OK**]. The following screen is displayed:

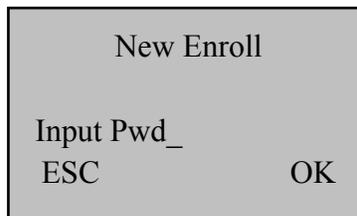

New Enroll
Input Pwd_
ESC OK

-
- 4) Input the password and affirm:

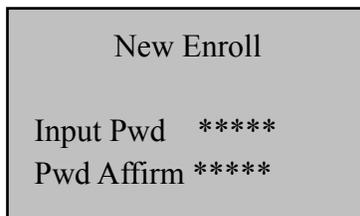


New Enroll

Input Pwd *****

Pwd Affirm *****

- 5) Press [OK], the following screen is displayed:

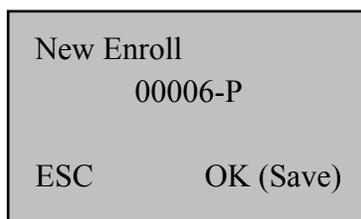

New Enroll

00006-P


ESC OK (Save)

Note: 00006-P
“-P” means password enrollment


- 6) Press [OK]. Press [ESC] to exit user enrollment or press [OK] to continue Password enrollment.

Fingerprint & Password

1) Press [**MENU**], select “User Manage”, press [**OK**], select “Enroll User”, press [**OK**]. Three enrollment methods will be displayed, select “FP & Pwd”, press [**OK**]. The following screen is displayed:

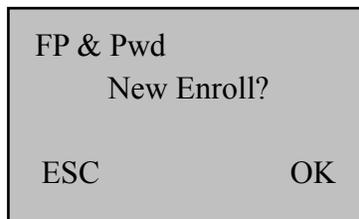

2) Press [**OK**], the following appears:

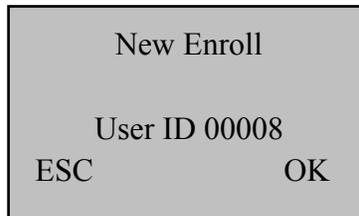

3) Press [**OK**], the following appears:



-
- 4) If the test is successful three times in a row, the following appears:

```
New Enroll
00008-0
Input Pwd *****
ESC          OK
```

- 5) Input your password, the following appears:

```
New Enroll
00008-0
Input Pwd *****
Pwd Affirm *****
```

- 6) Input the password again, press [**OK**], the following appears:

```
New Enroll
00008-0P
ESC          OK (Save)
```

Note: 0000-0P; “-0P” indicates first fingerprint and password.

- 7) Press [**OK**], the previous message continues to be displayed while the template is created.

User Verification Types


Fingerprint Verification

There are (3) fingerprint verification (“authentication”) types:

1:1 Verification (“One to One” Verification)

In this mode, a user enters their 5-digit User ID and takes a fingerprint reading. The TQ600 compares their fingerprint to the fingerprint template of the User ID that was entered, thus a 1:1 comparison. The 1:1 verification method is the fastest verification method since it only has to compare the user’s fingerprint to one template stored in the terminal.

1) In the initial interface, enter your ID number and the following appears:

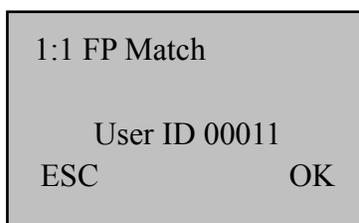

Note: The User ID is 5 digits. If you enter a number with less than 5 digits the TQ600 adds 0’s in order to create a 5 digit User ID, i.e., if you enter “11” the TQ600 will Enroll “00011”.


2) Press [OK] and the following appears:

A gray rectangular box containing the text: "FP Verify", "User ID 00011", and "Place Finger...".

FP Verify
User ID 00011
Place Finger...


3) It continues for about 0.5 seconds.

If the test is successful, the following appears:

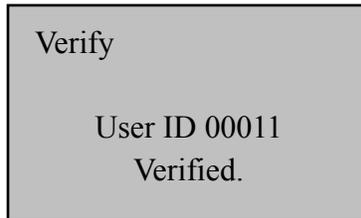A gray rectangular box containing the text: "Verify", "User ID 00011", and "Verified."

Verify
User ID 00011
Verified.

4) If your identity cannot be verified, you are prompted to try again, the following appears:

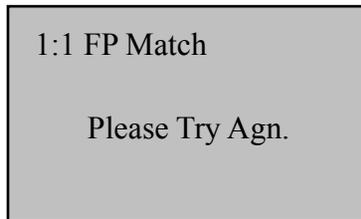A gray rectangular box containing the text: "1:1 FP Match" and "Please Try Agn."


1:1 FP Match
Please Try Agn.

It continues for about 0.5 seconds then returns to the start-up window.


1:N Verification (“One to Many” Verification)

In this mode, a user simply takes a fingerprint reading. The TQ600 compares their fingerprint to all of the fingerprint templates stored in the terminal. 1:N verification takes more time than 1:1 verification. The verification time is dependent on the number of fingerprint templates stored in the terminal.


- 1) Place finger on the sensor surface, the following appears:

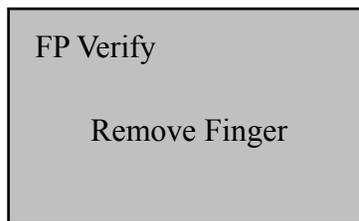

- 2) It continues for about 0.5 seconds. If the test is successful, the following appears:

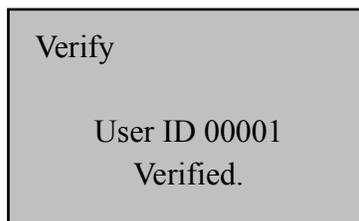

- 3) If your identity cannot be verified, you are prompted to try again, the following appears:

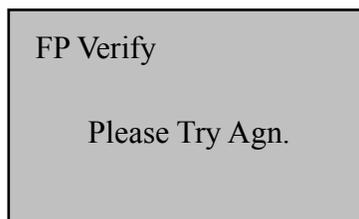


It continues for about 0.5 seconds, return to the start-up window.

Password Verification


A password 1 to 5 digits long is used to validate authentication. Password verification can be used in special cases, i.e., when all of a user's fingerprints are damaged. This method of verification does not provide the security of biometric identification and should only be used when absolutely necessary. **Note:** when a user with an enrolled password attempts (1:1) verification the TQ600 will ask for the User's password and the user will not have the option of taking a fingerprint reading.

- 1) To verify a password, enter your ID number, the following appears:

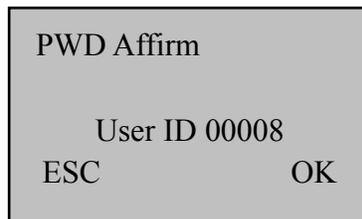


PWD Affirm
User ID 00008
ESC OK

- 2) Press [**OK**], the following appears:

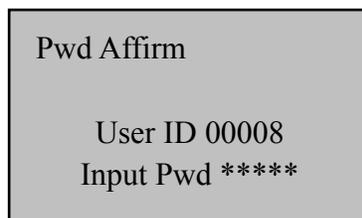


Pwd Affirm
User ID 00008
Input Pwd *****

- 3) Input correct password, press [**OK**], the following appears:

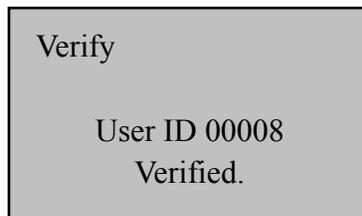

Verify
User ID 00008
Verified.

4) If the password cannot be verified, the following appears:

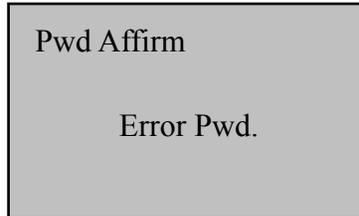


Enrolling – Proximity Terminals

This chapter describes how to enroll users on the TQ600P.


Proximity Card Enrollment

- 1) Press [MENU], select “User Manage”, press [OK], select “Enroll User”, press [OK]. The following screen is displayed:

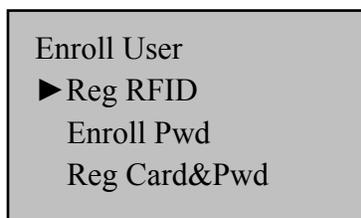


Enroll User
▶ Reg RFID
Enroll Pwd
Reg Card&Pwd

- 2) Select “Reg RFID”, press [OK]. The following screen is displayed:

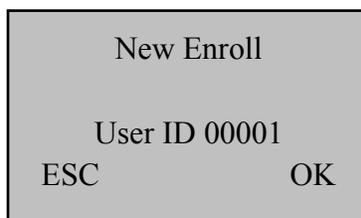


New Enroll
User ID 00001
ESC OK

- 3) Enter a User ID (PIN number) and scan a proximity badge that hasn't been assigned to any users. The following screen is displayed:

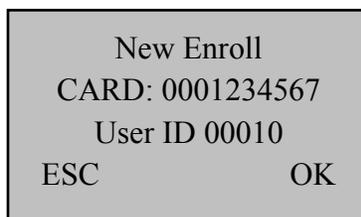

New Enroll
CARD: 0001234567
User ID 00010
ESC OK

4) Press [**OK**] to complete the enrollment. The following screen appears:

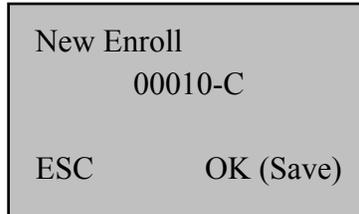


New Enroll
00010-C
ESC OK (Save)

5) Press [**OK**] to save enrollment. Press [**ESC**] to cancel the new enrollment.


Password Enrollment

1) Press [**MENU**], select “User Manage”, press [**OK**], select “Enroll User”, press [**OK**]. Three enrollment methods are displayed, choose “Enroll Pwd”, press [**OK**]. The following screen is displayed:

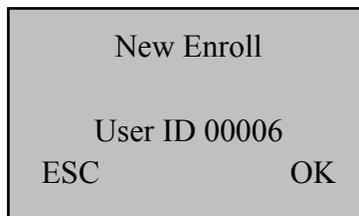


New Enroll
User ID 00006
ESC OK

2) The next available User ID is displayed. Press [OK] to choose this ID or enter a User ID (range is 1 to 65534) & press [OK]. The following screen is displayed:

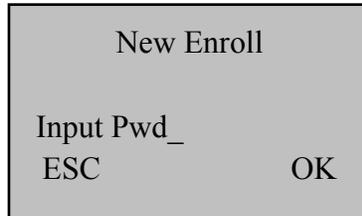


New Enroll
Input Pwd_
ESC OK

3) Input the password and affirm:

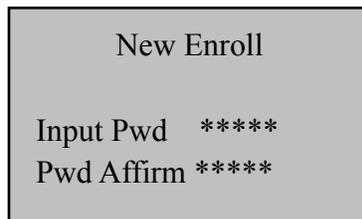

New Enroll
Input Pwd *****
Pwd Affirm *****

4) Press [OK], the following screen is displayed:

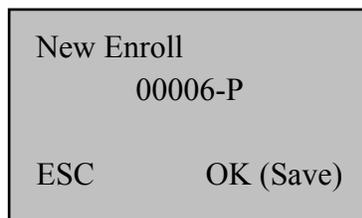


New Enroll
00006-P
ESC OK (Save)

Note: 00006-P
“-P” means password enrollment.

5) Press [OK]. Press [ESC] to exit user enrollment or press [OK] to continue Password enrollment.


Proximity Card & Password Enrollment

1) Press [**MENU**], select “User Manage”, press [**OK**], select “Enroll User”, press [**OK**]. Three enrollment methods are displayed, select “Reg Card&Pwd”, press [**OK**]. The following screen is displayed:

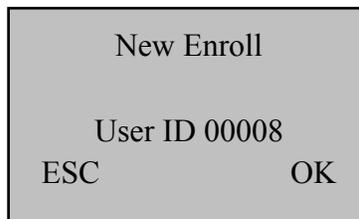


New Enroll
User ID 00008
ESC OK

2) Enter a User ID (PIN number) and scan a proximity badge that hasn't been assigned to any users. The following screen is displayed:

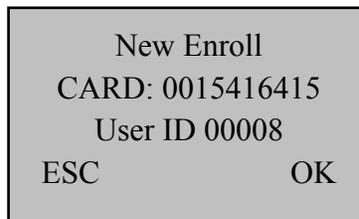


New Enroll
CARD: 0015416415
User ID 00008
ESC OK

3) Press [**OK**], the following appears:

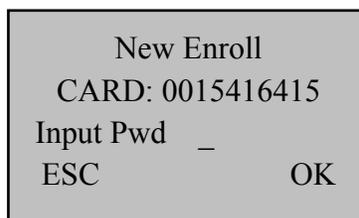


New Enroll
CARD: 0015416415
Input Pwd _
ESC OK

-
- 4) Input your password, press [**OK**], the following appears:

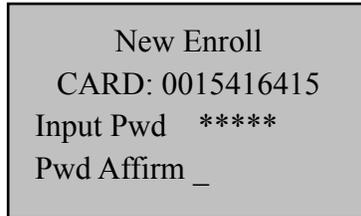

New Enroll
CARD: 0015416415
Input Pwd *****
Pwd Affirm _

- 5) Affirm your password, press [**OK**], the following appears:

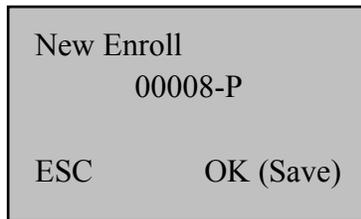

New Enroll
00008-P
ESC OK (Save)

Note: 00006-P
“-P” means password enrollment.

- 6) Press [**OK**] to save. Press [**ESC**] to cancel the enrollment.

Privilege Levels

The TQ600 has four user privilege levels: User, Enroller, Admin (administrator) and Supervisor.

- **Users** are people whose identity must be verified to record time such as punching in/out or the time spent working on a job or working in specific departments.
- **Enrollers** can enroll supervisors, administrators, enrollers and users. Enrollers can delete users. Enrollers can access “User Manage” and “System Information” menus.
- **Administrators** (Admin) can enroll supervisors, administrators, enroller and users. Administrators can delete enrollers and users. Administrators can access all operations, except “Advanced Options”.
- **Supervisor** is the highest authorization level. Supervisors can enroll supervisors, administrators, enrollers and users. Supervisors can delete administrators, enrollers and users. Supervisors can access all functions and change all setups.


Note: If no user has administrative privileges (enroller, administrator or supervisor) in the terminal, ALL users will be enrolled with “Supervisor” privileges.

To change a user that is currently enrolled as an administrator or enroller, delete the user and then re-enroll the user with the new privilege level.


Enroll w/ Privilege Level

Important! Until you enroll a user with at least Administrator privileges, all users will automatically be entered with Supervisor privileges even if they were entered as users. In order to prevent unauthorized personnel from making changes to the TQ600 you should enroll a user with Administrator password security.


- 1) Press [MENU]. Select “User Manage”, press [OK].

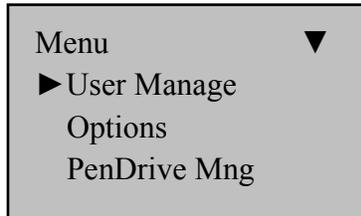

- 2) The User Manage screen appears:

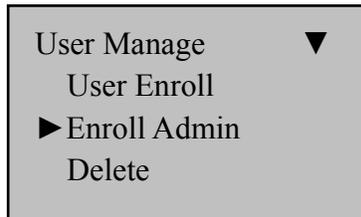


3) Select “Enroll Admin”, press [**OK**], the following appears:

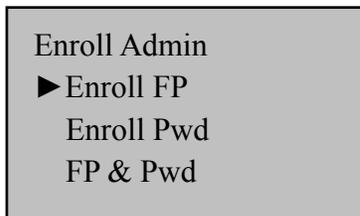


4) You can enroll an employee with (3) possible levels of terminal privileges: (1) “Supervisor”, (2) “Admin” or (3) “Enroller”.

Delete User Data


- 1) Press [MENU], the following appears:

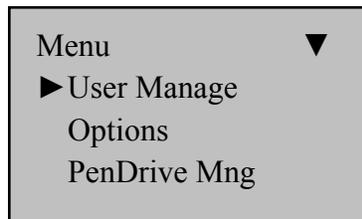

- 2) Select “User Manage”, press [OK], the following appears:

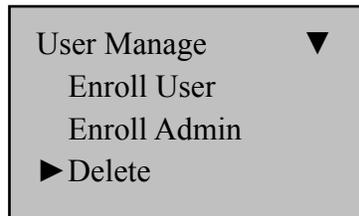


- 3) Select “Delete”, press [OK], input the User ID, press [OK] to confirm, follow the prompts to delete user.

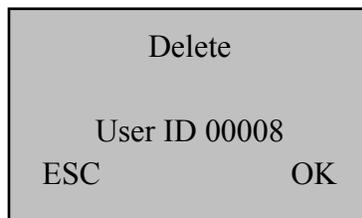


Note: You cannot delete a user with multiple enrolled fingerprints without deleting each fingerprint first. If the user has a password you will also need to delete it before you can remove the user from the terminal.

Options

Press [**MENU**] and verify your identity. The following appears:

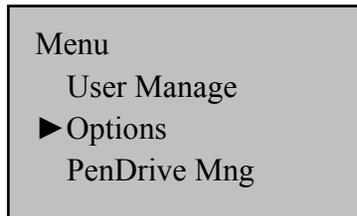

Select “Options”, press [**OK**], the following appears:

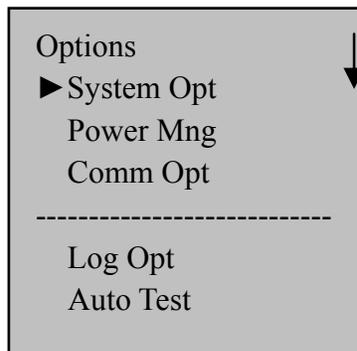

The following topics are reviewed in this section: System Options, Power Management, Communication Options, Log Options and Auto Test.

System Options

Select “System Opt”, press [OK], the following appears:

System Opt	▼
▶ Date Time	
Time Fmt	12H
Language	ENG

Fmt	MM/DD/YY
Adv Option	

The System Options are: Date & Time, Time Format, Language, Display Format and Advanced Options.

Set Date & Time

Select “Date Time”, press [OK] the following appears:

YYYY-MM-DD	24H
2008-01-02	
08:24:35	
ESC	OK

To change the date & time, input the correct date, press [▲/▼], enter the time and press [OK].

Note: The time and date will update automatically when the terminal is connected to the network.

Changing the Time Format

Select “Time Fmt”, press [OK], press [▲/▼] to change between 12 Hour and 24 Hour Format.

Changing the Language

Select “Language”, press [OK], press [▲/▼] to select the language (the default language is English), press [OK].

System Opt	▼
Date Time	
Time Fmt	12H
▶ Language	ENG

Press [ESC] to exit system options. The system will prompt you to save the setup, press [OK]. Restart the terminal for the language change to take effect.

System Opt	▼
Date Time	
Time Fmt	12H
▶ Language	ENG

English

Opc. Sistema	▼
Fecha y Hora	
Time Fmt	12H
▶ Idioma	ESP

Spanish

Changing the Date Format

Select “Fmt YY-MM-DD”, press [OK], press [▲/▼] to select the date and time format, press [OK].

System Opt	▼
Time Fmt	12H
Language	ENG
▶ Fmt	YY-MM-DD

There are ten formats: **YY-MM-DD**, **YY/MM/DD**, **YY.MM.DD**, **MM-DD-YY**, **MM/DD/YY**, **MM.DD.YY**, **DD-MM-YY**, **DD/MM/YY**, **DD.MM.YY**, **YYYYMMDD**.

E.g.: **YY/MM/DD** format (left) change to **YY-MM-DD** format (right)

Welcome 17:37 08/06/18 WED
--

Welcome 17:37 08-06-18 WED
--

Advanced Options

Select “Adv Option”, press [OK], the following appears:

Adv Option	▼
▶ Reset Opts.	
Del AttLogs	
Clear All Data	

Clr Admin Pri	
Show Score	N
Match Thr	35
Mst Input ID	N
1:1 Thr	15
Voice	Y
Upd Firmware	
Work Code	NO
Adj VOL(%)	67

Press [▲/▼] to scroll up or down to select the option.

- **Reset Opts.:** Restore all setup values to factory defaults.
- **Delete AttLogs:** Delete all transaction logs.
- **Clear All Data:** Delete all users and logs. **(Note: You will lose all information stored on the terminal.)**
- **Clr Admin Pri:** Change all privilege levels to User.
- **Show Score:** Show the degree to which a fingerprint reading matches the stored template. 0 is the lowest score (no match) and 50 is the highest score (perfect match).

-
- **Match Thr:** Set the fingerprint match threshold level. The threshold value can be set 0 – 75 (default is 35). See Table 1-1.
 - **Mst Input ID:** Turns 1:1 (one to one) fingerprint verification on or off.
 - **1:1 Thr:** The minimum fingerprint read correlation needed to achieve a positive match for 1:1 verification.
 - **Voice:** Set the voice prompts on or off.
 - **Upd Firmware:** **The user cannot update the firmware unless this feature has been enabled by an authorized dealer.**
 - **Work Code:** Not available at this time.
 - **Adj VOL(%):** Adjust the volume level (0-99); “0” turns off the speaker.

Power Manager

Select “Power Mng”, press [OK], the following appears:

Power Mng	▼
▶ Shutdown	N
PowerOn	N
Sleep	N

Idle	SLP
Idle Min	0
Bell Delay	10
Scheduled Bell	
Lock Power	N

- **Shutdown:** Set a time the terminal will automatically turn off. The terminal can be turned on again with the power button.

Select Shutdown, press [OK], the following appears:

Shutdown	
Set Sch. Fun?	
ESC	OK

Press [OK] and enter the time the unit will shut off.

After setting the shutdown time, press [ESC] and then [OK] to save the settings.

- **PowerOn:** Set a time the terminal will automatically turn on.

-
- **Sleep:** Set a time the terminal will go into sleep mode. Pressing any button will awaken the terminal.
 - **Idle:** Select “SLP” or “OFF” for the Idle mode. “SLP” – Sleep mode allows the terminal to be awakened by pressing any key. “OFF” - Turns the unit off and the power button must be pressed to turn the unit on.
 - **Idle Min:** Set how many minutes of no use before the terminal goes into the selected “Idle” mode. Setting “Idle Min” to “0” turns off this feature.
 - **Bell Delay:** Set the length of time the bell sounds. A setting of 5 sets the bell to ring for 10 seconds. A setting of 10 sets the bell to ring for 20 seconds.
 - **Scheduled Bell:** There are 20 bell schedules. Enter the times you would like the bell to sound. The bell will sound at the scheduled times for the duration set in the “Bell Delay”.
 - **Lock Power:** If set to “Y” the terminal cannot be turned off using the power button. To turn the unit off with the power button locked, enter the “Power Mng” menu and scroll down to “Power Off”.

Communication Options

Select “Comm Opt”, press [OK], the following appears:

Comm. Opt	▼
▶ Baud Rate	115200
Dev Num	1
IP Addr	

Net Speed	AUTO
NetMask	
Gateway	
Ethernet	Y
RS232	N
RS485	N
USB	Y
COMM Key	0

The TQ600 fully supports Ethernet, RS232 & USB communications.

- **Baud Rate:** The baud rate may be set to 9600, 19200 38400, 57600 & 115200.
- **Dev Num:** The terminal’s unique Device Number, the range is 1 to 255.
- **IP Addr:** Defaults to IP address 192.168.1.201
- **Net Speed:** The default Net Speed is “AUTO”, the other options are 10M-F, 10M-H, 100M-F and 100M-H.

-
- **NetMask:** The default Net Mask is 255.255.255.0
 - **Gateway:** The default gateway is 0.0.0.0
 - **Ethernet:** Turn Ethernet connectivity on or off.
 - **RS232:** Turn RS232 connectivity on or off.
 - **RS485: Not Supported**
 - **USB:** Turn USB connectivity on or off. Note: This is a serial connection established via USB cable.
 - **COMM Key:** Not utilized

Note: After setting, restart the terminal for the new configurations to take effect.

Log Options

Select “Log Opt”, press [OK], the following message appears:


Log Opt	
▶ Alm SuperLog	99
Alm AttLog	99
ReCheck Min	0

- **Alm SuperLog:** An alarm will sound to alert the supervisor that the logs are full. The set number is the remaining log capacity before the logs are full, set from 0-99.

-
- **Alm AttLog:** An alarm will sound when the logs are full. The set number is the remaining log capacity before the logs are full, set from 0-99.
 - **ReCheck Min:** Set the number of minutes before another punch is accepted by the terminal. If a punch occurs within the ReCheck Minutes, the punch will not be logged. This reduces duplicate (accidental) punches.

Auto Test

Select “Auto Test”, press [OK], the following appears:

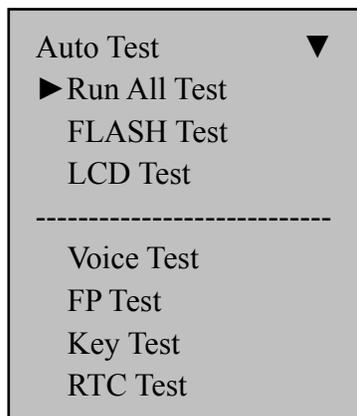

These options allow the testing of each portion of the terminal in order to pinpoint failures.

WARNING: Do not disconnect or interrupt power while performing any of the tests (loss of power during testing may damage the hardware.)

System Information

System Information allows review of the terminal information. Press [Menu], select “Sys Info”, press [OK], the following appears:

Sys Info	▼
▶ User Cnt	206
FP Cnt	173
Att Log	8046

Admin Cnt	2
Pwd User	30
S Logs	263
Free Space Info	
Dev Info	

- **User Cnt:** The number of enrolled users.
- **FP Cnt:** The number of enrolled fingerprints.
- **Att log:** The number of punches stored in the system.
- **Admin Cnt:** The number of users enrolled with Supervisor, Admin and Enroller privileges.
- **Pwd User:** The number of users using a password for authentication.
- **S Logs:** The number of supervisor logs.
- **Free Space Info:** The remaining log capacity before reaching the set alarm point.

-
- **Dev Info:** Terminal information (see below)
 - ◆ **Users (100): 100:** Proximity Terminal: Maximum number of users (100 X 100 = 10,000).
 - ◆ **FPCnt (100): 15:** Biometric Terminal: Maximum number of fingerprints (15 X 100 = 1,500).
 - ◆ **AttLog (10k): 5:** Maximum number of transaction (5 X 10,000 = 50,000).
 - ◆ **S Logs: 4096:** Maximum number of supervisor logs (tracks menu access).
 - ◆ **Manu Time:** Terminal's date/time of manufacture.
 - ◆ **Serial Num:** Terminal serial number.
 - ◆ **Vendor:** Dealer name
 - ◆ **Device Name:** U600 (Biometric), U600-P (Proximity).
 - ◆ **Alg Version:** The version of the fingerprint identification algorithm.
 - ◆ **Firmware Ver:** The version of the terminal firmware.

View Time and Attendance Records

Time & attendance records stored inside the terminal can be reviewed.

Review All Attendance Records

- 1) Press [MENU], select “User Manage”, press [OK], select “Browse AttLogs”, press [OK] and the following appears:

```
Browse AttLogs

User ID 00000
ESC          OK
```


- 2) Press [OK] with User ID as “00000” and all terminal attendance records will be displayed. Scroll through the records using [▲▼].

```
1/380
00001 05-27 18:46:21I
00012 05-27 18:32:09I
00217 05-27 18:30:52I
00031 05-27 18:29:01I
00016 05-27 18:27:55I
00029 05-27 18:22:08I
```

- 3) Press [ESC] to return to normal operation


Review Individual Attendance Records

- 1) Press [**MENU**], select “User Manage”, press [**OK**], select “Browse AttLogs”, press [**OK**] and the following appears:

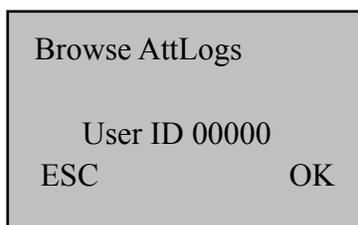

```
Browse AttLogs
User ID 00000
ESC          OK
```

- 2) Enter User ID (“00014 for example), press [**OK**] and the individual attendance records will be displayed. Scroll through the records using [**▲ ▼**].

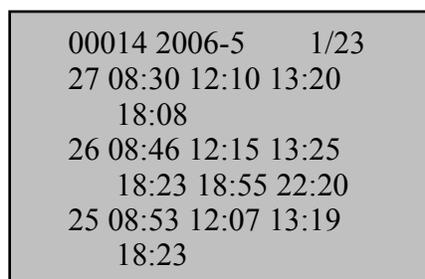

```
00014 2006-5    1/23
27 08:30 12:10 13:20
    18:08
26 08:46 12:15 13:25
    18:23 18:55 22:20
25 08:53 12:07 13:19
    18:23
```

- 3) Press [**ESC**] to return to normal operation

Browsing Attendance Records

The table below details additional commands for browsing attendance records:

Key	Description
▲	Scrolls display content up
▼	Scrolls display content down
1	Scrolls display content left
3	Scrolls display content right
OK	Restores right and left scrolling to initial position
2	Move up a line
5	Move down a line down
4	Toggles between compact display and complete display.

1/380
00001 05-27 18:46:21I
00012 05-27 18:32:09I
00217 05-27 18:30:52I
00031 05-27 18:29:01I
00016 05-27 18:27:55I
00029 05-27 18:22:08I

Compact

1/380
00001 27 18:46IF
00012 27 18:32IF
00217 27 18:30IF
00031 27 18:29IF
00016 27 18:27IF
00029 27 18:22IF

Complete

6	Toggle between Small and Large fonts.	<div data-bbox="889 310 1318 590" style="border: 1px solid black; background-color: #cccccc; padding: 5px;"> <p>00014 2006-5 1/23 27 08:30 12:10 13:20 18:08 26 08:46 12:15 13:25 18:23 18:55 22:20 25 08:53 12:07 13:19 18:23</p> </div> <p style="text-align: center;">Small Font</p> <div data-bbox="889 642 1318 921" style="border: 1px solid black; background-color: #cccccc; padding: 5px;"> <p>27 08:30 12:10 13:20 18:08 26 08:46 12:15 13:25 18:23 18:55 22:20</p> </div> <p style="text-align: center;">Large Font</p>
9	Scrolls to the newest record	
0	Scrolls to the oldest record	

Cleaning the TQ600

1. Cleaning the Keypad and Display

Use a soft damp cloth to remove dirt. Wipe dry.

2. Cleaning the Optical Sensor

Clean the optical sensor as follows:

(1) Use a can of compressed air to blow off any loose dust or dirt particles on the sensor.

(2) Lightly press a small strip of adhesive tape to the sensor surface and slowly peel it off to remove dust & dirt particles.

(3) Use a soft, non-abrasive dry cloth to wipe the sensor surface. Be careful not to scratch the surface of the sensor. If there are lint particles on the sensor surface, use clear adhesive tape to remove particles.

Caution:

Do not use any cleaners on the sensor or it could be damaged. Cleaning products that contain alcohol or other strong chemicals may discolor or crack the terminal housing.

Troubleshooting

1. Q: Fingerprint cannot be verified.

A: Possible Causes: The following conditions could result in a failed read.

- 1) Fingerprint is damaged or smooth
- 2) Finger is dry

Correction: Use 1:1 matching (see page 21). Moisturize finger. Enroll a different fingerprint.

2. Q: Terminal fails to communicate.

A: Possible Causes:

- 1) The communication port configuration is not correct; insure proper ports are connected.
- 2) Baud rate of the computer port and the terminal port are different.
- 3) The terminal has failed to connect with the power source or the computer;
- 4) The terminal is connected but failed to start.
- 5) The serial number of the linked terminal is not correct.
- 6) Data line or converter fails to communicate.
- 7) Failed computer COM port.

3. Q: The display does not work or parts of it do not work.

A: Possible Causes:

- 1) Motherboard is defective

2) The LCD display is defective.

Correction: Contact your dealer or Acroprint for repair.

4. Q: How do I remove a Supervisor?

A: Call Acroprint Technical Support.

5. Q: The terminal beeps when the communication connection is made.

A: When using the RS-232 connection insure that the baud rate of the PC and terminal are matched.

6. Q: Fingerprints have a high rejection rate.

A: Possible Causes:

- 1) Dirty sensor
- 2) Damaged sensor prism
- 3) Loose fingerprint reader connection
- 4) Damaged chip on PCB

Correction:

- 1) Clean sensor (see Cleaning instructions, Chapter 10)
- 2) Contact dealer or Acroprint for replacement of the prism.
- 3) Contact dealer or Acroprint.
- 4) Contact dealer or Acroprint.

7. Q: The terminal is communicating, but the attendance records are not correct in the system.

A: Lower the baud to 19200 or 9600 and confirm if the records are correct.

Appendix

USB Flash Drive Management

Not available at this time.

Bell Schedule

The TQ600 has a bell signal that can be programmed for different times during the day. The bell schedule and bell duration can be set based on user requirements. A total of 20 bell schedules can be set.

The TQ600 has an internal electronic bell, see Chapter 5, “Power Manage”.

Reserve Battery (Mini-UPS)

In order for the TQ600 to function during power interruptions an optional 12V Mini-UPS (p/n 74-0169-000) is available. Contact your dealer or Acroprint to purchase.

UPS Operational State:

The UPS remains idle as long as AC Power is available but will automatically supply power to the TQ600 the instant AC Power is interrupted. When AC Power is restored the UPS will automatically charge until fully charged.

Connection



Note: Connect the Mini-UPS to the TQ600 first, then plug the UPS in and turn the power on.

Battery Storage:

Store batteries in a cool/dry place 50-86° F (10-30 ° C). DO NOT store batteries for over 3 months and do not store them in direct sunlight, high temperature or high humidity. **Charge the**

batteries at least once every three months in order to maintain 50% of the rated capacity of the battery. Keep the batteries away from chemicals and heat sources.

Warning:

Batteries may leak, overheat, catch fire or explode if you don't follow proper safety & handling:

- DO NOT get batteries wet
- DO NOT place batteries near heat sources
- DO NOT use any charger other than the original charger
- DO NOT inverse polarity connection
- NEVER throw batteries into fire. Properly dispose of batteries according to local rules and regulations.
- DO NOT allow anything to short circuit the batteries (connect the positive and negative terminals of the battery)
- Dropping a battery may damage the battery. Replace the battery if you suspect that it is damaged.

Daylight Saving Time (DST)

The TQ600 's time and date is set from the Server PC's time and date. If DST is enabled on the PC it will automatically update the time of all terminals that are connected to it. The TQ600 has no internal provision for DST.

Work Codes

Not available at this time.

Fingerprint Privacy:

1. The TQ600 merely captures points of the fingerprint but not the actual fingerprint image.
2. The fingerprint points cannot be used to create a fingerprint image.
3. Acroprint will not be liable for any direct or the indirect damages resulting from the use or inability to use our equipment.
4. If you have a question about privacy concerning the use of our equipment you should have your employer contact Acroprint.

06-0386-000
Revision A