

Amana

A **Raytheon** Company

Use and Care Guide Home Laundry Automatic Dryer



Models:
(Electric Heat)
LEM447
LEM547
LEM847

(Gas Heat)
LGM449
LGM549
LGM849

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE. (If the dryer changes ownership, be sure this manual accompanies the dryer.)

How to Use Your Dryer . . .

The timer knob will not advance with the same regularity in the AUTOMATIC cycle as it does in the TIME DRY cycle.

For example, you may notice the timer knob remains in the same position for 15 minutes before it begins to move. THE TIMER IS NOT MALFUNCTIONING. This only means it took 15 minutes for the load to become dry enough to start advancing the timer knob. The length of time it takes for the timer knob to begin advancing depends on the type and size of load being dried.

Automatic Regular

This cycle is designed to dry large and average size loads of similar weight fabrics. Uniformity of fabrics is important to ensure that all items will dry in the same length of time. When properly set for the load, the dryer will determine the exact length of drying time, shut the heat off when the clothes are dry and tumble for approximately five minutes with no heat before stopping at the OFF position.

Automatic Delicate

For medium and lightweight fabrics (not permanent press) and for delicate items. Use this cycle for sheer and very lightweight cottons and those items labeled "Dry With Low Heat."

Cool-Down Periods

The AUTOMATIC REGULAR and AUTOMATIC DELICATE cycles have a five minute cool-down period at the end of the cycle. During that time, the load is tumbled with no heat. This helps reduce wrinkling. Setting the timer knob in a COOL-DOWN position will result in the load being tumbled with no heat. Do not remove load until COOL-DOWN period is complete and dryer stops. The signal (if selected) will buzz continuously for the final 30 seconds of the cool-down.

Suggested Dryer Settings

AUTOMATIC REGULAR and AUTOMATIC DELICATE Cycles

Load Type	Cycle (Timer Setting)
Heavy Cottons Rugs	Automatic Regular
Denim Corduroys	Automatic Regular
Cotton Work Clothes Cotton Knits Dresses Dress Shirts	Automatic Regular
Sheer Lightweight Cottons. Items Labeled "Dry With Low Heat"	Automatic Delicate

Automatic Permanent Press/ Knits

Use this setting for permanent press, polyester knits, heavy and medium weight synthetics that are "no-iron".

The COOL TUMBLE portion of this cycle is a cool-down (no heat) period. The end of cycle signal (if selected) will buzz continuously for the last 50 seconds of cool-down. If clothes are not removed at that time, the timer will advance into the Cool Tumble cycle, where the signal will buzz 30 seconds for every five minutes of the 15 minute cycle before dryer stops.

AUTOMATIC PERMANENT PRESS/KNITS CYCLE

Load Type	Cycle (Timer Setting)
Permanent Press Polyester Knits Heavy and Medium Weight Synthetics	Automatic Permanent Press/Knits
Lightweight, Delicates, Sheers and those labeled "Dry With Low Heat"	Automatic Delicate

Operation Instructions

▲WARNING


To reduce the risk of fire, electric shock, injury or death, to persons, read the **IMPORTANT SAFETY INSTRUCTIONS**, Pages 2 and 3, before operating the dryer.

To Dry Clothes

IMPORTANT: Please read instructions before using dryer. Before using dryer for the first time, wash out the inside of the dryer cylinder with a sudsy cloth, then wipe dry. Install the dryer according to the **INSTALLATION INSTRUCTIONS**. **KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

1. **CLEAN LINT FILTER** before each use.
2. **LOAD DRYER.** Open dryer door. Shake out laundry and place in dryer.
3. **CLOSE DOOR.** Dryer will not operate with the door open.
4. **Select drying temperature:** The **VARIABLE TEMPERATURE** setting controls the drying temperature.

VARIABLE TEMPERATURE

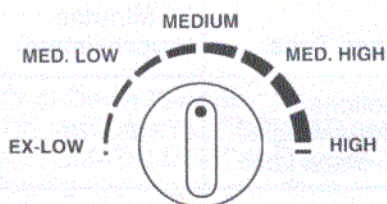

5. **SELECT TIMER SETTING** in cycle desired: **AUTOMATIC PERMANENT PRESS/KNITS**, **AUTOMATIC REGULAR**, **AUTOMATIC DELICATE**, **TIME DRY** or **AIR FLUFF**.

These cycles control the drying temperature and drying time.

6. **START DRYER:** Push the timer knob in.

TO STOP DRYER AT ANY TIME, open door or turn timer knob to an **OFF** position.

TO RESTART DRYER, close door, reset timer if necessary, and push the timer knob in. Your dryer is designed so that it will not operate if the door is open.

7. **SET SIGNAL CONTROL:** Rotate selector to "loud" (loudest sound) or to "off" (no sound) or to any level in between.



In the **Automatic Permanent Press/Knits** cycle, the signal will buzz continuously for the last 50 seconds of cool down. If clothes are not removed at that time, the timer will advance into the **Cool Tumble** cycle, where the signal will buzz 30 seconds for every five minutes of the 15 minute cycle before dryer stops.

In the **Automatic Regular**, **Automatic Delicate** and **Time Dry** cycles, the signal will buzz continuously for the final 30 seconds of the cool down.

In the **Air Fluff** cycle, the signal will buzz continuously for the final 30 seconds.

The signal will stop when the door is opened, or when the timer is advanced to an **OFF** position.

SIGNAL

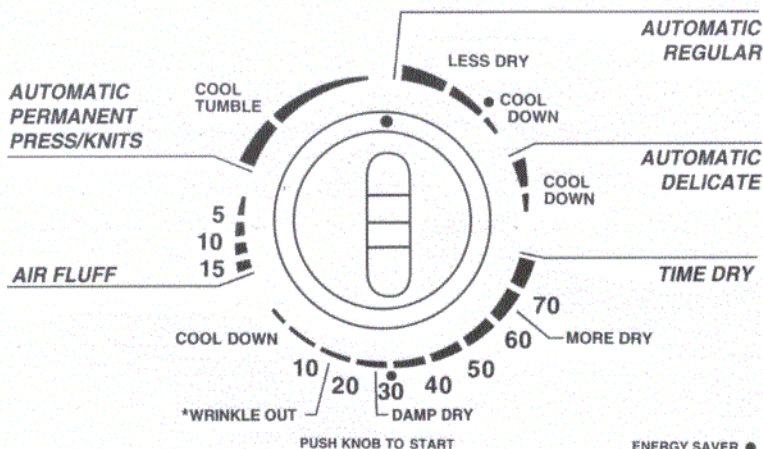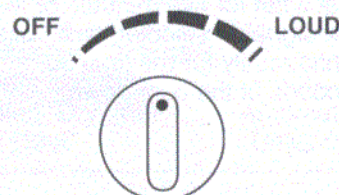

*Wrinkle Out feature not on all models.