

Tek Partner Universal Remote Control

User's Manual

BW-0561-RD

Your Tek Partner Universal Remote Control is a state of the art device that integrates many different infrared (IR) remote controls into one. The Tek Partner is pre-programmed at the factory so all you need to do is follow the instructions in this manual and you will be ready to go! The Tek Partner replaces up to 4 separate remote controls to operate your television (TV), video cassette recorder (VCR), digital video disc (DVD) and cable box or satellite receiver (CBL/SAT). Once programmed, the Tek Partner functions just like your original remote control. Just aim the Tek Partner at your device and press the desired functions. It's that easy! In addition, the Tek Partner has large, soft buttons that illuminate bright red when they are pressed. No other remote control is as user friendly as the Tek Partner.

Specifications

Operating System: Pre-programmed infrared (IR) remote control.

Compatibility: Replaces most brands of IR remote controls for TVs, VCRs, DVDs, Cable Boxes and Satellite Receivers.

Power Requirements: 4 AA size batteries (not included).

Size: 8-1/2" x 5-1/2" x 2-1/2" (LxWxH)

NOTE: The Tek Partner is not compatible with radio frequency (RF) devices or digital converter boxes.

Table of Contents

Introduction.....	1
Specifications.....	1
Setup.....	2
Programming.....	2
Power Scan.....	2-3
ID Recall.....	3
Volume Punch Through.....	3-4
Master Power.....	4
Menu Mode.....	4
Frequently Asked Questions.....	5
Care & Maintenance.....	5
Device Codes.....	6-9
Function Table.....	10

BW-0561-RD
0813

Visit our website at:
www.bigbuttonremotes.com

Bay Products, L.L.C.
803 West Alfred Street
Tampa, FL 33603-5405
Tel: (813) 871-0389
Fax: (888) 260-5370

Setup

1. Remove the battery cover from the back of the remote control.
2. Insert 4 new AA batteries.
 - a. Make sure the polarity of the batteries matches the diagram inside the battery compartment (- matches with - and + matches with +).
3. Push the battery cover back into place.

Programming

MODE (3 seconds) → digit → digit → digit

1. Make sure you are in front of the device you want to program with the power turned on.
2. Using Device Codes (see pages 6-9), locate the brand name of your device.

NOTE: All codes are 3 digits and there may be more than 1 code listed for your device.

3. On the remote control, press and hold the MODE button (TV, VCR, DVD or CBL/SAT) until the indicator light in the upper left hand corner begins to blink (this takes about 3 seconds).
4. As soon as the indicator light begins to blink, release the MODE button.
5. On the remote control, enter the 3 digit code for your device found in Device Codes.
6. Try different functions on the remote control to make sure the correct code was entered.
 - a. If only some or none of the functions work, repeat the steps above and try the next code located in Device Codes. If there are no more codes listed, try Power Scan.

Power Scan

MODE (3 seconds) → PWR → ▲ (PLAY) → ENTER (SELECT)

The Power Scan function checks every pre-programmed code in the remote control. Use Power Scan if:

- A. Your device is not listed in Device Codes.
or
 - B. You cannot program the remote control using codes located in Device Codes.
1. Make sure you are in front of the device you want to program with the power turned on.

2. On the remote control, press and hold the MODE button (TV, VCR, DVD or CBL/SAT) until the indicator light in the upper left hand corner begins to blink (this takes about 3 seconds).
3. As soon as the indicator light begins to blink, release the MODE button.
4. On the remote control, press and release the PWR button.
5. On the remote control, slowly press and release the ▲ (PLAY) button until the device (TV, VCR, DVD or CBL/SAT) powers off.
 - a. Each time you press the ▲ (PLAY) button, the remote control is checking the next code and trying to turn off the device.
6. As soon as the device powers off, press and release the ENTER (SELECT) button on the remote control.
 - a. Make sure that you do not press the ▲ (PLAY) button after the device powers off. If you do this, the remote control will move to the next code. When you press the ENTER (SELECT) button, the code is programmed into the remote control.
7. Try different functions on the remote control to make sure it is programmed properly.
 - a. If only some or none of the functions work, repeat the steps above.

NOTE: Be patient, there are dozens of codes for each type of device.

ID Recall

MODE (3 seconds) → MENU/PREV. CH (RECALL)

The ID Recall function will show you the code for any programmed device.

1. On the remote control, press and hold the MODE button (TV, VCR, DVD or CBL/SAT) until the indicator light in the upper left hand corner begins to blink (this takes about 3 seconds).
2. As soon as the indicator light begins to blink, release the MODE button.
3. On the remote control, press and release the MENU/PREV. CH (RECALL) button.
4. As soon as you release the MENU/PREV. CH (RECALL) button, the indicator light in the upper left hand corner will show you the code for your device by blinking the 100's, 10's and 1's of your code.
5. Count the number of blinks to determine the code. A '0' in any location is represented by a fast flicker.

Example: Code 102 is shown as BLINK <pause> FLICKER <pause> BLINK, BLINK.

Volume Punch Through

CBL/SAT (3 seconds) → CBL/SAT (hold) → TV

The Volume Punch Through function allows you to change the volume on your TV while in CBL/SAT mode.

1. Make sure that you program the remote control for your TV and Cable Box/Satellite Receiver.
2. On the remote control, press and hold the CBL/SAT button until the indicator light in the upper left hand corner begins to blink (this takes about 3 seconds).
3. As soon as the indicator light begins to blink, release the CBL/SAT button.
4. On the remote control, press and hold the CBL/SAT button and then press the TV button (while holding the CBL/SAT button) and then release both buttons.

Master Power

MODE (3 seconds) → PWR → PWR

The Master Power function allows you to turn the power on or off for all programmed devices at the same time.

1. Make sure that you program the remote control for all of your devices.
2. Turn on all of your devices.
3. On the remote control, press and hold the MODE button (TV, VCR, DVD or CBL/SAT) until the indicator light in the upper left hand corner begins to blink (this takes about 3 seconds).
4. As soon as the indicator light begins to blink, release the MODE button.
5. On the remote control, press and release the PWR button.
6. Again, on the remote control, press and release the PWR button.
7. To disable Master Power, repeat the steps above.

Menu Mode

The Menu Mode allows you to use the blue arrow buttons (▲, ▼, ◀, ▶) to navigate a programmed device.

1. Make sure that the device you want to use has been programmed into the remote control.
2. Press and release the MENU/PREV. CH (RECALL) button.
 - a. In Menu Mode, use arrow buttons (▲, ▼, ◀, ▶) to navigate.
 - b. Once the desired menu item is reached, press and release the ENTER (SELECT) button to select it.

NOTE: If any button other than ▲, ▼, ◀, ▶ or ENTER (SELECT) is pressed or if no buttons are pressed within 20 seconds, the remote control will exit Menu Mode.

Frequently Asked Questions

Q. Why won't my Tek Partner work?

A. Make sure you have fresh batteries and that they are installed correctly (see Setup on Page 2). If this does not solve the problem, please call (813) 871-0389 for technical support. We are more than happy to help you.

Q. How do I know which code will work for my device?

A. Look up the brand name of your device in Device Codes (see Pages 6-9). Each code is 3 digits. Enter one code at a time and test the remote control after each code is entered until you have one that controls all the functions properly. If you do not find a code to match your brand, proceed to Power Scan (see Pages 2-3).

Q. I want my devices to come on all at the same time, what do I do?

A. Program each of your devices separately and make sure they are all functioning properly. Once they are all programmed, power on all devices. Hold down the device button (TV, VCR, DVD or CBL/SAT) until the indicator light starts to blink, release the device button and press and release the PWR button twice. Repeat for each device (TV, VCR, CBL/SAT or DVD). Master Power should now be enabled. To disable Master Power just repeat the process again (see Master Power on Page 4).

Q. I used the Power Scan option to find a code for my device. How do I know what the code is?

A. Please follow the instructions on Page 3 for ID Recall.

Q. I cannot get my volume to work on my satellite receiver or cable box, what should I do?

A. You need to set up Volume Punch Through. See the instructions on Pages 3-4.

Care & Maintenance

1. Do not expose the remote control to direct sunlight, extreme high or low temperatures, liquids or mechanical shock.
2. Do not mix old and new batteries as old batteries have a tendency to leak.
3. Do not use corrosive or abrasive cleaners on the remote control.
4. Do not disassemble the remote control as it contains no user serviceable parts.
5. To keep the remote control clean, periodically wipe it with a dry, soft cloth.

TV CODES

ACER 131
ADMIRAL 069, 192
ADVENT 159, 241
AIWA 126
AKAI 001, 006, 014, 020, 042, 052, 098, 160, 216
AKURA 361, 362, 363, 364
AMPRO 070
ANAM 045, 055, 057, 076, 095, 106, 109, 112
AOC 001, 132, 135
APEX 164, 216, 365
AUDIOVOX 087, 165
BELL&HOWELL 069
BENQ 309, 310
BLU:SENS 166, 169, 171
BROKSONIC 091, 255
CANDLE 001, 002, 003
CENTURION 038, 170
CETRONIC 045
CITIZEN 001, 002, 003, 045, 092
CLASSIC 045
COBY 311
CONTEC 045
CORANDO 172
CRAIG 045, 055, 157
CROWN 045
CURTIS MATHES 001, 092, 123, 128
CXC 045
DAEWOO 022, 023, 045, 046, 056, 068, 102, 108, 111, 114, 116, 118, 119, 127
DELL 330
DIBOSS 174
DISH NETWORK 176
DYNASTY 045
DYNATECH 063
DYNEX 083, 129, 185, 312
ELECTROGRAPH 187
ELECTROHOME 167
ELEMENT 313
EMERSON 001, 029, 033, 045, 048, 049, 091, 094, 139, 141, 157, 162, 214, 314, 315
ENVISION 001
EPSON 188
FISHER 058
FUJITSU 331, 332, 333

TV CODES

FUNAI 033, 045, 193
FUTURETECH 045
GATEWAY 017, 195, 196
GE 001, 015, 021, 057, 070, 121, 133, 141, 145, 163, 199
GOLDSTAR (LG) 043, 066, 067, 101, 104, 105, 110, 113, 118
GRADIENTE 238
GRUNDIG 334, 349, 350, 351, 352, 353, 354, 355, 356, 357, 358, 359, 360
GVA 316
HAIER 197, 317
HARMAN KARDON 201
HISENSE 148, 200, 318, 319
HITACHI 001, 015, 016, 018, 029, 072, 147, 204, 207, 226
HP 203, 336
HUMAX 337
HY-TEK 093
HYUNDAI 115, 208
ILO 082, 103
INFINITY 247
INKEL 120
INSIGNIA 050, 152, 312
JBL 247
JCPENNY 001, 015, 035, 092, 145
JENSEN 019
JVC 040, 079, 251
KAWASHO 173
KEC 045
KENWOOD 001
KLEGG 209
KLH 075
KLOSS 002, 060
KNOLL SYSTEMS 338
KONKA 339
KTV 001, 045, 162, 248
LG (GOLDSTAR) 043, 066, 067, 101, 104, 105, 110, 113, 118
LLOYTRON 172, 173
LODGENET 069
LOEWEE 211, 247
LOGIK 069
LXI 145, 247
MAGNASONIC 089
MAGNAVOX 001, 003, 005, 010, 030, 041, 059, 060, 061, 064, 065,

TV CODES

118, 122, 145, 210, 225, 247, 321
MAJESTIC 069
MARANTZ 001, 167, 247
MAXENT 196
MEMOREX 053, 069
MGA 001, 033, 167
MIDLAND 199
MINTEK 213
MISAKI 193
mitsubishi 001, 011, 033, 039, 100, 154, 160, 167, 168
MOTOROLA 237
MTC 001
NAD 031
NATIONAL 177, 178, 179, 180, 181, 182
NEC 001, 022, 025, 042, 057, 084, 121, 125
NIKEI 045
OLEVIA 077
ONKING 045
ONWA 045
OPTIMUS 031
OPTOMA 218
OPTONICA 025
ORION 091, 219
PANASONIC 008, 051, 057, 076, 149, 247, 248, 249, 250, 252
PENNEY 199
PHILCO 001, 003, 045, 057, 060, 061, 064, 065, 118
PHILIPS 001, 003, 040, 060, 088, 130, 145, 231, 232, 233, 234, 235, 236, 247
PIONEER 001, 024, 029, 031, 032
POLAROID 071, 073, 074, 075, 078
PORTLAND 220
PROSCAN 133, 195
PROTON 081
QUASAR 034, 057, 227, 232, 248
RADIO SHACK 025, 043, 045, 048, 118, 163, 198
RCA 001, 007, 029, 057, 130, 133, 145, 155, 161, 163, 176, 199, 205, 206, 222
REALISTIC 025, 043, 045, 048, 163
RUNCO 186, 223
SAA 183
SAMPO 001

TV CODES

SAMSUNG 001, 044, 085, 092, 096,
104, 118, 124, 134, 136, 145, 156
SANSUI 091
SANYO 026, 037, 038, 054, 058, 137
SCEPTRE 224, 366
SCOTT 033, 045, 049
SEARS 033, 035, 058, 092, 145
SELECO 340
SHARP 025, 028, 033, 138, 154, 253
SHERWOOD 228
SIGNATURE 069
SOLE 229, 341
SONY 004, 012, 117, 140, 194, 230,
245
SOUNDESIGN 003, 033, 045
SSS 045
SUPERSCAN 193
SUPRE MACY 002
SYLVANIA 001, 003, 009, 027, 060,
061, 064, 065, 107, 118, 142, 145,
146, 150, 153, 240, 247, 254, 323
SYMPHONIC 184, 193
SYNTAX OLEVIA 077
TATUNG 057, 063
TCL 243
TEAC 143, 325
TECHNICS 080
TEKNIKA 001, 002, 003, 033, 036,
045, 069, 092, 167
TELEFUNKEN 047
TELERENT 069
THOMSON 190, 191
TOSHIBA 013, 035, 042, 063, 092,
144, 158, 202, 246
TRUTECH 099
UNIVERSAL 015
VIDEO CONCEPTS 160
VIDIKRON 244, 342
VIEWSONIC 086, 301, 343, 344
VIORE 302, 326
VITO 303
VIZIO 062, 066, 097, 327
WARDS 015, 025, 033, 061, 064,
065, 069, 247
WHITE WESTINGHOUSE 151, 347, 348
WINBOOK 305
YAMAHA 001, 306, 307

TV CODES

YUPITERU 045
ZENITH 069, 070, 090, 308

VCR CODES
AIWA 040
AKAI 022, 048, 050, 109
AMPRO 076
AMSTRAD 133
ANAM 037, 039, 089
ASA 134
AUDIO DYNAMICS 018, 029, 044,
048
BROKSONIC 005, 041, 043, 110,
166
CANDLE 134
CANON 037, 039, 140
CAPEHART 094
CITIZEN 134
CRAIG 003, 116
CURTIS MATHES 037, 039
DAEWOO 012, 014, 094, 096, 098,
102
DAYTRON 094
DBX 018, 029, 044, 048
DUAL 136
DYNATECH 040, 057
ELECTROHOME 063
EMERSON 033, 037, 040, 041, 042,
043, 050, 110, 112, 171, 182, 183,
184, 191, 193, 195
FERGUSON 136
FINLUX 133
FISHER 003, 016, 142
FUNAI 040, 133
GE 037, 039, 067, 076, 093, 095,
124, 127
GOLDSTAR 011, 018, 092, 100, 107
GO VIDEO 113, 117
GRAETZ 136
HARMAN KARDON 018, 049
HITACHI 011, 040, 048, 067
INSTANTREPLAY 037, 039
ITT 136
JCL 037, 039
JCPENNY 011, 018, 039
JENSEN 048

VCR CODES

JVC 018, 037, 039, 048, 052, 054,
059, 111, 132
KENWOOD 020, 044, 048, 052
LLOYD 040
LXI 011, 020, 040
MAGNAVOX 007, 008, 035, 036,
037, 039, 040, 072,
MARANTZ 018, 037, 039, 073
MATSUI 033
MEI 037, 039
MEMOREX 003, 020, 037, 039, 040,
057, 076, 115
MGA 049, 050, 063
MINOLTA 011
MITSUBISHI 011, 026, 032, 049, 050,
055, 063, 065, 131, 145, 146
MOTOROLA 196, 197
MTC 133
MULTITECH 030, 040
NAD 139
NATIONAL 140
NEC 018, 029, 044, 048, 052
NORDMENDE 048
OPTIMUS 057
OPTONICA 057
ORION 005, 166
PANASONIC 017, 024, 037, 078, 150,
167, 173, 176, 188, 189, 201, 203, 206
PENTAX 011, 026, 037, 039, 067
PHILCO 037, 039, 040
PHILIPS 037, 039, 040, 075
PIONEER 011, 018, 027, 052
PORTLAND 094
PROSCAN 121
PULSAR 076
QUARTZ 002, 020
QUASAR 039, 167
RADIO SHACK 003, 020, 057, 093,
133, 134, 140, 142, 160, 167
RCA 006, 011, 026, 039, 066, 067,
093, 095, 124, 127
REALISTIC 003, 020, 037, 039, 040,
057, 093, 142, 160
SABA 136
SALORA 020
SAMSUNG 004, 009, 028, 038, 090,
091, 093, 095, 098, 106, 109, 207

VCR CODES

SANSUI 005, 048, 052, 116, 166
SANYO 003, 014, 020, 115
SCHAUB LORENZ 136
SCOTT 043, 098, 110, 112
SEARS 003, 011, 016, 020, 026, 037, 142
SHARP 010, 019, 037, 156, 196, 205
SHINTOM 030
SONY 003, 015, 016, 021, 037, 056, 060, 061, 082, 187, 196, 199, 202
SOUNDESIGN 040
STS 011
SYLVANIA 001, 037, 039, 040, 063, 200, 208
SYMPHONIC 040
TANDY 040
TASHICO 134
TATUNG 044, 048
TEAC 040, 044, 048
TECHNICS 037, 039
TEKNIKA 037, 039, 040
TELEFUNKEN 136
THOMAS 040
THOMSON 136
THORN 136
TOSHIBA 004, 011, 013, 023, 025, 051, 063, 085, 098, 112, 142, 174, 185, 193, 195, 198
VECTOR RESEARCH 018
VICTOR 052
VIDEO CONCEPTS 018, 040, 050
WARDS 003, 011, 030, 037, 039, 040, 057, 058, 112
YAMAHA 018, 040, 044, 048
ZENITH 005, 040, 052, 060, 076

CBL CODES

ABC 001, 003, 045, 048, 052, 059, 130
ADB 089
ALLEGRO 111
AMERICAST 212
AMINO 067
ANTRONIX 021
ARCHER 012, 014, 021, 031, 112
BELCOR 113
CABLE STAR 033, 113

CBL CODES

CENTURION 092
CENTURY 014
CISCO 051, 060, 078
CITIZEN 014, 111
COLOUR VOICE 090
COMCAST 026, 032
COMTRONICS 037
CONTEC 228
DIAMOND 030
DIGI 114
EAGLE 027, 037, 046, 186
EASTERN 063, 066, 070, 115
ECHOSTAR 011
ELECTRICORD 039
EMERSON 112
FOXTEL 038
GC ELETRONICS 113
GE 009, 076
GEMINI 015
GENERAL 210
GENERAL INSTRUMENT 032, 226, 227
G.I 001, 003, 015, 017, 096, 097, 141
GOLDEN CHANNEL 037
GOLD STAR 224
GOODMIND 112
HAMLIN 055, 056, 061, 099, 100, 101, 117, 152, 175, 207, 208
HITACHI 001, 061
HOSPITALITY 074, 080
JASCO 111
JERROLD 001, 002, 003, 007, 015, 016, 017, 073, 096, 097, 140, 141, 162, 166, 167, 210
MACOM 040, 191
MAGNAVOX 017, 019, 068, 082
MEMOREX 058
MOTOROLA 004, 005, 006, 043, 049, 060, 064, 069, 077, 215, 216
MOVIE TIME 039
NSC 044, 075, 190
OAK 023, 043, 059, 196, 197, 223
PACE 029, 078, 079, 083, 084, 086, 087, 088
PANASONIC 050, 053, 155, 176, 177, 189, 214, 225

CBL CODES

PANTHER 114
PARAGON 058
PHILIPS 013, 019, 020, 027, 085, 090
PIONEER 001, 041, 057, 119, 147, 148, 171, 209, 217, 219, 224
POST NEWS WEEK 023
PRIMESTAR 162
PTS 018, 054, 075, 076
PULSAR 058
QUASAR 058
QUEST 035
RADIO SHACK 111, 112, 213
RCA 053, 214
REALISTIC 012
REGAL 055, 056, 061, 099, 100, 101, 158, 207
REGENCY 063, 115
RUNCO 058
SAMSUNG 008, 037, 072, 186, 224
SCIENTIFIC ATLANTA 003, 018, 022, 047, 048, 052, 079, 130, 145, 159, 160, 183, 203, 204
SIGNAL 037
SIGNATURE 001
SL MARX 037
SONY 098, 229, 231
SPRUCER 053, 081, 177, 189
STARCOM 002, 015, 016, 141, 163
STARGATE 015, 037
SYLVANIA 071
TADIRAN 037
TANDY 024
TELECAPATION 028
TEXSCAN 036, 071
TIMELESS 123
TOCOM 045, 046, 062, 170, 205
TOSHIBA 058
UNIKA 014, 021, 031
UNITED CABLE 059
UNIVERSAL 012, 014, 021, 031, 033, 034, 039, 042, 113
VENTURER 010
VIDEOWAY 124
VIEWSTAR 019, 025, 190
ZENITH 058, 065, 098, 212, 222

SAT CODES

ALHASTAR DSR 422
 CANAL 399
 CANAL+ 399
 CHANNEL MASTER 317, 320, 321, 361
 CHAPARRAL 315, 316, 451
 DIRECTV 312, 360
 DISH NETWORK 401
 DRAKE 317, 318, 413
 DX ANTENNA 331, 352, 369
 ECHOSTAR 475
 ECHOSTAR 309, 319, 322, 380, 395, 396, 400, 401, 406, 410, 463, 467, 475, 477, 483, 484, 490 493
 ELECTRO HOME 392
 FOXTEL 397
 FUJITSU 334
 GENERAL ELECTRIC 474
 GENERAL INSTRUMENT 301, 303, 311, 323, 365, 403, 454, 468
 GRUNDIG 393
 HITACHI 372
 HITACHI DBS 455
 HOUSTON TRACKER 463, 467
 HUGHES 306, 314, 385, 455, 480, 485, 488
 HUMAX 388
 JANIEL 366
 JERROLD 367, 454, 464, 468
 JERROLD PRIMESTAR 456
 KCPI 408
 LEGEND 453
 MACOM 317, 365, 370, 371
 MAGNAVOX 473
 MEMOREX 453
 MITUBISHI 372
 MOTOROLA 402
 NEXTWAVE 423
 NORSAT 374
 OPTIMUS 466
 PAC DSS 478
 PACE 328, 329, 336, 337, 338, 340, 342, 343, 344, 345, 346, 347, 356, 357, 363, 386
 PANASONIC 366, 469
 PANASONIC DBS 457

SAT CODES

PHILIPS 305, 375, 480, 485, 487, 488, 492, 494
 PREMIERE 376
 PRESIDENT 381, 404
 PRIMESTAR 412, 454, 464
 RCA 307, 308, 310, 379, 465, 474, 481, 482, 491
 RCA DSS 458, 476
 REALISTIC 325, 349, 377
 SAMSUNG 313, 359, 362, 368, 373, 422, 489
 SATELLITE SERVICE CO 331, 335, 341, 353
 SCIENTIFIC ATLANTA 339
 SKY 363, 364
 SONY 304, 405, 407, 486
 STAR CHOICE DBS 459
 SUPER GUIDE 327, 423
 TEECOM 330, 333, 390, 391, 409
 TOPFIELD 378
 TOSHIBA 302, 426, 462, 470, 473
 UEC 358
 UNIDEN 323, 324, 325, 326, 332, 348, 349, 350, 351, 354, 355, 381, 382, 383, 389, 403, 466
 VIASAT 398
 ZENITH 371, 384, 387, 394, 419, 479

DVD CODES

APEX DIGITAL 056, 216, 233, 239
 CALIFORNIA AUDIO 176
 COBY 042, 048
 CYBERHOME 001
 DAEWOO 246
 DENON 150, 162, 201, 208
 DVD-VIDEO 231
 DYNEX 041
 EMERSON 007
 GE 196, 197
 GO VIDEO 002
 GRADIENTE 228, 229
 HARMAN KARDON 148, 149, 186, 220
 HITACHI 193
 INSIGNIA 029, 033, 045

DVD CODES

JVC 192, 199
 KENWOOD 151, 183, 225
 KLH 224
 LG 046, 198, 211, 219, 226
 LOTTE 152
 MAGNAVOX 007, 017, 024, 028, 031, 051, 057, 169, 212, 234
 MARANTZ 169, 214
 MEMOREX 012
 MITSUBISHI 172, 202
 NAD 217
 ONKYO 200, 207
 OPTIMUS 153, 183
 PACIFIC 018
 PANASONIC 044, 163, 171, 179, 181, 184, 189, 203, 205, 238, 240, 243
 PHILIPS 005, 169, 188, 212
 PIONEER 154, 160, 174, 180, 221, 222
 POLAROID 023
 PROCEED 215
 PROSCAN 173, 196, 197
 RCA 159, 173, 196, 197, 232
 RUNCO 165
 SAMSUNG 002, 003, 016, 021, 025, 043, 050, 168, 195, 209, 210, 241, 244, 245
 SANYO 004, 022, 155, 156, 182
 SHARP 036, 037, 047, 161, 166, 183, 204, 230
 SONY 013, 019, 038, 156, 167, 178, 187, 191, 206, 223, 232, 242
 SYLVANIA 006, 020, 032, 034, 235
 SYMPHONIC 027
 TECHNICS 164
 THOMPSON 196, 197
 TIVO 008, 009, 010, 011, 014, 015
 TOSHIBA 026, 035, 039, 040, 049, 169, 181, 185, 190, 200, 213, 227, 236
 TRUTECH 030
 YAMAHA 157, 158, 205, 218
 ZENITH 169, 194, 198, 211, 219
 ZENITH DIVX 175

Tek Partner Function Table				
Button Name	TV	VCR	DVD	CBL/SAT
TV	TV MODE	TV MODE	TV MODE	TV MODE
VCR	VCR MODE	VCR MODE	VCR MODE	VCR MODE
DVD	DVD MODE	DVD MODE	DVD MODE	DVD MODE
CBL (SAT)	CBL/SAT MODE	CBL/SAT MODE	CBL/SAT MODE	CBL/SAT MODE
PWR	ON/OFF	ON/OFF	ON/OFF	ON/OFF
0 - 9	0 - 9	0 - 9	0 - 9	0 - 9
MENU/PREV. CH (RECALL)	LAST CHANNEL/RECALL	LAST CHANNEL/RECALL	OPEN/CLOSE	LAST CHANNEL/RECALL
ENTER (SELECT)	ENTER	ENTER	ENTER	SELECT/ENTER
TV/VCR (TV/SAT)	TV/VCR	TV/VCR	TV/DVD	TV/SAT
MUTE (INFO/VIEW)	MUTE	MUTE	MUTE	INFO/VIEW
CH +	CHANNEL UP	CHANNEL UP	SKIP +	CHANNEL UP
CH -	CHANNEL DOWN	CHANNEL DOWN	SKIP -	CHANNEL DOWN
STOP (EXIT)	STOP (VCR)	STOP	STOP/EXIT	EXIT
PLAY (▲)	PLAY (VCR)	PLAY	PLAY	UP
PAUSE (GUIDE)	PAUSE (VCR)	PAUSE	PAUSE	GUIDE
REW (▶)	REWIND (VCR)	REWIND	REWIND	LEFT
FF (▼)	FAST FORWARD (VCR)	FAST FORWARD	FAST FORWARD	DOWN
REC (▶)	RECORD (VCR)	RECORD	RECORD	RIGHT
VOL +	VOLUME UP	VOLUME UP	VOLUME UP	VOLUME UP
VOL -	VOLUME DOWN	VOLUME DOWN	VOLUME DOWN	VOLUME DOWN