Refill Instructions -Lexmark 10N0217 (No.17)





LexmarkAll in One X72 . X74 . X75 . X1130 . X1150 . X1180 . X225

Color Jetprinter Z13 . Z23 . Z25 . Z33 . Z34 . Z35 . Z515 . Z601 . Z605 . Z615

Items Required

Original Lexmark 17 Cartridge, Syringe & Fillingbe Black Ink 10ml

Instructions

1. Assemble syringe and steel filling tube and fill with appropriate colour in **(g.2)**

2. Remove the top from the black ink bottle and usin the syringe remove 10ml of black in(g.3)

3. The filler hole is located on top of the cartridge. (g.4)

4. Insert the steel filling tube into the appropriate fil holes. **(g.5)**. Push down into centre of the sponge. **IMPORTANT:** Cartridge contains a sponge and a slight resistant may be felt.

5. SLOWLY Inject ink. When ink overflows from fillin hole or starts to leak from print heads cartridge is for Stop injecting immediately

Blot printer heads with tissue before continuing to next colour

IMPORTANT: Clean syringe with water and dry before refilling next colour

6. After refilling replace label back over filling hole.
7. Leave the cartridge to stand overnight on nonabsorbent surface this will ensure no

leakage and give the ink time to fully saturate the sponge.

IMPORTANT: DO NOT LEAVE ON TISSUE.

8. Install cartridge and run a priming cycle.

PLEASE NOTE: The ink indicator level may need to be turned off. Check your HPinstructions manual for details.

Order your

Refill PACKs at:

www.refill4.com





fig.4

