





## Basic Operations

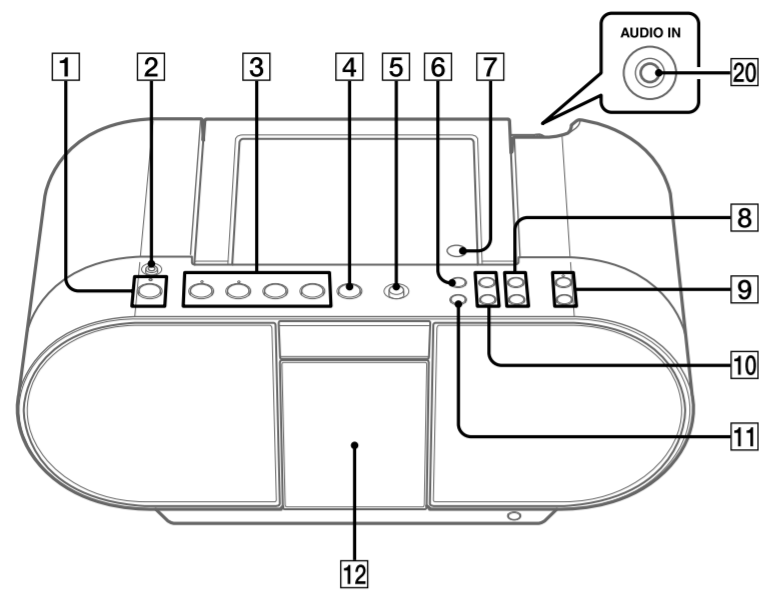


VOLUME + [9], iPod & iPhone [2] and CD [3] have a tactile dot.

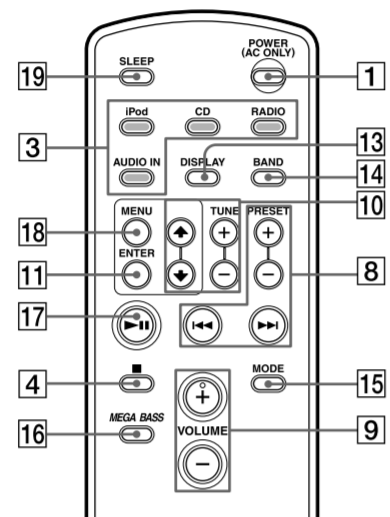

VOLUME + [9] has a tactile dot.

### Loading an iPod

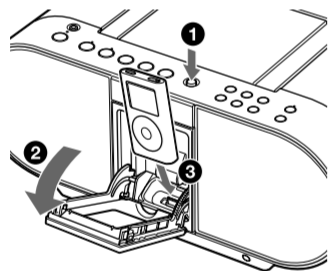


- 1 Press PUSH OPEN [5].
- 2 The door for the iPod is opened.
- 3 Insert your iPod onto the connector.

Close the door until it clicks.


#### Tips

- When using an iPod nano 1st generation/iPod nano 2nd generation (aluminium), you can adjust the position of the connector so that the iPod is placed in the middle.
- When using an iPod other than iPod nano 1st generation/iPod nano 2nd generation (aluminium), slide the connector to the right.

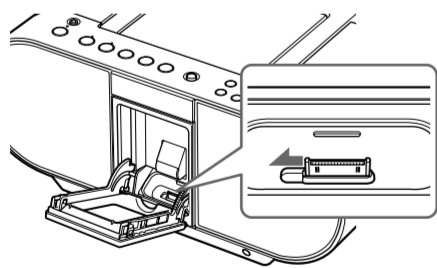


### To change the cover

 When using an iPod touch/iPhone, you can replace the cover with the exchangeable lid (supplied).




Exchangeable lid (supplied)

### Remove the cover

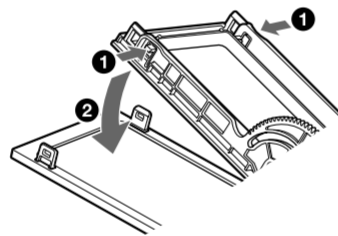

- 1 Press the latches on both sides of the door at the same time.
  - 2 Remove the cover [12].
- Shut the door until it clicks.


### Insert the exchangeable lid

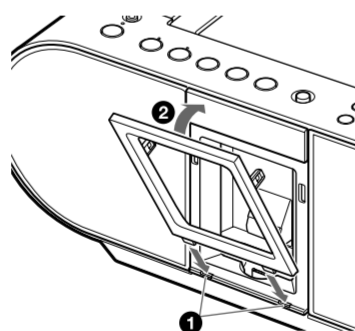

- 1 Inset the tabs of the exchangeable lid into the slots.
- 2 Push the upper part of the exchangeable lid until it clicks into place.


#### Note

Confirm the latches are correctly engaged on both sides.

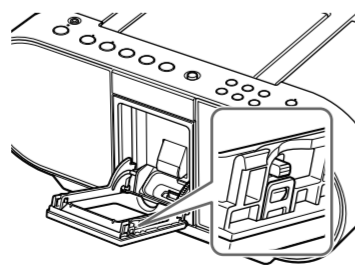

### Playing an iPod

 Press iPod & iPhone [2] (iPod [3] on the remote) and power turns on (direct power-on). "DC OUT" appears in the display (AC only) and the iPod begins to play automatically.



You can operate the connected iPod by the unit or the iPod buttons.

To	Press
Pause playback	iPod & iPhone [2] (iPod [3] on the remote). To resume play, press it again.
Stop playback	[4]
Go to the next track	[5]
Go back to the previous track	[6]
Locate a point while listening to	[8] (forward) or [7] (backward) while playing and hold it until you find the point.
Locate a point while observing on the iPod display	[8] (forward) or [7] (backward) in pause and hold it until you find the point.
Select a menu	Press MENU/MODE [6] (MENU [18] on the remote) and [10] or [11] to select a menu, and then press ENTER [11].
Go back to the previous menu	Press MENU/MODE [6] (MENU [18] on the remote).

#### Notes

- You may use the universal adaptor supplied with your iPod for a more customized fit. The iPod may be docked without the use of an adaptor.
- If you connect the iPod when another function is in use, the function will change to iPod automatically.
- Apple's iPod Universal Dock Adapter (not supplied) can be used with this unit.
- To use an iPod, refer to the user's guide of your iPod.
- Before disconnecting the iPod, pause playback.


**To use the unit as a battery charger (AC only)**  
You can use the unit as a battery charger. The charging status appears in the iPod display. For details, see the user's guide of your iPod.

#### On copyrights


- iPod is a trademark of Apple Inc., registered in the U.S. and other countries.
- iPhone is a trademark of Apple Inc.
- All other trademarks and registered trademarks are of their respective holders. In this manual, "™" and "®" marks are not specified.

### Playing a CD

1 Press [7] PUSH OPEN/CLOSE [7] and place a disc with the label side up in the CD compartment.  
To close the CD compartment, press [7] PUSH OPEN/CLOSE [7].

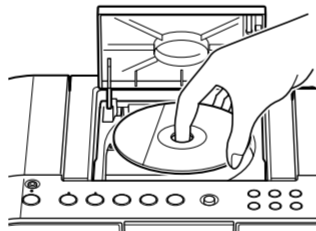

2 Press CD [3] (CD [3] on the remote).  
The player plays all the tracks once.

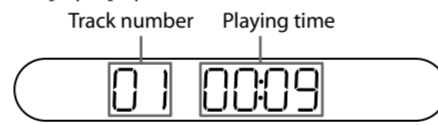

To	Press
Pause playback	CD [3] (CD [3] on the remote). To resume play, press it again.
Stop playback	[4]
Go to the next track	[5]
Go back to the previous track	[6]
Locate a point while listening to	[8] (forward) or [7] (backward) while playing and hold it until you find the point.
Locate a point while observing the display	[8] (forward) or [7] (backward) in pause and hold it until you find the point.
Remove the CD	[7] PUSH OPEN/CLOSE [7]

### Selecting a CD play mode

Press MENU/MODE [6] (MODE [15] on the remote) until "CD 1", "SHUF", "SHUF" and "PGM", or "PGM" and "CD" appear in the display. Then proceed as follows:

To Select	Select	Then do this
Repeat a single track	"CD 1"	Press [8] or [7] to select the track that you want to repeat, then press CD [3] (CD [3] on the remote).
Repeat all tracks	"CD"	Press CD [3] (CD [3] on the remote).
Shuffle play	"SHUF"	Press CD [3] (CD [3] on the remote).
Repeat tracks in random order	"SHUF"	Press CD [3] (CD [3] on the remote).
Program play	"PGM"	Press [8] or [7] then press DISPLAY-ENTER [11] (ENTER [11] on the remote) for the tracks (up to 20) you want to program in the order you want. Then press CD [3] (CD [3] on the remote).



Repeat programmed tracks	"PGM" and "CD"	Press [8] or [7] then press DISPLAY-ENTER [11] (ENTER [11] on the remote) for the tracks (up to 20) you want to program in the order you want. Then Press CD [3] (CD [3] on the remote).
--------------------------	----------------	--

#### To cancel the selected play mode

Press MENU/MODE [6] (MODE [15] on the remote) repeatedly until the selected mode disappears from the display.

#### To check the programmed track and playing order in the display

To check the order of tracks before playing, press DISPLAY-ENTER [11] (ENTER [11] on the remote). Every time you press the button, the track number appears in the programmed order.

#### To change the current program

Press [4] once if the CD is stopped and twice if the CD is playing. The current program will be erased. Then create a new program following the programming procedure.

#### Tip

You can play the same program again, since the program is saved until you open the CD compartment.

### Listening to the radio

1 Press RADIO-BAND-AUTO PRESET [3] repeatedly (direct power-on) or press RADIO [3] and BAND [14] repeatedly on the remote.

Each time you press the button, the indication changes as follows:  
"FM" ↔ "AM"

2 Hold down TUNE + or - [10] until the frequency digits begin to change in the display.

The player automatically scans the radio frequencies and stops when it finds a clear station.

If you can't tune in a station, press the button repeatedly to change the frequency step by step. When an FM stereo broadcast is received, "ST" appears.

#### Tips

- If the FM broadcast is noisy, press MENU/MODE [6] (MODE [15] on the remote) until "Mono" appears in the display and the radio will play in monaural.
- If you touch or operate an iPod connected to this unit while listening to AM/FM, noise may occur. Avoid touching or operating the iPod in this case.
- If you are listening to the radio with an iPhone connected to the unit, interference with radio reception may occur. Remove the iPhone in this case.
- If you hear noise from the AM/FM radio while supplying power to an iPod ("DC OUT" indicator appears in the display), press and hold MENU/MODE [6] (MODE [15] on the remote) for a few seconds to stop the power supply to the iPod ("DC OUT" indicator disappears from the display).

### Presetting radio stations

You can store radio stations into the player's memory. You can preset up to 30 radio stations, 20 for FM and 10 for AM in any order.

- 1 Press RADIO-BAND-AUTO PRESET [3] (BAND [14] on the remote) to select the band.
- 2 Hold down RADIO-BAND-AUTO PRESET [3] (RADIO [3] on the remote) for 2 seconds until "AUTO" flashes in the display.
- 3 Press DISPLAY-ENTER [11] (ENTER [11] on the remote). The stations are stored in memory from the lower frequencies to the higher ones automatically.

#### If a station cannot be preset automatically

You need to preset a station with a weak signal manually.

- 1 Press RADIO-BAND-AUTO PRESET [3] (BAND [14] on the remote) to select the band.
- 2 Tune in a station you want.
- 3 Hold down DISPLAY-ENTER [11] (ENTER [11] on the remote) for 2 seconds until the preset number flashes in the display.
- 4 Press PRESET + or - [8] until the preset number you want for the station flashes in the display.
- 5 Press DISPLAY-ENTER [11] (ENTER [11] on the remote). The new station replaces the old one.

#### Tip

The preset radio stations remain in memory even if you unplug the AC power cord or remove the batteries.

### Playing preset radio stations

- 1 Press RADIO-BAND-AUTO PRESET [3] (BAND [14] on the remote) to select the band.
- 2 Press PRESET + or - [8] to tune in the stored station.

### Using the display

#### iPod mode


**To use iPod backlight**  
Press DISPLAY [13] on the remote.

#### CD mode

**To check the total track number and playing time**  
In stop mode, press DISPLAY-ENTER [11] (DISPLAY [13] on the remote).

#### To check the remaining time

Press DISPLAY-ENTER [11] (DISPLAY [13] on the remote) repeatedly. The display changes as follows:

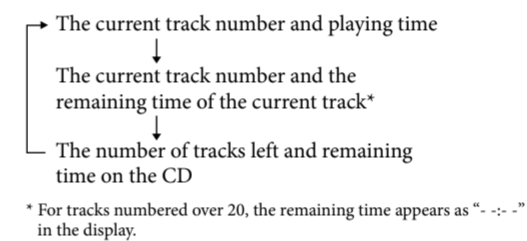

#### Radio mode

#### To display the frequency or a preset station number

Each time you press DISPLAY-ENTER [11] (DISPLAY [13] on the remote), the display changes to the frequency or a preset station number (if you have preset any).

### Connecting optional components

You can enjoy the sound from an optional component such as a portable digital music player through the speakers of this unit. Be sure to turn off the power of each component before making any connections. For details, refer to the instruction manual of the component to be connected.

- 1 Connect the AUDIO IN jack [20] on the back of the unit to the line output jack of the portable digital music player or other components using an audio connecting cable (not supplied).
- 2 Turn the unit and the connected component on.
- 3 Press AUDIO IN [3] and start playing sound on the connected component.

The sound from the connected component is output from the speakers of this unit.

To connect the unit to a TV or VCR, use an extension cable (not supplied) with a stereo-mini jack on one end and two phono plugs on the other end.

## Troubleshooting

### General

#### The power is not on.

- Connect the AC power cord to the wall outlet securely.
- Make sure the batteries are inserted correctly.
- Replace all the batteries with new ones if they are weak.
- When you operate the unit on batteries, you cannot turn on the unit using POWER [1] on the remote.

#### There is no audio.

- Unplug the headphones when listening through speakers.

#### Noise is heard.

- Someone is using a portable telephone or other equipment that emits radio waves near the player.  
→ Move the portable telephone, etc., away from the player.

### iPod

#### There is no audio.

- Make sure the iPod is connected firmly.
- Adjust the VOLUME +, - [9].

#### Operation is impossible.

- Make sure the iPod is connected firmly.

#### Cannot charge iPod.

- You cannot charge the iPod when the unit is using DC power supply.
- You cannot charge the iPod when "DC OUT" does not appear on the display in radio mode.

### CD player

#### The CD does not play or "no DISC" is displayed even when a CD is in place.

- Place the CD with the label surface up.
- Clean the CD.
- Take out the CD and leave the CD compartment open for about an hour to dry moisture condensation.
- The CD-R/CD-RW is blank.
- There is a problem with the quality of the CD-R/CD-RW, recording device or application software.
- Replace all the batteries with new ones if they are weak.

#### The sound drops out.

- Reduce the volume.
- Clean the CD, or replace it if the CD is badly damaged.
- Place the player in a location free from vibration.
- Clean the lens with a commercially available blower.
- The sound may drop out or noise may be heard when using poor quality CD-Rs/CD-RWs, or if there is a problem with the recording device or application software.


### Radio

#### Reception is poor.

- Reorient the antenna to improve FM reception.



- Reorient the player itself to improve AM reception.

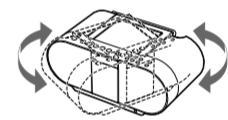

#### The audio is weak or has poor quality.

- Replace all the batteries with new ones if they are weak.
- Move the player away from the TV.

#### The picture of your TV becomes unstable.

- If you are listening to an FM program near the TV with an indoor antenna, move the player away from the TV.

### Remote

#### The remote does not function.

- Replace all the batteries in the remote with new ones if they are weak.
- Make sure that you are pointing the remote at the remote sensor on the unit.
- Remove any obstacles in the path of the remote and the unit.
- Make sure the remote sensor is not exposed to strong light such as direct sunlight or fluorescent lamp light.
- Move closer to the unit when using the remote.

After trying the remedies, if you still have problems, unplug the AC power cord or remove all the batteries. After all the indications in the display disappear, plug the AC power cord in or insert the batteries again. If the problem persists, please consult your nearest Sony dealer.