


FILE NO.

**SERVICE MANUAL  
(SUPPLEMENT)**

**Remote Control Color  
Television**

**DS27820-02 (U.S.A.)  
(CANADA)  
ORIGINAL VERSION**

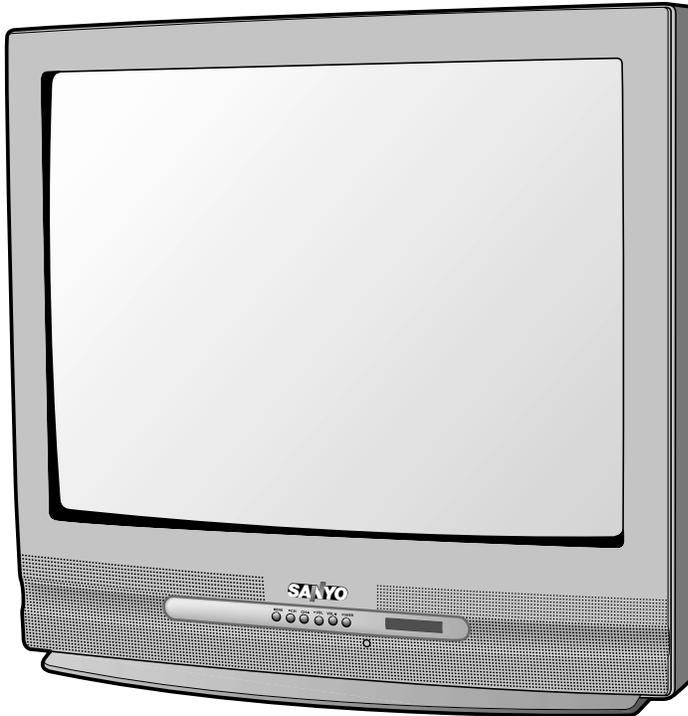

**Chassis No. 27820-02**

**NOTE:** Match the Chassis No. on the unit's back cover with the Chassis No. in the Service Manual.

**If the Original Version Service Manual Chassis No. does not match the unit's, additional Service Literature is required. You must refer to "Notices" to the Original Service Manual prior to servicing the unit.**

**THIS CHASSIS IS SIMILAR TO MODEL DS27830, CHASSIS NUMBER 27830-00. SERVICE INFORMATION GIVEN IN THIS MANUAL IS ONLY THE DIFFERENCE INFORMATION FROM MODEL DS27830, CHASSIS NUMBER 27830-00. FOR ADDITIONAL SERVICE INFORMATION, REFER TO THE SERVICE MANUAL FOR CHASSIS NUMBER 27830-00 USED IN MODEL DS27830 (SM780089).**

# DIFFERENCES

**MODEL DS27820 (Chassis No. 27820-02) — SAME AS MODEL DS27830  
(Chassis No. 27830-00) EXCEPT:**

## **1. IN THE CHASSIS ELECTRICAL PARTS LIST**

LOCATION NO.	MODEL DS27830 (Chassis No. 27830-00)		MODEL DS27820 (Chassis No. 27820-02)	
	Part No.	Description	Part No.	Description
A100	610 303 0623	ASSY, PWB, MAIN	610 311 7256	ASSY, PWB, MAIN
A700	610 303 0715	ASSY, PWB, CRT	610 311 7263	ASSY, PWB, CRT
A1000	610 303 1651	ASSY, PWB, A/V	610 311 7270	ASSY, PWB, A/V

For parts or service contact

**SANYO FISHER SERVICE**

**21605 Plummer Street  
Chatsworth, CA 91311 (U.S.A.)**

**300 Applewood Crescent,  
Concord, Ontario L4K 5C7 (CANADA)**

October / 2003 / 2000 SMC

Printed in U.S.A.