



ACCUSPLIT. 705MX OPERATING INSTRUCTIONS

BASIC STOPWATCH OPERATIONS

Master Reset

R+L (2sec) - Reset**
All segments go blank,
then come on briefly.

Event

R - Start
R - Stop (Display shows "SPLIT")
R(2sec) - Reset**



Dual Split Memory with Split Counter

R - Start (Shows Running DUAL Time)
R - Split* (Top shows CUM 1, Bottom shows LAP 1)
R - Split* (shows CUM 2, Bottom shows LAP 2)
R - Split* (Top shows CUM 3, Bottom shows LAP 3)
R - Split* (Top shows CUM 4, Bottom shows LAP 4)
R(2sec) - Reset**


*Split Counter always shows Current Split
Push C to return to Running Time

Memory Review (before Resetting)

L - Review* (Bottom shows AVE LAP Split, Top shows TOTAL ELAPSED TIME)
L - Review (Shows last DUAL Split)
L - Review (Shows next DUAL Split, in reverse order)
*Reviews at any time in reverse numerical order.
Hold down for Rapid Review.

BATTERY CHANGING

See specifications panel and drawing to right.

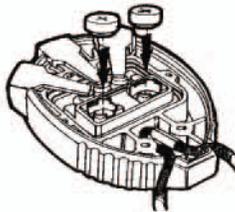

**Reset before 30 hrs. (end of range) and rollover.
After rollover, use Master Reset.

ACCUSPLIT, Inc.
3090 Independence Drive
Suite 148
Livermore, CA 94551 USA
800-935-1996 • 925-290-1900
FAX 925-290-1930
www.ACCUSPLIT.com
support@ACCUSPLIT.com

REGISTER NOW Please return your
AV705MX Registration to the Repair
Center address in the warranty, & we
will let you know about future products.
User _____ Email (preferred) _____

SPECIFICATIONS
Batteries: Batteries should last for 3 years. If display becomes dim, open back and replace with SR44 or equivalent.
Operating Temperature: 14°F to 138°F (-10°C to 59°C)
Quartz Crystal Accuracy: 0.01 sec/hr (accuracy may vary with shock, temperature or aging of crystal).

NO-PROOF-OF-PURCHASE LIMITED WARRANTY
See label on back of unit for details, or check
<http://support.ACCUSPLIT.com>

support@accusplit.com
www.accusplit.com

ASSEMBLED IN HONG KONG
© 2005 ACCUSPLIT