



**AGES 3+**  
20176


## Circular Saw

**Thank you for purchasing this PLAY-DOH Brand toy!**

**This set includes 2 three-ounce cans of PLAY-DOH Brand Modeling Compound (Net Weight 6 oz., 170 grams), saw, shape half mold and file.**

### TO INSTALL BATTERIES

Using Phillips screwdriver, loosen screws in battery compartment cover (screws stay attached to cover). Remove cover. Insert 2 x 1.5V "AA" or R6 size batteries. Alkaline batteries recommended. Replace cover and tighten screws.

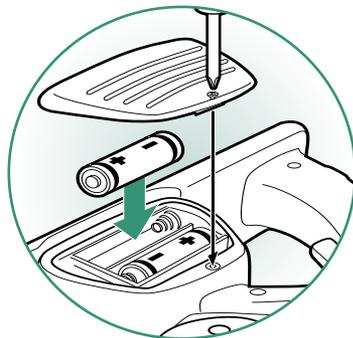

### CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
3. Always remove weak or dead batteries from the product.

### IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.

Batteries should be replaced by an adult.



### CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**



© 2004 Hasbro. All Rights Reserved.  
® denotes Reg. U.S. Pat. & TM Office.  
P/N 6395680000



Questions? Call: 1-800-327-8264