

Thank you for choosing a COBY MP3 player!



~This guide will cover how to transfer your music CD's into your COBY MP3 player using Windows Media Player 11.

~This guide will also provide common troubleshooting solutions for your COBY MP3 player.

Requirements

Windows Media Player 11 (WMP11)

The directions in this guide are given for Windows Media Player 11 (WMP11)


If your computer does not have Windows Media Player installed, please download the latest version of Windows Media Player (WMP) from Microsoft's website

www.microsoft.com/windows/windowsmedia/player/download/download.aspx

AUDIO TRANSFER – Getting Started

Transfer your Music CD's into your COBY MP3 player

1) Launch the WMP11 program.

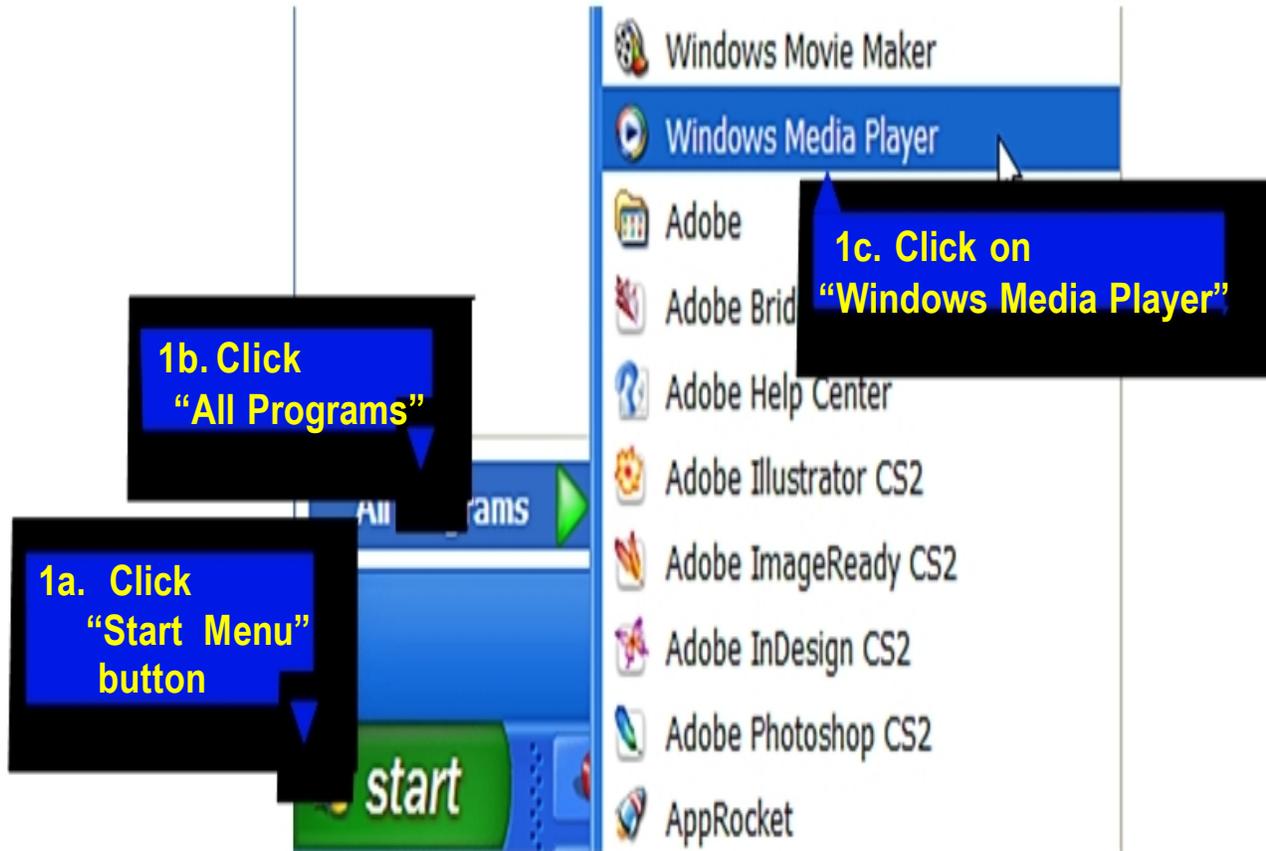

2) Put an audio CD into the CD-ROM drive of your computer.

- ✦ If your computer has an internet connection, WMP will automatically retrieve and display the album information.

Click the “**Rip**” tab and select which “Title” to rip.
To rip the entire album, check all of the check



The screenshot shows the Windows Media Player interface with the 'Rip' tab selected. The album 'Coming Home (D:)' by Lionel Richie is displayed. The track list is as follows:

Album	Title	Length	Rip Status	Contributing Artist	Composer	
Coming Home (D:)						
Audio CD (D:)						
	<input checked="" type="checkbox"/> 1	I Call It Love	3:19	Stopped	Lionel Richie	Herman...
Lionel Richie	<input checked="" type="checkbox"/> 2	Sweet Vacation	3:54		Lionel Richie	Lionel Ri...
Soul and R&B	<input checked="" type="checkbox"/> 3	Why	4:01		Lionel Richie	Chuckii ...
2006	<input checked="" type="checkbox"/> 4	What You Are	4:12		Lionel Richie	Jermain...
☆☆☆☆☆	<input checked="" type="checkbox"/> 5	Up All Night	3:36		Lionel Richie	Chuckii ...
	<input checked="" type="checkbox"/> 6	I'm Coming Home	4:18		Lionel Richie	Chuckii ...
	<input checked="" type="checkbox"/> 7	All Around the World	3:34		Lionel Richie	Lionel Ri...
	<input checked="" type="checkbox"/> 8	Out of My Head	3:15		Lionel Richie	Lionel Ri...
	<input checked="" type="checkbox"/> 9	Reason to Believe	4:46		Lionel Richie	Dallas A...
	<input checked="" type="checkbox"/> 10	Stand Down	4:02		Lionel Richie	Dallas A...
	<input checked="" type="checkbox"/> 11	I Love You	4:12		Lionel Richie	Lionel Ri...

3) Set the Rip Options (optional).

Click the **Rip** button to set the Rip options. The recommended Rip settings are:

- ✧ Select "Format > mp3"
- ✧ Select "Bit Rate > 128 Kbps"
- ✧ Select "More Options" to change the directory to which WMP saves your ripped music files. WMP will save your music to your "My Documents > My Music" folder by default.



4) Start ripping the CD.

Click the “**Rip**” button and select “Rip” to start converting the audio CD to MP3/WMA

- ✦ The ripping process will take a few minutes to complete. WMP will save the converted music files in your “My Documents > My Music” folder by default.



Transfer MP3/WMA Files to Your COBY Player


Once you have MP3 or WMA digital music files on your computer, transfer them to your COBY player in order to listen to music anywhere.

Use WMP11 to transfer (sync) music from your computer to your COBY MP3 player.


1) Launch the WMP11 program.

2) Connect your COBY player to a USB port on the computer.

✦ WMP11 will detect your COBY player automatically.

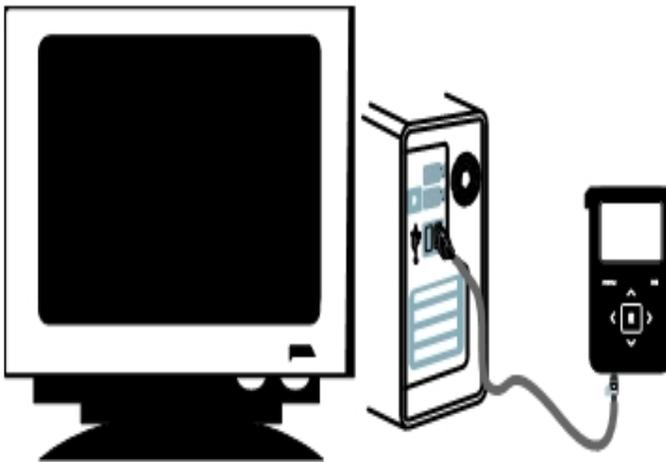

3) Browse your music library to choose songs to sync.

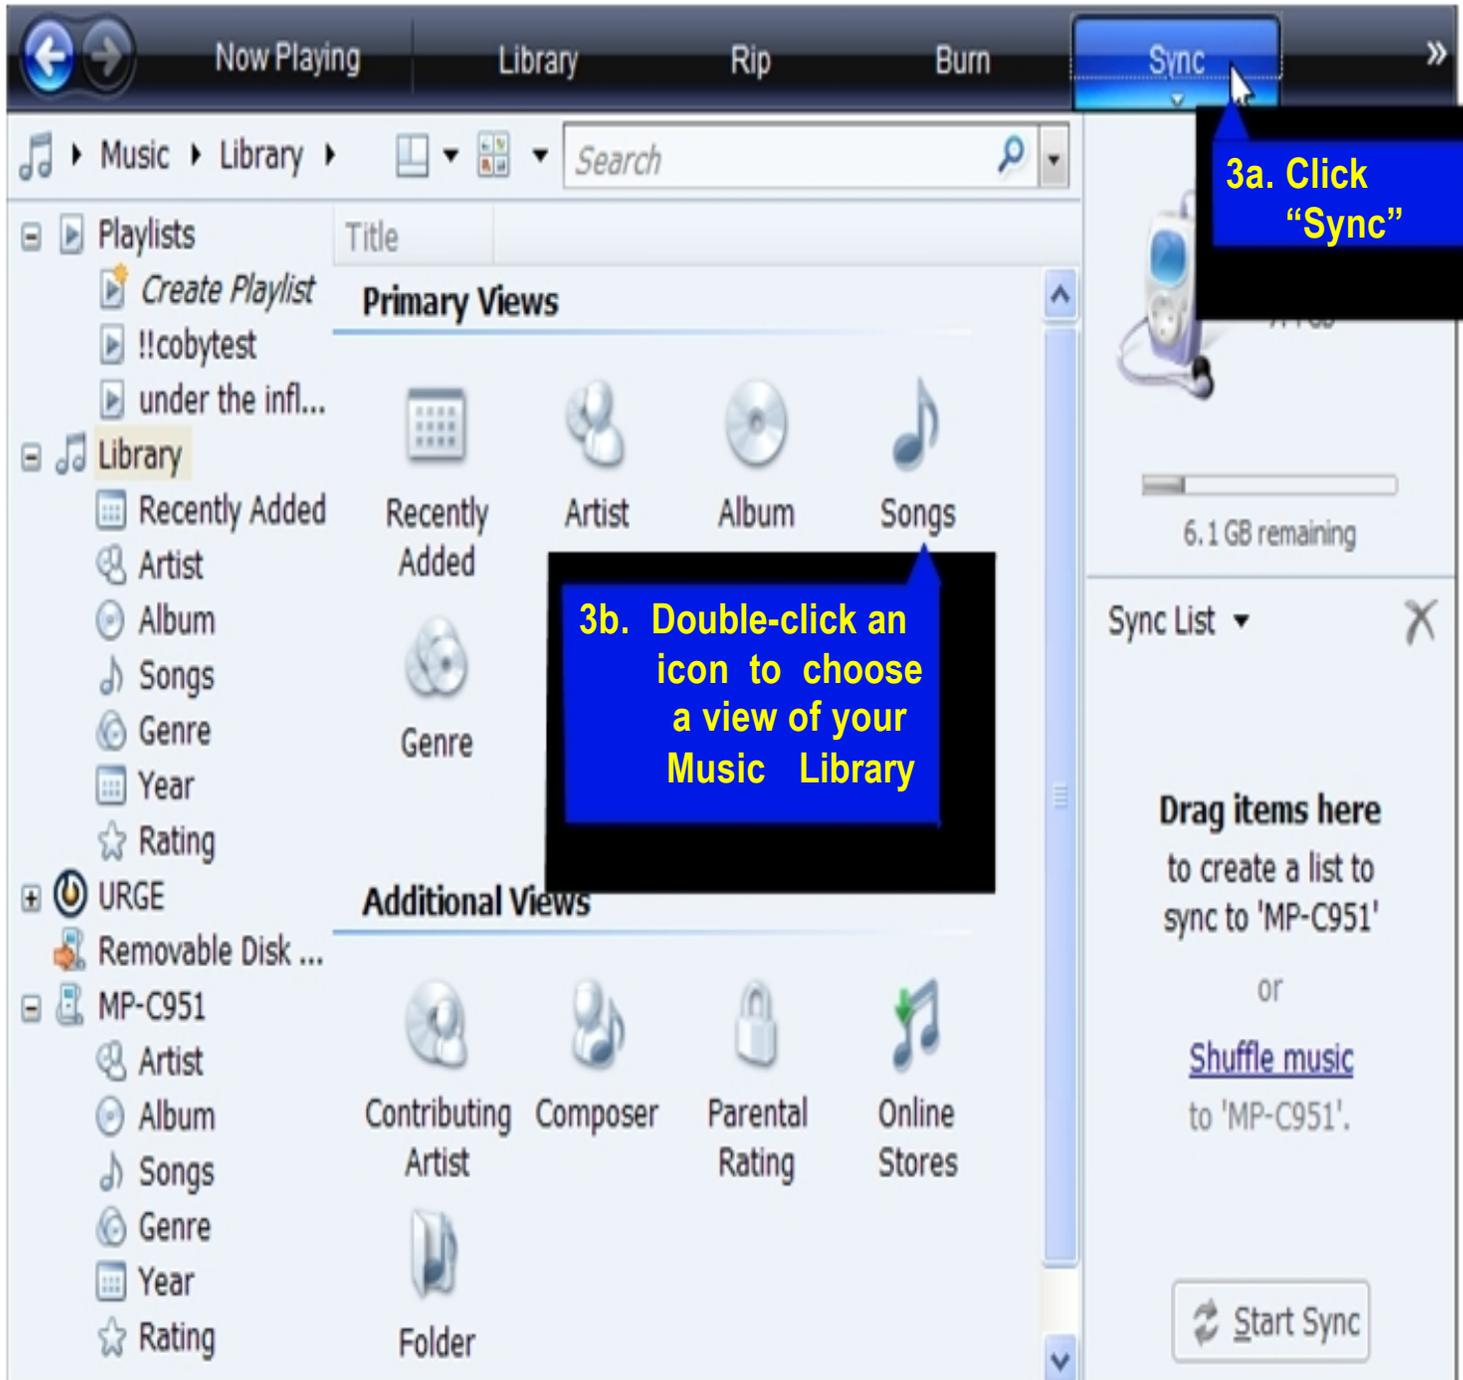

The screenshot shows the iTunes application window. At the top, there are tabs for 'Now Playing', 'Library', 'Rip', 'Burn', and 'Sync'. The 'Sync' tab is selected, and a blue callout box with yellow text points to it, containing the instruction: "3a. Click 'Sync'". Below the tabs is a breadcrumb path: "Music > Library > Search". On the left sidebar, the "Library" section is expanded, showing various view options like "Recently Added", "Artist", "Album", "Songs", "Genre", and "Year". In the main area, there are two sections: "Primary Views" and "Additional Views". In the "Primary Views" section, the "Songs" icon is highlighted with a blue callout box containing the instruction: "3b. Double-click an icon to choose a view of your Music Library". The right sidebar shows a sync progress bar with "6.1 GB remaining" and a "Sync List" section with instructions to drag items to create a list to sync to 'MP-C951' or to shuffle music. A "Start Sync" button is at the bottom right.

4) Select songs to sync to your COBY player.



4a. Type in the Search bar to quickly find a song.


4c. Drag the selected tracks here to add them to the Sync List.

4b. Click on a track to select it for synchronization. To select multiple tracks, hold the CTRL or SHIFT and click on the tracks.

4d. Click "Start Sync" to transfer the Sync List to your COBY player.

5) Disconnect your COBY player from the computer.

Once the sync process is complete, unplug your player from the USB port of the computer. Now you're ready to listen to music on your COBY player.

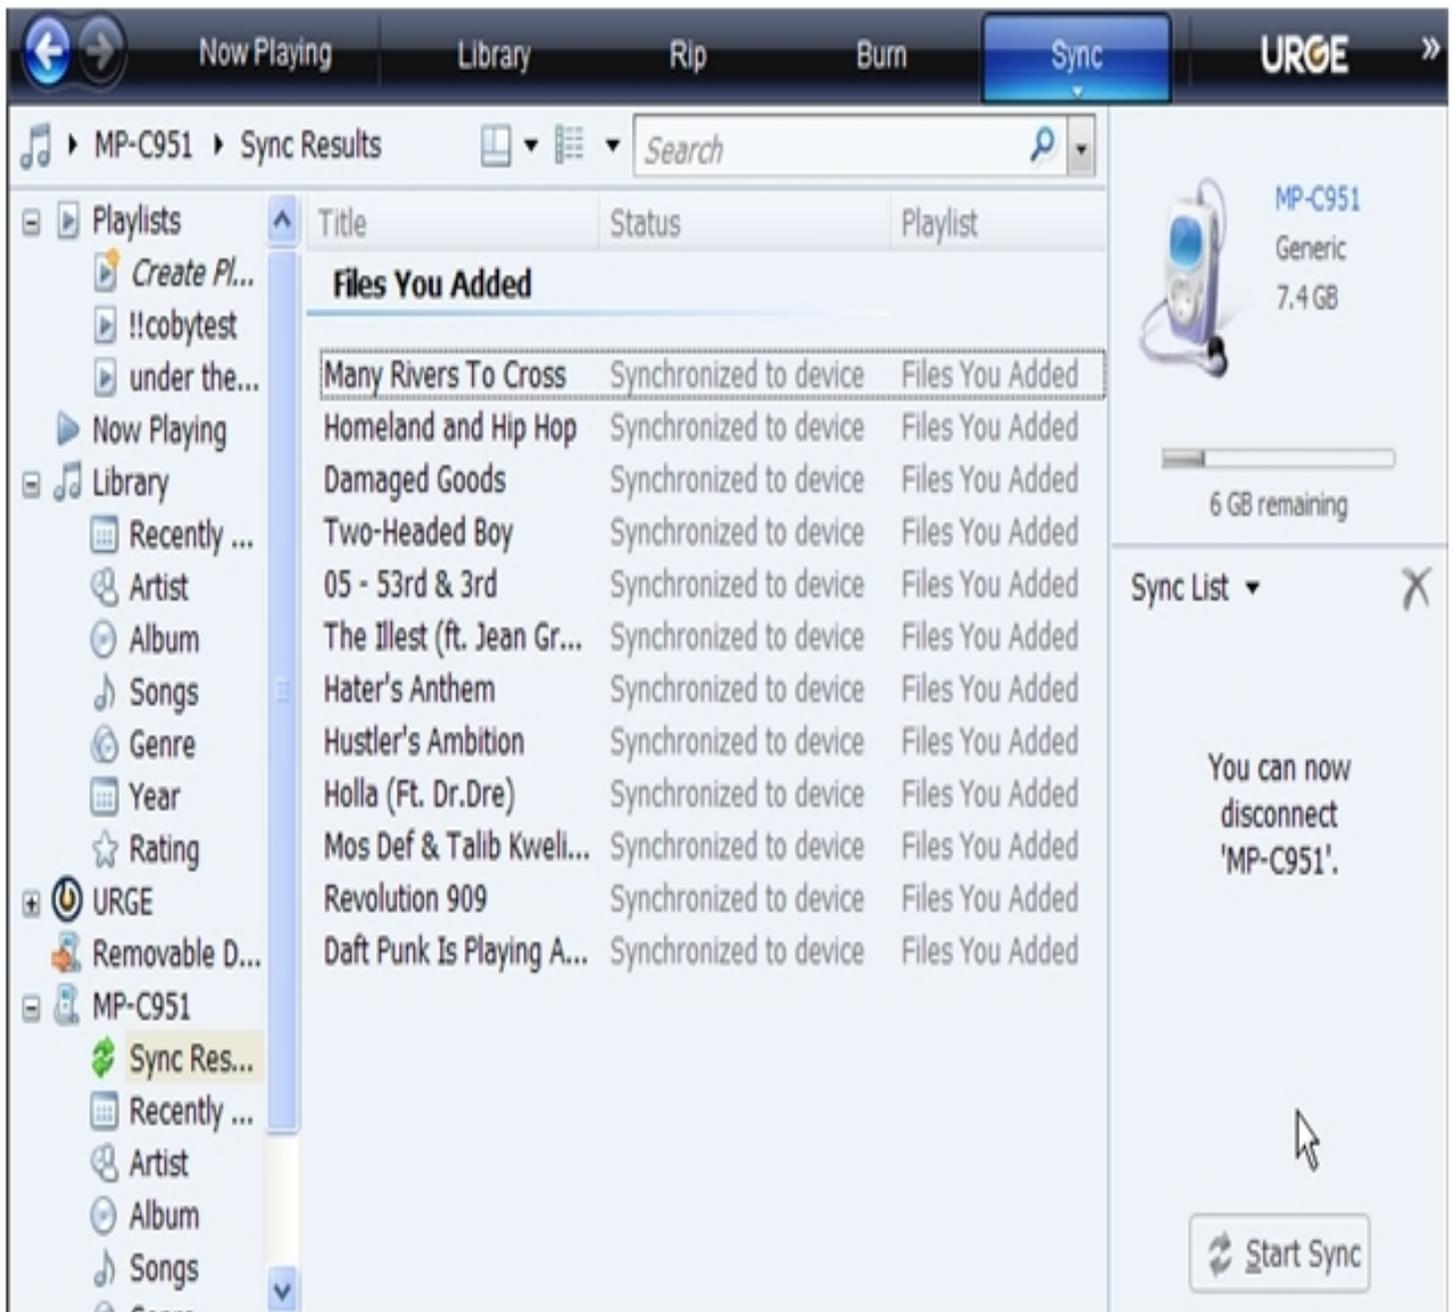

The screenshot shows the iTunes application window with the 'Sync' tab selected. The main window displays a list of songs that have been synchronized to the MP-C951 device. The list includes the following items:

Title	Status	Playlist
Files You Added		
Many Rivers To Cross	Synchronized to device	Files You Added
Homeland and Hip Hop	Synchronized to device	Files You Added
Damaged Goods	Synchronized to device	Files You Added
Two-Headed Boy	Synchronized to device	Files You Added
05 - 53rd & 3rd	Synchronized to device	Files You Added
The Illest (ft. Jean Gr...	Synchronized to device	Files You Added
Hater's Anthem	Synchronized to device	Files You Added
Hustler's Ambition	Synchronized to device	Files You Added
Holla (Ft. Dr.Dre)	Synchronized to device	Files You Added
Mos Def & Talib Kweli...	Synchronized to device	Files You Added
Revolution 909	Synchronized to device	Files You Added
Daft Punk Is Playing A...	Synchronized to device	Files You Added

On the right side of the window, there is a summary for the MP-C951 device, showing it is a Generic device with 7.4 GB of storage. Below this, a progress bar indicates that 6 GB of storage remains. A 'Sync List' dropdown menu is visible, and a message states: 'You can now disconnect 'MP-C951''. At the bottom right, there is a 'Start Sync' button.

VIDEO TRANSFER – Getting Started

Converting your VIDEO files and transferring it into your player.

Install the Conversion Utility

1. Insert the driver CD
2. Copy the “MTVVideoConverter_Ver1.12.11.3” folder.
3. Paste the “MTVVideoConverter_Ver1.12.11.3” folder on your desktop.

Run the Conversion Utility

1. On your desktop, open the MTVVideoConverter_Ver1.12.11.3 folder.
2. Double click on the “VideoConvert” camera icon.
3. The program will initialize.

Converting Video (see diagram below)

- 1.a** Find and Select the video files to convert in the INPUT Video field.
- 1.b** Select the directory where you want to save the converted file.
- 1.c** Start the conversion process

When the conversion is completed, copy and paste or drag and drop the converted files to your MP3 player MOVIE DIR folder.


Done!!

▶ || ◻ Volume

0 min: 0 sec 3 min: 36 sec

Time Selection to Convert

→ 0 min 0 sec ← 3 min 36 sec ◻ Mute



? Help Video Input C:\Documents and Settings\Mike\Desktop\FOX\Shakira Feat Wycle

Input Video **1.a** Music Input

Video Output C:\Documents and Settings\Mike\Desktop\FOX\ **1.b**

Input Music

MTV Preview

Start Conversion **1.c**

Cancel Conversion

Conversion Status

0%

Output Frame Size

- 96X64
- 128X96
- 128X128
- 160X112
- 160X128
- 176X144
- 208X176
- Cut Image

Output Frame Rate

- Sports Video
- Animated Video
- Quick Slide Show (5fps)
- Photo Slide Show (1fps)
- Enhanced

Output Audio Quality

- Good
- Normal

Common Troubleshooting

Problems

Possible Solutions

No Power

- *Ensure that the "HOLD" button is turned off.
- *The Battery level may be too low. Charge the unit.
- *Reset the unit by inserting a pin on the back of the unit "Reset" hole.

Music does NOT Play or Freezes

- *Unknown Format (WMA with DRM).
- *The file(s) are corrupted or damaged.
- *Unsupported file format (ACC, WAV, M4A...Etc.)

No Sound after file transfer

- *Ensure that the original file plays on your computer. If not, then you will need to obtain the codec for that file.
- *Unsupported format.

Video Conversion Error

- *Ensure that the original file plays on your computer. If not, then you will need to obtain the codec for that file.
- *Unsupported format.

Video Issues

- *Make sure that you are using the correct output frame size and the correct output frame rate.
- *For the best output frame size, set the MTV Video Converter to 160X128 or 160X112 @ 15fps (sports Video).

Computer does NOT recognized the MP3 player

- *Check the connections.
- *Switch USB ports or DO NOT use a USB extension cable.
- *Go into the player "Setup" and change the USB mode to either MTP to MSC or MSC to MTP.

If you are still having difficulty with your MP3 player, please contact Customer Care, Hours of operation, Monday-Friday 8:00 AM – 8:30:00 PM EST, Saturday and Sunday 9:00 AM – 5:30 PM EST. You can also reach us online at

customerservice@cobyusa.com or techsupport@cobyusa.com

1-800-727- 3592