


**Lavastoviglie**  
**Dishwasher**  
**Lave-vaisselle**  
**Geschirrspüler**  
**Afwasautomaat**  
**Lavavajillas**  
**Máquina de lavar-louça**

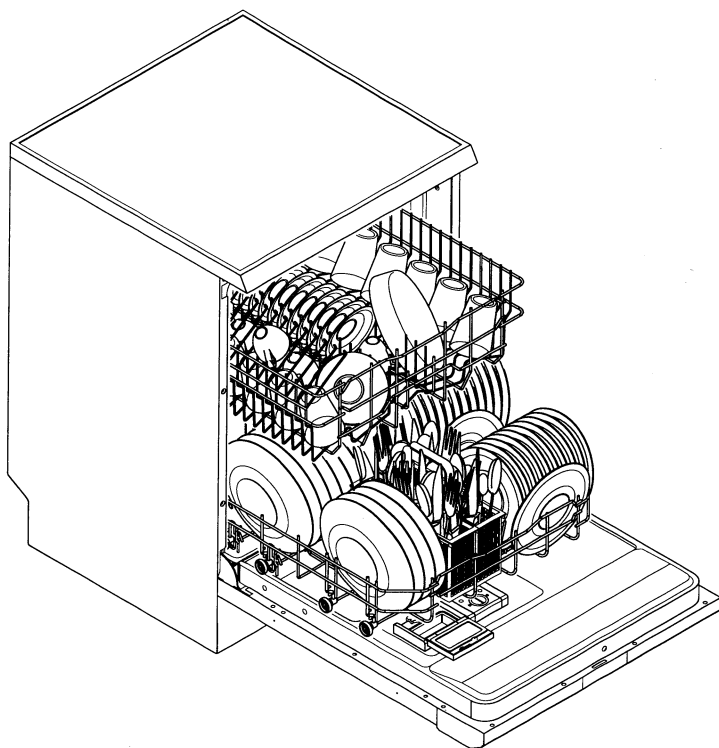

Istruzioni per l'installazione e l'uso  
Instructions for installation and use  
Instructions pour l'installation et l'emploi  
Informationen für Installation und Gebrauch  
Instructies voor installatie en gebruik  
Instrucciones para la instalación y el uso  
Instruções de utilização

# CONTENTS

<b>General precautions</b>	<b>pag. 25</b>
<b>Installation</b>	<b>pag. 27</b>
<b>Description of the appliance</b>	<b>pag. 29</b>
<b>Water softener</b>	<b>pag. 30</b>
<b>Adjusting the softener</b>	<b>pag. 31</b>
<b>Detergent and rinse-aid dispenser</b>	<b>pag. 32</b>
<b>Loading the dishwasher</b>	<b>pag. 33</b>
<b>How to save energy</b>	<b>pag. 34</b>
<b>First wash</b>	<b>pag. 35</b>
<b>Programme delay</b>	<b>pag. 36</b>
<b>Additional functions</b>	<b>pag. 37</b>
<b>Dealing with malfunctions</b>	<b>pag. 38</b>
<b>Table of programs</b>	<b>pag. 39</b>
<b>Cleaning and maintenance</b>	<b>pag. 40</b>
<b>How to deal with small problems</b>	<b>pag. 42</b>
<b>After-sales service</b>	<b>pag. 42</b>
<b>Recommendations</b>	<b>pag. 43</b>
<b>Technical data</b>	<b>pag. 44</b>

## PROTECTING THE ENVIRONMENT

### Disposing of the packaging

Ensure that the recyclable material from the packaging is consigned to your nearest recycling centre.

### CAUTION

Before using your appliance, read the instructions in this manual carefully. Keep this manual in a safe place; if you sell your dishwasher, pass the manual on to the new owner.

The manufacturer declines all responsibility if the following precautions are not complied with.

- 1) Do not use appliances damaged in transit; if in doubt, contact your dealer.
- 2) The materials used for packaging (plastic bags, polystyrene, wood, etc.) must not be left within reach of children, since they are a potential source of danger.
- 3) The appliance must be installed and connected in accordance with the instructions provided by the manufacturer or by qualified personnel.
- 4) The appliance must only be used for household purposes and for the functions for which it was designed.
- 5) Never touch or operate the appliance with wet hands or bare feet.
- 6) Do not leave the dishwasher exposed to the weather (rain, direct sunlight, etc.).

7) Only skilled staff are authorized to carry out repair work on the appliance.

8) In case of malfunctions or maintenance work, disconnect the appliance from the electrical mains. Remove the plug or cut off the supply of current by disconnecting the master circuit-breaker for your home.

9) Once taken out of use, appliances must be rendered unusable. It is important to cut the mains power lead after disconnecting the plug from the socket. Take measures on parts of the appliance such as locks, doors, etc. which might be dangerous for children if used during play, to eliminate any such risks. Consign the obsolete appliance to an authorized scrapping centre.

10) Keep children away from detergents and from the open dishwasher. The appliance might contain residues of detergent.

11) Never drink the water left in the appliance or on dishes after washing programs.

12) Do not place solvents such as alcohol or turpentine inside the dishwasher tank; they might cause an explosion.

### 13) MODELS WITH AQUASTOP

This device prevents the room from flooding in case of water leaks. If it is

tripped, a qualified technician will have to be called in to evaluate and repair the failure. In these models, the filler pipe, equipped with a resin container connected to the water supply point, contains a solenoid valve. Never cut the pipe or allow the box to fall into water. If the filler pipe is damaged, disconnect the appliance from the water supply.

14) Leaning or sitting on the open door of the dishwasher may cause it to tip over.

15) Never place plastic dishes above the heating element; they might melt.

16) Never touch the heating element during a washing cycle or just after it has finished.

17) Children are forbidden to use or play with the dishwasher.

18) Only wash dishes and cutlery suitable for washing in a dishwasher.

19) Knives and cutlery receive a better wash if placed in the basket with their handles pointing down; however, handles may be left pointing upward to avoid injury by tips or blades.

20) Any program in progress is interrupted if the door is opened. When the door is closed again, the program restarts from the point where it was interrupted. Only open the door during a program if absolutely necessary, since irregularities in the program may result. Before reclosing the door, leave it ajar for a few minutes.

## INSTALLATION

### Unpacking

Remove the outer cardboard casing, the top, the reinforcing corner pieces and the polystyrene base. Open the door of the dishwasher and remove the polystyrene basket retainer elements.

### Positioning

Place the appliance in the chosen position. The side or back of the appliance may be placed in direct contact with adjoining units or walls. The water filler and drain pipes may be turned to the right or left to allow appropriate installation.

### Levelling

After positioning the appliance, screw the feet in or out to adjust its height if necessary, and to level it until horizontal.

**Proper levelling ensures that the dishwasher gives the best service.**

**N.B.:** some models only have one foot at the rear, which can be adjusted using a screw low down on the front of the appliance.

This allows the appliance's position to be adjusted even after it has been mounted inside the kitchen units. (See sheet with illustrations of installations phases).

**If the appliance is installed on a carpeted floor, take care that the**

**openings in its base are not obstructed.**

### Connection to the cold water supply

Connect the filler pipe to a cold water connection having **3/4 gas** threaded attachment, fitting the filter supplied with the dishwasher and taking care to screw it tightly onto the cock (Fig. 1). If the water piping is new or has been out of use for a long time, before making the connection run the water until it is clear and free from dirt.

Without this precaution, the water inlet may be fouled, causing damage to the appliance.

### Connection to the hot water supply

The appliance may be supplied with mains hot water (central heating system) at a temperature of no more than 60 °C. In this case, the washing time will be about 20 minutes shorter and the wash will be slightly less effective. The connection must be made to the hot water supply exactly as described for connection to the cold water supply.

### Connecting to the drain line

Fit the drain pipe into a drain line with diameter of at least **4 cm**, or place it over a sink, avoiding restrictions or over-tight bends.

The free end must be between **32 and 80 cm** above the ground, and must not be immersed in water (Fig. 2).

### Electrical connection

Connect the plug to a power socket which has an earth connection in good working order (earthing of the system is a safety precaution required by law) after checking that the mains voltage and frequency values are as stated on the nameplate on the inside edge of the door and that the electrical system to which the appliance is connected is rated for the maximum current stated on the same nameplate.

If the power socket to which the appliances is to be connected is not compatible with the plug, replace the plug with another of suitable type rather than using adaptors or multiple plugs, which might cause heating or burning. If the appliance is not

connected by means of a plug, in order to comply with the relative safety inspections an omnipolar breaking device with contact opening gap of at least **3 mm** must be installed on the installation side.

**The manufacturer declines all responsibility for any injury or damage deriving from failure to connect the line to earth or a faulty earth connection.**


### N.B.

**This appliance complies with the requirements of EEC Directive 89/336 dated 3.6.89 (including the amending directive 92/31) on the prevention and elimination of radio frequency disturbance.**

- *The plug must be accessible after installation.*
- *If the power supply lead is damaged, it must only be replaced by the After-Sales Service or by a similarly qualified person.*
- **CAUTION!**  
*If the power supply lead is replaced, the hatch must be returned to the correct position.*

## DESCRIPTION OF THE APPLIANCE

Before reading this description, open out the pages with the illustrations at the end of the manual.

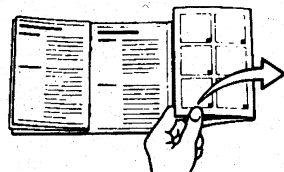

### Control panel description

- 1 **ON** button
- 2 **PROGRAMME SELECTION** button
- 3 **DELAYED START** selection button
- 4 **ECONOMY PROGRAMME SELECTION** button
- 5 **NO DRY** button
- 6 **HALF-LOAD** wash button
- 7 Information display

### Inside the tank

- 15 Top basket
- 16 Top spray arm
- 17 Bottom basket
- 18 Bottom spray arm
- 19 Salt container
- 20 Washing filter
- 21 Detergent and rinse-aid container
- 22 Cutlery basket

## WATER SOFTENER

The dishwasher is equipped with an automatic softener which uses regenerating salts specially developed for dishwashers to remove hardening substances from the water.

Hard water leaves whitish marks on the dry dishes, and dishes gradually lose their shine over time.

The appliance is preset to dispense the right amount of salt on the basis of the hardness of the mains water.

N.B. The appliance leaves the factory with a medium setting.

**Important note: users are asked to take great care to close the salt container carefully after filling. It is important that detergent, or water containing it, should not enter the salt container, since this would impair operation of the regeneration system.**

**In this case, the warranty would no longer apply.**

### Filling with salt

Use only regenerating salt for household dishwashers.

If salt pastilles are used, do not fill the container completely.

**Only use edible or industrial salt in extreme cases, since they contain insoluble substances which may damage the water softening system over time.**

There is a container on the bottom of the dishwasher into which the regeneration salt has to be poured. After taking out the bottom basket, unscrew the cap of the container by turning it anti-clockwise and pour in the salt using the funnel supplied with the dishwasher (Fig. 3). Before screwing the cap back into place, remove salt residues from the opening of the container.

The water softener contains about 1,7 kg of salt.

With water of average hardness reload with softener every 20 wash cycles.

**N.B.:** when the appliance is used for the first time, one litre of water has to be poured into the tank as well as the salt.

**The salt container must always be topped up before a wash, so that any overflowing salt solution will be removed immediately by the water.**

**If this solution is left inside the tank, it might cause corrosion.**

## ADJUSTING THE WATER SOFTENER

The dishwasher is fitted with a device which allows adjustment to the level of hardness of the mains water. It is inside the plastic ring-nut on the right-hand side inside the dishwasher (Fig. 4) and allows setting at 5 levels.

Set the water softener after checking the hardness of your water in accordance with the table.

Water hardness		Setting
German degrees	French degrees	
0 - 4 °dH	0 - 7 °dF	Setting N. 1 NO SALT
5 - 9 °dH	8-15 °dF	Setting N. 1
10-22 °dH	16-37 °dF	Setting N. 2
23-29 °dH	38-50 °dF	Setting N. 3
30-35 °dH	51-60 °dF	Setting N. 4
36-41 °dH	61-70 °dF	Setting N. 5

**N.B.** Contact your water supplier for information about the hardness of the water.

## DETERGENT AND RINSE AID DISPENSER

The detergent and rinse aid dispensers are on the inside of the door.

The detergent dispenser is on the left and the rinse aid dispenser on the right.

**Fill the dispenser with detergent before each wash.**

### Filling with detergent

To open the detergent dispenser press the relative button gently. The lid will spring out. Pour in the detergent and close the lid (Fig. 5). The dispenser is opened automatically during washing. If the "super" program is selected, as well as the usual dose of detergent, an extra amount will have to be added to cavity "G" or "H" (Fig. 5A-5B).

**Important: use only detergents specifically intended for dishwashers. The use of good detergents is important in obtaining the best washing results. If insufficient detergent is added, the dirt will not be completely eliminated, while excessive detergent does not increase the effectiveness of the wash, but is wasteful and may cause foam and pollution.**

### Adding rinse-aid

Open the cap or hatch of the dispenser and pour in the rinse-aid, watching the optical level indicator (Fig. 6A - 6B).

Rinse-aid level indicator

- Dispenser full
- Dispenser empty

The rinse-aid dispenser is able take about 140 c.c. of liquid. Before closing the cap or hatch, wipe away any spills of rinse-aid with a soft cloth.

**The rinse-aid is added to the water automatically during the last rinse; it speeds up the drying process and prevents the formation of stains and scale deposits on the dishes.**

To adjust the dosage, turn the selector on the dispenser to the desired position; the doses are proportional to the numbers indicated (Fig. 6A - 6B). Increase the dose if the washed dishes are dull or show round marks. If dishes are sticky or have whitish streaks, reduce the dose. The appliance leaves the factory with a medium setting.

## LOADING THE DISHWASHER

The dishwasher has a capacity of 12 place-settings including serving dishes.

**Before loading the dishes, remove the largest scraps of food to avoid blocking the filter.**

**Very dirty pans or frying-pans must be soaked in water before they are placed in the dishwasher, to allow food waste to be removed more easily.**

**Put pans in the bottom basket.**

### Loading the bottom basket

Thanks to the particularly vigorous washing action of the bottom spray arm, the bottom basket is the right place for the dishes with the toughest dirt. It is fitted with a plate rack (Fig.7) and a basket for all types of cutlery. The bottom basket will be filled with plates, soup dishes, dessert and serving dishes, pans and lids. Place the main course and dessert plates on the that are provided, taking care that there is always a gap between one plate and the next. They must always be vertical to allow the water to pass freely. Pans must always be upside down. All loading combinations and variations are possible, provided dishes and pans are placed so that all dirty surfaces are exposed to the jets of water from below, and the water is able to flow freely (Fig. 8A-8B).

### Loading the top basket

The top basket is intended to take only small and medium items such as glasses, small plates, coffee and tea cups, shallow bowls and light heat-resistant plastic objects. When the top basket is used in the lower position, plates with light dirt can also be placed in it. Load plates with the top facing forward, and cups and other recipients with the opening facing down. A few washes will give you experience of the best way to arrange cups and glasses in two layers. Large and small plates can be placed in the centre, in the supports provided. The diagrams show some possible options for arranging dishes in the top basket (Fig. 9A-9B). The top basket contains the "half load" cutlery basket; for instructions on its use see "HALF LOAD WASH".

### Adjusting the top basket

The top basket can be set in two different positions depending on the height of the dishes. Pull the basket out to the limit position, turn and stop "E" on the right and runner (Fig. 11) through 90°, push the runner towards the dishwasher and then raise the basket and insert the lower set of wheels into the runner (Fig. 12); now restore the end stop to its original position. This will allow large diameter plates to be loaded into bottom basket.

## HOW TO SAVE ENERGY

A number of basic rules can be followed to save water and electricity:

- Use the dishwasher when fully loaded
- Do not wash dishes in running water
- Use the washing program best suited to the type of load
- Do not carry out the preliminary rinse
- If available, connect the appliance to the hot water supply system up to 60°C

## FIRST WASH

### Switching on

The dishwasher must not be turned on until the dishes have been loaded, the dispenser has been filled with detergent, a check has been made that the spray arms turn freely, and the door has been shut. The water tap must also be turned on and salt placed in the container. To simply programme and communications, the dishwasher is equipped with an **"Information Display"**.

- 08 Indicates the programme selected/delayed start/alarms;
- 09 Indicates that a delay has been set before the start of the programme;
- 10 No rinse aid warning light
- 11 No regenerating salt warning light;
- 12 Indicates that an economy programme has been selected;
- 13 Indicates that the dry exclusion has been selected;
- 14 Indicates that the half wash has been selected.

### Setting the programme

All programming operations are accompanied by a short beep to indicate reception; if you do not hear anything when a button is pressed, the programme selected does not provide this function. To select the most suitable programme for the dishes to be washed, **comply carefully with the table** in the manual which follows, **especially in the beginning**. This table lists the programmes available in relation to the type of dishes, their strength and resistance to temperature, and how dirty they are. With this fully integrated dishwasher,

the washing programmes are selected with the door partly open. Once the most suitable programme has been identified, it is set by pressing the **"programme selection"** button until the corresponding number appears on the information display.

**N.B.:** "P0" on the display means that no washing programme has been selected. This indication remains on the display until the "programme selection" button is pressed; at this point the display will show the last programme carried out. Each time the button is pressed, the system will scroll through the program numbers from that number onward.

### Start-up

At this point, to start the dishwasher simply close the door. A beep will inform you that the programme is starting.

### Switch-off

The end of the washing programme is signalled by an on/off beeper and the appearance of "P0" on the display.

### Caution!

If you open the door during the wash cycle, you must wait **at least 1 min.** with the door ajar before starting the dishwasher again.

### Deleting/Changing the programme

To abort a programme in progress, simply select programme "P0". When the door is closed, the dishwasher will force an early end to the programme.

**N.B.:** this operation can be carried out quickly by keeping the "programme

selection" button pressed for about 3 seconds, until "P0" appears on the display. To change a programme already in progress, simply set the new number corresponding to the programme desired. When the door is closed, the dishwasher will automatically start the new programme.

### Programme delay

Allows the start of washing programmes to be delayed by from **a minimum of 1 hour to a maximum of 9.**

This allows you to operate the dishwasher during the hours prefer. When the "programme delay" button is pressed, the display first shows the duration of the program, and then the number of hours (9, 8, ...1) of delay required before the dishwasher starts. The "clock" symbol remains until the program begins, while the number of hours disappears automatically if the keypad is not touched for five seconds, or if any button other than "program delay" is pressed.

To see how many hours are left before the programme starts, simply press the corresponding button once.

### Economy programme selection

This button can be pressed to reduce the temperatures in programmes higher than number 3, allowing a significant electricity saving and reducing the duration of the washing cycle.

### Drying exclusion selection

Pressing this button the drying at the end of the cycle is excluded in the programmes where this is present obtaining a reduction of the duration of the programme and also of energetic consumption.

### Half load wash selection

This option is ideal for loads of up to 6 place-settings and saves water and electricity.

Selected using the button on the control panel, this allows washing only in the top basket, in the right of which a cutlery basket must be placed (Fig. 10).

The bottom basket must be left empty.





## ADDITIONAL FUNCTIONS

The electronic control system of the dishwasher allows its use to be personalized to the user's requirement using a programming procedure which is not directly accessible and provides the following options:

- Disabling of the beep which underlines all dishwasher programming and operating procedures;
- Adaptation of the dishwasher's water filling system to the mains water supply pressure;

Programming procedure:

- a) press the "programme selection" and "programme delay" buttons together for 3 seconds, until the symbol of the parameter to be modified appears on the display (see table below);
- b) press the "programme delay" button to modify the parameter;
- c) press the "programme selection" button to change the parameter to be modified and/or to exit from the procedure.

Display symbol	Parameter	Settable value	Effect
	Beeper	0 1	enabled disabled
	Water pressure	0 1	normal low

## DEALING WITH MALFUNCTIONS

The electronic control system is capable of detecting and signalling a series of possible dishwasher malfunctions. Therefore before calling the After-Sales Service, users are advised to consult the list below, and in all cases to make a note of the error message.

### - Alarm E2

The system which limits the water level inside the dishwasher (Safety Level) has been tripped. Since this might be a temporary fault, try reprogramming the machine. If the malfunction persists, call the After-Sales Service.

### - Alarm E3

The dishwasher is not able to heat the washing water correctly. To establish the cause of the fault, call the After-Sales Service.

### - Alarm E4

The temperature monitoring system has failed. Switch off the dishwasher, switch it back on and restart a washing programme. If the alarm appears again, call the After-Sales Service, specifying the number of the error.

### - Alarm E5

The dishwasher is not able to take in water. Check that:

- a) the water cock is open,
- b) the filter in the filler pipe is not blocked,
- c) there are no restrictions in the filler pipe.

After making these checks, close the door. The washing programme will restart from the point where it was interrupted. If this is not sufficient, set the water supply pressure on the "low" value using the procedure described previously. If the alarm persists call the After-Sales Service.

### - Alarm E6

The water has overheated. To find out the cause of the fault, call the After-Sales Service.

### - Alarm E7

The dishwasher is unable to discharge the water. Check that:

- a) the drain hose is not crushed,
- b) the drain line is not blocked.

After making these checks, close the door. The washing programme will restart from the point where it was interrupted. If the alarm persists call the After-Sales Service.

## TABLE OF PROGRAMS

N°	Cycle	Load Type	Prewash	Wash
1	SOAK	Preliminary rinsing of dishes.	YES	NO
2	DELICATE	Dishes with light dirt (glasses, cups).	NO	45 °C
2	CRYSTAL	Delicate china or glassware which cannot withstand high washing temperatures. Small non dried food remains which do not contain starch.	NO	45 °C
3	RAPID	Dishes with light or medium dirt with no dried residues or starches.	NO	45 °C
4	NORMAL	Dishes with normal dirt with dried residues of foods containing starches.	YES	65 °C
4	DAILY	Dishes with normal dirt without dried residues or starches.	NO	65 °C
5	BIO (*)	Dishes with light dirt with dried residues of foods containing starches.	YES	55 °C
5	ECO BIO (**) EN 50242	Dishes with light dirt with dried residues of foods containing starches.	NO	55 °C
6	STRONG	Very dirty pans and dishes with dried residues containing starches.	SI	68 °C
6	STRONG (without prewash)	Dishes with normal dirt and pans, with dried residues containing starches.	NO	68 °C
7	SUPER	Very dirty pans and dishes with a lot of dried on food, containing also starch (ex. pasta, rice, semolina, potatoes, eggs, sauces, roasts.).	45 °C	70 °C
8 ***	RINSE	Dishes requiring "refreshing".	NO	NO

(\*) Program recommended with "new generation" detergents containing enzymes.

(\*\*) Reference cycle according to EN 50242.

(\*\*\*) Before starting programme n. 8, check that the hatch of the detergent dispenser is open.

O = Press the "ECO" button. □ = Optional.

N.B. Only soak with partial load.

Quantity of detergent grams	1 St Rinse	2 St Rinse	Rinse Aid Rinse	Drying	Half Load	Eco	No Dry
-	NO	NO	NO	NO	□	-	-
25	YES	NO	65 °C	YES	□	-	□
25	YES	NO	55 °C	YES	□	O	□
25	YES	YES	NO	NO	□	-	-
30	YES	NO	65 °C	YES	□	-	□
30	YES	NO	65 °C	YES	□	O	□
30	YES	NO	65 °C	YES	□	-	□
30	YES	NO	65 °C	YES	□	O	□
30	YES	YES	68 °C	YES	□	-	□
30	YES	YES	68 °C	YES	□	O	□
10 + 25	YES	YES	70 °C	YES	□	-	□
-	NO	YES	65 °C	YES	□	-	□

Where indicated, the drying phase can be eliminated. This reduces the cycle time and saves energy.

For all programmes, washing can be carried out in the top basket only, by selecting the 1/2 load option.

## CLEANING AND MAINTENANCE

### Cleaning the appliance

The outside surfaces and the inside of the door of the dishwasher must be cleaned regularly with a soft, damp cloth.

#### **Never use abrasive or acid detergents**

The door seals must be cleaned with a damp sponge. The outside of the appliance may be cleaned with a normal detergent for enamelled surfaces.

**Make sure that the appliance is disconnected from the electrical mains.**

### Cleaning the water intake filter

Clean the water intake filter "A" (see Fig. 1) at the stop-cock outlet periodically. Turn off the tap, unscrew the end of the water filler hose, remove the filter and clean it gently under a jet of running water, then replace the filter and screw the hose back in place.

### Cleaning the spray arms

The spray arms can easily be removed to allow periodic cleaning of the nozzles and prevent any clogging. To remove the top arm, push it upwards and unscrew anticlockwise (Fig. 13); the bottom arm simply lifts off (Fig. 17). Wash them thoroughly under a jet of water and place them back in their seats.

### Cleaning the filter unit

The central filter "C" (Fig. 14) should be removed for inspection periodically, and cleaned if necessary. To remove it, press the tangs gently and pull it up (Fig. 14); take hold of the central filter "D" and remove it from the microfilter (Fig. 15). Finally, separate the two parts which make up the plastic filter by pushing gently in the points shown in fig. 16, and pull the top to remove it. To remove the rectangular stainless steel filter, turn the spray support anti-clockwise after detaching it (Fig. 17).

**Clean filters in running water using a stiff brush.**

**It is essential to clean filters carefully as instructed above, as the dishwasher cannot operate with a fouled filter.**

**Users must also take care to replace the cleaned filters correctly, to avoid damage to the washing pump.**

### **If the dishwasher is to be out of use for a long period**

The following precautions must be taken:

- perform two consecutive pre-rinses
- disconnect the plug from the mains
- leave the door slightly open so that no unpleasant smells can form
- fill the rinse-aid dispenser
- turn off the water tap

Before re-using the dishwasher after a lay-off:

- re-connect the plug to the power socket
- check that no sludge or rust has been deposited in the water supply pipeline; allow water to flow freely from the supply tap for a few minutes
- re-connect the filler hose and turn the water tap back on.

## HOW TO DEAL WITH SMALL PROBLEMS

### **If the dishes are not clean at the end of a program**

Check whether:

- the right washing program has been used
- the detergent dispenser has opened
- the dishes have been arranged correctly
- the right amount of detergent has been placed in the dispenser
- the spray-arms turn freely
- the water tap has been turned on
- the spray-arm nozzles are blocked
- the filler hose filter is fouled

- the mains water pressure is correct
- there is salt in the water softener

### **If the dishwasher does not work**

Check that:

- the plug is correctly inserted in the power supply socket and the fuses are in the right place
- there is not a power supply blackout
- the water tap is turned on
- the door is closed correctly
- the filler hose filter is not fouled
- the filler and drain hoses are not crused

## AFTER-SALES SERVICE

**If the checks described in the "If the dishwasher does not work" section fail to eliminate any faults on the appliance, the After-Sales Service will have to be called in.**

**Calls made where no defects are found are not covered by the warranty and will therefore be charged to the customer.**

The appliance you have purchased complies with current safety regulations relating to electrical equipment.

Any technical checks must only be carried out by specialized staff, since repairs by unskilled workers may create dangers for the end user.

## USEFUL ADVICE

### **Before you use your dishwasher, some advice about dishes.**

All household dishes can be washed in this dishwasher. However, in some cases their characteristics have to be borne in mind.

**When buying new dishes, check that they can be washed in a dishwasher.**

### **Cups, bowls and plates with concave bases.**

These do not dry completely since water collects in the cavities, from where it cannot evaporate quickly enough.

### **Decorate dishes**

Glazed colours withstand washing

### **Not glazed colours**

Colours applied above the glaze may be of a quality which offers good resistance to mechanical washing for a normal lifetime. It is difficult to prevent more delicate colours from fading with frequent use. If in doubt about the resistance of a particular service, wash one or two pieces in the dishwasher each time for about four weeks (use an item already damaged if possible).

### **Aluminium items**

Anodized aluminium items may become discoloured

### **Silver cutlery**

Silver items may stain if they come

into contact with foods containing sulphur (eggs, legumes, etc.). These stains can be removed using products for silverware.

### **Handmade items**

Handmade items are rarely suitable for washing in the dishwasher. The relatively high water temperatures and the detergents used may damage them.

### **Wooden items**

Wooden items such as chopping-boards do not withstand mechanical washing, and may warp or crack.

### **Old knives**

Knives with the blade glued into the handle must not be washed in the dishwasher, since the adhesives used do not withstand heat.

### **Plastic dishes**

Plastic dishes do not withstand heat and may become misshapen. Heat-proof plastic dishes must only be washed in the top basket.

### **Glass and crystal**













In general, glass can be washed in the dishwasher. However, there are some types of glass which will not withstand mechanical washing and gradually lose their transparency. Users are therefore advised to wash delicate glasses using the "gentle wash" program, with which there is less danger of damaging them.





## TECHNICAL DATA

Width	cm. 60
Depth	cm. 60
Height	cm. 85
Dimension with door open	cm. 116
Capacity	12 standard place-settings
Intake water pressure	min. 100 KPa - max. 900 KPa
Power supply voltage	220 - 230 V
Heating element power	2100 W
Total power absorption	2,25 kW
Fuse	10 A

## INDEX

Avertissements	pag. 47
Installation	pag. 49
Description de la machine	pag. 51
Adocisseur d'eau	pag. 52
Réglage de l'adocisseur	pag. 53
Distributeur du produit de lavage et du produit de rinçage	pag. 54
Préparation de la vaisselle	pag. 55
Comment économiser de l'énergie électrique	pag. 56
Premier lavage	pag. 57
Départ différé	pag. 58
Fonctions Supplémentaires	pag. 59
Remedes aux anomalies de fonctionnement	pag. 60
Tableau des programmes	pag. 61
Nettoyage et entretien	pag. 62
Comment remédier à de petits inconvénients	pag. 64
Centre de Dépannage	pag. 64
Conseils	pag. 65
Caractéristiques techniques	pag. 66

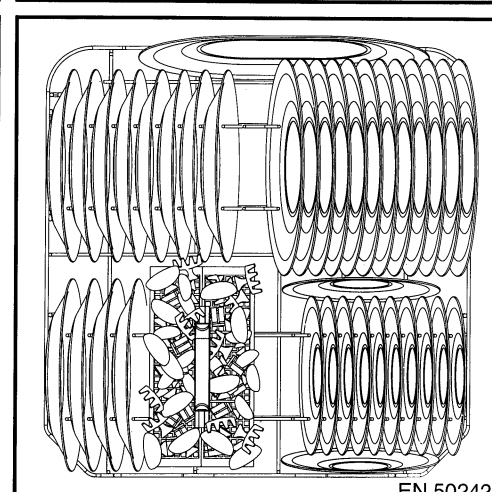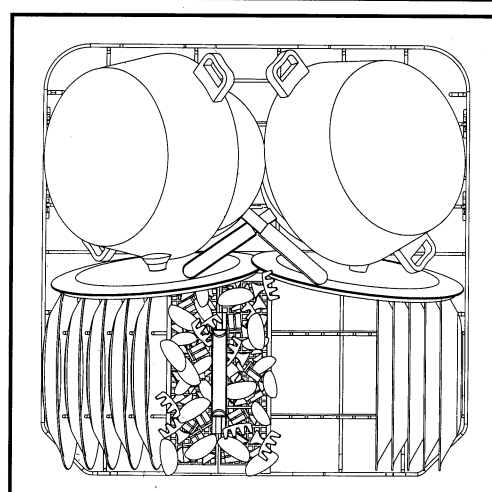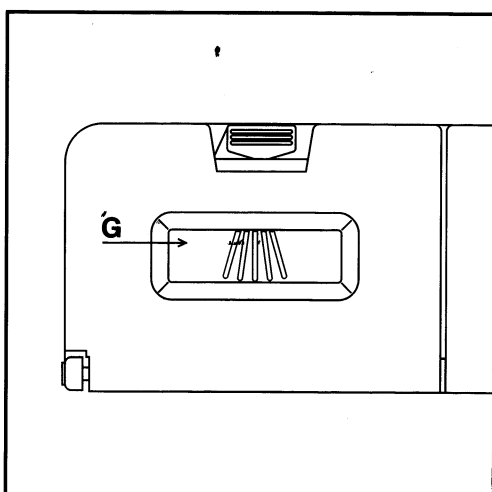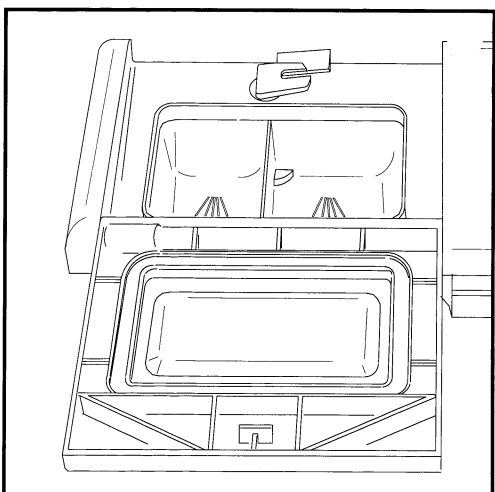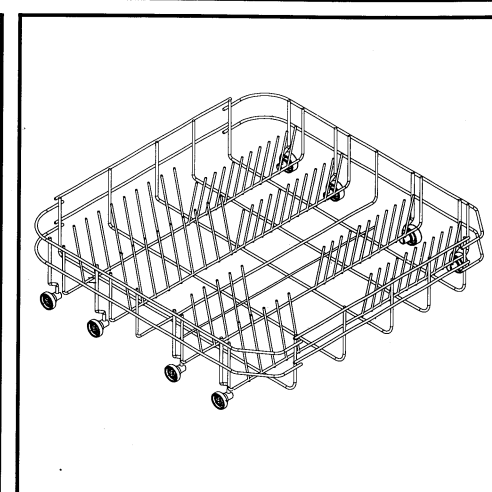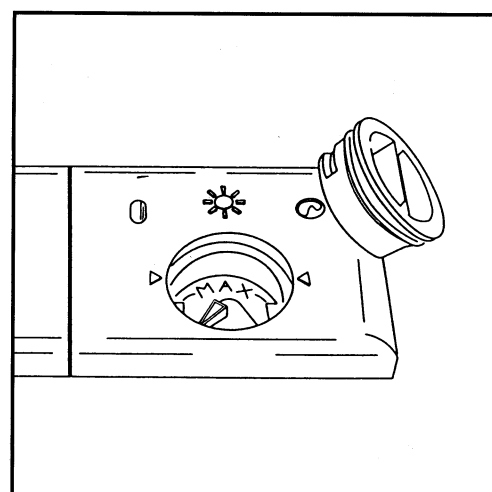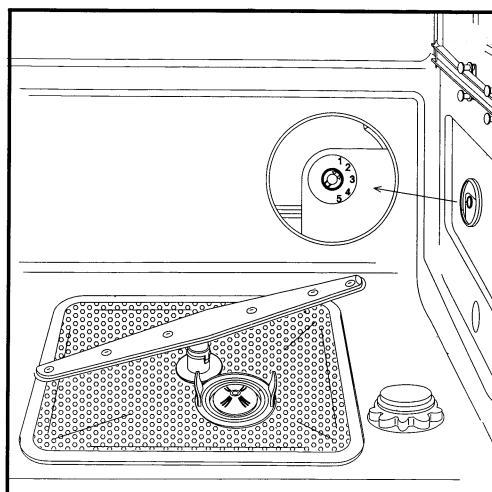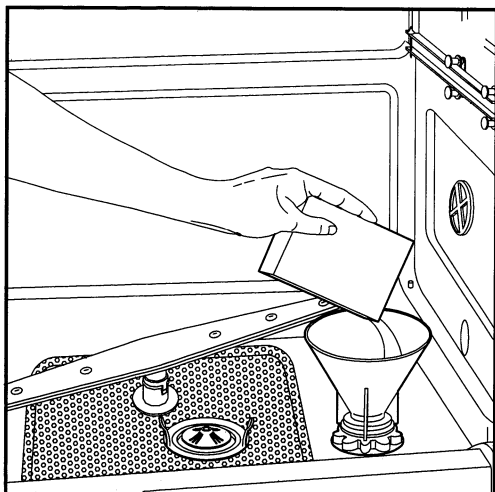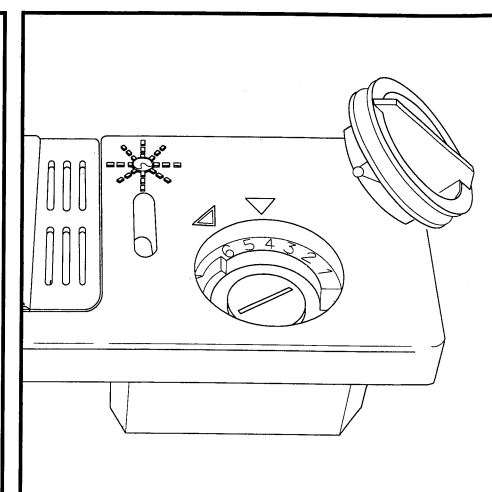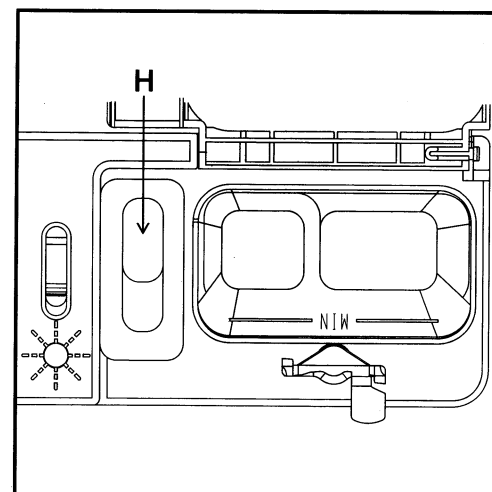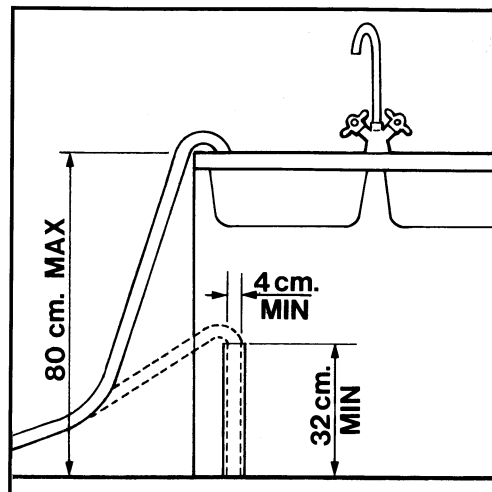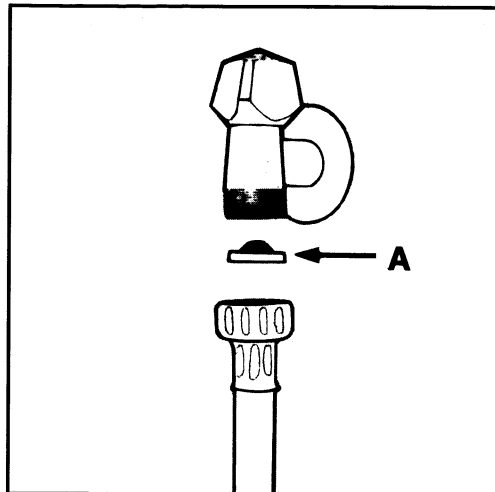

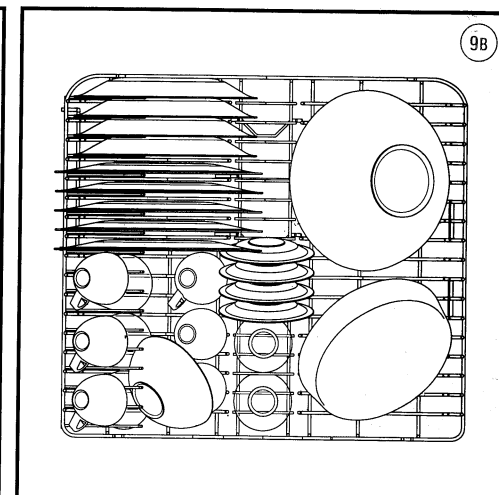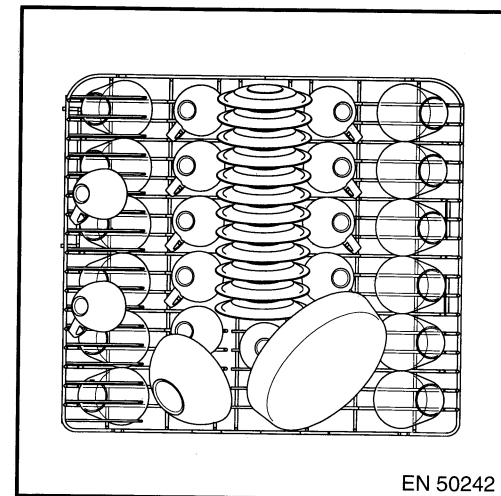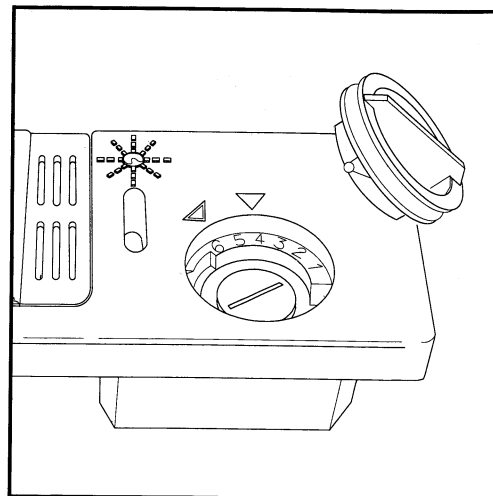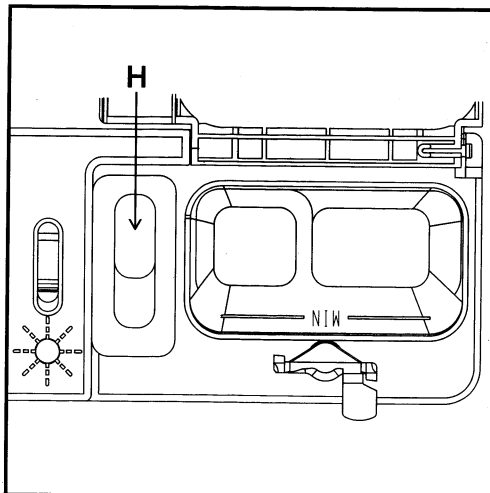

EN 50242

